



Hewlett Packard
Enterprise

HPE ProLiant BL660c Gen9 Server Blade

Maintenance and Service Guide

Abstract

This guide describes identification and maintenance procedures, diagnostic tools, specifications and requirements for hardware components and software. This guide is for an experienced service technician.

Part Number: 798323-005
September 2018
Edition: 6

© Copyright 2015, 2018 Hewlett Packard Enterprise Development LP

The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Intel® and Xeon® are trademarks of Intel Corporation in the United States and other countries.

microSD is a trademark or registered trademark of SD-3C in the United States, other countries or both.

Contents

Customer self repair	5
Parts only warranty service	5
Illustrated parts catalog.....	15
Mechanical components.....	15
System components.....	18
Removal and replacement procedures	25
Required tools	25
Safety considerations	25
Preventing electrostatic discharge.....	25
Server blade warnings and cautions	25
Symbols on equipment.....	26
Server blade preparation.....	26
Power down the server.....	26
Remove the server	27
Installing a server	28
Access panel	29
Drive blank	30
SAS/SATA drive	30
NVMe SSD	31
Enclosure connector covers	31
Direct connect SATA cable	32
Mezzanine assembly.....	33
Mezzanine options	34
FlexibleLOM	36
SAS cable.....	37
Storage controller/NVMe pass-through board.....	37
Serial label pull tab.....	38
Front panel drive cage assembly	39
M.2 SSD assembly	40
Heatsink blank.....	41
DIMM baffles	42
Remove the right DIMM baffle.....	42
Remove the center DIMM baffle.....	43
Remove the left DIMM baffle	44
DIMMs	44
HPE Smart Storage Battery	45
SAS/SATA or NVMe backplane	46
System battery	47
Heatsink	48
Processor	50
System board assembly	54
HPE Trusted Platform Module	60
Troubleshooting	61
Troubleshooting resources.....	61
Diagnostic tools	62
Product QuickSpecs	62
HPE iLO	62
Active Health System	62
iLO RESTful API support.....	63
Integrated Management Log	63
HPE UEFI System Utilities	63

Using UEFI System Utilities.....	64
Embedded Diagnostics option.....	64
Re-entering the server serial number and product ID	64
HPE Insight Diagnostics	65
HPE Insight Diagnostics survey functionality	65
HPE Insight Remote Support	65
USB support	66
External USB functionality	66
HPE Smart Storage Administrator.....	66
Automatic Server Recovery.....	67
Component identification	68
Front panel components.....	68
Front panel LEDs and buttons.....	69
Power fault LEDs.....	69
Serial label pull tab information	70
Drive numbering	70
Drive carrier components and LED definitions	71
SATA/SAS drive carrier	71
NVMe SSD carrier	72
System board components.....	73
System maintenance switch.....	74
Mezzanine connector definitions	74
DIMM slot locations	75
HPE c-Class Blade SUV Cable.....	75
Cabling	76
Cabling overview	76
HPE Smart Storage Battery cabling	76
Direct connect SATA cabling.....	76
SAS cabling.....	77
Using the HPE c-Class Blade SUV Cable.....	77
Connecting locally to a server blade with video and USB devices.....	78
Accessing a server blade with local KVM.....	78
Accessing local media devices	79
Specifications	80
Environmental specifications.....	80
Server blade specifications	80
Acronyms and abbreviations.....	81
Documentation feedback	83
Index.....	84

Customer self repair

Hewlett Packard Enterprise products are designed with many Customer Self Repair (CSR) parts to minimize repair time and allow for greater flexibility in performing defective parts replacement. If during the diagnosis period Hewlett Packard Enterprise (or Hewlett Packard Enterprise service providers or service partners) identifies that the repair can be accomplished by the use of a CSR part, Hewlett Packard Enterprise will ship that part directly to you for replacement. There are two categories of CSR parts:

- **Mandatory**—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.
- **Optional**—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

NOTE: Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

Based on availability and where geography permits, CSR parts will be shipped for next business day delivery. Same day or four-hour delivery may be offered at an additional charge where geography permits. If assistance is required, you can call the Hewlett Packard Enterprise Support Center and a technician will help you over the telephone. Hewlett Packard Enterprise specifies in the materials shipped with a replacement CSR part whether a defective part must be returned to Hewlett Packard Enterprise. In cases where it is required to return the defective part to Hewlett Packard Enterprise, you must ship the defective part back to Hewlett Packard Enterprise within a defined period of time, normally five (5) business days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective part may result in Hewlett Packard Enterprise billing you for the replacement. With a customer self repair, Hewlett Packard Enterprise will pay all shipping and part return costs and determine the courier/carrier to be used.

For more information about the Hewlett Packard Enterprise CSR program, contact your local service provider. For the North American program, go to the Hewlett Packard Enterprise CSR website (<http://www.hpe.com/support/selfrepair>).

Parts only warranty service

Your Hewlett Packard Enterprise Limited Warranty may include a parts only warranty service. Under the terms of parts only warranty service, Hewlett Packard Enterprise will provide replacement parts free of charge.

For parts only warranty service, CSR part replacement is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

Réparation par le client (CSR)

Les produits Hewlett Packard Enterprise comportent de nombreuses pièces CSR (Customer Self Repair = réparation par le client) afin de minimiser les délais de réparation et faciliter le remplacement des pièces défectueuses. Si pendant la période de diagnostic, Hewlett Packard Enterprise (ou ses partenaires ou mainteneurs agréés) détermine que la réparation peut être effectuée à l'aide d'une pièce CSR, Hewlett Packard Enterprise vous l'envoie directement. Il existe deux catégories de pièces CSR :

- **Obligatoire**—Pièces pour lesquelles la réparation par le client est obligatoire. Si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.
- **Facultatif**—Pièces pour lesquelles la réparation par le client est facultative. Ces pièces sont également conçues pour permettre au client d'effectuer lui-même la réparation. Toutefois, si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, l'intervention peut ou non vous être facturée, selon le type de garantie applicable à votre produit.

REMARQUE: Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour permettre au client d'effectuer lui-même la réparation. Pour que la garantie puisse s'appliquer, Hewlett Packard Enterprise exige que le remplacement de la pièce soit effectué par un Mainteneur Agréé. Ces pièces sont identifiées par la mention "Non" dans le Catalogue illustré.

Les pièces CSR sont livrées le jour ouvré suivant, dans la limite des stocks disponibles et selon votre situation géographique. Si votre situation géographique le permet et que vous demandez une livraison le jour même ou dans les 4 heures, celle-ci vous sera facturée. Pour toute assistance,appelez le Centre d'assistance Hewlett Packard Enterprise pour qu'un technicien vous aide au téléphone Dans les documents envoyés avec la pièce de rechange CSR, Hewlett Packard Enterprise précise s'il est nécessaire de lui retourner la pièce défectueuse. Si c'est le cas, vous devez le faire dans le délai indiqué, généralement cinq (5) jours ouvrés. La pièce et sa documentation doivent être retournées dans l'emballage fourni. Si vous ne retournez pas la pièce défectueuse, Hewlett Packard Enterprise se réserve le droit de vous facturer les coûts de remplacement. Dans le cas d'une pièce CSR, Hewlett Packard Enterprise supporte l'ensemble des frais d'expédition et de retour, et détermine la société de courses ou le transporteur à utiliser.

Pour plus d'informations sur le programme CSR de Hewlett Packard Enterprise, contactez votre Mainteneur Agréé local. Pour plus d'informations sur ce programme en Amérique du Nord, consultez le site Web Hewlett Packard Enterprise (<http://www.hpe.com/support/selfrepair>).

Service de garantie "pièces seules"

Votre garantie limitée Hewlett Packard Enterprise peut inclure un service de garantie "pièces seules". Dans ce cas, les pièces de rechange fournies par Hewlett Packard Enterprise ne sont pas facturées.

Dans le cadre de ce service, la réparation des pièces CSR par le client est obligatoire. Si vous demandez à Hewlett Packard Enterprise de remplacer ces pièces, les coûts de déplacement et main d'œuvre du service vous seront facturés.

Riparazione da parte del cliente

Per abbreviare i tempi di riparazione e garantire una maggiore flessibilità nella sostituzione di parti difettose, i prodotti Hewlett Packard Enterprise sono realizzati con numerosi componenti che possono essere riparati direttamente dal cliente (CSR, Customer Self Repair). Se in fase di diagnostica Hewlett Packard Enterprise (o un centro di servizi o di assistenza Hewlett Packard Enterprise) identifica il guasto come riparabile mediante un ricambio CSR, Hewlett Packard Enterprise lo spedirà direttamente al cliente per la sostituzione. Vi sono due categorie di parti CSR:

- **Obbligatorie**—Parti che devono essere necessariamente riparate dal cliente. Se il cliente ne affida la riparazione ad Hewlett Packard Enterprise, deve sostenere le spese di spedizione e di manodopera per il servizio.
- **Opzionali**—Parti la cui riparazione da parte del cliente è facoltativa. Si tratta comunque di componenti progettati per questo scopo. Se tuttavia il cliente ne richiede la sostituzione ad Hewlett Packard Enterprise, potrebbe dover sostenere spese addizionali a seconda del tipo di garanzia previsto per il prodotto.

NOTA: alcuni componenti Hewlett Packard Enterprise non sono progettati per la riparazione da parte del cliente. Per rispettare la garanzia, Hewlett Packard Enterprise richiede che queste parti siano sostituite da un centro di assistenza autorizzato. Tali parti sono identificate da un "No" nel Catalogo illustrato dei componenti.

In base alla disponibilità e alla località geografica, le parti CSR vengono spedite con consegna entro il giorno lavorativo seguente. La consegna nel giorno stesso o entro quattro ore è offerta con un supplemento di costo solo in alcune zone. In caso di necessità si può richiedere l'assistenza telefonica di un addetto del centro di supporto tecnico Hewlett Packard Enterprise. Nel materiale fornito con una parte di ricambio CSR, Hewlett Packard Enterprise specifica se il cliente deve restituire dei componenti. Qualora sia richiesta la resa ad Hewlett Packard Enterprise del componente difettoso, lo si deve spedire ad Hewlett Packard Enterprise entro un determinato periodo di tempo, generalmente cinque (5) giorni lavorativi. Il componente difettoso deve essere restituito con la documentazione associata nell'imballo di spedizione fornito. La mancata restituzione del componente può comportare la fatturazione del ricambio da parte di Hewlett Packard Enterprise. Nel caso di riparazione da parte del cliente, Hewlett Packard Enterprise sostiene tutte le spese di spedizione e resa e sceglie il corriere/vettore da utilizzare.

Per ulteriori informazioni sul programma CSR di Hewlett Packard Enterprise, contattare il centro di assistenza di zona. Per il programma in Nord America fare riferimento al sito Web (<http://www.hpe.com/support/selfrepair>).

Servizio di garanzia per i soli componenti

La garanzia limitata Hewlett Packard Enterprise può includere un servizio di garanzia per i soli componenti. Nei termini di garanzia del servizio per i soli componenti, Hewlett Packard Enterprise fornirà gratuitamente le parti di ricambio.

Per il servizio di garanzia per i soli componenti è obbligatoria la formula CSR che prevede la riparazione da parte del cliente. Se il cliente invece richiede la sostituzione ad Hewlett Packard Enterprise dovrà sostenere le spese di spedizione e di manodopera per il servizio.

Customer Self Repair

Hewlett Packard Enterprise Produkte enthalten viele CSR-Teile (Customer Self Repair), um Reparaturzeiten zu minimieren und höhere Flexibilität beim Austausch defekter Bauteile zu ermöglichen. Wenn Hewlett Packard Enterprise (oder ein Hewlett Packard Enterprise Servicepartner) bei der Diagnose feststellt, dass das Produkt mithilfe eines CSR-Teils repariert werden kann, sendet Ihnen Hewlett Packard Enterprise dieses Bauteil zum Austausch direkt zu. CSR-Teile werden in zwei Kategorien unterteilt:

- **Zwingend**—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.
- **Optional**—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

HINWEIS: Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

CSR-Teile werden abhängig von der Verfügbarkeit und vom Lieferziel am folgenden Geschäftstag geliefert. Für bestimmte Standorte ist eine Lieferung am selben Tag oder innerhalb von vier Stunden gegen einen Aufpreis verfügbar. Wenn Sie Hilfe benötigen, können Sie das Hewlett Packard Enterprise

Support Center anrufen und sich von einem Mitarbeiter per Telefon helfen lassen. Den Materialien von Hewlett Packard Enterprise, die mit einem CSR-Ersatzteil geliefert werden, können Sie entnehmen, ob das defekte Teil an Hewlett Packard Enterprise zurückgeschickt werden muss. Wenn es erforderlich ist, das defekte Teil an Hewlett Packard Enterprise zurückzuschicken, müssen Sie dies innerhalb eines vorgegebenen Zeitraums tun, in der Regel innerhalb von fünf (5) Geschäftstagen. Das defekte Teil muss mit der zugehörigen Dokumentation in der Verpackung zurückgeschickt werden, die im Lieferumfang enthalten ist. Wenn Sie das defekte Teil nicht zurückschicken, kann Hewlett Packard Enterprise Ihnen das Ersatzteil in Rechnung stellen. Im Falle von Customer Self Repair kommt Hewlett Packard Enterprise für alle Kosten für die Lieferung und Rücksendung auf und bestimmt den Kurier-/Frachtdienst.

Weitere Informationen über das Hewlett Packard Enterprise Customer Self Repair Programm erhalten Sie von Ihrem Servicepartner vor Ort. Informationen über das CSR-Programm in Nordamerika finden Sie auf der Hewlett Packard Enterprise Website unter (<http://www.hpe.com/support/selfrepair>).

Parts-only Warranty Service (Garantieservice ausschließlich für Teile)

Ihre Hewlett Packard Enterprise Garantie umfasst möglicherweise einen Parts-only Warranty Service (Garantieservice ausschließlich für Teile). Gemäß den Bestimmungen des Parts-only Warranty Service stellt Hewlett Packard Enterprise Ersatzteile kostenlos zur Verfügung.

Für den Parts-only Warranty Service ist das CSR-Verfahren zwingend vorgegeben. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

Reparaciones del propio cliente

Los productos de Hewlett Packard Enterprise incluyen muchos componentes que el propio usuario puede reemplazar (Customer Self Repair, CSR) para minimizar el tiempo de reparación y ofrecer una mayor flexibilidad a la hora de realizar sustituciones de componentes defectuosos. Si, durante la fase de diagnóstico, Hewlett Packard Enterprise (o los proveedores o socios de servicio de Hewlett Packard Enterprise) identifica que una reparación puede llevarse a cabo mediante el uso de un componente CSR, Hewlett Packard Enterprise le enviará dicho componente directamente para que realice su sustitución. Los componentes CSR se clasifican en dos categorías:

- **Obligatorio**—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.
- **Opcional**—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

NOTA: Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

Según la disponibilidad y la situación geográfica, los componentes CSR se enviarán para que lleguen a su destino al siguiente día laborable. Si la situación geográfica lo permite, se puede solicitar la entrega en el mismo día o en cuatro horas con un coste adicional. Si precisa asistencia técnica, puede llamar al Centro de asistencia técnica de Hewlett Packard Enterprise y recibirá ayuda telefónica por parte de un técnico. Con el envío de materiales para la sustitución de componentes CSR, Hewlett Packard Enterprise especificará si los componentes defectuosos deberán devolverse a Hewlett Packard Enterprise. En aquellos casos en los que sea necesario devolver algún componente a Hewlett Packard Enterprise,

deberá hacerlo en el periodo de tiempo especificado, normalmente cinco días laborables. Los componentes defectuosos deberán devolverse con toda la documentación relacionada y con el embalaje de envío. Si no enviará el componente defectuoso requerido, Hewlett Packard Enterprise podrá cobrarle por el de sustitución. En el caso de todas sustituciones que lleve a cabo el cliente, Hewlett Packard Enterprise se hará cargo de todos los gastos de envío y devolución de componentes y escogerá la empresa de transporte que se utilice para dicho servicio.

Para obtener más información acerca del programa de Reparaciones del propio cliente de Hewlett Packard Enterprise, póngase en contacto con su proveedor de servicios local. Si está interesado en el programa para Norteamérica, visite la página web de Hewlett Packard Enterprise CSR (<http://www.hpe.com/support/selfrepair>).

Servicio de garantía exclusivo de componentes

La garantía limitada de Hewlett Packard Enterprise puede que incluya un servicio de garantía exclusivo de componentes. Según las condiciones de este servicio exclusivo de componentes, Hewlett Packard Enterprise le facilitará los componentes de repuesto sin cargo adicional alguno.

Para este servicio de garantía exclusivo de componentes, es obligatoria la sustitución de componentes por parte del usuario (CSR). Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

Customer Self Repair

Veel onderdelen in Hewlett Packard Enterprise producten zijn door de klant zelf te repareren, waardoor de reparatietaart tot een minimum beperkt kan blijven en de flexibiliteit in het vervangen van defecte onderdelen groter is. Deze onderdelen worden CSR-onderdelen (Customer Self Repair) genoemd. Als Hewlett Packard Enterprise (of een Hewlett Packard Enterprise Service Partner) bij de diagnose vaststelt dat de reparatie kan worden uitgevoerd met een CSR-onderdeel, verzendt Hewlett Packard Enterprise dat onderdeel rechtstreeks naar u, zodat u het defecte onderdeel daarmee kunt vervangen. Er zijn twee categorieën CSR-onderdelen:

- **Verplicht**—Onderdelen waarvoor reparatie door de klant verplicht is. Als u Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht.
- **Optioneel**—Onderdelen waarvoor reparatie door de klant optioneel is. Ook deze onderdelen zijn ontworpen voor reparatie door de klant. Als u echter Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, kunnen daarvoor extra kosten in rekening worden gebracht, afhankelijk van het type garantieservice voor het product.

OPMERKING: Sommige Hewlett Packard Enterprise onderdelen zijn niet ontwikkeld voor reparatie door de klant. In verband met de garantievoorwaarden moet het onderdeel door een geautoriseerde Service Partner worden vervangen. Deze onderdelen worden in de geïllustreerde onderdelencatalogus aangemerkt met "Nee".

Afhankelijk van de leverbaarheid en de locatie worden CSR-onderdelen verzonden voor levering op de eerstvolgende werkdag. Levering op dezelfde dag of binnen vier uur kan tegen meerkosten worden aangeboden, indien dit mogelijk is gezien de locatie. Indien assistentie is gewenst, belt u het Hewlett Packard Enterprise Support Center om via de telefoon ondersteuning van een technicus te ontvangen. Hewlett Packard Enterprise vermeldt in de documentatie bij het vervangende CSR-onderdeel of het defecte onderdeel aan Hewlett Packard Enterprise moet worden gereturneerd. Als het defecte onderdeel aan Hewlett Packard Enterprise moet worden teruggezonden, moet u het defecte onderdeel binnen een bepaalde periode, gewoonlijk vijf (5) werkdagen, retourneren aan Hewlett Packard Enterprise. Het defecte onderdeel moet met de bijbehorende documentatie worden gereturneerd in het meegeleverde verpakkingsmateriaal. Als u het defecte onderdeel niet terugzendt, kan Hewlett Packard

Enterprise u voor het vervangende onderdeel kosten in rekening brengen. Bij reparatie door de klant betaalt Hewlett Packard Enterprise alle verzendkosten voor het vervangende en geretourneerde onderdeel en kiest Hewlett Packard Enterprise zelf welke koerier/transportonderneming hiervoor wordt gebruikt.

Neem contact op met een Service Partner voor meer informatie over het Customer Self Repair programma van Hewlett Packard Enterprise. Informatie over Service Partners vindt u op de Hewlett Packard Enterprise website (<http://www.hpe.com/support/selfrepair>).

Garantieservice "Parts Only"

Het is mogelijk dat de Hewlett Packard Enterprise garantie alleen de garantieservice "Parts Only" omvat. Volgens de bepalingen van de Parts Only garantieservice zal Hewlett Packard Enterprise kosteloos vervangende onderdelen ter beschikking stellen.

Voor de Parts Only garantieservice is vervanging door CSR-onderdelen verplicht. Als u Hewlett Packard Enterprise verzoekt deze onderdelen voor u te vervangen, worden u voor deze service reiskosten en arbeidsloon in rekening gebracht

Reparo feito pelo cliente

Os produtos da Hewlett Packard Enterprise são projetados com muitas peças para reparo feito pelo cliente (CSR) de modo a minimizar o tempo de reparo e permitir maior flexibilidade na substituição de peças com defeito. Se, durante o período de diagnóstico, a Hewlett Packard Enterprise (ou fornecedores/parceiros da Hewlett Packard Enterprise) concluir que o reparo pode ser efetuado pelo uso de uma peça CSR, a Hewlett Packard Enterprise enviará a peça diretamente ao cliente. Há duas categorias de peças CSR:

- **Obrigatória**—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.
- **Opcional**—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

OBSERVAÇÃO: Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

Conforme a disponibilidade e o local geográfico, as peças CSR serão enviadas no primeiro dia útil após o pedido. Onde as condições geográficas permitirem, a entrega no mesmo dia ou em quatro horas pode ser feita mediante uma taxa adicional. Se precisar de auxílio, entre em contato com o Centro de suporte técnico da Hewlett Packard Enterprise para que um técnico o ajude por telefone. A Hewlett Packard Enterprise especifica nos materiais fornecidos com a peça CSR de reposição se a peça com defeito deve ser devolvida à Hewlett Packard Enterprise. Nos casos em que isso for necessário, é preciso enviar a peça com defeito à Hewlett Packard Enterprise, você deverá enviar a peça com defeito de volta para a Hewlett Packard Enterprise dentro do período de tempo definido, normalmente em 5 (cinco) dias úteis. A peça com defeito deve ser enviada com a documentação correspondente no material de transporte fornecido. Caso não o faça, a Hewlett Packard Enterprise poderá cobrar a reposição. Para as peças de reparo feito pelo cliente, a Hewlett Packard Enterprise paga todas as despesas de transporte e de devolução da peça e determina a transportadora/serviço postal a ser utilizado.

Para obter mais informações sobre o programa de reparo feito pelo cliente da Hewlett Packard Enterprise, entre em contato com o fornecedor de serviços local. Para o programa norte-americano, visite o site da Hewlett Packard Enterprise (<http://www.hpe.com/support/selfrepair>).

Serviço de garantia apenas para peças

A garantia limitada da Hewlett Packard Enterprise pode incluir um serviço de garantia apenas para peças. Segundo os termos do serviço de garantia apenas para peças, a Hewlett Packard Enterprise fornece as peças de reposição sem cobrar nenhuma taxa.

No caso desse serviço, a substituição de peças CSR é obrigatória. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

カスタマーセルフリペア

修理時間を短縮し、故障部品の交換における高い柔軟性を確保するために、Hewlett Packard Enterprise製品には多数のカスタマーセルフリペア（CSR）部品があります。診断の際に、CSR部品を使用すれば修理ができるとHewlett Packard Enterprise（Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店）が判断した場合、Hewlett Packard Enterpriseはその部品を直接、お客様に発送し、お客様に交換していただけます。CSR部品には以下の2種類があります。

- 必須 - カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。
- 任意 - カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

注：Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

部品供給が可能な場合、地域によっては、CSR部品を翌営業日に届くように発送します。また、地域によっては、追加費用を負担いただくことにより同日または4時間以内に届くように発送することも可能な場合があります。サポートが必要なときは、Hewlett Packard Enterpriseサポートセンターに電話していただければ、技術者が電話でアドバイスします。交換用のCSR部品または同梱物には、故障部品をHewlett Packard Enterpriseに返送する必要があるかどうかが表示されています。故障部品をHewlett Packard Enterpriseに返送する必要がある場合は、指定期限内（通常は5営業日以内）に故障部品をHewlett Packard Enterpriseに返送してください。故障部品を返送する場合は、届いた時の梱包箱に関連書類とともに入れてください。故障部品を返送しない場合、Hewlett Packard Enterpriseから部品費用が請求されます。カスタマーセルフリペアの際には、Hewlett Packard Enterpriseは送料および部品返送費を全額負担し、使用する宅配便会社や運送会社を指定します。

部品のみ保証サービス

Hewlett Packard Enterprise保証サービスには、部品のみ保証サービスが適用される場合があります。このサービスでは、交換部品は無償で提供されます。

部品のみ保証サービスにおいては、CSR部品をお客様により交換作業していただくことが必須になります。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様のご負担となります。

客户自行维修

Hewlett Packard Enterprise 产品提供许多客户自行维修 (CSR) 部件，以尽可能缩短维修时间和在更换缺陷部件方面提供更大的灵活性。如果在诊断期间 Hewlett Packard Enterprise (或Hewlett Packard Enterprise 服务提供商或服务合作伙伴) 确定可以通过使用 CSR 部件完成维修，Hewlett Packard Enterprise 将直接把该部件发送给您进行更换。有两类 CSR 部件：

- 强制性的 — 要求客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。
- 可选的 — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

注：某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

CSR 部件将在下一个工作日发运（取决于备货情况和允许的地理范围）。在允许的地理范围内，可在当天或四小时内发运，但要收取额外费用。如果需要帮助，您可以致电 Hewlett Packard Enterprise 技术支持中心，将会有技术人员通过电话为您提供帮助。Hewlett Packard Enterprise 会在随更换的 CSR 部件发运的材料中指明是否必须将有缺陷的部件返还给 Hewlett Packard Enterprise。如果要求您将有缺陷的部件返还给 Hewlett Packard Enterprise，那么您必须在规定的期限内（通常是五 (5) 个工作日）将缺陷部件发给 Hewlett Packard Enterprise。有缺陷的部件必须随所提供的发运材料中的相关文件一起返还。如果未能送还有缺陷的部件，Hewlett Packard Enterprise 可能会要求您支付更换费用。客户自行维修时，Hewlett Packard Enterprise 将承担所有相关运输和部件返回费用，并指定快递商/承运商。

有关 Hewlett Packard Enterprise 客户自行维修计划的详细信息，请与您当地的服务提供商联系。有关北美地区的计划，请访问 Hewlett Packard Enterprise 网站 (<http://www.hpe.com/support/selfrepair>)。

仅部件保修服务

您的 Hewlett Packard Enterprise 有限保修服务可能涉及仅部件保修服务。根据仅部件保修服务条款的规定，Hewlett Packard Enterprise 将免费提供更换的部件。

仅部件保修服务要求进行 CSR 部件更换。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

客戶自行維修

Hewlett Packard Enterprise 產品設計了許多「客戶自行維修」(CSR) 的零件以減少維修時間，並且使得更換瑕疵零件時能有更大的彈性。如果在診斷期間，Hewlett Packard Enterprise (或 Hewlett Packard Enterprise 服務供應商或維修夥伴) 辨認出此項維修工作可以藉由使用 CSR 零件來完成，則 Hewlett Packard Enterprise 將直接寄送該零件給您作更換。CSR 零件分為兩種類別：

- **強制的** — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。
- **選購的** — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

備註：某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

基於材料取得及環境允許的情況下，CSR 零件將於下一個工作日以快遞寄送。在環境的允許下當天或四小時內送達，則可能需要額外的費用。若您需要協助，可致電 Hewlett Packard Enterprise 支援中心，會有一位技術人員透過電話來協助您。不論損壞的零件是否必須退回，Hewlett Packard Enterprise 皆會在與 CSR 替換零件一起運送的材料中註明。若要將損壞的零件退回 Hewlett Packard Enterprise，您必須在指定的一段時間內 (通常為五 (5) 個工作天)，將損壞的零件寄回 Hewlett Packard Enterprise。損壞的零件必須與寄送資料中隨附的相關技術文件一併退還。如果無法退還損壞的零件，Hewlett Packard Enterprise 可能要向您收取替換費用。針對客戶自行維修情形，Hewlett Packard Enterprise 將負責所有運費及零件退還費用，並指定使用何家快遞/貨運公司。

如需 Hewlett Packard Enterprise 的 CSR 方案詳細資訊，請連絡您當地的服務供應商。至於北美方案，請參閱 Hewlett Packard Enterprise 的 CSR 網站`selfrepair` (<http://www.hpe.com/support/selfrepair>)。

僅限零件的保固服務

您的「Hewlett Packard Enterprise 有限保固」可能包含僅限零件的保固服務。在僅限零件的保固服務情況下，Hewlett Packard Enterprise 將免費提供替換零件。

針對僅限零件的保固服務，CSR 零件替換是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

고객 셀프 수리

Hewlett Packard Enterprise 제품은 수리 시간을 최소화하고 결함이 있는 부품 교체 시 더욱 융통성을 발휘할 수 있도록 하기 위해 고객 셀프 수리(CSR) 부품을 다량 사용하여 설계되었습니다. 진단 기간 동안 Hewlett Packard Enterprise(또는 Hewlett Packard Enterprise 서비스 공급업체 또는 서비스 협력업체)에서 CSR 부품을 사용하여 수리가 가능하다고 판단되면 Hewlett Packard Enterprise는 해당 부품을 바로 사용자에게 보내어 사용자가 교체할 수 있도록 합니다. CSR 부품에는 두 가지 종류가 있습니다.

- 필수 - 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.
- 선택 사항 - 고객 셀프 수리가 선택 사항인 부품. 이 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

참고: 일부 Hewlett Packard Enterprise 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

CSR 부품은 재고 상태와 지리적 조건이 허용하는 경우 다음 영업일 납품이 가능하도록 배송이 이루어집니다. 지리적 조건이 허용하는 경우 추가 비용이 청구되는 조건으로 당일 또는 4시간 배송이 가능할 수도 있습니다. 도움이 필요하시면 Hewlett Packard Enterprise Support Center로 전화하십시오. 전문 기술자가 전화로 도움을 줄 것입니다. Hewlett Packard Enterprise는 결함이 발생한 부품을 Hewlett Packard Enterprise로 반환해야 하는지 여부를 CSR 교체 부품과 함께 배송된 자료에 지정합니다. 결함이 발생한 부품을 Hewlett Packard Enterprise로 반환해야 하는 경우에는 지정된 기간 내(통상 영업일 기준 5일)에 Hewlett Packard Enterprise로 반환해야 합니다. 이때 결함이 발생한 부품은 제공된 포장 재료에 넣어 관련 설명서와 함께 반환해야 합니다. 결함이 발생한 부품을 반환하지 않는 경우 Hewlett Packard Enterprise가 교체 부품에 대해 비용을 청구할 수 있습니다. 고객 셀프 수리의 경우, Hewlett Packard Enterprise는 모든 운송 및 부품 반환 비용을 부담하며 이용할 운송업체 및 택배 서비스를 결정합니다.

Hewlett Packard Enterprise CSR 프로그램에 대한 자세한 내용은 가까운 서비스 제공업체에 문의하십시오. 북미 지역의 프로그램에 대해서는 Hewlett Packard Enterprise CSR 웹 사이트(<http://www.hpe.com/support/selfrepair>)를 참조하십시오.

부품 제공 보증 서비스


Hewlett Packard Enterprise 제한 보증에는 부품 제공 보증 서비스가 포함될 수 있습니다. 이러한 경우 Hewlett Packard Enterprise는 부품 제공 보증 서비스의 조건에 따라 교체 부품만을 무료로 제공합니다.

부품 제공 보증 서비스 제공 시 CSR 부품 교체는 의무 사항입니다. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 이 서비스에 대한 출장비 및 작업비가 청구됩니다.

Illustrated parts catalog

Mechanical components

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the Hewlett Packard Enterprise PartSurfer website (<http://www.hpe.com/info/partssurfer>).

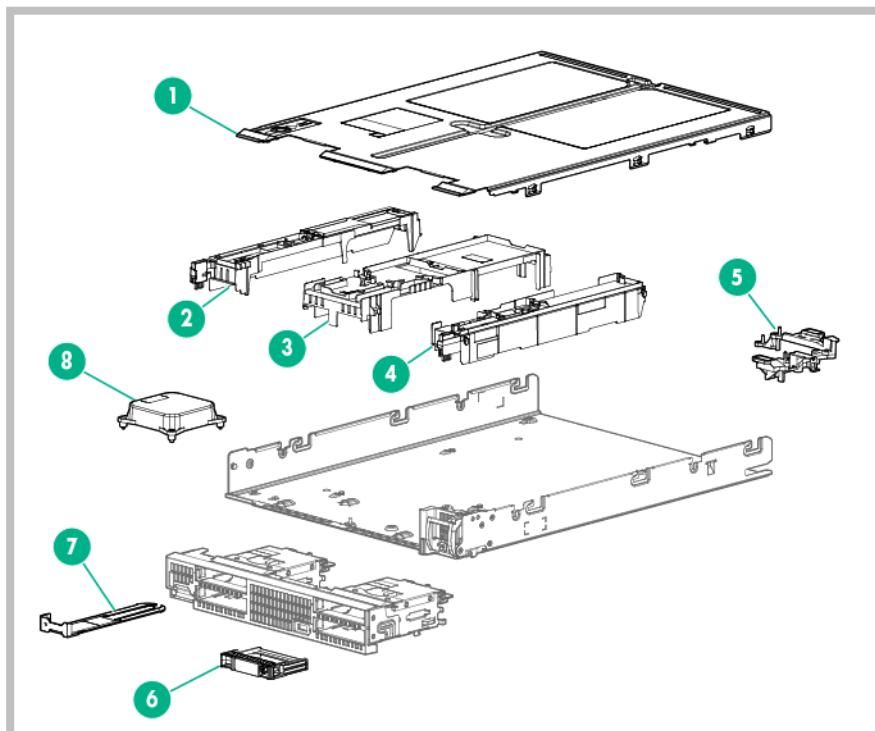

Item	Description	Spare part number	Customer self repair (on page 5)
1	Access panel	806557-001	Mandatory ¹
	DIMM baffles	—	—
2	Left DIMM baffle	808192-001	Mandatory ¹
3	Center DIMM baffle	808190-001	Mandatory ¹
4	Right DIMM baffle	808191-001	Mandatory ¹
5	Mezzanine assembly	784960-001	Mandatory ¹
6	Drive blank (SFF)	675607-001	Mandatory ¹
7	Serial label pull tab	777690-001	Mandatory ¹
8	Heatsink blank	862026-001	Mandatory ¹

¹Mandatory—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

²Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

³No—Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

¹Obligatoire—Pièces pour lesquelles le client doit procéder lui-même aux réparations. Si vous demandez à Hewlett Packard Enterprise de procéder au remplacement de ces pièces, les frais de transport et de main d'œuvre pour ce service vous seront facturés.

²Facultatif—Pièces pour lesquelles une réparation par le client est facultative. Ces pièces sont également conçues pour que le client puisse procéder lui-même aux réparations. Cependant, les frais supplémentaires engendrés par le remplacement de ces pièces par Hewlett Packard Enterprise dépendent du type de service de garantie désigné pour votre produit.

³Non—Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour être remplacées par le client. Afin de se conformer aux exigences de la garantie la garantie du client, Hewlett Packard Enterprise demande à un fournisseur de services agréé de procéder au remplacement de la pièce. Ces pièces sont signalées par le mot « Non » dans le Catalogue de pièces illustré.

¹Obbligatorio—Parti per le quali il cliente è tenuto a effettuare autonomamente la riparazione. Se si richiede l'intervento di Hewlett Packard Enterprise per la sostituzione di queste parti, al cliente verranno addebitate le spese di viaggio e manodopera dell'operazione.

²Facoltativo—Parti per le quali la riparazione in autonomia da parte del cliente è facoltativa. Queste parti sono progettate per consentire anche la riparazione da parte del cliente. Tuttavia, se il cliente richiede l'intervento di Hewlett Packard Enterprise per la sostituzione, potrebbero essere addebitate spese aggiuntive a seconda del tipo di garanzia in assistenza previsto per il prodotto.

³No—Alcune parti Hewlett Packard Enterprise non sono progettate la riparazione in autonomia da parte del cliente. In base a quanto previsto dalla garanzia per il cliente, Hewlett Packard Enterprise richiede l'intervento di un tecnico autorizzato per la sostituzione della parte. Queste parti sono contrassegnate con "No" nel catalogo parti illustrato.

¹Zwingend—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

²Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

³Nein—Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

¹Obligatorio—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

²Opcional—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

³No—Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

¹Verplicht—Onderdelen die de klant zelf moet vervangen. Als u Hewlett Packard Enterprise vraagt deze onderdelen te vervangen, worden er reis- en arbeidskosten voor deze service in rekening gebracht.

²Optioneel—Onderdelen die de klant zelf kan vervangen. Deze onderdelen zijn ook ontworpen om door de klant zelf te worden vervangen. Als u Hewlett Packard Enterprise verzoekt om deze te vervangen, kan het zijn dat hiervoor extra kosten in rekening worden gebracht, afhankelijk van het soort garantie dat op uw product van toepassing is.

³Geen—Sommige onderdelen van Hewlett Packard Enterprise zijn niet ontworpen om door de klant zelf te worden vervangen. Om te voldoen aan de garantievervoordrachten eist Hewlett Packard Enterprise dat een geautoriseerde serviceverlener het onderdeel vervangt. Deze onderdelen worden aangeduid met 'Geen' in de geïllustreerde onderdelencatalogus.

¹Obrigatório—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

²Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

³Não—Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

¹Mandatory : 必須 — カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

²Optional : 任意 — カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

³No : 除外 — Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

¹Mandatory — 客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

²Optional — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

³No — 某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

¹Mandatory — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 更換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

²Optional — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

³No — 某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。


¹Mandatory — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 해당 서비스에 대한 출장비 및 작업비가 청구됩니다.

²Optional — 고객 셀프 수리가 선택 사항인 부품. 이러한 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이러한 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

³No — 일부 Hewlett Packard Enterprise 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 요구하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 “No”라고 표시되어 있습니다.

System components

Hewlett Packard Enterprise continually improves and changes product parts. For complete and current supported parts information, see the Hewlett Packard Enterprise PartSurfer website (<http://www.hpe.com/info/partssurfer>).

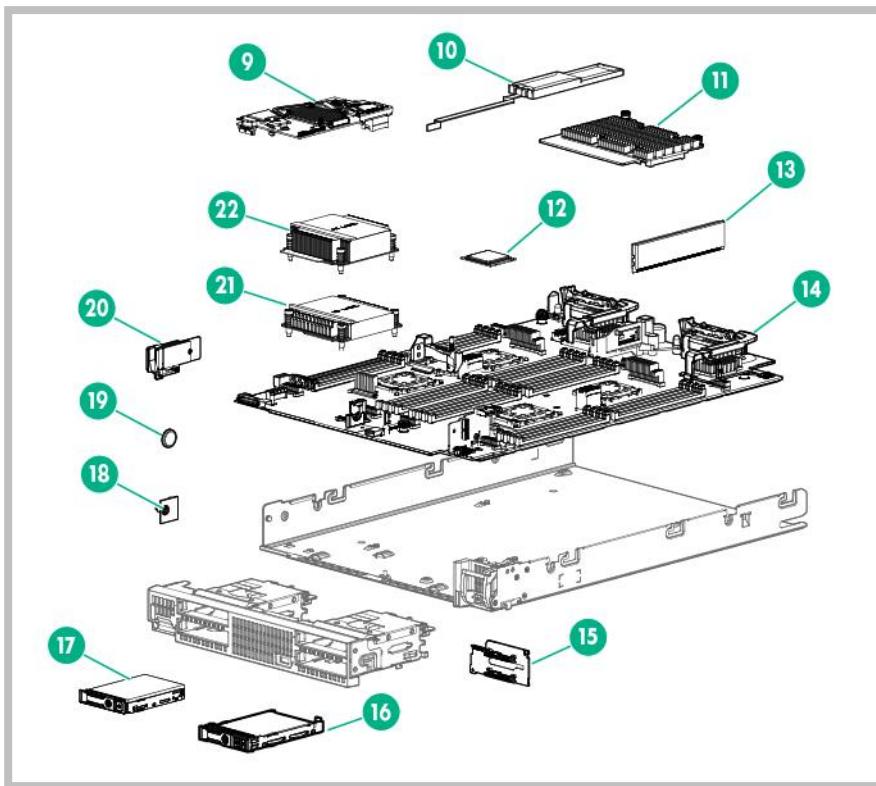

Item	Description	Spare part number	Customer self repair (on page 5)
9	Storage controllers	—	—
a)	HPE Smart Array P246br controller	750000-001	Mandatory1
b)	HPE LPe1605 16Gb Fibre Channel Host Bus Adapter*	718577-001	Mandatory1
c)	HPE QMH2672 16Gb Fibre Channel Host Bus Adapter*	711305-001	Mandatory1
d)	Smart Array P741m-2G FBWC 12 GB 4 ports external mezzanine SAS controller*	749998-001	Mandatory1
10	Smart Storage battery with cable, 12 W, 7.2 V	750452-001	Mandatory1
11	Network adapters	—	—
a)	FlexFabric 10Gb 2-port 536FLB Adapter	768080-001	Mandatory1
b)	FlexFabric 20Gb 2-port 630M Adapter*	701528-001	Mandatory1
c)	FlexFabric 20Gb 2-port 630FLB Adapter*	701527-001	Mandatory1
d)	FlexFabric 20Gb 2-port 650M Adapter*	701535-001	Mandatory1
e)	FlexFabric 20Gb 2-port 650FLB Adapter*	701536-001	Mandatory1
f)	Ethernet 1Gb 4-port 366M Adapter*	616010-001	Mandatory1
g)	Ethernet 10Gb 2-port 560FLB Adapter*	656243-001	Mandatory1
h)	Ethernet 10Gb 2-port 570M Adapter*	730700-001	Mandatory1

	i) Ethernet 10Gb 2-port 570FLB Adapter*	730701-001	Mandatory1
12	Processors	—	—
	Intel Xeon E5-4600 v3 processors	—	—
	a) 1.7-GHz Intel Xeon E5-4610 v3 processor* **	791915-001	Optional2
	b) 1.7-GHz Intel Xeon E5-4640 v3 processor* **	791913-001	Optional2
	c) 1.8-GHz Intel Xeon E5-4620 v3 processor* **	791914-001	Optional2
	d) 2.0-GHz Intel Xeon E5-4667 v3 processor* **	791917-001	Optional2
	e) 2.1-GHz Intel Xeon E5-4650 v3 processor* **	791912-001	Optional2
	f) 2.1-GHz Intel Xeon E5-4660 v3 processor* **	791911-001	Optional2
	g) 2.1-GHz Intel Xeon E5-4669 v3 processor* **	791916-001	Optional2
	h) 2.6-GHz Intel Xeon E5-4627 v3 processor* **	791918-001	Optional2
	i) 2.9-GHz Intel Xeon E5-4655 v3 processor* **	791919-001	Optional2
	Intel Xeon E5-4600 v4 processors	—	—
	a) 1.8 GHz Intel Xeon E5-4610 v4, 10c, 105W* **	852377-001	Optional2
	b) 2.1 GHz Intel Xeon E5-4620 v4, 10c, 105W* **	852378-001	Optional2
	c) 2.1 GHz Intel Xeon E5-4640 v4, 12c, 105W* **	852379-001	Optional2
	d) 2.2 GHz Intel Xeon E5-4650 v4, 14c, 105W* **	852380-001	Optional2
	e) 2.2 GHz Intel Xeon E5-4660 v4, 16c, 120W* **	852381-001	Optional2
	f) 2.2 GHz Intel Xeon E5-4667 v4, 18c, 135W* **	852384-001	Optional2
	g) 2.2 GHz Intel Xeon E5-4669 v4, 22c, 135W* **	852385-001	Optional2
	h) 2.5 GHz Intel Xeon E5-4655 v4, 8c, 135W* **	852383-001	Optional2
	i) 2.6 GHz Intel Xeon E5-4627 v4, 10c, 135W* **	852382-001	Optional2
13	DIMMs	—	—
	DIMMs optimized for Intel Xeon E5-4600 v3 processors	—	—
	a) 8-GB, Single Rank x4 PC4-2133P-R (DDR4-2133)	774170-001	Mandatory1
	b) 8-GB, Dual Rank x8 PC4-2133P-R (DDR4-2133)*	774171-001	Mandatory1
	c) 16-GB, Dual Rank x4 PC4-2133P-R (DDR4-2133)*	774172-001	Mandatory1
	d) 16-GB, Dual Rank x4 PC4-2133P-L (DDR4-2133)*	774173-001	Mandatory1
	e) 32-GB, Dual Rank x4 PC4-2133P-R (DDR4-2133)*	774175-001	Mandatory1
	f) 32-GB, Quad Rank x4 PC4-2133P-L (DDR4-2133)*	774174-001	Mandatory1
	DIMMs optimized for Intel Xeon E5-4600 v4 processors	—	—
	a) 8-GB, single-rank x8 PC4-2400T-R*	819410-001	Mandatory1
	b) 16-GB, dual-rank x4 PC4-2400T-R*	846740-001	Mandatory1
	c) 32-GB, dual-rank x4 PC4-2400T-R*	819412-001	Mandatory1
	d) 32-GB, dual-rank x4 PC4-2400T-L*	819414-001	Mandatory1
	e) 64-GB, quad-rank x4 PC4-2400T-L*	819413-001	Mandatory1

14	System board assembly	—	—
	a) System board assembly for Intel Xeon E5-4600 v3 processors	759483-001	Optional2
	b) System board assembly for Intel Xeon E5-4600 v4 processors*	858552-001	Optional2
15	Drive backplane	—	—
	a) SAS/SATA drive backplane	795117-001	Optional2
	b) NVMe drive backplane*	744413-001	Optional2
	Drives	—	—
16	NVMe drives	—	—
	a) 400-GB, SSD, Write intensive, NVMe, 2.5in ME SC2 PLP	765059-001	Mandatory1
	b) 400-GB, SSD, Mixed use, NVMe, 2.5in VE SC2 PLP*	765063-001	Mandatory1
	c) 400-GB, SSD, Read intensive, NVMe, 2.5in VE SC2 PLP*	765067-001	Mandatory1
	d) 800-GB, SSD, Write intensive, NVMe, 2.5in ME SC2 PLP*	765060-001	Mandatory1
	e) 800-GB, SSD, Mixed use, NVMe, 2.5in VE SC2 PLP*	765064-001	Mandatory1
	f) 1.2-TB, SSD, Read intensive, NVMe, 2.5in VE SC2 PLP*	765068-001	Mandatory1
	g) 1.6-TB, SSD, Write intensive, NVMe, 2.5in ME SC2 PLP*	765061-001	Mandatory1
	h) 1.6-TB, SSD, Mixed use, NVMe, 2.5in VE SC2 PLP*	765065-001	Mandatory1
	i) 2.0-TB, SSD, Read intensive, NVMe, 2.5in LE SC2 PLP*	765066-001	Mandatory1
	j) 2.0-TB, SSD, Read intensive, NVMe, 2.5in VE SC2 PLP*	765069-001	Mandatory1
17	SAS/SATA drives	—	—
	a) 146-GB, SAS, SFF, 15,000-rpm, 6G	653950-001	Mandatory1
	b) 300-GB, SAS, SFF, 10,000-rpm, 6G*	653955-001	Mandatory1
	c) 300-GB, SAS, SFF, 15,000-rpm, 6G*	653960-001	Mandatory1
	d) 300-GB, SAS, SFF, 15,000-rpm, 12G*	759546-001	Mandatory1
	e) 300-GB, SAS, SFF, 10,000-rpm, 12G*	785410-001	Mandatory1
	f) 450-GB, SAS, SFF, 10,000-rpm, 6G*	653956-001	Mandatory1
	g) 450-GB, SAS, SFF, 15,000-rpm, 12G*	759547-001	Mandatory1
	h) 500-GB, SATA, SFF, 7,200-rpm, 6G*	656107-001	Mandatory1
	i) 500-GB, SAS, SFF, 7,200-rpm, 6G*	653953-001	Mandatory1
	j) 600-GB, SAS, SFF, 10,000-rpm, 6G*	653957-001	Mandatory1
	k) 600-GB, SAS, SFF, 10,000-rpm, 12G*	781516-B21	Mandatory1
	l) 600-GB, SAS, SFF, 15,000-rpm, 12G*	759548-001	Mandatory1
	m) 600-GB, SAS, SFF, 15,000-rpm, 12G*	748435-001	Mandatory1
	n) 900-GB, SAS, SFF, 10,000-rpm, 6G*	653971-001	Mandatory1
	o) 900-GB, SAS, SFF, 10,000-rpm, 12G*	785411-001	Mandatory1
	p) 1-TB, SATA, SFF, 7,200-rpm, 6G*	765868-001	Mandatory1

q) 1-TB, SAS, SFF, 7,200-rpm, 6G*	653954-001	Mandatory1
r) 1-TB 6G, SATA, SFF, 7,200-rpm, 6G*	656108-001	Mandatory1
s) 1-TB, SAS, SFF, 7,200-rpm, 12G*	765872-001	Mandatory1
t) 1.2-TB, SAS, SFF, 10,000-rpm, 6G*	718292-001	Mandatory1
u) 1.2-TB, SAS, SFF, 10,000-rpm, 12G*	781578-001	Mandatory1
v) 1.8-TB, SAS, SFF, 10,000-rpm, 12G	791055-001	Mandatory1
w) 2-TB, SATA, SFF, 7,200-rpm, 6G*	765869-001	Mandatory1
x) 2-TB, SAS, SFF, 7,200-rpm, 12G*	765873-001	Mandatory1
Solid state drives	—	—
a) 80-GB, SATA, VE, SFF, 6G*	734562-001	Mandatory1
b) 100-GB, SATA, ME, SFF, 6G*	692164-001	Mandatory1
c) 120-GB, SATA, VE, SFF, 6G*	765013-001	Mandatory1
d) 120-GB, SATA, VE, SFF, 6G*	718136-001	Mandatory1
e) 120-GB, SATA, VE, SFF, 6G*	757361-001	Mandatory1
f) 200-GB, SATA, ME, SFF, 6G*	692165-001	Mandatory1
g) 200-GB, SAS, ME, SFF, 12G*	741224-001	Mandatory1
h) 200-GB, SAS, HE, SFF, 12G*	741230-001	Mandatory1
i) 240-GB, SATA, VE, SFF, 6G*	765014-001	Mandatory1
j) 240-GB, SATA, VE, SFF, 6G*	718137-001	Mandatory1
k) 240-GB, SATA, VE, SFF, 6G*	757366-001	Mandatory1
l) 300-GB, SATA, VE, SFF, 6G*	739954-001	Mandatory1
m) 400-GB, SATA, ME, SFF, 6G*	692166-001	Mandatory1
n) 400-GB, SATA, LE, SFF, 6G*	768268-001	Mandatory1
o) 400-GB, SAS, ME, SFF, 12G*	741226-001	Mandatory1
p) 400-GB, SAS, HE, SFF, 12G*	741232-001	Mandatory1
q) 400-GB, SAS, ME, SFF, 12G*	780432-001	Mandatory1
r) 480-GB, SATA, VE, SFF, 6G*	765015-001	Mandatory1
s) 480-GB, SATA, VE, SFF, 6G*	718138-001	Mandatory1
t) 480-GB, SATA, VE, SFF, 6G*	757371-001	Mandatory1
u) 600-GB, SATA, VE, SFF, 6G*	739959-001	Mandatory1
v) 800-GB, SATA, VE, SFF, 6G*	718139-001	Mandatory1
w) 800-GB, SATA, ME, SFF, 6G*	692167-001	Mandatory1
x) 800-GB, SATA, VE, SFF, 6G*	765016-001	Mandatory1
y) 800-GB, SAS, HE, SFF, 12G*	741234-001	Mandatory1
z) 800-GB, SAS, ME, SFF, 12G*	741228-001	Mandatory1
aa) 800-GB, SAS, VE, SFF, 12G*	762749-001	Mandatory1
bb) 800-GB, SAS, ME, SFF, 12G*	780434-001	Mandatory1

	cc) 960-GB, SATA, LE, SFF, 6G*	757231-001	Mandatory1
	dd) 1.6-TB, SATA, LE, SFF, 6G*	768270-001	Mandatory1
	ee) 1.6-TB, SATA, VE, SFF, 6G*	757381-001	Mandatory1
	ff) 1.6-TB, SAS, VE, SFF, 12G*	762751-001	Mandatory1
	gg) 1.6-TB, SAS, ME, SFF, 12G*	780436-001	Mandatory1
18	Trusted Platform Module	—	—
	a) TPM 1.2 module kit	505836-001	No3
	b) TPM 2.0 module kit*	812119-001	No3
19	System battery	234556-001	Optional2
20	M.2 SSD Enablement board	—	—
	a) 64 GB M.2 SATA SSD board	749154-001	Mandatory1
	b) Dual 64 GB M.2 SATA SSD board*	797906-001	Mandatory1
	c) 120-GB Read intensive-1 M.2 Blade Enablement board*	846756-001	Mandatory1
	d) Dual 120-GB Read intensive-1 M.2 Blade Enablement board*	846757-001	Mandatory1
21	Heatsink (for processor 3 or 4)	777686-001	Optional2
22	Heatsink (for processor 1 or 2)	777687-001	Optional2
23	Mezzanine options	—	—
	a) InfiniBand QDR/Ethernet 10Gb 2-port 544+M adapter*	764734-001	Mandatory ¹
	b) InfiniBand FDR/Ethernet 10Gb/40Gb 2-port 544+M adapter*	764735-001	Mandatory ¹
	c) InfiniBand FDR 2-port 545M adapter*	705086-001	Mandatory ¹
24	NVMe pass-through board*	744408-001	Optional ²
25	c-Class blade SUV cable*	416003-001	Mandatory ¹
26	SATA cable*	784961-001	Mandatory ¹
27	SAS cable*	806558-001	Mandatory ¹

*Not shown

**Do not mix processors with different speeds or cache sizes.

¹Mandatory—Parts for which customer self repair is mandatory. If you request Hewlett Packard Enterprise to replace these parts, you will be charged for the travel and labor costs of this service.

²Optional—Parts for which customer self repair is optional. These parts are also designed for customer self repair. If, however, you require that Hewlett Packard Enterprise replace them for you, there may or may not be additional charges, depending on the type of warranty service designated for your product.

³No—Some Hewlett Packard Enterprise parts are not designed for customer self repair. In order to satisfy the customer warranty, Hewlett Packard Enterprise requires that an authorized service provider replace the part. These parts are identified as "No" in the Illustrated Parts Catalog.

¹Obligatoire—Pièces pour lesquelles le client doit procéder lui-même aux réparations. Si vous demandez à Hewlett Packard Enterprise de procéder au remplacement de ces pièces, les frais de transport et de main d'œuvre pour ce service vous seront facturés.

²Facultatif—Pièces pour lesquelles une réparation par le client est facultative. Ces pièces sont également conçues pour que le client puisse procéder lui-même aux réparations. Cependant, les frais supplémentaires engendrés par le remplacement de ces pièces par Hewlett Packard Enterprise dépendent du type de service de garantie désigné pour votre produit.

³Non—Certaines pièces Hewlett Packard Enterprise ne sont pas conçues pour être remplacées par le client. Afin de se conformer aux exigences de la garantie la garantie du client, Hewlett Packard Enterprise demande à un fournisseur de services agréé de procéder au remplacement de la pièce. Ces pièces sont signalées par le mot « Non » dans le Catalogue de pièces illustré.

¹Obbligatorio—Parti per le quali il cliente è tenuto a effettuare autonomamente la riparazione. Se si richiede l'intervento di Hewlett Packard Enterprise per la sostituzione di queste parti, al cliente verranno addebitate le spese di viaggio e manodopera dell'operazione.

²Facoltativo—Parti per le quali la riparazione in autonomia da parte del cliente è facoltativa. Queste parti sono progettate per consentire anche la riparazione da parte del cliente. Tuttavia, se il cliente richiede l'intervento di Hewlett Packard Enterprise per la sostituzione, potrebbero essere addebitate spese aggiuntive a seconda del tipo di garanzia in assistenza previsto per il prodotto.

³No—Alcune parti Hewlett Packard Enterprise non sono progettate per la riparazione in autonomia da parte del cliente. In base a quanto previsto dalla garanzia per il cliente, Hewlett Packard Enterprise richiede l'intervento di un tecnico autorizzato per la sostituzione della parte. Queste parti sono contrassegnate con "No" nel catalogo parti illustrato.

¹Zwingend—Teile, für die das Customer Self Repair-Verfahren zwingend vorgegeben ist. Wenn Sie den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen, werden Ihnen die Anfahrt- und Arbeitskosten für diesen Service berechnet.

²Optional—Teile, für die das Customer Self Repair-Verfahren optional ist. Diese Teile sind auch für Customer Self Repair ausgelegt. Wenn Sie jedoch den Austausch dieser Teile von Hewlett Packard Enterprise vornehmen lassen möchten, können bei diesem Service je nach den für Ihr Produkt vorgesehenen Garantiebedingungen zusätzliche Kosten anfallen.

³Nein—Einige Hewlett Packard Enterprise Teile sind nicht für Customer Self Repair ausgelegt. Um den Garantieanspruch des Kunden zu erfüllen, muss das Teil von einem Hewlett Packard Enterprise Servicepartner ersetzt werden. Im illustrierten Teilekatalog sind diese Teile mit „No“ bzw. „Nein“ gekennzeichnet.

¹Obligatorio—Componentes cuya reparación por parte del usuario es obligatoria. Si solicita a Hewlett Packard Enterprise que realice la sustitución de estos componentes, tendrá que hacerse cargo de los gastos de desplazamiento y de mano de obra de dicho servicio.

²Opcional—Componentes cuya reparación por parte del usuario es opcional. Estos componentes también están diseñados para que puedan ser reparados por el usuario. Sin embargo, si precisa que Hewlett Packard Enterprise realice su sustitución, puede o no conllevar costes adicionales, dependiendo del tipo de servicio de garantía correspondiente al producto.

³No—Algunos componentes de Hewlett Packard Enterprise no están diseñados para que puedan ser reparados por el usuario. Para que el usuario haga valer su garantía, Hewlett Packard Enterprise pone como condición que un proveedor de servicios autorizado realice la sustitución de estos componentes. Dichos componentes se identifican con la palabra "No" en el catálogo ilustrado de componentes.

¹Verplicht—Onderdelen die de klant zelf moet vervangen. Als u Hewlett Packard Enterprise vraagt deze onderdelen te vervangen, worden er reis- en arbeidskosten voor deze service in rekening gebracht.

²Optioneel—Onderdelen die de klant zelf kan vervangen. Deze onderdelen zijn ook ontworpen om door de klant zelf te worden vervangen. Als u Hewlett Packard Enterprise verzoekt om deze te vervangen, kan het zijn dat hiervoor extra kosten in rekening worden gebracht, afhankelijk van het soort garantie dat op uw product van toepassing is.

³Geen—Sommige onderdelen van Hewlett Packard Enterprise zijn niet ontworpen om door de klant zelf te worden vervangen. Om te voldoen aan de garantievoorwaarden eist Hewlett Packard Enterprise dat een geautoriseerde serviceverlener het onderdeel vervangt. Deze onderdelen worden aangeduid met 'Geen' in de geillustreerde onderdelencatalogus.

¹Obrigatório—Peças cujo reparo feito pelo cliente é obrigatório. Se desejar que a Hewlett Packard Enterprise substitua essas peças, serão cobradas as despesas de transporte e mão-de-obra do serviço.

²Opcional—Peças cujo reparo feito pelo cliente é opcional. Essas peças também são projetadas para o reparo feito pelo cliente. No entanto, se desejar que a Hewlett Packard Enterprise as substitua, pode haver ou não a cobrança de taxa adicional, dependendo do tipo de serviço de garantia destinado ao produto.

³Não—Algumas peças da Hewlett Packard Enterprise não são projetadas para o reparo feito pelo cliente. A fim de cumprir a garantia do cliente, a Hewlett Packard Enterprise exige que um técnico autorizado substitua a peça. Essas peças estão identificadas com a marca "No" (Não), no catálogo de peças ilustrado.

¹Mandatory : 必須 — カスタマーセルフリペアが必須の部品。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、その修理サービスに関する交通費および人件費がお客様に請求されます。

²Optional : 任意 — カスタマーセルフリペアが任意である部品。この部品もカスタマーセルフリペア用です。当該部品について、もしもお客様がHewlett Packard Enterpriseに交換作業を依頼される場合には、お買い上げの製品に適用される保証サービス内容の範囲内においては、別途費用を負担していただくことなく保証サービスを受けることができます。

³No : 除外 — Hewlett Packard Enterprise製品の一部の部品は、カスタマーセルフリペアの対象外です。製品の保証を継続するためには、Hewlett Packard EnterpriseまたはHewlett Packard Enterprise正規保守代理店による交換作業が必須となります。部品カタログには、当該部品がカスタマーセルフリペア除外品である旨が記載されています。

¹Mandatory — 客户必须自行维修的部件。如果您请求 Hewlett Packard Enterprise 更换这些部件，则必须为该服务支付差旅费和人工费用。

²Optional — 客户可以选择是否自行维修的部件。这些部件也是为客户自行维修设计的。不过，如果您要求 Hewlett Packard Enterprise 为您更换这些部件，则根据为您的产品指定的保修服务类型，Hewlett Packard Enterprise 可能收取或不再收取任何附加费用。

³No — 某些 Hewlett Packard Enterprise 部件的设计并未考虑客户自行维修。为了满足客户保修的需要，Hewlett Packard Enterprise 要求授权服务提供商更换相关部件。这些部件在部件图解目录中标记为“否”。

¹Mandatory — 客戶自行維修所使用的零件是強制性的。如果您要求 Hewlett Packard Enterprise 換這些零件，Hewlett Packard Enterprise 將會向您收取此服務所需的外出費用與勞動成本。

²Optional — 客戶自行維修所使用的零件是選購的。這些零件也設計用於客戶自行維修之用。不過，如果您要求 Hewlett Packard Enterprise 為您更換，則可能需要也可能不需要負擔額外的費用，端視針對此產品指定的保固服務類型而定。

³No — 某些 Hewlett Packard Enterprise 零件沒有消費者可自行維修的設計。為符合客戶保固，Hewlett Packard Enterprise 需要授權的服務供應商更換零件。這些零件在圖示的零件目錄中，被標示為「否」。

¹Mandatory — 고객 셀프 수리가 의무 사항인 필수 부품. 사용자가 Hewlett Packard Enterprise에 이 부품의 교체를 요청할 경우 해당 서비스에 대한 출장비 및 작업비가 청구됩니다.

²Optional — 고객 셀프 수리가 선택 사항인 부품. 이러한 부품들도 고객 셀프 수리가 가능하도록 설계되었습니다. 하지만 사용자가 Hewlett Packard Enterprise에 이러한 부품의 교체를 요청할 경우 사용자가 구입한 제품에 해당하는 보증 서비스 유형에 따라 추가 비용 없이 교체가 가능할 수 있습니다.

³No — 일부 Hewlett Packard Enterprise 부품은 고객 셀프 수리가 불가능하도록 설계되었습니다. Hewlett Packard Enterprise는 만족스러운 고객 보증을 위해 공인 서비스 제공업체를 통해 부품을 교체하도록 요구하고 있습니다. 이러한 부품들은 Illustrated Parts Catalog에 "No"라고 표시되어 있습니다.

Removal and replacement procedures

Required tools

You will need the following items for some procedures:

- T-15 Torx screwdriver
- T-10 Torx screwdriver
- No. 2 Phillips screwdriver
- Insight Diagnostics software ("HPE Insight Diagnostics" on page 65)

Safety considerations

Before performing service procedures, review all the safety information.

Preventing electrostatic discharge

To prevent damaging the system, be aware of the precautions you must follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage:


- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Server blade warnings and cautions

-
-  **WARNING:** To reduce the risk of shock or injury from high-current electrical energy, do not remove the server access panel and then install the server into the enclosure.
-
-  **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.
-
-  **CAUTION:** Do not operate the server with the access panel removed. Operating the server in this manner results in improper airflow and improper cooling that can lead to thermal damage.
-
-  **CAUTION:** When performing non-hot-plug operations, you must power down the server blade and/or the system. However, it may be necessary to leave the server blade powered up when performing other operations, such as hot-plug installations or troubleshooting.

Symbols on equipment

The following symbols may be placed on equipment to indicate the presence of potentially hazardous conditions.

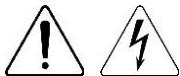

This symbol indicates the presence of hazardous energy circuits or electric shock hazards. Refer all servicing to qualified personnel.

WARNING: To reduce the risk of injury from electric shock hazards, do not open this enclosure. Refer all maintenance, upgrades, and servicing to qualified personnel.



This symbol indicates the presence of electric shock hazards. The area contains no user or field serviceable parts. Do not open for any reason.

WARNING: To reduce the risk of injury from electric shock hazards, do not open this enclosure.



This symbol on an RJ-45 receptacle indicates a network interface connection.

WARNING: To reduce the risk of electric shock, fire, or damage to the equipment, do not plug telephone or telecommunications connectors into this receptacle.



This symbol indicates the presence of a hot surface or hot component. If this surface is contacted, the potential for injury exists.

WARNING: To reduce the risk of injury from a hot component, allow the surface to cool before touching.



This symbol indicates that the component exceeds the recommended weight for one individual to handle safely.

WARNING: To reduce the risk of personal injury or damage to the equipment, observe local occupational health and safety requirements and guidelines for manual material handling.



These symbols, on power supplies or systems, indicate that the equipment is supplied by multiple sources of power.

WARNING: To reduce the risk of injury from electric shock, remove all power cords to disconnect power from the system completely.

Server blade preparation

To service any internal server component, power down the server and remove it from the enclosure.

Power down the server

Before powering down the server for any upgrade or maintenance procedures, perform a backup of critical server data and programs.



IMPORTANT: When the server is in standby mode, auxiliary power is still being provided to the system.

Depending on the Onboard Administrator configuration, use one of the following methods to power down the server:

- Press and release the Power On/Standby button.
This method initiates a controlled shutdown of applications and the OS before the server enters standby mode.
- Press and hold the Power On/Standby button for more than 4 seconds to force the server to enter standby mode.

This method forces the server to enter standby mode without properly exiting applications and the OS. If an application stops responding, you can use this method to force a shutdown.

- Use a virtual power button selection through iLO.
This method initiates a controlled remote shutdown of applications and the OS before the server enters standby mode.
- Use the Onboard Administrator CLI to execute one of the following commands:
 - `poweroff server [bay number]`
This command initiates a controlled shutdown of applications and the OS before the server enters standby mode.
 - `poweroff server [bay number] force`
This form of the command forces the server to enter standby mode without properly exiting applications and the OS. If an application stops responding, this method forces a shutdown.
- Use the Onboard Administrator GUI to initiate a shutdown:
 - a. Select the **Enclosure Information** tab.
 - b. In the Device Bays item, select the **Overall** checkbox.
 - c. From the Virtual Power menu, initiate a shutdown of applications and the OS:
 - For a controlled shutdown, select **Momentary Press**.
 - For an emergency shutdown, select **Press and Hold**.

Before proceeding, verify that the server is in standby mode by observing that the system power LED is amber.


Remove the server

 **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

 **CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding can cause ESD damage.

1. Back up all server data.
2. Power down the server (on page [26](#)).
3. Remove the server from the enclosure
 - a. Open the server release button.
 - b. Pull the server release lever.


c. Pull the server away from the enclosure.

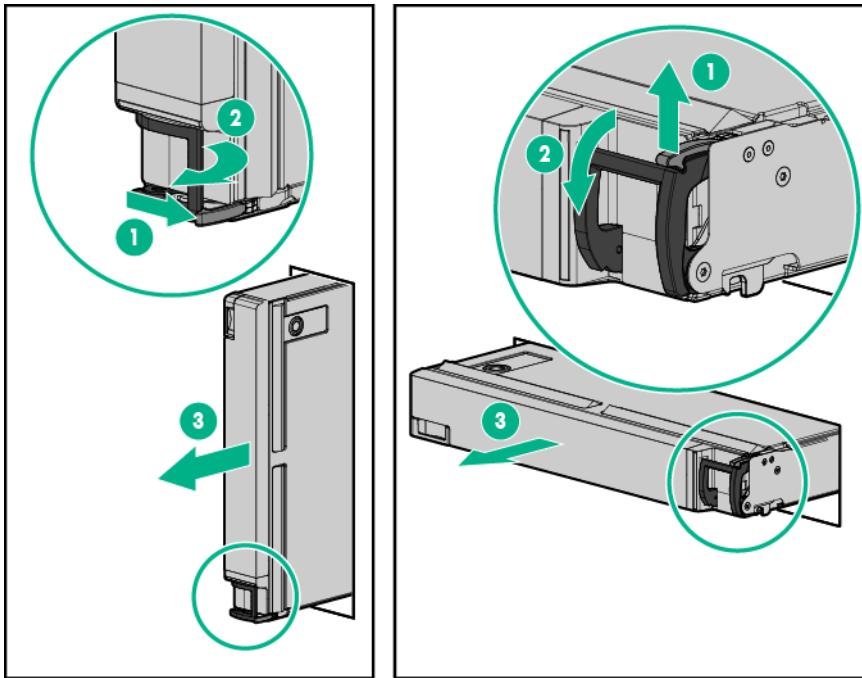


4. Place the server on a flat, level work surface.

Installing a server


1. Remove the connector covers.

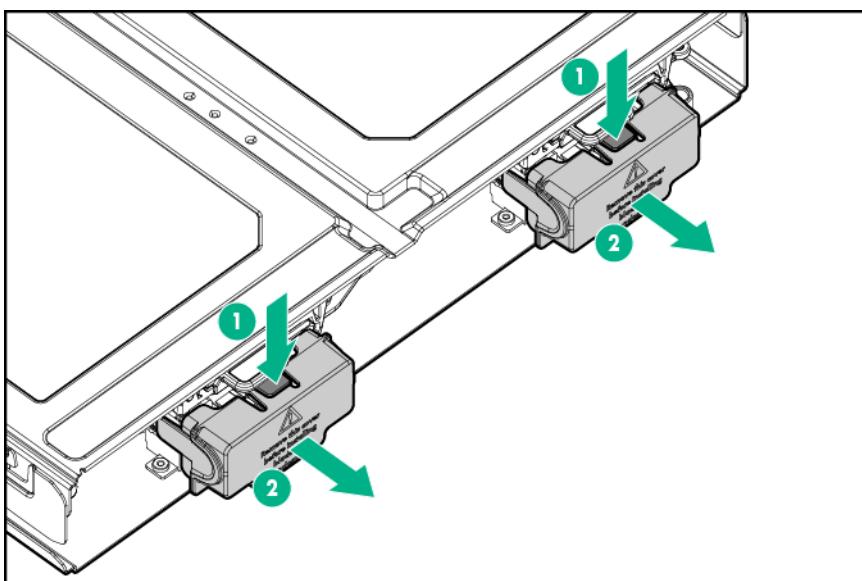

2. Open the server latch.

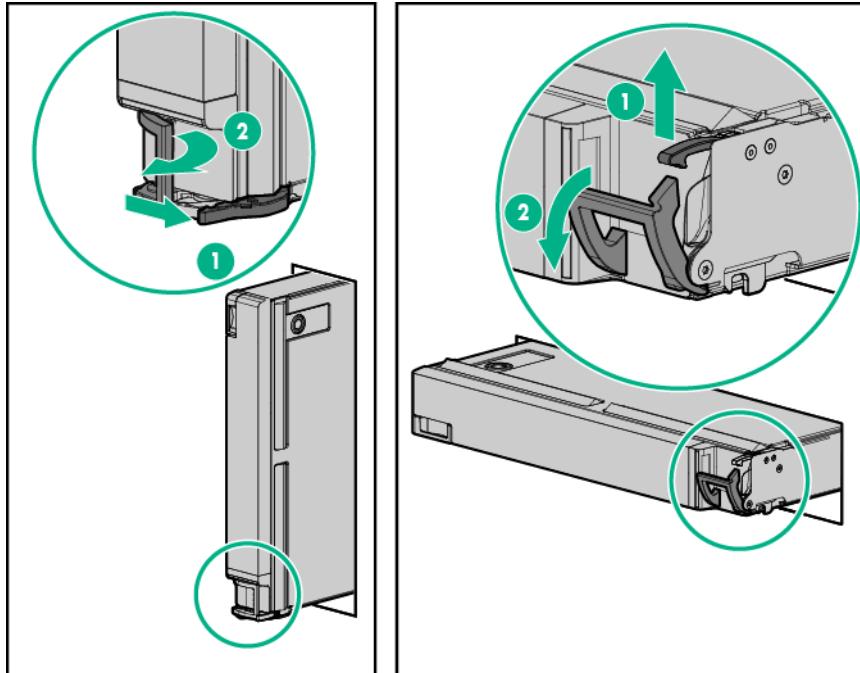

3. Install the server.

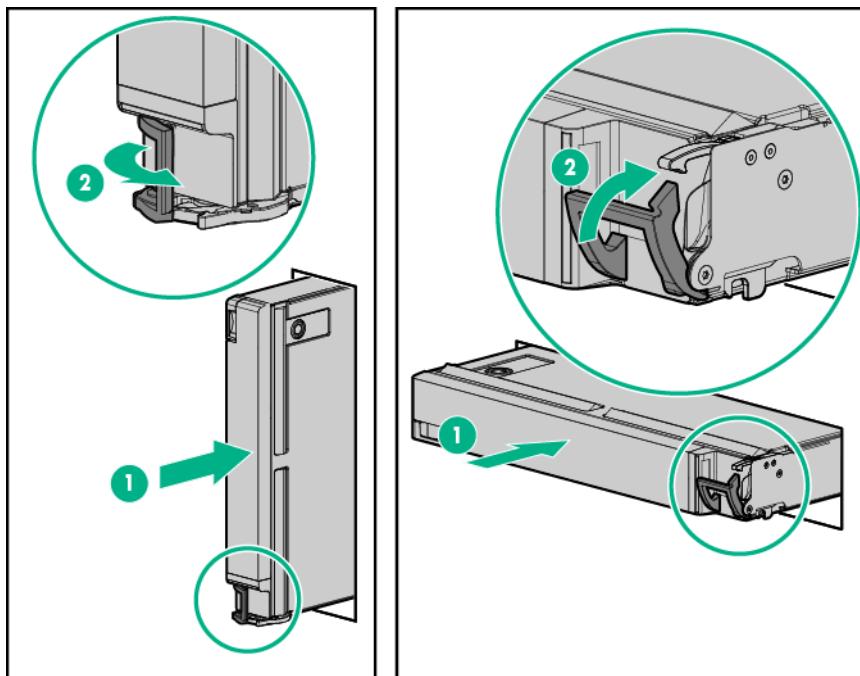


Access panel

⚠ WARNING: To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.

⚠ CAUTION: Do not operate the enclosure for long periods with the access panel open or removed. Operating the enclosure in this manner results in improper airflow and improper cooling that can lead to thermal damage.

To remove the component:


1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Press the access panel release button.
4. Slide the access panel towards the rear of the server, and then lift to remove the panel.

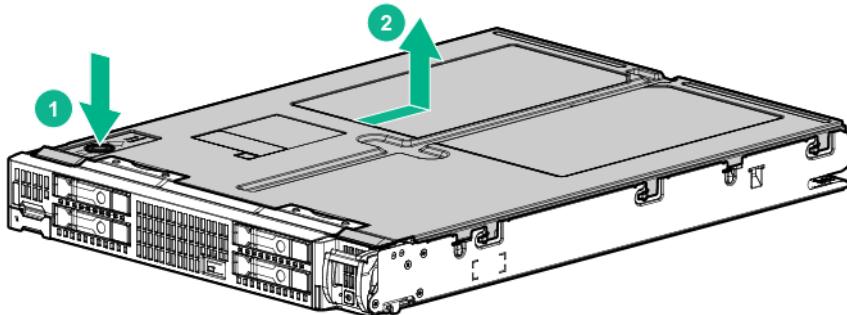

To replace the component, reverse the removal procedure.

Drive blank

Remove the component as indicated.

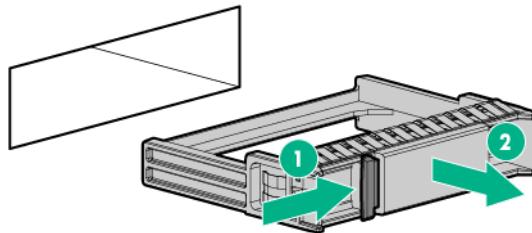


To replace the component, squeeze the release latch and slide the drive blank into the bay until it clicks into place.

SAS/SATA drive

To remove the component:

1. Determine the status of the drive from the drive LED definitions ("SATA/SAS drive carrier" on page 71).
2. Back up all server data on the drive.
3. Remove the drive.

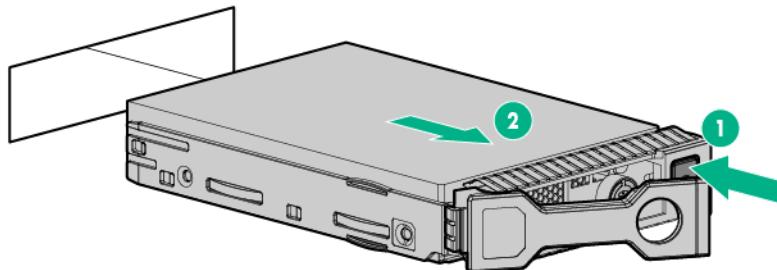


To replace the drive, slide the drive into the bay until it is fully seated, and then close the release lever to lock the drive in the bay.

NVMe SSD

The NVMe SSD is a PCIe BUS device. A device attached to a PCIe bus cannot be removed without allowing the device and bus to complete and cease the signal/traffic flow.

To remove the component:

1. Determine the status of the drive from the drive LED definitions ("NVMe SSD carrier" on page 72).
2. Back up all data on the drive.
3. Remove the drive:
 - a. Push the Power button.
 - b. The Do Not Remove button will illuminate and flash. Do not depress the button while it is illuminated.
 - c. Wait until the flashing stops and the icon on the button is no longer illuminated.
 - d. Depress the Do Not remove button to release the release lever.
 - e. Pull the release lever to disengage the drive from the backplane and slide the drive out of the drive bay.

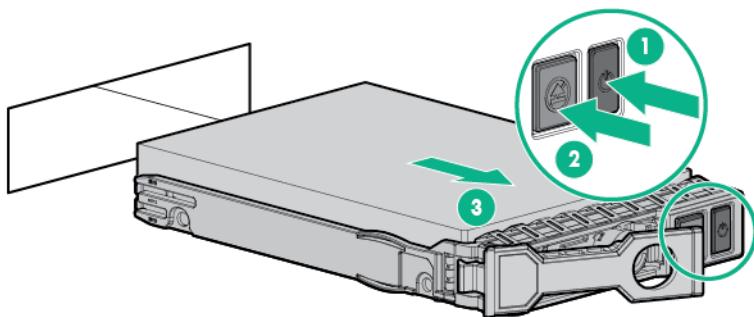


To replace the drive, slide the drive into the bay until it is fully seated, and then close the release lever to lock the drive in the bay.

Enclosure connector covers

To remove the component:

1. Place the server on a flat, level work surface.


2. Remove the enclosure connector covers.

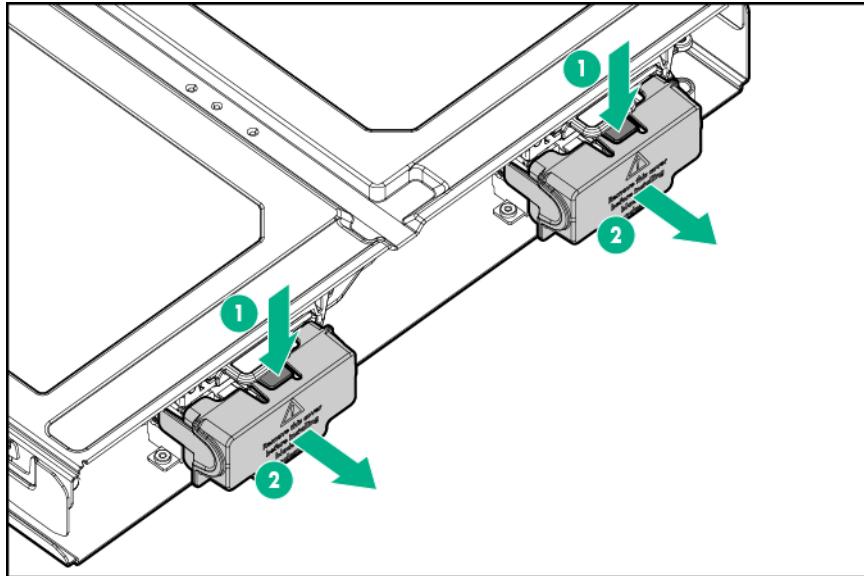

To replace the component, reverse the removal procedure.

Direct connect SATA cable

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("Access panel" on page 29).
4. Remove the direct connect SATA cables.
 - a. Press the latch on the connector, and then disconnect the cable from the system board.
 - b. Loosen the captive screw.
 - c. Disconnect the other end of the cable from the drive backplane.
 - d. Release the cable from the center DIMM baffle.

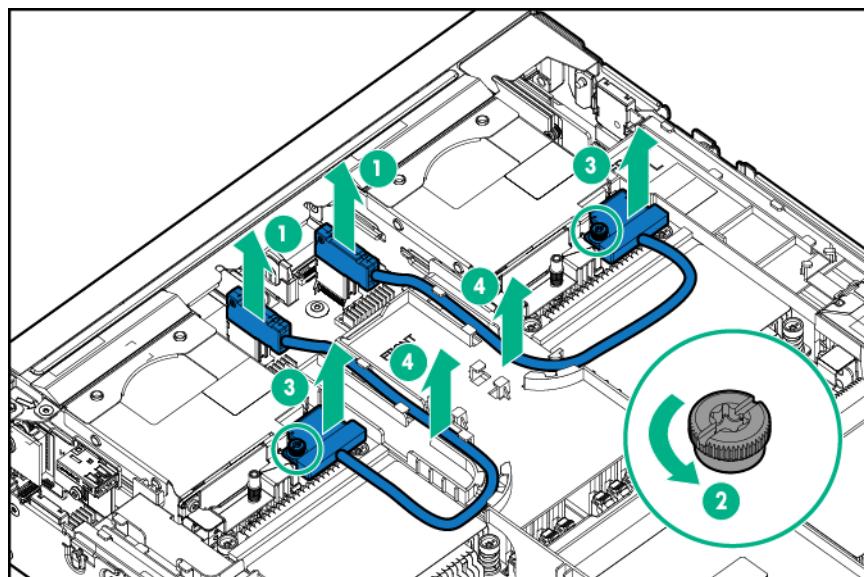


To replace the component, reverse the removal procedure.

Mezzanine assembly

To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("Access panel" on page 29).
4. Remove the mezzanine assembly.
 - a. Press the latch on the release lever.
 - b. Open the release lever.
 - c. Remove the assembly.

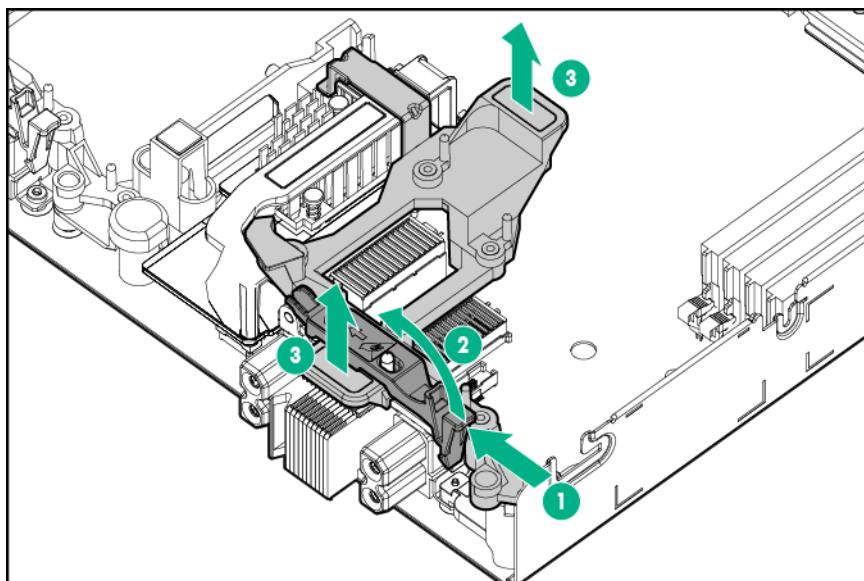


5. If installed, remove the mezzanine board.

To replace the component:

NOTE: If populating the mezzanine connector 3 slot in the server (behind processors 2 and 4), the mezzanine card must be placed in the top bracket slot.

1. If removed, install the mezzanine board.
2. Align the mezzanine assembly with the guide pins on the system board, and then install the mezzanine assembly on the system board.

3. Press down firmly on the mezzanine assembly handles, and then close the mezzanine assembly latch.

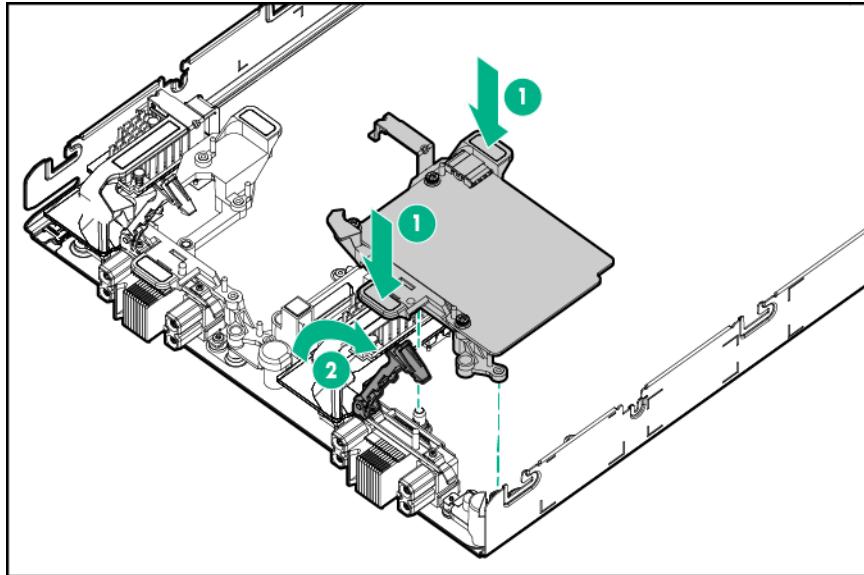


4. Install the access panel.
5. Install the server ("[Installing a server](#)" on page [28](#)).

Mezzanine options


To remove the component:

1. Power down the server (on page [26](#)).
2. Remove the server (on page [27](#)).
3. Place the server on a flat, level work surface.
4. Remove the access panel ("[Access panel](#)" on page [29](#)).
5. Remove the mezzanine assembly ("[Mezzanine assembly](#)" on page [33](#)).
6. Remove the mezzanine card from the mezzanine assembly.

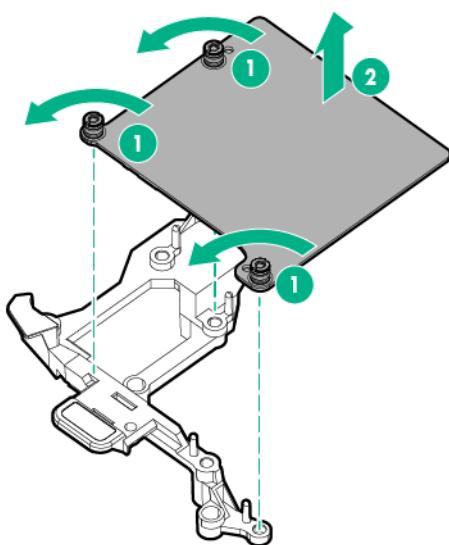


To replace the component:

1. Align the mezzanine card with the guide pins on the mezzanine assembly.

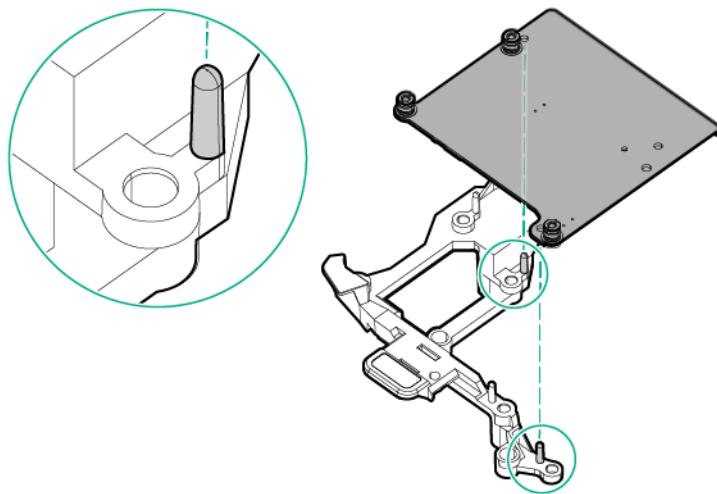


2. Install the mezzanine card in the mezzanine assembly, and then tighten the mezzanine card screws to secure the card to the mezzanine assembly.

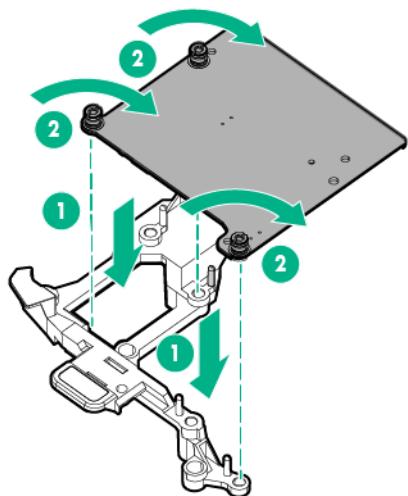

3. Align the mezzanine assembly with the guide pins on the system board, and then install the mezzanine assembly on the system board.

4. Press down firmly on the mezzanine assembly handles, and then close the mezzanine assembly latch.

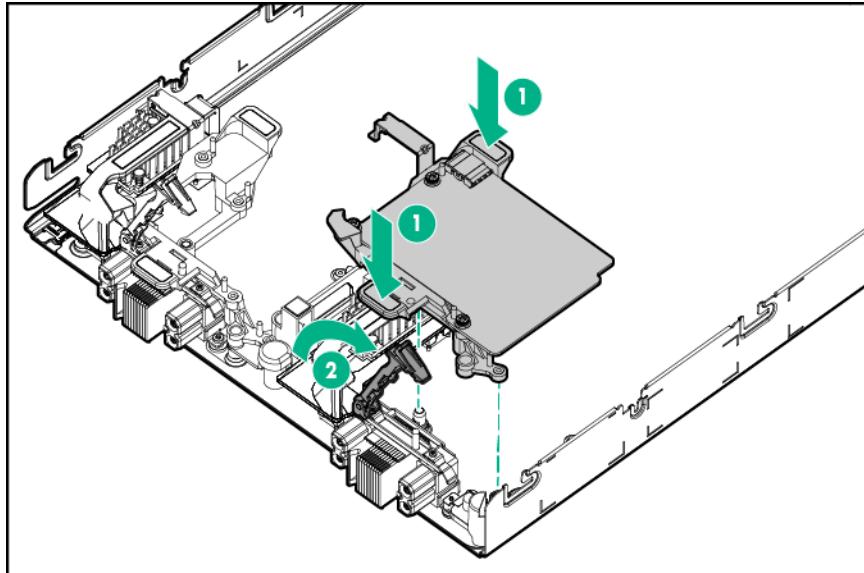


5. Install the access panel.
6. Install the server ("[Installing a server](#)" on page 28).

FlexibleLOM

To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("[Access panel](#)" on page 29).
4. Remove the mezzanine assembly ("[Mezzanine assembly](#)" on page 33).
5. Use the FlexibleLOM handle to remove the FlexibleLOM from the system board.

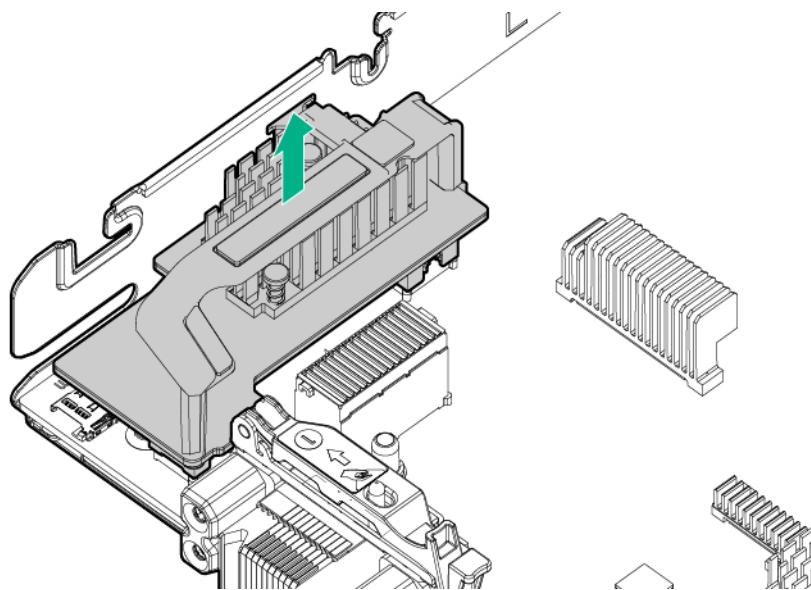


To replace the component, reverse the removal procedure.

SAS cable

To remove the component:

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Disconnect the SAS cable from the storage controller and the drive backplane.
 - a. Loosen the captive screw.
 - b. Disconnect the cable from the drive cage backplane.
 - c. Press the release latch on the connector.
 - d. Disconnect the cable from the connector.
 - e. Release the cable from the baffle.

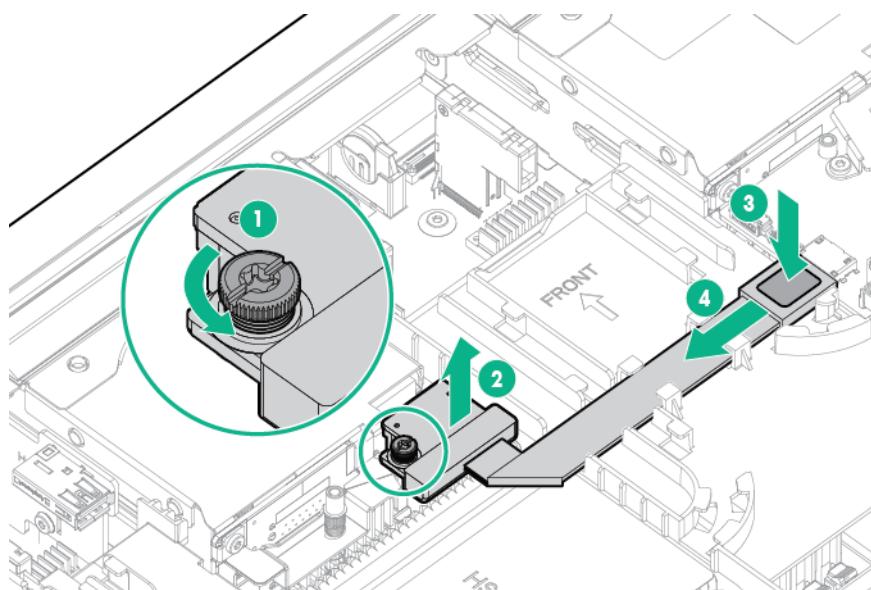


To replace the component, reverse the removal procedure.

Storage controller/NVMe pass-through board


To remove the component:

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. If removing the storage controller, remove the SAS cable ("SAS cable" on page 37).
6. Remove the storage controller/NVMe pass-through board.
 - a. Press the release latch.

b. Open the release lever.

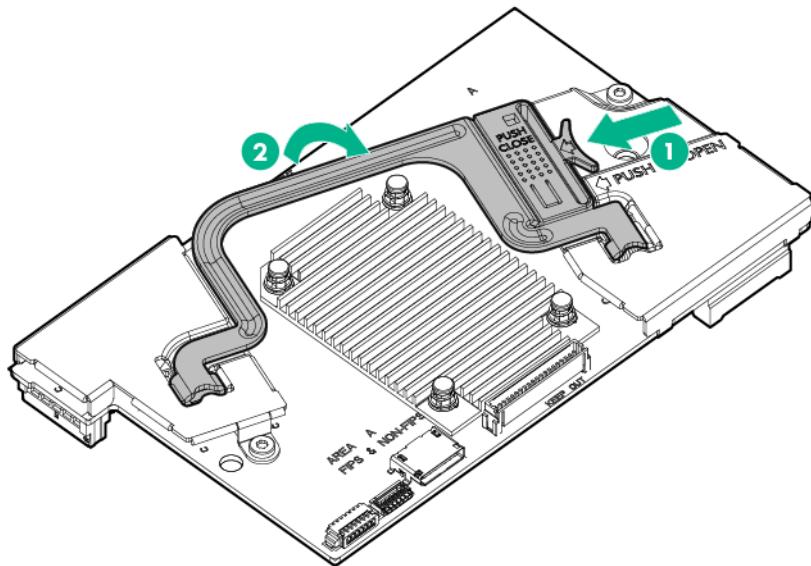

7. Hold the release lever and remove the storage controller/NVMe pass-through board.

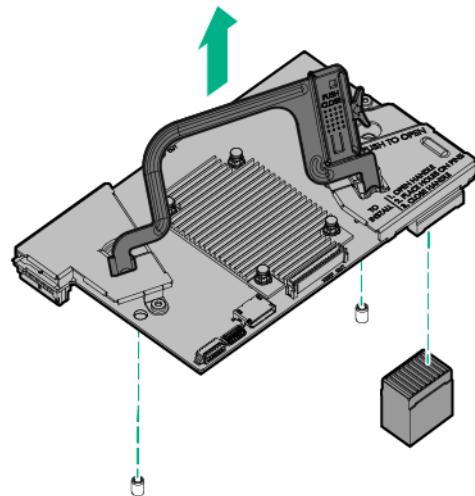


To replace the component, reverse the removal procedure.

Serial label pull tab

To remove the component:

1. If the SUV cable is installed, remove the SUV cable.
2. Fully extend the serial label pull tab.

3. Press both sides of the tab and extend it until the tab is completely removed from the chassis.

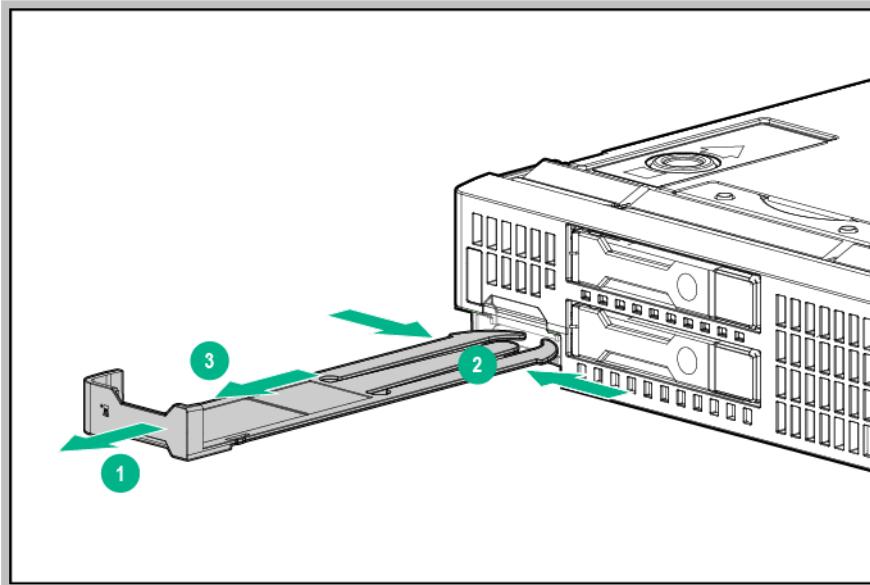


To replace the component, reverse the removal procedure.

Front panel drive cage assembly


To remove the component:

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
6. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).
7. Remove all drives ("SAS/SATA drive" on page 30, "NVMe SSD" on page 31).
8. Remove all DIMM baffles ("DIMM baffles" on page 42).
9. Remove the front panel/drive cage assembly

- a. Extend the serial label pull tab.

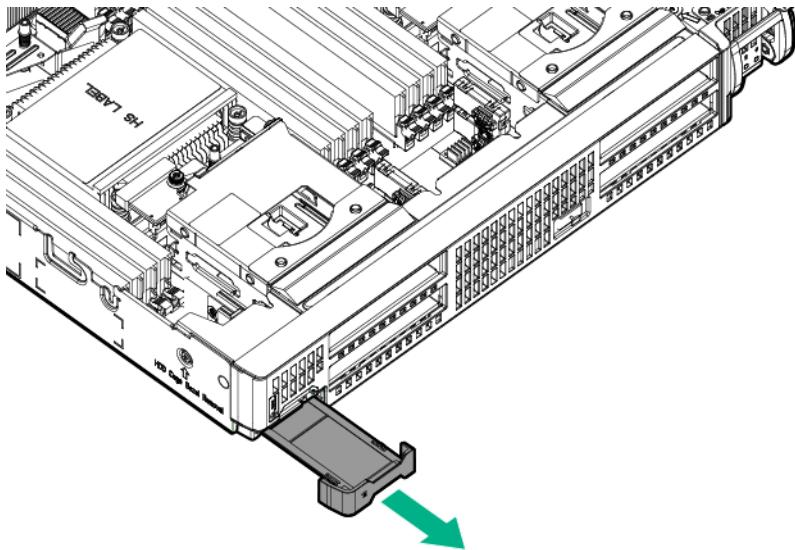

- b. Remove the three T-15 screws from the front cage assembly.
c. Remove the front panel/drive cage assembly.

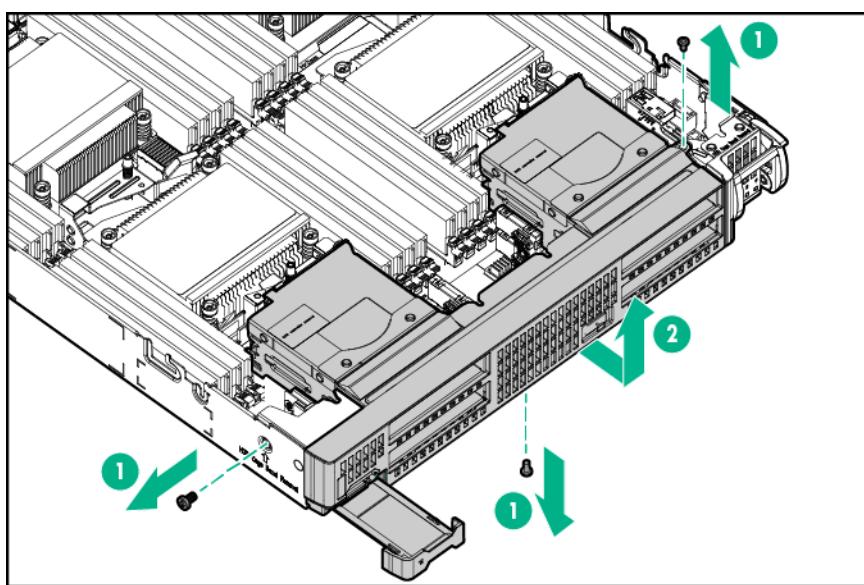


M.2 SSD assembly

To remove the component:

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).

6. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).
7. Remove all DIMM baffles ("DIMM baffles" on page 42).
8. Remove the front panel/drive cage assembly ("Front panel drive cage assembly" on page 39).
9. Remove the M.2 SSD assembly:
 - a. Loosen and remove the screw securing the M.2 SSD.
 - b. Remove the M.2 SSD from the system board connector.

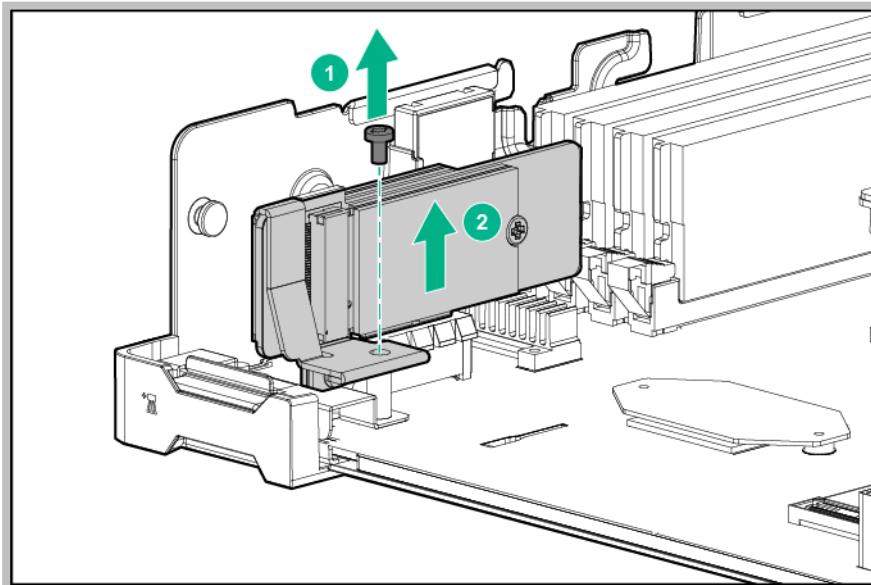


To replace the component, reverse the removal procedure.

Heatsink blank

To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("Access panel" on page 29).
4. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
5. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).
6. Using a no. 2 Phillips screwdriver, remove the heatsink blank.

Retain the heatsink blank for future use.

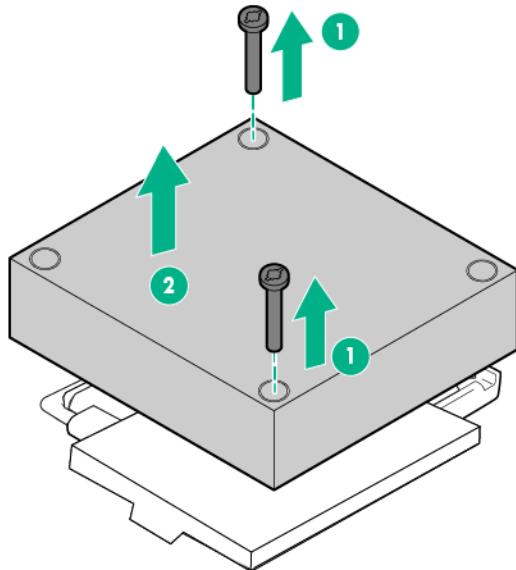

To replace the component, reverse the removal procedure.

- ⚠ **CAUTION:** To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws.

DIMM baffles


- ⚠ **CAUTION:** To avoid damage to the server and the enclosure, install all DIMM baffles in the proper location after adding or replacing DIMMs. DIMM baffles that are missing or installed incorrectly can compromise server and enclosure cooling.

The server contains three DIMM baffles.

Remove the right DIMM baffle

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. If installed, remove the internal USB devices.


6. Remove the right DIMM baffle.

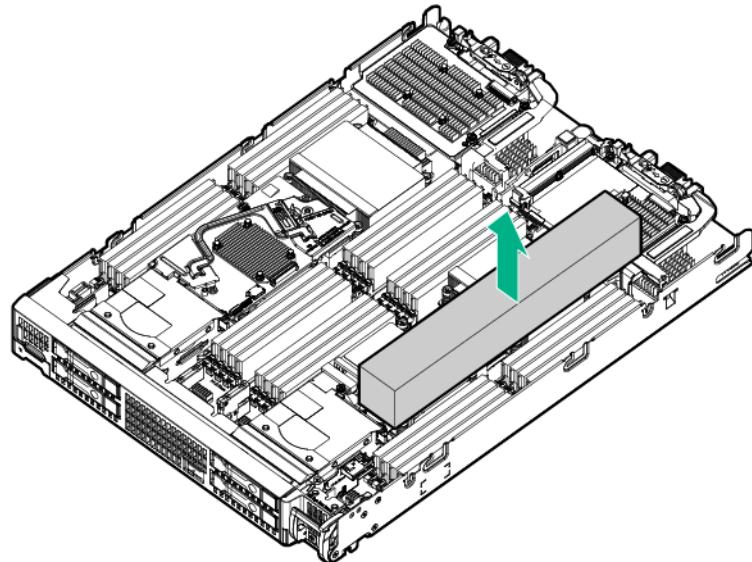

To replace the component, reverse the removal procedure.

Remove the center DIMM baffle

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Remove the center DIMM baffle.
 - a. If installed, remove the Direct Connect SATA cable ("Direct connect SATA cable" on page 32).
 - b. If installed, remove the SAS cable ("SAS cable" on page 37).
 - c. Lift up the center DIMM baffle.

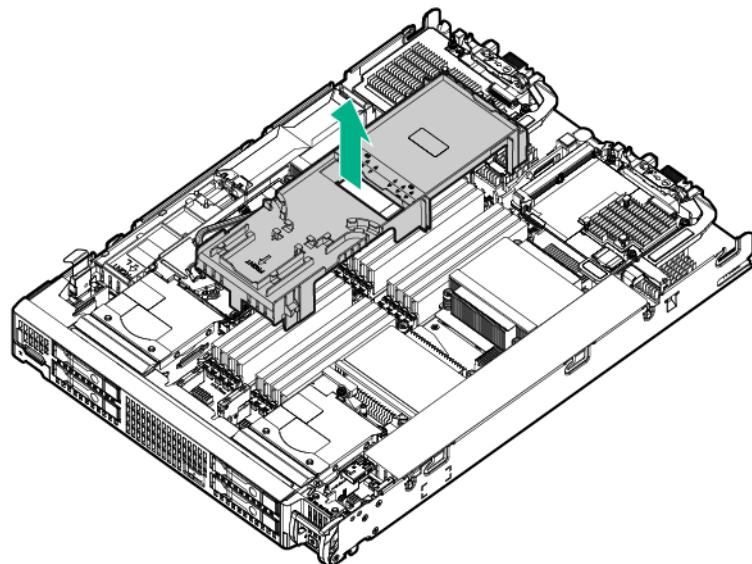


To replace the component, reverse the removal procedure.

Remove the left DIMM baffle

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Disconnect the Smart storage battery connector.
6. Remove the left DIMM baffle.



IMPORTANT: When removing the left DIMM baffle, leave the Smart Storage Battery installed on the baffle. Use the blue pull tab to disconnect the Smart Storage Battery cable from the system board.

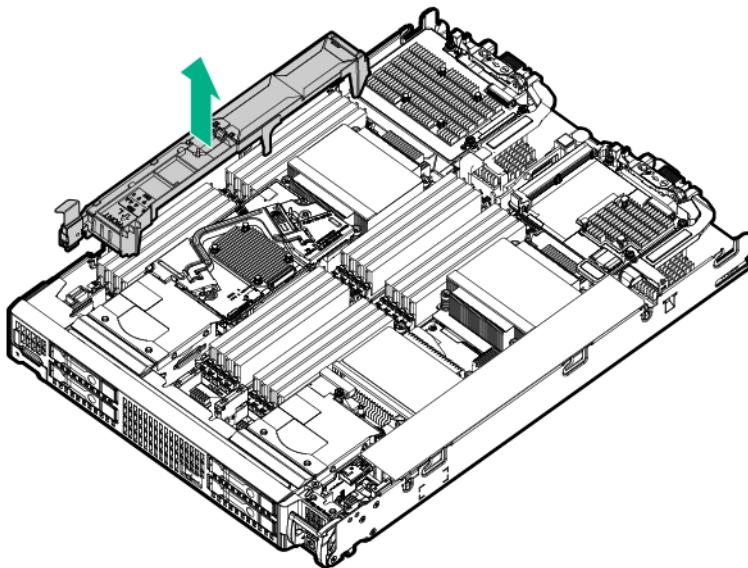

To replace the component, reverse the removal procedure.

DIMMs




CAUTION: To prevent improper cooling and thermal damage, always install DIMMs of the same height on the server. This server does not support mixing standard and non-standard height DIMMs.

To identify the DIMMs installed in the server, see "DIMM identification ("DIMM slot locations" on page 75, "System board components" on page 73)."

To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("Access panel" on page 29).
4. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
5. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).

6. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 73)."
7. Remove the DIMM baffles ("DIMM baffles" on page 42).
8. Do the following if removing DIMMs 5-8 for processor 1 or 2:
 - a. Remove the mezzanine assembly ("Mezzanine assembly" on page 33).
 - b. Remove the FlexibleLOM ("FlexibleLOM" on page 36).
9. Remove the DIMM.

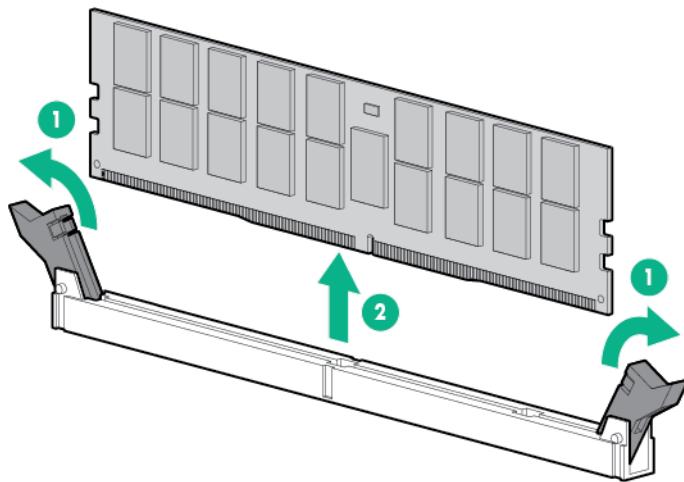


To replace the component, reverse the removal procedure. To configure the memory mode, use UEFI System Utilities ("HPE UEFI System Utilities" on page 63).

HPE Smart Storage Battery

To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("Access panel" on page 29).
4. Remove the left DIMM baffle ("DIMM baffles" on page 42).

5. Remove the Smart Storage Battery.

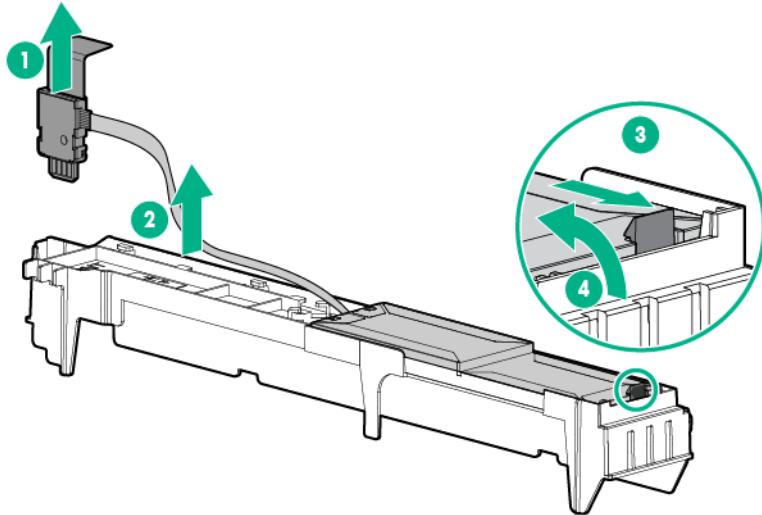


To replace the component, reverse the removal procedure.

SAS/SATA or NVMe backplane

To remove the component:

1. Back up all server data.
2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Remove all drives ("SAS/SATA drive" on page 30, "NVMe SSD" on page 31).
6. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
7. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).
8. Remove the internal USB drive, if installed. To locate the internal USB connector, see "System board components (on page 73)."
9. Remove all DIMM baffles ("DIMM baffles" on page 42).
10. Remove the front panel/drive cage assembly ("Front panel drive cage assembly" on page 39).

11. Remove the drive backplane from the front panel/drive cage assembly.

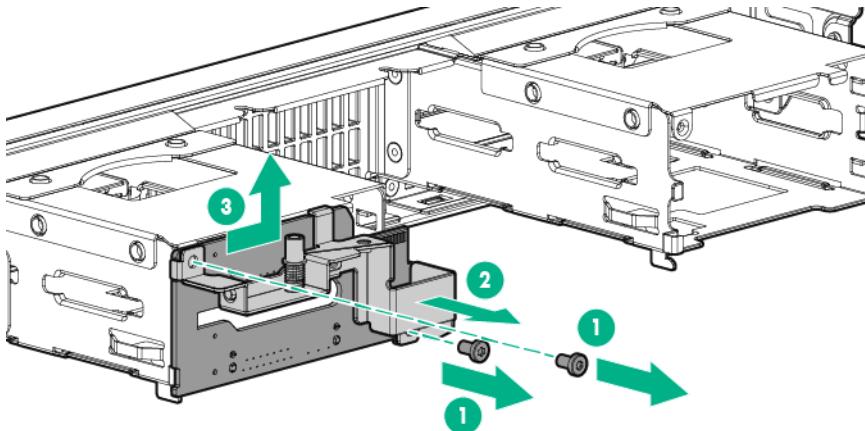

To replace the component, reverse the removal procedure.

System battery

If the server no longer automatically displays the correct date and time, then replace the battery that provides power to the real-time clock. Under normal use, battery life is 5 to 10 years.



WARNING: The computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. A risk of fire and burns exists if the battery pack is not properly handled. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
- Do not expose the battery to temperatures higher than 70°C (158°F).
- Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
- Replace only with the spare designated for this product.




IMPORTANT: Replacing the system board battery resets the system ROM to its default configuration. After replacing the battery, reconfigure the system through RBSU.

To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Place the server on a flat, level work surface.
4. Remove the access panel ("Access panel" on page 29).
5. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
6. If installed, remove the internal USB drive. To locate the internal USB connector, see "System board components (on page 73)."
7. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).
8. Remove all DIMM baffles ("DIMM baffles" on page 42).
9. Remove the front panel/drive cage assembly ("Front panel drive cage assembly" on page 39).

10. Locate the battery on the system board ("System board components" on page 73).
11. Remove the battery.

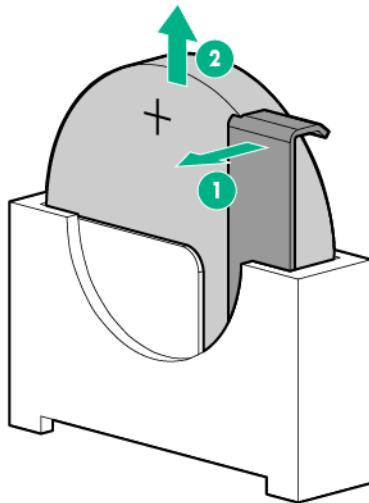

To replace the component, reverse the removal procedure.

For more information about battery replacement or proper disposal, contact an authorized reseller or an authorized service provider.

Heatsink



WARNING: To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.


To remove the component:

1. Power down the server (on page 26).
2. Remove the server (on page 27).
3. Remove the access panel ("Access panel" on page 29).
4. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
5. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).

NOTE: Only remove the storage controller if the processor 1 or processor 3 heatsink is being removed.


6. Remove all DIMM baffles ("DIMM baffles" on page 42).
7. Remove the heatsink:
 - a. Loosen one pair of diagonally opposite screws halfway, and then loosen the other pair of screws.
 - b. Completely loosen all screws in the same sequence.

- c. Remove the heatsink from the processor backplate.

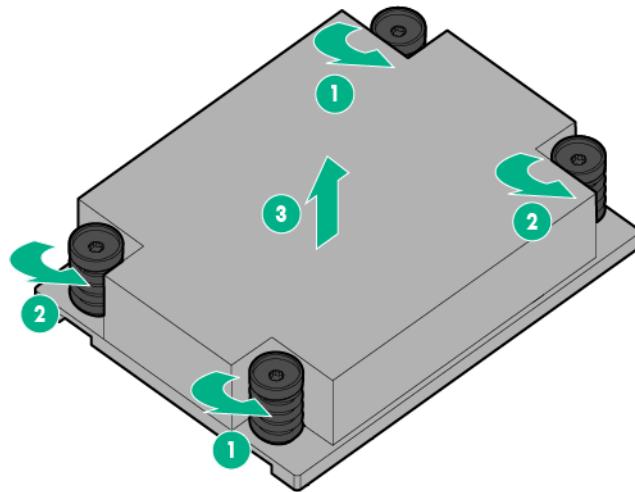

To replace the component:


1. Remove the thermal interface protective cover from the heatsink.

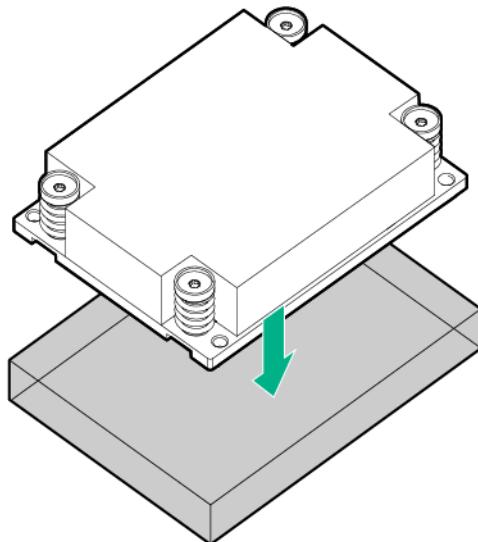

CAUTION: To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws.

2. Install the heatsink:
 - a. Position the heatsink on the processor backplate.
 - b. Tighten one pair of diagonally opposite screws halfway, and then tighten the other pair of screws.

- c. Finish the installation by completely tightening the screws in the same sequence.

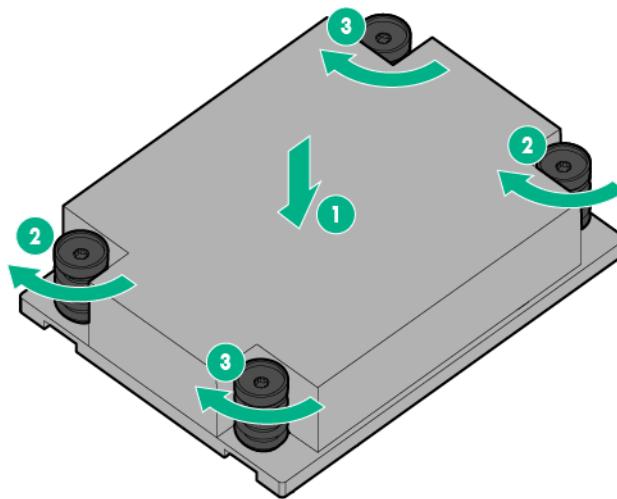

3. Install all DIMM baffles.
4. Install the storage controller/NVMe pass-through board, if removed.
5. Install the direct connect SATA cable, if removed.
6. Install the SAS cable, if removed.
7. Install the access panel.
8. Install the server ("[Installing a server](#)" on page 28).

Processor


-
- ⚠ WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.
-
- ⚠ CAUTION:** To prevent possible server malfunction and damage to the equipment, multiprocessor configurations must contain processors with the same part number.
-
- ⚠ CAUTION:** The heatsink thermal interface media is not reusable and must be replaced if the heatsink is removed from the processor after it has been installed.
-
- ⚠ CAUTION:** To prevent possible server overheating, always populate processor sockets with a processor and a heatsink or a heatsink blank.
-
- ⚠ CAUTION:** To prevent damage to electrical components, properly ground the server before beginning any installation procedure. Improper grounding may cause ESD damage.
-
- ⚠ IMPORTANT:** Always install a PPM when you install a processor. The system fails to boot if the PPM is missing.
-

To remove the component:

1. Update the system ROM.


Locate and download the latest ROM version from the Hewlett Packard Enterprise Support Center website (<http://www.hpe.com/support/hpesc>). Follow the instructions on the website to update the system ROM.

2. Power down the server (on page 26).
3. Remove the server (on page 27).
4. Remove the access panel ("Access panel" on page 29).
5. Do one of the following:
 - o Remove the direct connect SATA cable ("Direct connect SATA cable" on page 32).
 - o Remove the SAS cable ("SAS cable" on page 37).
6. Remove the storage controller/NVMe pass-through board ("Storage controller/NVMe pass-through board" on page 37).
7. Remove the heatsink ("Heatsink" on page 48).
8. Open each of the processor locking levers in the order indicated, and then open the processor retaining bracket.

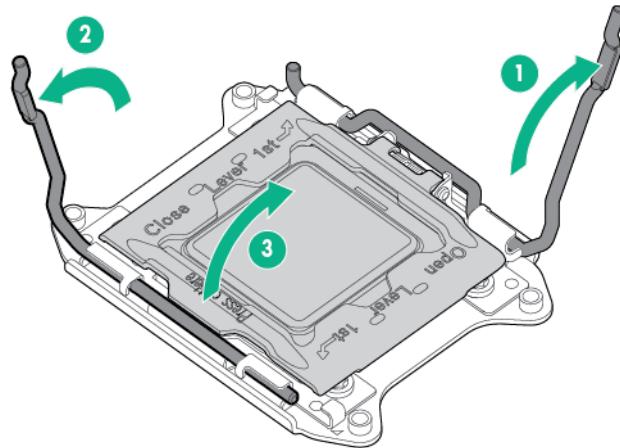

CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED. To avoid damage to the system board, do not touch the processor or the processor socket contacts.

9. Remove the processor from the processor retaining bracket.

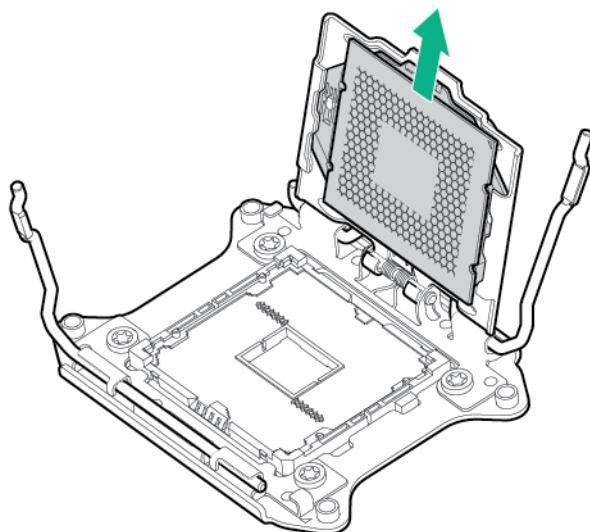


To replace the component:



CAUTION: To avoid damage to the system board, processor socket, and screws, do not overtighten the heatsink screws.

1. Install the processor. Verify that the processor is fully seated in the processor retaining bracket by visually inspecting the processor installation guides on either side of the processor. **THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.**

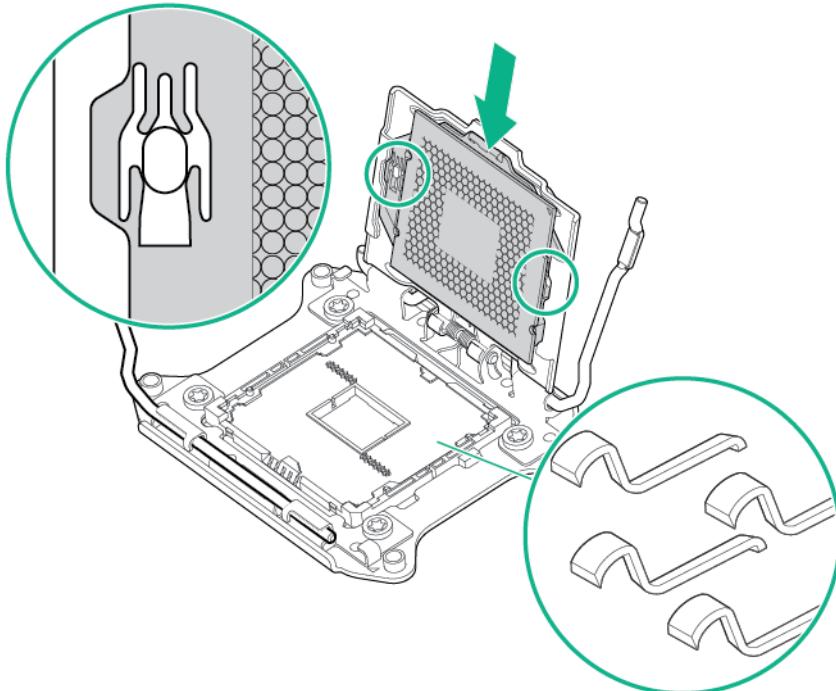


CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED. To avoid damage to the system board, do not touch the processor or the processor socket contacts.




CAUTION: Do not press down on the processor. Pressing down on the processor might damage the processor socket and the system board. Press only in the area indicated on the processor retaining bracket.

2. Close the processor retaining bracket. When the processor is installed properly inside the processor retaining bracket, the processor retaining bracket clears the flange on the front of the socket.


3. Press and hold the processor retaining bracket in place, and then close each processor locking lever. Press only in the area indicated on the processor retaining bracket.

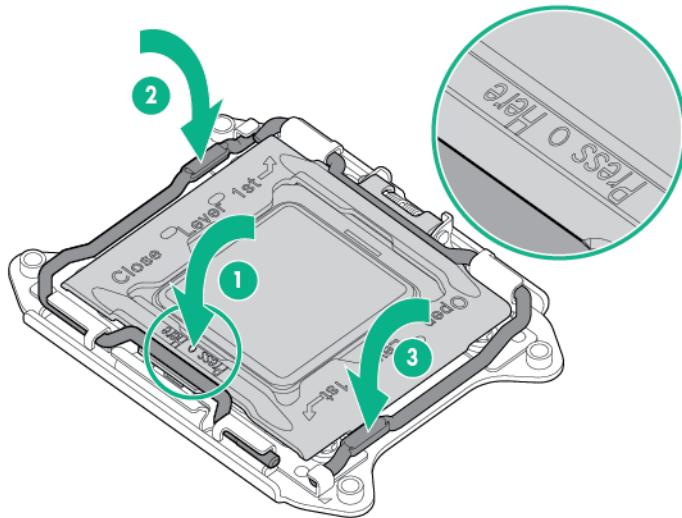

4. Clean the old thermal grease from the processor with an alcohol swab. Allow the alcohol to evaporate before continuing.
5. Apply all the grease to the top of the processor in the following pattern to ensure even distribution.

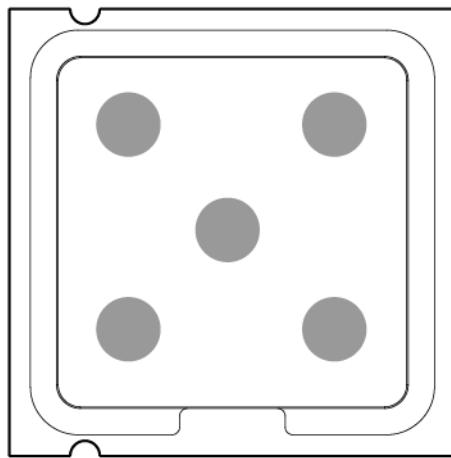

6. Align and install the heatsink. Alternate tightening the screws until the heatsink is seated properly.

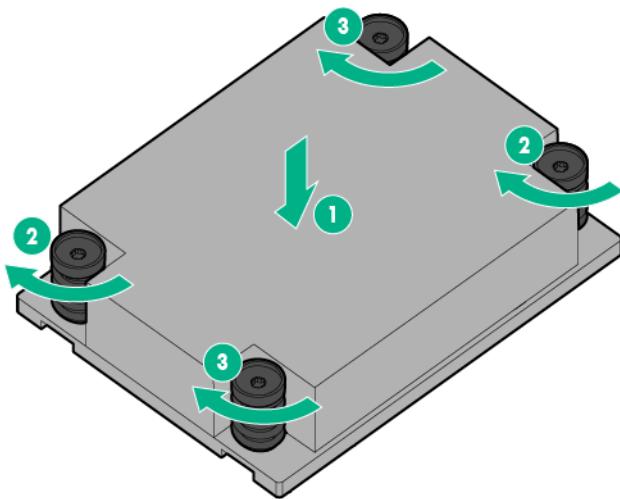

7. Install all DIMM baffles, if removed.
8. Install the storage controller/NVMe pass-through board.
9. Install the SAS cable, if removed.
10. Install the direct connect SATA cable, if removed.
11. Install the access panel.
12. Install the server ("[Installing a server](#)" on page [28](#)).

System board assembly




CAUTION: When returning a damaged system board to Hewlett Packard Enterprise, always install all processor socket covers to prevent damage to the processor sockets and system board.

To remove the component:


1. Power down the server (on page [26](#)).
2. Remove the server (on page [27](#)).
3. Remove the access panel ("[Access panel](#)" on page [29](#)).
4. Remove the mezzanine assembly ("[Mezzanine assembly](#)" on page [33](#)).
5. Remove the FlexibleLOM ("[FlexibleLOM](#)" on page [36](#)).
6. Do one of the following:
 - o Remove the direct connect SATA cable ("[Direct connect SATA cable](#)" on page [32](#)).
 - o Remove the SAS cable ("[SAS cable](#)" on page [37](#)).
7. Remove the storage controller/NVMe pass-through board ("[Storage controller/NVMe pass-through board](#)" on page [37](#)).
8. Remove the front panel/drive cage assembly ("[Front panel drive cage assembly](#)" on page [39](#)).
9. Remove the M.2 SSD enablement board ("[M.2 SSD assembly](#)" on page [40](#)).
10. Remove the internal USB drive, if installed. To locate the internal USB connector, see "[System board components](#) (on page [73](#))."
11. Remove the microSD card, if installed. To locate the microSD card, see "[System board components](#) (on page [73](#))."

12. Remove all DIMM baffles ("DIMM baffles" on page 42).
13. Remove all DIMMs ("DIMMs" on page 44).
14. Remove the heatsink ("Heatsink" on page 48).
15. Open each of the processor locking levers in the order indicated, and then open the processor retaining bracket.

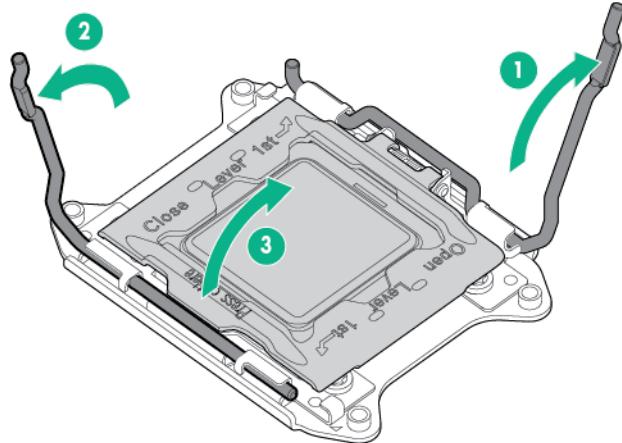


CAUTION: THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED. To avoid damage to the system board, do not touch the processor or the processor socket contacts.

16. Remove the processor from the processor retaining bracket.

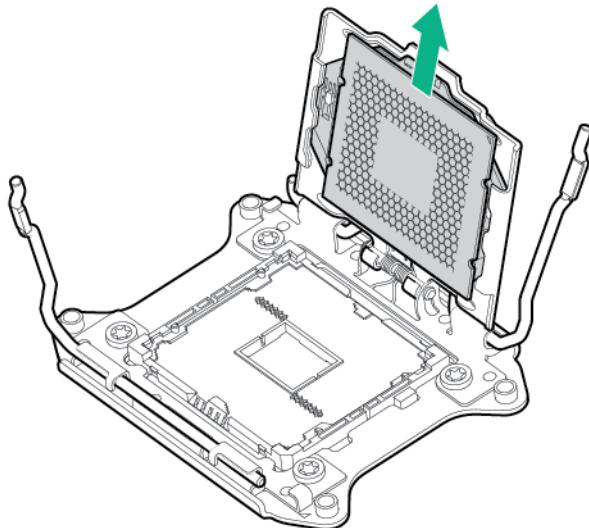


17. Retain all of the information on the serial label pull tab for use with installing the new system board.
18. Remove the system board assembly:
 - a. Loosen the three system board tray thumbscrews.

- b. Slide the system board assembly towards the rear, and then lift up the system board assembly to remove it.

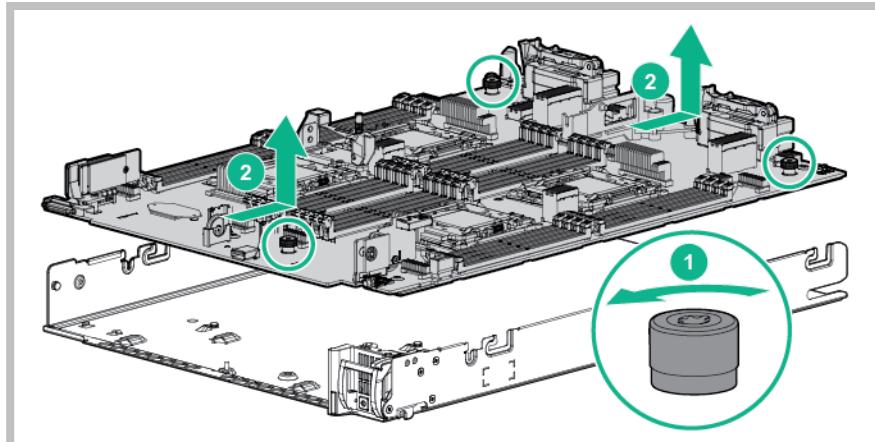

To replace the system board assembly:


1. Remove the enclosure connector covers from the new system board and install the enclosure connector covers on the damaged system board ("Enclosure connector covers" on page 31).
2. Place the new system board assembly into the base cover.
3. Slide the new system board assembly towards the front until it locks in place.
4. Tighten the three thumb screws.

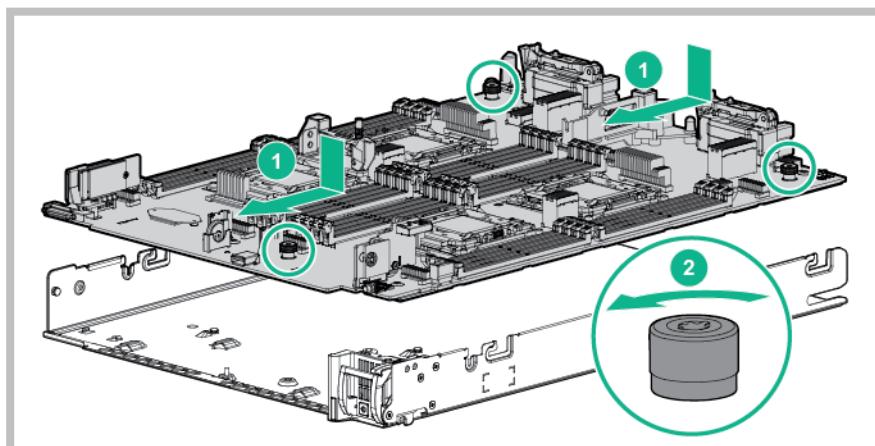


IMPORTANT: Install all components in the same configuration prior to removing the system board.

-
5. Remove the heatsink blank ("Heatsink blank" on page 41).


6. Open each of the processor locking levers in the order indicated, and then open the processor retaining bracket.

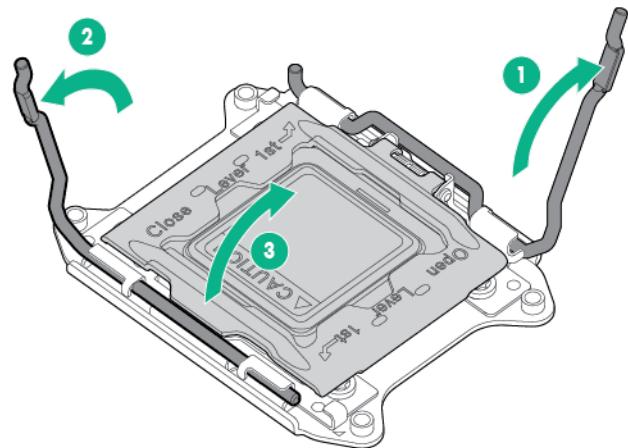

7. Remove the clear processor socket cover. Retain the processor socket cover for future use.

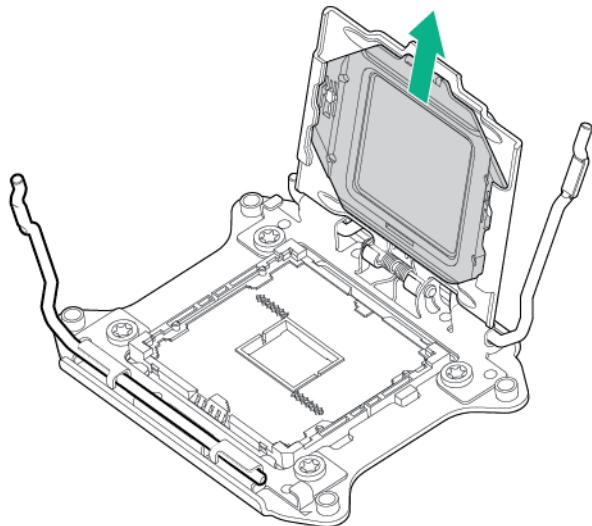


8. Install the processor. Verify that the processor is fully seated in the processor retaining bracket by visually inspecting the processor installation guides on either side of the processor. **THE PINS ON THE SYSTEM BOARD ARE VERY FRAGILE AND EASILY DAMAGED.**

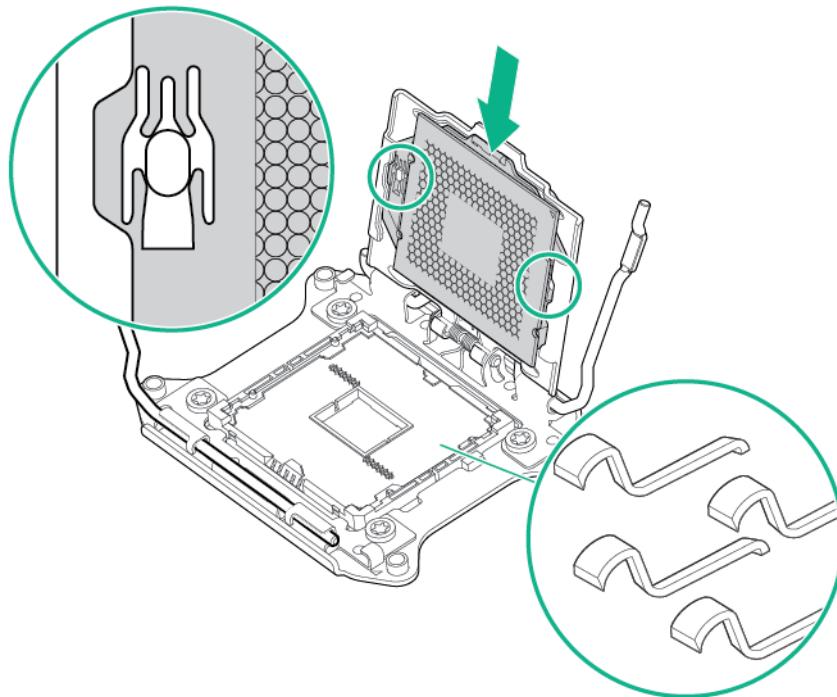

- △ **CAUTION:** Do not press down on the processor. Pressing down on the processor might damage the processor socket and the system board. Press only in the area indicated on the processor retaining bracket.
- △ **CAUTION:** Close and hold down the processor cover socket while closing the processor locking levers. The levers should close without resistance. Forcing the levers closed can damage the processor and socket, requiring system board replacement.

9. Close the processor retaining bracket. When the processor is installed properly inside the processor retaining bracket, the processor retaining bracket clears the flange on the front of the socket.

10. Press and hold the processor retaining bracket in place, and then close each processor locking lever. Press only in the area indicated on the processor retaining bracket.

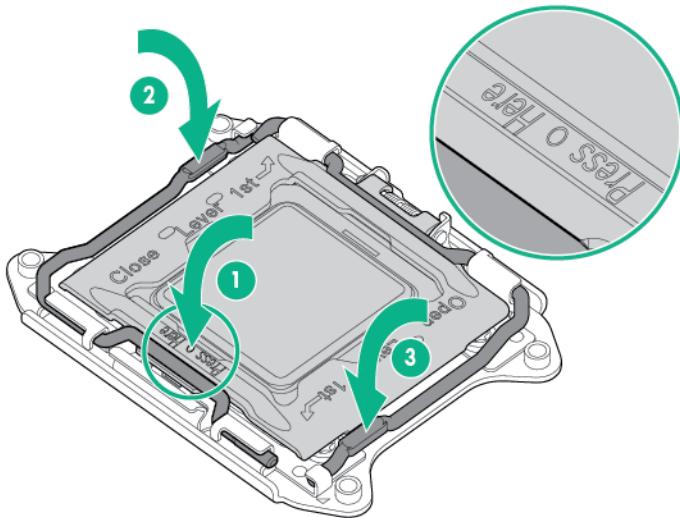

11. Install the heatsink ("Heatsink" on page 48).
12. Install the M.2 SSD enablement board.
13. Install the front panel/drive cage assembly.
14. Install the storage controller/NVMe pass-through board.
15. Install the SAS cable, if removed.
16. Install the direct connect SATA cable, if removed.
17. Install all DIMMs.
18. Install all DIMM baffles ("DIMM baffles" on page 42).
19. Install the internal USB drive ("System board components" on page 73).
20. Install the FlexibleLOM.
21. Install the mezzanine assembly ("Mezzanine assembly" on page 33).
22. Install the access panel.
23. Install the server ("Installing a server" on page 28).

After you replace the system board, you must re-enter the server serial number and the product ID.

1. During the server startup sequence, press the **F9** key to access UEFI System Utilities.
2. Select the **System Configuration > BIOS/Platform Configuration (RBSU) > Advanced Options > Advanced System ROM Options > Serial Number**, and then press the **Enter** key.
3. Enter the serial number and press the **Enter** key. The following message appears:
The serial number should only be modified by qualified service personnel.
This value should always match the serial number located on the chassis.
4. Press the **Enter** key to clear the warning.
5. Enter the serial number and press the **Enter** key.
6. Select **Product ID**. The following warning appears:
Warning: The Product ID should ONLY be modified by qualified service personnel. This value should always match the Product ID located on the chassis.
7. Enter the product ID and press the **Enter** key.
8. Press the **F10** key to confirm exiting System Utilities. The server automatically reboots.

HPE Trusted Platform Module

The TPM is not a customer-removable part.

- △ **CAUTION:** Any attempt to remove an installed TPM from the system board breaks or disfigures the TPM security rivet. Upon locating a broken or disfigured rivet on an installed TPM, administrators should consider the system compromised and take appropriate measures to ensure the integrity of the system data.

If you suspect a TPM board failure, leave the TPM installed and remove the system board. Contact a Hewlett Packard Enterprise authorized service provider for a replacement system board and TPM board.

Troubleshooting

Troubleshooting resources

The *HPE ProLiant Gen9 Troubleshooting Guide, Volume I: Troubleshooting* provides procedures for resolving common problems and comprehensive courses of action for fault isolation and identification, issue resolution, and software maintenance on ProLiant servers and server blades. To view the guide, select a language:

- English (http://www.hpe.com/support/Gen9_TSG_en)
- French (http://www.hpe.com/support/Gen9_TSG_fr)
- Spanish (http://www.hpe.com/support/Gen9_TSG_es)
- German (http://www.hpe.com/support/Gen9_TSG_de)
- Japanese (http://www.hpe.com/support/Gen9_TSG_ja)
- Simplified Chinese (http://www.hpe.com/support/Gen9_TSG_zh_cn)

The *HPE ProLiant Gen9 Troubleshooting Guide, Volume II: Error Messages* provides a list of error messages and information to assist with interpreting and resolving error messages on ProLiant servers and server blades. To view the guide, select a language:

- English (http://www.hpe.com/support/Gen9_EMG_en)
- French (http://www.hpe.com/support/Gen9_EMG_fr)
- Spanish (http://www.hpe.com/support/Gen9_EMG_es)
- German (http://www.hpe.com/support/Gen9_EMG_de)
- Japanese (http://www.hpe.com/support/Gen9_EMG_ja)
- Simplified Chinese (http://www.hpe.com/support/Gen9_EMG_zh_cn)

Diagnostic tools

Product QuickSpecs

For more information about product features, specifications, options, configurations, and compatibility, see the product QuickSpecs on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/qs>).

HPE iLO

iLO is a remote server management processor embedded on the system boards of HPE ProLiant and Synergy servers. iLO enables the monitoring and controlling of servers from remote locations. HPE iLO management is a powerful tool that provides multiple ways to configure, update, monitor, and repair servers remotely. iLO (Standard) comes preconfigured on HPE servers **without an additional cost or license**.

Features that enhance server administrator productivity are licensed. For more information, see the iLO documentation on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ilo-docs>).

Active Health System

The HPE Active Health System provides the following features:

- Combined diagnostics tools/scanners
- Always on, continuous monitoring for increased stability and shorter downtimes
- Rich configuration history
- Health and service alerts
- Easy export and upload to Service and Support

The Active Health System monitors and records changes in the server hardware and system configuration. The Active Health System assists in diagnosing problems and delivering rapid resolution if server failures occur.

The Active Health System collects the following types of data:

- Server model
- Serial number
- Processor model and speed
- Storage capacity and speed
- Memory capacity and speed
- Firmware/BIOS

Active Health System does not collect information about Active Health System users' operations, finances, customers, employees, partners, or data center, such as IP addresses, host names, user names, and passwords. Active Health System does not parse or change operating system data from third-party error event log activities, such as content created or passed through by the operating system.

The data that is collected is managed according to the Hewlett Packard Enterprise Data Privacy policy. For more information, see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/privacy>).

The Active Health System, in conjunction with the system monitoring provided by Agentless Management or SNMP Pass-thru, provides continuous monitoring of hardware and configuration changes, system status, and service alerts for various server components.

The Agentless Management Service is available in the SPP, which can be downloaded from the Hewlett Packard Enterprise website (<http://www.hpe.com/servers/spp/download>). The Active Health System log can be downloaded manually from iLO 4 or HPE Intelligent Provisioning and sent to Hewlett Packard Enterprise.

For more information, see the following documents:

- *iLO User Guide* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/ilo/docs>)
- *Intelligent Provisioning User Guide* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/intelligentprovisioning/docs>)

iLO RESTful API support

HPE iLO 4 firmware version 2.00 and later includes the iLO RESTful API. The iLO RESTful API is a management interface that server management tools can use to perform configuration, inventory, and monitoring of the ProLiant server via iLO. The iLO RESTful API uses basic HTTPS operations (GET, PUT, POST, DELETE, and PATCH) to submit or return JSON-formatted data with iLO web server.

HPE iLO 4.2.30 and later is Redfish 1.0-conformant while remaining backward compatible with the existing iLO RESTful API.

HPE iLO 4 supports the iLO RESTful API with ProLiant Gen8 and later servers. For more information about the iLO RESTful API, see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/restfulinterface/docs>).

Integrated Management Log

The IML records hundreds of events and stores them in an easy-to-view form. The IML timestamps each event with 1-minute granularity.

You can view recorded events in the IML in several ways, including the following:

- From within HPE SIM
- From within UEFI System Utilities ("HPE UEFI System Utilities" on page 63)
- From within the Embedded UEFI shell
- From within operating system-specific IML viewers:
 - For Windows: IML Viewer
 - For Linux: IML Viewer Application
- From within the iLO web interface
- From within Insight Diagnostics ("HPE Insight Diagnostics" on page 65)

HPE UEFI System Utilities

The UEFI System Utilities is embedded in the system ROM. The UEFI System Utilities enable you to perform a wide range of configuration activities, including:

- Configuring system devices and installed options
- Enabling and disabling system features
- Displaying system information
- Selecting the primary boot controller

- Configuring memory options
- Selecting a language
- Launching other pre-boot environments such as the Embedded UEFI Shell and Intelligent Provisioning

For more information on the UEFI System Utilities, see the *HPE UEFI System Utilities User Guide for HPE ProLiant Gen9 Servers* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/UEFI/docs>).

Scan the QR code located at the bottom of the screen to access mobile-ready online help for the UEFI System Utilities and UEFI Shell. For on-screen help, press **F1**.

Using UEFI System Utilities

To use the UEFI System Utilities, use the following keys.

Action	Key
Access System Utilities	F9 during server POST
Navigate menus	Up and Down arrows
Select items	Enter
Save selections	F10
Access Help for a highlighted configuration option*	F1

*Scan the QR code on the screen to access online help for the UEFI System Utilities and UEFI Shell.

Default configuration settings are applied to the server at one of the following times:

- Upon the first system power-up
- After defaults have been restored

Default configuration settings are sufficient for typical server operations; however, you can modify configuration settings as needed. The system prompts you for access to the UEFI System Utilities each time the system is powered up.

Embedded Diagnostics option

The system BIOS in all ProLiant Gen9 servers includes an Embedded Diagnostics option in the ROM. The Embedded Diagnostics option can run comprehensive diagnostics of the server hardware, including processors, memory, drives, and other server components.

For more information on the Embedded Diagnostics option, see the *HPE UEFI System Utilities User Guide for HPE ProLiant Gen9 Servers* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/UEFI/docs>).

Re-entering the server serial number and product ID

After you replace the system board, you must re-enter the server serial number and the product ID.

1. During the server startup sequence, press the **F9** key to access UEFI System Utilities.
2. Select the **System Configuration > BIOS/Platform Configuration (RBSU) > Advanced Options > Advanced System ROM Options > Serial Number**, and then press the **Enter** key.
3. Enter the serial number and press the **Enter** key. The following message appears:
The serial number should only be modified by qualified service personnel.
This value should always match the serial number located on the chassis.
4. Press the **Enter** key to clear the warning.

5. Enter the serial number and press the **Enter** key.
6. Select **Product ID**. The following warning appears:

Warning: The Product ID should ONLY be modified by qualified service personnel. This value should always match the Product ID located on the chassis.
7. Enter the product ID and press the **Enter** key.
8. Press the **F10** key to confirm exiting System Utilities. The server automatically reboots.

HPE Insight Diagnostics

The Insight Diagnostics is a proactive server management tool, available in both offline and online versions, that provides diagnostics and troubleshooting capabilities to assist IT administrators who verify server installations, troubleshoot problems, and perform repair validation.

The Insight Diagnostics Offline Edition performs various in-depth system and component testing while the OS is not running. To run this utility, boot the server using Intelligent Provisioning.

The Insight Diagnostics Online Edition is a web-based application that captures system configuration and other related data needed for effective server management. Available in Microsoft Windows and Linux versions, the utility helps to ensure proper system operation.

For more information or to download the utility, see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/InsightDiagnostics>). The Insight Diagnostics Online Edition is also available in the SPP.

HPE Insight Diagnostics survey functionality

HPE Insight Diagnostics (on page 65) provides survey functionality that gathers critical hardware and software information on ProLiant servers.

This functionality supports operating systems that are supported by the server. For operating systems supported by the server, see the Hewlett Packard Enterprise website (<http://www.hpe.com/info/supportos>).

If a significant change occurs between data-gathering intervals, the survey function marks the previous information and overwrites the survey data files to reflect the latest changes in the configuration.

Survey functionality is installed with every Intelligent Provisioning-assisted Insight Diagnostics installation, or it can be installed through the SPP.

HPE Insight Remote Support

Hewlett Packard Enterprise strongly recommends that you register your device for remote support to enable enhanced delivery of your Hewlett Packard Enterprise warranty, HPE support services, or Hewlett Packard Enterprise contractual support agreement. Insight Remote Support supplements your monitoring continuously to ensure maximum system availability by providing intelligent event diagnosis, and automatic, secure submission of hardware event notifications to Hewlett Packard Enterprise, which will initiate a fast and accurate resolution, based on your product's service level. Notifications can be sent to your authorized Hewlett Packard Enterprise Channel Partner for onsite service, if configured and available in your country.

For more information, see *Insight Remote Support and Insight Online Setup Guide for ProLiant Servers and BladeSystem c-Class Enclosures* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/insightremotesupport/docs>). Insight Remote Support is available as part of Hewlett Packard Enterprise Warranty, HPE support services, or Hewlett Packard Enterprise contractual support agreement.

USB support

Hewlett Packard Enterprise servers support both USB 2.0 ports and USB 3.0 ports. Both types of ports support installing all types of USB devices (USB 1.0, USB 2.0, and USB 3.0), but may run at lower speeds in specific situations:

- USB 3.0 capable devices operate at USB 2.0 speeds when installed in a USB 2.0 port.
- When the server is configured for UEFI Boot Mode, Hewlett Packard Enterprise provides legacy USB support in the pre-boot environment prior to the operating system loading for USB 1.0, USB 2.0, and USB 3.0 speeds.
- When the server is configured for Legacy BIOS Boot Mode, Hewlett Packard Enterprise provides legacy USB support in the pre-boot environment prior to the operating system loading for USB 1.0 and USB 2.0 speeds. While USB 3.0 ports can be used with all devices in Legacy BIOS Boot Mode, they are not available at USB 3.0 speeds in the pre-boot environment. Standard USB support (USB support from within the operating system) is provided by the OS through the appropriate USB device drivers. Support for USB 3.0 varies by operating system.

For maximum compatibility of USB 3.0 devices with all operating systems, Hewlett Packard Enterprise provides a configuration setting for USB 3.0 Mode. Auto is the default setting. This setting impacts USB 3.0 devices when connected to USB 3.0 ports in the following manner:

- **Auto (default)**—If configured in Auto Mode, USB 3.0 capable devices operate at USB 2.0 speeds in the pre-boot environment and during boot. When a USB 3.0 capable OS USB driver loads, USB 3.0 devices transition to USB 3.0 speeds. This mode provides compatibility with operating systems that do not support USB 3.0 while still allowing USB 3.0 devices to operate at USB 3.0 speeds with state-of-the art operating systems.
- **Enabled**—If Enabled, USB 3.0 capable devices operate at USB 3.0 speeds at all times (including the pre-boot environment) when in UEFI Boot Mode. This mode should not be used with operating systems that do not support USB 3.0. If operating in Legacy Boot BIOS Mode, the USB 3.0 ports cannot function in the pre-boot environment and are not bootable.
- **Disabled**—If configured for Disabled, USB 3.0 capable devices function at USB 2.0 speeds at all times.

The pre-OS behavior of the USB ports is configurable in the UEFI System Utilities, so that the user can change the default operation of the USB ports. For more information, see the *HPE UEFI System Utilities User Guide for HPE ProLiant Gen9 Servers* on the Hewlett Packard Enterprise website (<http://www.hpe.com/info/UEFI/docs>).

External USB functionality

Hewlett Packard Enterprise provides external USB support to enable local connection of USB devices for server administration, configuration, and diagnostic procedures.

For additional security, external USB functionality can be disabled through USB options in UEFI System Utilities.

HPE Smart Storage Administrator

The HPE SSA is a configuration and management tool for HPE Smart Array controllers. Starting with HPE ProLiant Gen8 servers, HPE SSA replaces ACU with an enhanced GUI and additional configuration features.

The HPE SSA exists in three interface formats: the HPE SSA GUI, the HPE SSA CLI, and HPE SSA Scripting. Although all formats provide support for configuration tasks, some of the advanced tasks are available in only one format.

Some HPE SSA features include the following:

- Supports online array capacity expansion, logical drive extension, assignment of online spares, and RAID or stripe size migration
- Provides diagnostic and SmartSSD Wear Gauge functionality on the Diagnostics tab
- For supported controllers, provides access to additional features.

For more information about HPE SSA, see the Hewlett Packard Enterprise website (<http://www.hpe.com/servers/ssa>).

Automatic Server Recovery


ASR is a feature that causes the system to restart when a catastrophic operating system error occurs, such as a blue screen, ABEND (does not apply to HPE ProLiant DL980 Servers), or panic. A system fail-safe timer, the ASR timer, starts when the System Management driver, also known as the Health Driver, is loaded. When the operating system is functioning properly, the system periodically resets the timer. However, when the operating system fails, the timer expires and restarts the server.

ASR increases server availability by restarting the server within a specified time after a system hang. At the same time, the SIM console notifies you by sending a message to a designated pager number that ASR has restarted the system. You can disable ASR from the System Management Homepage or through RBSU.

Component identification

Front panel components


- SATA/SAS model

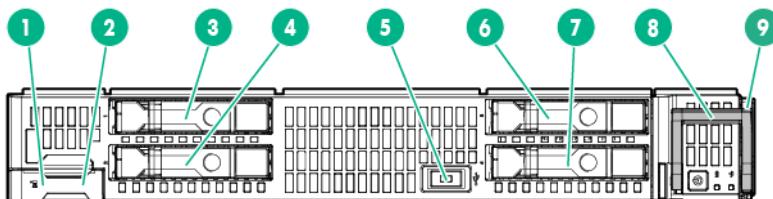

Item	Description
1	HPE c-Class Blade SUV cable connector* (behind the serial label pull tab)
2	Serial label pull tab
3	SAS/SATA drive bay 1
4	SAS/SATA drive bay 2
5	External USB 3.0 connector
6	SAS/SATA drive bay 3
7	SAS/SATA drive bay 4
8	Server blade release lever
9	Server blade release button

*The SUV connector and the c-Class Blade SUV Cable are used for server configuration and diagnostic procedures.


- NVMe model

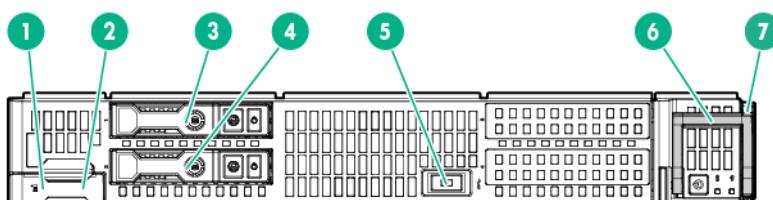

Item	Description
1	HPE c-Class Blade SUV cable connector* (behind the serial label pull tab)
2	Serial label pull tab
3	NVMe drive bay 1
4	NVMe drive bay 2
5	External USB 3.0 connector
6	Server blade release lever
7	Server blade release button

*The SUV connector and the c-Class Blade SUV Cable are used for server configuration and diagnostic procedures.

Front panel LEDs and buttons

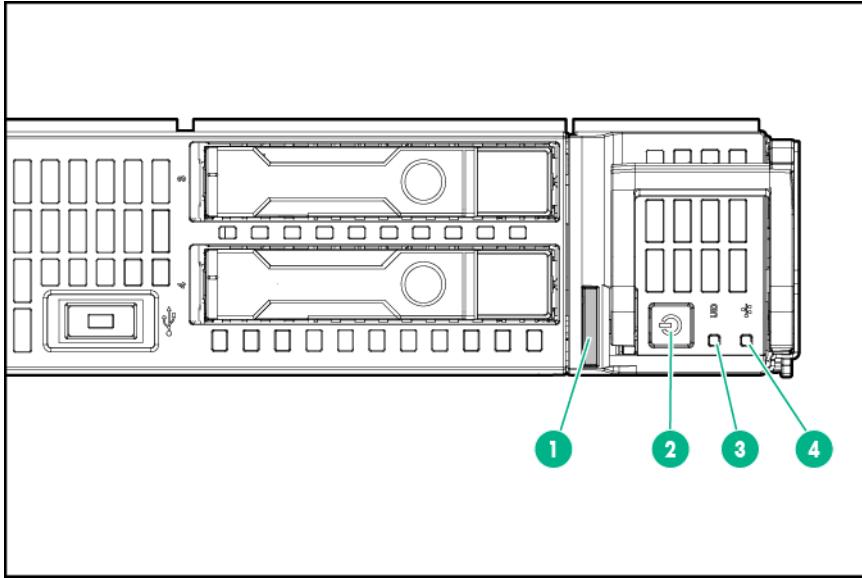

Item	Description	Status
1	Health LED	Solid green = Normal Flashing green (1 flash per second) = iLO is rebooting Flashing amber = System degraded Flashing red (1 flash per second) = System critical If the health LED indicates a degraded or critical state, review the system IML ("Integrated Management Log" on page 63) or use iLO ("HPE iLO" on page 62) to review the system health status.
2	Power On/Standby button and system power LED	Solid green = System on Flashing green (1 flash per second) = Performing power on sequence Solid amber = System in standby Off = No power present Facility power is not present, power cord is not attached, no power supplies are installed, power supply failure has occurred, or the front I/O cable is disconnected.
3	UID LED	Solid blue = Activated Flashing blue: <ul style="list-style-type: none">• 1 flash per second = Remote management or firmware upgrade in progress• 4 flashes per second = iLO manual reboot sequence initiated• 8 flashes per second = iLO manual reboot sequence in progress Off = Deactivated
4	NIC status LED	Solid green = Link to network Flashing green (1 flash per second) = Network active Off = No network activity

When all four LEDs described in this table flash simultaneously, a power fault has occurred. For more information, see "Front panel LED power fault codes ("Power fault LEDs" on page 69)."

Power fault LEDs

The following table provides a list of power fault LEDs, and the subsystems that are affected. Not all power faults are used by all servers.

Subsystem	LED behavior
System board	1 flash
Processor	2 flashes
Memory	3 flashes
Riser board PCIe slots	4 flashes
FlexibleLOM	5 flashes
Removable HPE Flexible Smart Array controller/Smart SAS HBA controller	6 flashes
System board PCIe slots	7 flashes
Power backplane or storage backplane	8 flashes
Power supply	9 flashes


Serial label pull tab information

The serial label pull tab is located on the front panel of the server. To locate the serial label pull tab, see "Front panel components (on page 68)." The serial label pull tab provides the following information:

- Product serial number
- HPE iLO information
- QR code that points to mobile-friendly documentation


Drive numbering

- SATA/SAS model

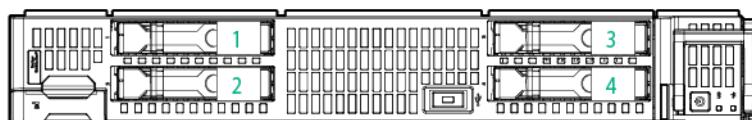

Item	Description
1	SAS/SATA drive bay 1
2	SAS/SATA drive bay 2
3	SAS/SATA drive bay 3
4	SAS/SATA drive bay 4


- NVMe model

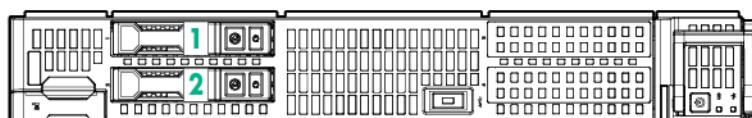

Item	Description
1	NVMe drive bay 1
2	NVMe drive bay 2

Drive carrier components and LED definitions

SATA/SAS drive carrier

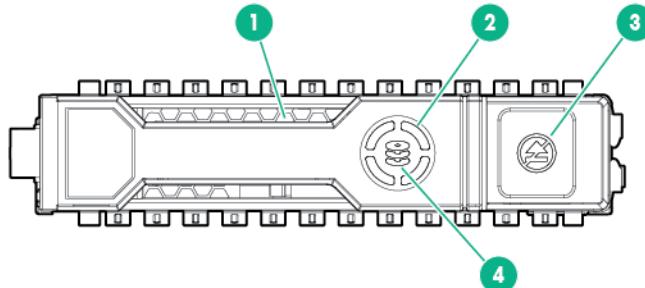


Item	LED	Status	Definition
1	Locate	Solid blue	The drive is being identified by a host application.
		Flashing blue	The drive carrier firmware is being updated or requires an update.
2	Activity ring	Rotating green	Drive activity
		Off	No drive activity
3	Do not remove	Solid white	Do not remove the drive. Removing the drive causes one or more of the logical drives to fail.
		Off	Removing the drive does not cause a logical drive to fail.
4	Drive status	Solid green	The drive is a member of one or more logical drives.
		Flashing green	The drive is rebuilding or performing a RAID migration, strip size migration, capacity expansion, or logical drive extension, or is erasing.
		Flashing amber/green	The drive is a member of one or more logical drives and predicts the drive will fail.
		Flashing amber	The drive is not configured and predicts the drive will fail.
		Solid amber	The drive has failed.
		Off	The drive is not configured by a RAID controller.



IMPORTANT: The Dynamic Smart Array B140i Controller is only available in UEFI Boot Mode. It cannot be enabled in Legacy BIOS Boot Mode. If the B140i controller is disabled, drives connected to the system board Mini-SAS connectors operate in AHCI or Legacy mode. Under this condition:

- The drives cannot be a part of a hardware RAID or a logical drive.
- The Locate, Drive status, and Do not remove LEDs of the affected drives are not controlled and will retain their last configured state. HPE SmartDrives preserve the last configured state across power cycles.


NVMe SSD carrier

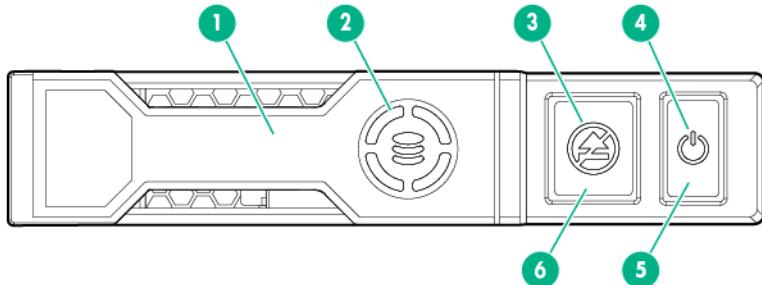

Item	Component	Status	Definition
1	Release lever	—	Ejects the NVMe drive carrier from the cage.
2	Activity ring LED	Rotating green Off	Drive activity No drive activity
3	Do Not Remove LED	Solid white Flashing white Off	Drive is powered on, and configured in system. Do not remove the drive. Ejection request pending. Do not remove the drive. Drive removed from the PCIe bus, and can be ejected.
4	Power LED	Solid green Flashing green Off	Drive is powered on, and configured in system. Do not remove the drive. Ejection request pending. Do not remove the drive. Drive removed from the PCIe bus, and can be ejected.
5	Power button	—	Momentary press to request drive removal from PCIe bus and ejection. Drive removal request can be denied by operating system.
6	Do Not Remove button	—	Releases the release lever for removal and insertion.

Upon NVMe SSD insertion, an LED initiation sequence will be visible - lighting each LED in the carrier in sequence from left to right. The sequence will cycle until the drive is recognized by the system. When the SSD is recognized by the system - the Do Not Remove LED will be solid white and the Power LED will be solid green.

System board components

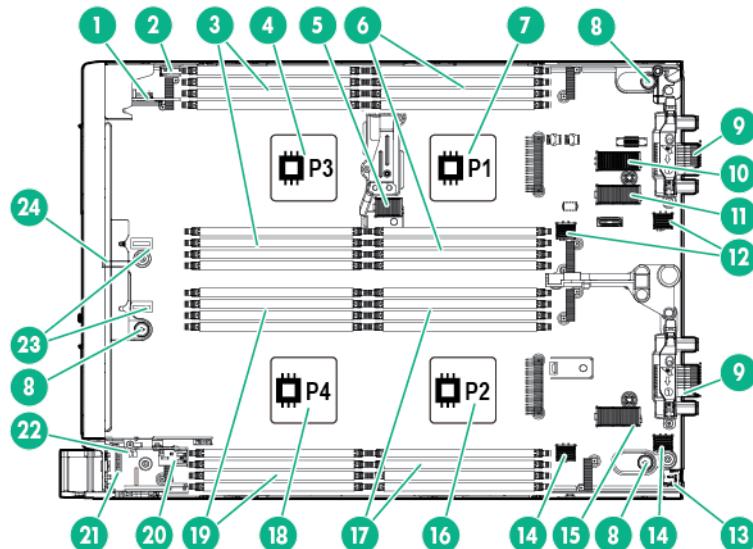

Item	Description
1	M.2 SSD enablement board connector
2	Smart Storage Battery connector
3	Processor 3 DIMM slots (8)
4	Processor 3
5	Storage controller/NVMe pass-through board connector
6	Processor 1 DIMM slots (8)
7	Processor 1
8	System board thumb screws (3)
9	Enclosure connectors
10	Mezzanine connector 1 (Type A mezzanine only)
11	Mezzanine connector 2 (Type A or Type B mezzanine)
12	FlexibleLOM 2 connectors (2)
13	microSD connector
14	FlexibleLOM 1 connectors (2)
15	Mezzanine connector 3 (Type A or Type B mezzanine)
16	Processor 2
17	Processor 2 DIMM slots (8)
18	Processor 4
19	Processor 4 DIMM slots (8)
20	Internal USB 3.0 connector
21	System maintenance switch
22	TPM connector
23	SATA cable connectors (2)
24	System battery

The symbols correspond to the symbols located on the interconnect bays. For more information, see "Interconnect bay numbering and device mapping."

System maintenance switch

Position	Default	Function
S1	Off	Off = iLO security is enabled. On = iLO security is disabled.
S2	Off	Off = System configuration can be changed. On = System configuration is locked.
S3	Off	Reserved
S4	Off	Reserved
S5	Off	Off = Power-on password is enabled. On = Power-on password is disabled.
S6	Off	Off = No function On = ROM reads system configuration as invalid.
S7	Off	Off = Set default boot mode to UEFI. On = Set default boot mode to legacy.
S8	—	Reserved
S9	—	Reserved
S10	—	Reserved
S11	—	Reserved
S12	—	Reserved

To access the redundant ROM, set S1, S5, and S6 to On.

When the system maintenance S6 switch is set to the On position, the system will erase all system configuration settings from both CMOS and NVRAM on the next reboot. Clearing CMOS, NVRAM, or both deletes configuration information. Be sure to configure the server properly to prevent data loss.


Mezzanine connector definitions

A PCIe x8 mezzanine connector supports x16 cards at up to x8 speeds.


Item	PCIe
Mezzanine connector 1	x8, Type A mezzanine card only
Mezzanine connector 2	x16, Type A or B mezzanine card
Mezzanine connector 3	x16, Type A or B mezzanine card

DIMM slot locations

DIMM slots are numbered sequentially (1 through 8) for each processor. The supported AMP modes use the alpha assignments for population order, and the slot numbers designate the DIMM slot ID for spare replacement.

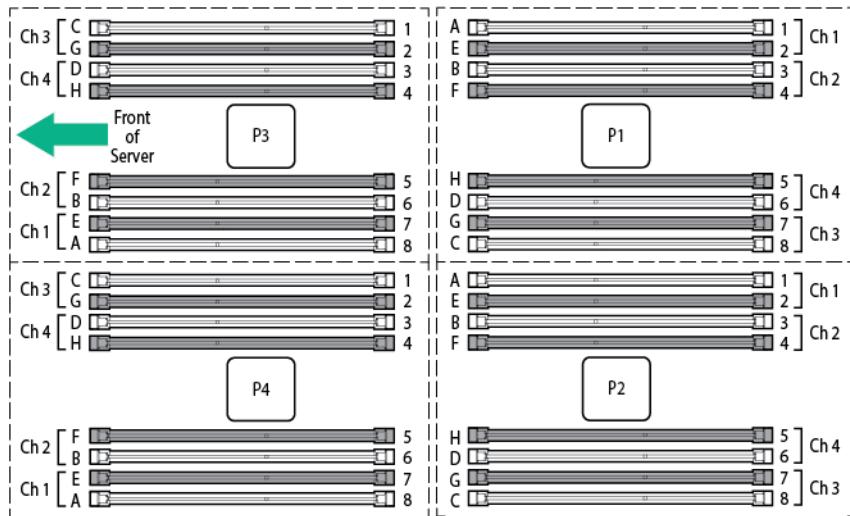

HPE c-Class Blade SUV Cable

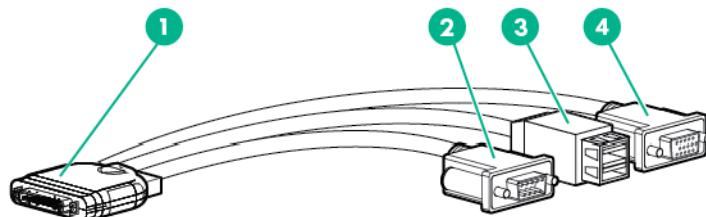


Item	Connector	Description
1	Server blade	For connecting to the SUV connector on the server front panel
2	Serial	For trained personnel to connect a null modem serial cable and perform advanced diagnostic procedures
3	USB	For connecting up to two USB devices
4	Video	For connecting a video monitor

Cabling

Cabling overview


This section provides guidelines that help you make informed decisions about cabling the server and hardware options to optimize performance.

HPE Smart Storage Battery cabling

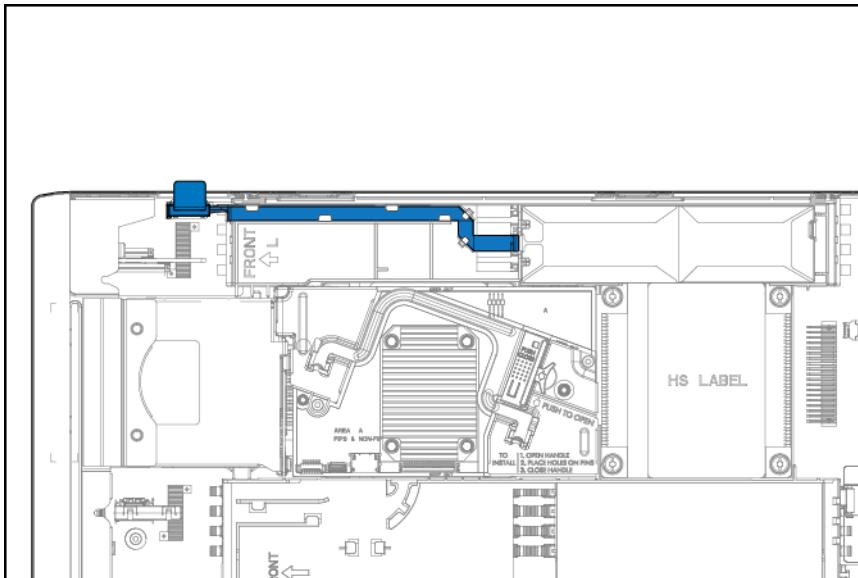


Direct connect SATA cabling

- Single direct connect SATA cable

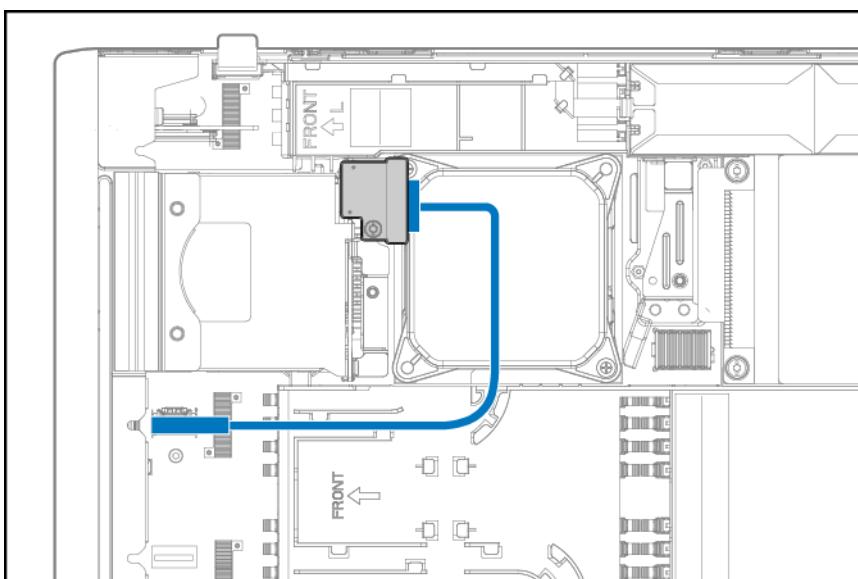


- Dual direct connect SATA cables

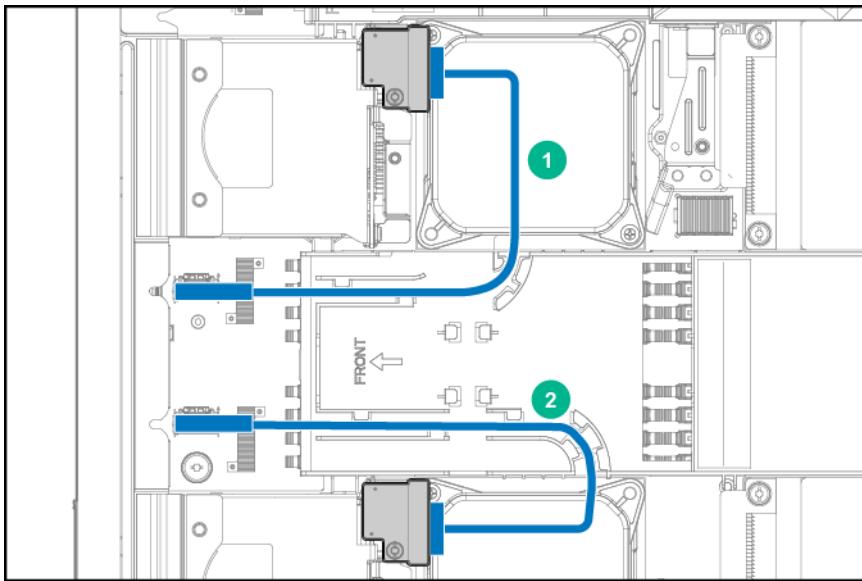

Item	Description
1	SATA cable to drive cage 1 and 2 backplane
2	SATA cable to drive cage 3 and 4 backplane

SAS cabling

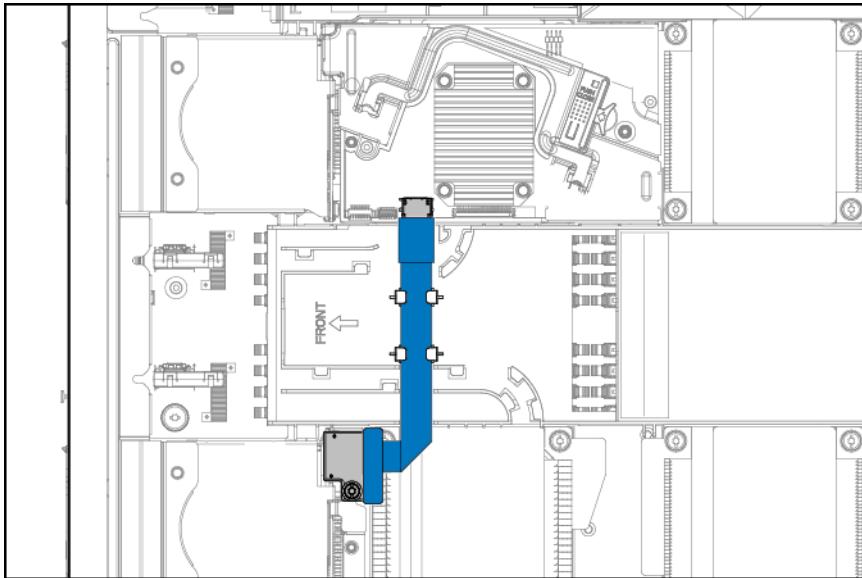

Using the HPE c-Class Blade SUV Cable

The HPE c-Class Blade SUV Cable enables the user to perform server administration, configuration, and diagnostic procedures by connecting video and USB devices directly to the server. For SUV cable connectors, see "c-Class Blade SUV Cable ("HPE c-Class Blade SUV Cable" on page 75)."

Connecting locally to a server blade with video and USB devices

Use the SUV cable to connect a monitor and any of the following USB devices:

- USB hub
- USB keyboard
- USB mouse
- USB CD/DVD-ROM drive


Numerous configurations are possible. This section offers two possible configurations. For more information, see "USB support (on page 66)."

Accessing a server blade with local KVM

For this configuration, a USB hub is not necessary. To connect additional devices, use a USB hub.

 **CAUTION:** Before disconnecting the SUV cable from the connector, always squeeze the release buttons on the sides of the connector. Failure to do so can result in damage to the equipment.

1. Open the serial label pull tab and connect the c-Class Blade SUV Cable to the server.
2. Connect the video connector to a monitor.
3. Connect a USB mouse to one USB connector.
4. Connect a USB keyboard to the second USB connector.

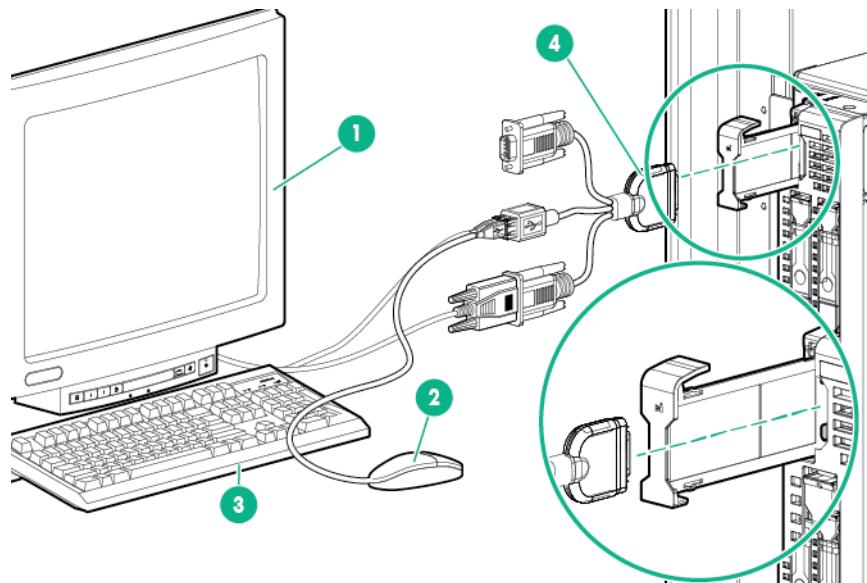


Item	Description
1	Monitor
2	USB mouse
3	USB keyboard
4	c-Class Blade SUV Cable

Accessing local media devices

Use the following configuration when configuring a server or loading software updates and patches from a USB CD/DVD-ROM.

Use a USB hub when connecting a USB CD-ROM drive to the server. The USB hub provides additional connections.

1. Open the serial label pull tab and connect the c-Class Blade SUV cable to the server.
2. Connect the video connector to a monitor.
3. Connect a USB hub to one USB connector.
4. Connect the following to the USB hub:
 - o USB CD/DVD-ROM drive
 - o USB keyboard
 - o USB mouse

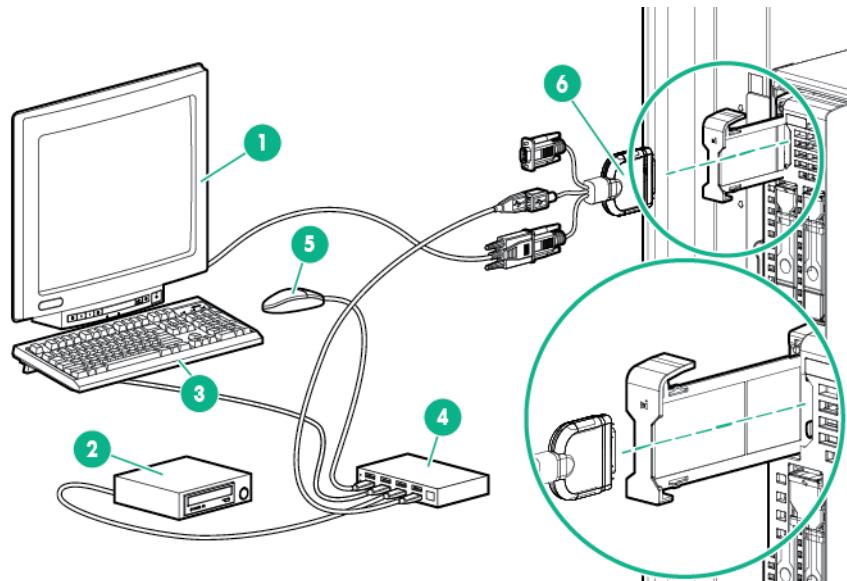

Item	Description
1	Monitor
2	USB CD/DVD-ROM drive
3	USB keyboard
4	USB hub
5	USB mouse
6	c-Class Blade SUV Cable

Specifications

Environmental specifications

Specification	Value
Temperature range*	—
Operating	10°C to 35°C (50°F to 95°F)
Non-operating	-30°C to 60°C (-22°F to 140°F)
Relative humidity (noncondensing)**	—
Operating	10% to 90% @ 28°C (82.4°F)
Non-operating	5% to 95% @ 38.7°C (101.7°F)
Altitude†	—
Operating	3050 m (10,000 ft)
Non-operating	9144 m (30,000 ft)

* The following temperature conditions and limitations apply:

- All temperature ratings shown are for sea level.
- An altitude derating of 1°C per 304.8 m (1.8°F per 1,000 ft) up to 3048 m (10,000 ft) applies.
- No direct sunlight is allowed.
- The maximum permissible rate of change is 10°C/hr (18°F/hr).
- The type and number of options installed may reduce the upper temperature and humidity limits.
- Operating with a fan fault or above 30°C (86°F) may reduce system performance.

** Storage maximum humidity of 95% is based on a maximum temperature of 45°C (113°F).

†Maximum storage altitude corresponds to a minimum pressure of 70 kPa (10.1 psia).

Server blade specifications

Specification	Value
Height	5.08 cm (2.00 in)
Depth	50.65 cm (19.94 in)
Width	36.68 cm (14.44 in)
Weight (minimum)	9.16 kg (20.20 lb)
Weight (maximum)	12.29 kg (27.10 lb)

Acronyms and abbreviations

AMP

Advanced Memory Protection

CSR

Customer Self Repair

ESD

electrostatic discharge

IML

Integrated Management Log

KVM

keyboard, video, and mouse

LOM

LAN on Motherboard

LRDIMM

load reduced dual in-line memory module

NVMe

non-volatile memory express

NVRAM

nonvolatile memory

PCIe

Peripheral Component Interconnect Express

POST

Power-On Self Test

PSP

HPE ProLiant Support Pack

RBSU

ROM-Based Setup Utility

RDIMM

registered dual in-line memory module

SAS

serial attached SCSI

SATA

serial ATA

SD

Secure Digital

SIM

Systems Insight Manager

SUV

serial, USB, video

TPM

Trusted Platform Module

UDIMM

unregistered dual in-line memory module

USB

universal serial bus

Documentation feedback

Hewlett Packard Enterprise is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (<mailto:docsfeedback@hpe.com>). When submitting your feedback, include the document title, part number, edition, and publication date located on the front cover of the document. For online help content, include the product name, product version, help edition, and publication date located on the legal notices page.

Index

A

access panel 29
accessing a server blade with local KVM 78, 79
Active Health System 62
ACU (Array Configuration Utility) 66
Array Configuration Utility (ACU) 66
ASR (Automatic Server Recovery) 67
Automatic Server Recovery (ASR) 67

B

boot options 63, 64
buttons 68
buttons, front panel 68

C

cables 76, 77, 78
cabling 76, 77, 78
cabling, drive 76, 77
cautions 25
Change Control 63, 64
components 15, 25, 68, 72
components, identification 15, 68
components, mechanical 15
connectors 68
CSR (customer self repair) 5
customer self repair (CSR) 5

D

diagnosing problems 61
diagnostic tools 62, 64, 65, 67
diagnostics utility 65
dimensions, server 80
DIMM slot locations 74
documentation 83
documentation feedback 83
drive cabling 76
drive LEDs 71

E

electrostatic discharge 25
environmental specifications 80
error messages 61
external cables 78
external USB functionality 66

F

features 68
firmware upgrade utility, troubleshooting 61
front panel components 68
front panel/drive cage assembly 39

G

grounding methods 25

H

health driver 67
Hewlett Packard Enterprise Technical Support 5
HPE c-Class Blade SUV Cable 74, 77, 78
HPE Insight Diagnostics 65
HPE Insight Diagnostics survey functionality 65

I

identifying components 68
illustrated parts catalog 15
iLO (Integrated Lights-Out) 62, 63
IML (Integrated Management Log) 63
Insight Diagnostics 65
Integrated Lights-Out (iLO) 63
Integrated Management Log (IML) 63
internal USB connector 66

K

KVM 78

L

LED, health 69
LEDs, front panel 71
LEDs, troubleshooting 61
legacy USB support 66

M

maintenance 25
management tools 62
mechanical components 15
media devices 79
mezzanine connector definitions 74
mezzanine connectors 74

O

operating systems supported 65

P

part numbers 15
powering down 26
preparation procedures 26
problem diagnosis 61, 62
Product ID 64

Q

QuickSpecs 62

R

regulatory compliance identification numbers 61
remote support and analysis tools 65
removal and replacement procedures 25
removing the server blade 27
replacement procedures 25
required tools 25
ROM legacy USB support 66
ROM-Based Setup Utility (RBSU) 63

S

safety considerations 25
safety information 25, 26
SAS cabling 77
SAS drives 15
serial label pull tab 68, 70
serial number 64
server blade components 68
server blade removal 27
server blade specifications 80
server specifications 80
specifications 80
specifications, environmental 80
specifications, server blade 80
static electricity 25
supported servers 61
supported targets 61
SUV cable 78
SUV connector 77, 78
symbols on equipment 26
system board components 72
system components 68

T

technical support 5
TPM (Trusted Platform Module) 60
troubleshooting 61
troubleshooting resources 61, 62
Trusted Platform Module (TPM) 60

U

USB (universal serial bus) 66
USB devices 78
USB support 66
utilities 62, 63, 64

V

video devices 78

W

warnings 25
warranty 5
weight 80