



MX480 3D Universal Edge Router Hardware Guide



Modified: 2017-12-18

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. and/or its affiliates in the United States and other countries. All other trademarks may be property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

MX480 3D Universal Edge Router Hardware Guide
Copyright © 2017 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

	About the Documentation	xxv
	Documentation and Release Notes	xxv
	Supported Platforms	xxv
	Documentation Conventions	xxv
	Documentation Feedback	xxvii
	Requesting Technical Support	xxviii
	Self-Help Online Tools and Resources	xxviii
	Opening a Case with JTAC	xxviii
Part 1	Overview	
Chapter 1	System Overview	3
	MX480 Router Description	3
Chapter 2	MX480 Release Notes	5
	Outstanding Issues with the MX480 Router	5
	Errata with the MX480 Router Documentation	6
Chapter 3	Chassis Components and Descriptions	9
	MX480 Chassis Description	9
	MX480 Component Redundancy	11
	MX480 Router Hardware and CLI Terminology Mapping	12
	MX480 Craft Interface Description	14
	Alarm Relay Contacts on the MX480 Craft Interface	15
	Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface	15
	MX480 Component LEDs on the Craft Interface	16
	Host Subsystem LEDs on the MX480 Craft Interface	16
	Power Supply LEDs on the MX480 Craft Interface	17
	DPC and MPC LEDs on the MX480 Craft Interface	17
	FPC LEDs on the MX480 Craft Interface	17
	SCB LEDs on the MX480 Craft Interface	18
	Fan LEDs on the MX480 Craft Interface	18
	MX480 Cable Management Brackets	19
Chapter 4	Cooling System Components and Descriptions	21
	MX480 Cooling System Description	21
	MX480 Fan LED	23

Chapter 5	Host Subsystem Components and Descriptions	25
	MX480 Host Subsystem Description	25
	MX480 Host Subsystem LEDs	26
	MX480 Midplane Description	26
	MX480 Routing Engine Description	27
	Routing Engine Components	28
	Routing Engine Interface Ports	28
	Routing Engine Boot Sequence	29
	RE-S-1800 Routing Engine Description for MX Series	29
	RE-S-1800 Routing Engine Components	30
	RE-S-1800 Routing Engine Boot Sequence	31
	RE-S-1800 Routing Engine LEDs	31
	RE-S-X6-64G Routing Engine Description	32
	RE-S-X6-64G Routing Engine Components	32
	RE-S-X6-64G Routing Engine Boot Sequence	33
	RE-S-X6-64G Routing Engine LEDs	34
	Routing Engine Specifications	35
	MX480 Routing Engine LEDs	38
	Routing Engine LEDs (RE-S-X6-64G)	39
	Supported Routing Engines by Router	40
	M7i Routing Engines	40
	M10i Routing Engines	41
	M40e Routing Engines	41
	M120 Routing Engines	41
	M320 Routing Engines	42
	MX5, MX10, MX40, and MX80 Routing Engine	43
	MX104 Routing Engines	43
	MX240 Routing Engines	43
	MX480 Routing Engines	44
	MX960 Routing Engines	45
	MX2008 Routing Engines	46
	MX2010 Routing Engines	46
	MX2020 Supported Routing Engines	47
	MX10003 Routing Engines	47
	PTX1000 Routing Engines	47
	PTX3000 Routing Engines	48
	PTX5000 Routing Engines	48
	T320 Routing Engines	49
	T640 Routing Engines	49
	T1600 Routing Engines	50
	T4000 Routing Engines	51
	TX Matrix Routing Engines	51
	TX Matrix Plus Routing Engines	52
	TX Matrix Plus (with 3D SIBs) Routing Engines	52

Chapter 6	Line Card Components and Descriptions	55
	Interface Modules—DPCs	55
	MX480 Dense Port Concentrator (DPC) Description	55
	DPC Components	56
	MX480 DPC Port and Interface Numbering	57
	MX480 Dense Port Concentrator (DPC) LEDs	60
	DPCs Supported on MX240, MX480, and MX960 Routers	60
	Interface Modules—FPCs and MICs	63
	MX480 Flexible PIC Concentrator (FPC) Description	63
	FPC Components	64
	MX480 Flexible PIC Concentrator (FPC) LEDs	65
	FPCs Supported by MX240, MX480, and MX960 Routers	65
	MX480 PIC Description	66
	MX480 PIC Port and Interface Numbering	66
	MX480 PIC LEDs	68
	PICs Supported by MX240, MX480, and MX960 Routers	68
	Interface Modules—MPCs and MICs	69
	MIC/MPC Compatibility	69
	MX480 Modular Interface Card (MIC) Description	76
	MX480 MIC Port and Interface Numbering	77
	MX480 Modular Interface Card (MIC) LEDs	80
	MICs Supported by MX Series Routers	80
	MX480 Modular Port Concentrator (MPC) Description	87
	MPC Components	89
	MX480 Modular Port Concentrator (MPC) LEDs	90
	MPCs Supported by MX Series Routers	90
	MX480 Application Services Modular Line Card Description	93
	MX480 AS MLC Function	94
	AS MLC Components	94
	MX480 SCB, Power Supply, and Cooling System Requirements for AS MLC	95
	MX480 Application Services Modular Storage Card Description	96
	MX480 Application Services Modular Processing Card Description	97
	MX480 AS MSC LEDs	97
	MX480 AS MXC LEDs	98
Chapter 7	Power System Components and Descriptions	99
	MX480 Power System Description	99
	MX480 AC Power Supply Description	100
	AC Power Supply Configurations	101
	MX480 AC Power Supply LEDs	102
	MX480 DC Power Supply Description	102
	DC Power Supply Configurations	103
	MX480 DC Power Supply LEDs	104
Chapter 8	Switch Fabric Components and Descriptions	107
	MX480 SCB Description	107
	SCB Slots	108
	SCB Redundancy	108

	SCB Components	108
	SCB-MX LEDs	109
	MX480 SCBE Description	110
	MX SCBE Slots	111
	MX SCBE Redundancy	111
	MX SCBE Components	111
	MX480 SCBE LEDs	111
	MX480 SCBE2 Description	113
	SCBE2 Slots	114
	SCBE2 Redundancy	114
	SCBE2 Components	114
	MX480 SCBE2 LEDs	114
Part 2	Site Planning, Preparation, and Specifications	
Chapter 9	Preparation Overview	119
	MX480 Router Physical Specifications	119
	MX480 Router Environmental Specifications	121
	MX480 Site Preparation Checklist	121
	MX480 Router Rack Requirements	122
	Rack Size and Strength	123
	Spacing of Mounting Bracket Holes	124
	Connection to Building Structure	124
	MX480 Router Clearance Requirements for Airflow and Hardware Maintenance	125
	MX480 Router Cabinet Size and Clearance Requirements	126
	MX480 Router Cabinet Airflow Requirements	126
	MX480 Chassis Grounding Specifications	127
	MX480 Chassis Grounding Points Specifications	127
	MX480 Router Grounding Cable Lug Specifications	128
	MX480 Router Grounding Cable Specifications	129
Chapter 10	Transceiver and Cable Specifications	131
	Calculating Power Budget and Power Margin for Fiber-Optic Cables	131
	Calculating Power Budget for Fiber-Optic Cable	131
	Calculating Power Margin for Fiber-Optic Cable	132
	Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion	133
	Signal Loss in Multimode and Single-Mode Fiber-Optic Cable	133
	Attenuation and Dispersion in Fiber-Optic Cable	133
	Routing Engine Interface Cable and Wire Specifications for MX Series Routers	134
Chapter 11	Cable and Pinout Specifications	137
	RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port	137
	RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports	138
Chapter 12	AC Power Requirements, Specifications, and Guidelines	139
	AC Electrical Specifications for the MX480 Router	139
	Power Requirements for an MX480 Router	140

	Calculating Power Requirements for MX480 Routers	149
	AC Power Circuit Breaker Requirements for the MX480 Router	153
	AC Power Cord Specifications for the MX480 Router	153
Chapter 13	DC Power Requirements, Specifications, and Guidelines	157
	DC Power Supply Electrical Specifications for the MX480 Router	157
	Power Requirements for an MX480 Router	158
	Calculating Power Requirements for MX480 Routers	167
	DC Power Circuit Breaker Requirements for the MX480 Router	171
	DC Power Source Cabling for the MX480 Router	172
	DC Power Cable Specifications for the MX480 Router	173
Part 3	Initial Installation and Configuration	
Chapter 14	Unpacking the MX480 Router	177
	Tools and Parts Required to Unpack the MX480 Router	177
	Unpacking the MX480 Router	177
	Verifying the MX480 Router Parts Received	179
Chapter 15	Installing the Mounting Hardware	183
	Installing the MX480 Router Mounting Hardware for a Rack or Cabinet	183
	Moving the Mounting Brackets for Center-Mounting the MX480 Router	185
Chapter 16	Installing the MX480 Router	187
	Installing an MX480 Router Overview	187
	Tools Required to Install the MX480 Router with a Mechanical Lift	188
	Removing Components from the MX480 Router Before Installing It with a Lift	189
	Removing the Power Supplies Before Installing the MX480 Router with a Lift	189
	Removing the Fan Tray Before Installing the MX480 Router with a Lift	190
	Removing the SCBs Before Installing the MX480 Router with a Lift	191
	Removing the DPCs Before Installing the MX480 Router with a Lift	192
	Removing the FPCs Before Installing the MX480 Router with a Lift	193
	Installing the MX480 Router Using a Mechanical Lift	194
	Reinstalling Components in the MX480 Router After Installing It with a Lift	196
	Reinstalling the Power Supplies After Installing the MX480 Router with a Lift	196
	Reinstalling the Fan Tray After Installing the MX480 Router with a Lift	197
	Reinstalling the SCBs After Installing the MX480 Router with a Lift	198
	Reinstalling the DPCs After Installing the MX480 Router with a Lift	199
	Reinstalling the FPCs After Installing the MX480 Router with a Lift	200
	Tools Required to Install the MX480 Router Without a Mechanical Lift	201
	Removing Components from the MX480 Router Before Installing It Without a Lift	202
	Removing the Power Supplies Before Installing the MX480 Router Without a Lift	202
	Removing the Fan Tray Before Installing the MX480 Router Without a Lift	203
	Removing the SCBs Before Installing the MX480 Router Without a Lift	204

	Removing the DPCs Before Installing the MX480 Router Without a Lift . . .	205
	Removing the FPCs Before Installing the MX480 Router Without a Lift . . .	206
	Installing the MX480 Chassis in the Rack Manually	208
	Reinstalling Components in the MX480 Router After Installing It Without a Lift	210
	Reinstalling the Power Supplies After Installing the MX480 Router Without a Lift	210
	Reinstalling the Fan Tray After Installing the MX480 Router Without a Lift	211
	Reinstalling the SCBs After Installing the MX480 Router Without a Lift . . .	212
	Reinstalling the DPCs After Installing the MX480 Router Without a Lift . . .	213
	Reinstalling the FPCs After Installing the MX480 Router Without a Lift . . .	214
	Installing the MX480 Router Cable Management Bracket	215
Chapter 17	Connecting the MX480 Router to Power	217
	Tools and Parts Required for MX480 Router Grounding and Power Connections	217
	Grounding the MX480 Router	218
	Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies	219
	Powering On an AC-Powered MX480 Router	220
	Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies	221
	Powering On a DC-Powered MX480 Router with Normal Capacity Power Supplies	224
	Powering Off the MX480 Router	226
	Connecting an MX480 AC Power Supply Cord	226
	Connecting an MX480 DC Power Supply Cable	227
Chapter 18	Connecting the MX480 Router to the Network	231
	Tools and Parts Required for MX480 Router Connections	231
	Connecting the MX480 Router to Management and Alarm Devices	231
	Connecting the MX480 Router to a Network for Out-of-Band Management	232
	Connecting the MX480 Router to a Management Console or Auxiliary Device	232
	Connecting the MX480 Router to an External Alarm-Reporting Device . . .	233
	Connecting the MX480 Router to a Network for Out-of-Band Management . . .	234
	Connecting the MX480 Router to a Management Console or Auxiliary Device . .	235
	Connecting the MX480 Router to an External Alarm-Reporting Device	236
	Connecting DPC, MPC, MIC, or PIC Cables to the MX480 Router	237
	Connecting the Alarm Relay Wires to the MX480 Craft Interface	239
Chapter 19	Initially Configuring the MX480 Router	241
	Initially Configuring the MX480 Router	241

Part 4	Installing and Replacing Components	
Chapter 20	Overview of Installing and Replacing Components	247
	MX480 Field-Replaceable Units (FRUs)	247
	Tools and Parts Required to Replace MX480 Hardware Components	248
Chapter 21	Installing Components	251
	Installing the MX480 Craft Interface	251
	Installing the MX480 Air Filter	252
	Installing the MX480 Fan Tray	253
	Installing an MX480 Routing Engine	254
	Installing an MX480 DPC	256
	Installing a Cable on an MX480 DPC, MPC, MIC, or PIC	259
	Installing an MX480 FPC	261
	Installing an MX480 MIC	264
	Installing an MX480 Dual-Wide MIC	266
	Installing an MX480 MPC	269
	Installing an MX480 PIC	271
	Installing an MX480 AS MLC	274
	Installing an MX480 AS MSC	275
	Installing an MX480 AS MXC	277
	Installing an MX480 AC Power Supply	278
	Installing an MX480 DC Power Supply	280
	Installing an MX480 SCB	283
	Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC	285
Chapter 22	Replacing Chassis Components	287
	Replacing the MX480 Craft Interface	287
	Disconnecting the Alarm Relay Wires from the MX480 Craft Interface	287
	Removing the MX480 Craft Interface	288
	Installing the MX480 Craft Interface	289
	Connecting the Alarm Relay Wires to the MX480 Craft Interface	290
	Replacing the MX480 Cable Management Brackets	291
	Replacing the Management Ethernet Cable on an MX Series Router	292
	Replacing the Console or Auxiliary Cable on an MX480 Router	292
Chapter 23	Replacing Cooling System Components	295
	Replacing the MX480 Air Filter	295
	Removing the MX480 Air Filter	295
	Installing the MX480 Air Filter	296
	Replacing the MX480 Fan Tray	297
	Removing the MX480 Fan Tray	298
	Installing the MX480 Fan Tray	299

Chapter 24	Replacing Host Subsystem Components	301
	Replacing an MX480 Routing Engine	301
	Removing an MX480 Routing Engine	301
	Installing an MX480 Routing Engine	303
	Replacing an SSD Drive on an RE-S-1800	305
	Replacing an SSD Drive on an RE-S-X6-64G	306
	Replacing Connections to MX480 Routing Engine Interface Ports	311
	Replacing the Management Ethernet Cable on an MX Series Router	312
	Replacing the Console or Auxiliary Cable on an MX480 Router	312
	Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem	313
	Removing the Routing Engine	314
	Installing the Routing Engine RE-S-X6-64G	316
	Verifying and Configuring the Upgraded Routing Engine as the Master	319
	Verifying and Configuring the Upgraded Routing Engine as the Backup	319
	Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem	319
	Removing the Routing Engine	320
	Installing the Routing Engine RE-S-X6-64G	321
Chapter 25	Replacing Line Card Components	323
	Replacing an MX480 DPC	323
	Removing an MX480 DPC	323
	Installing an MX480 DPC	325
	Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC	328
	Removing a Cable on an MX480 DPC, MPC, MIC, or PIC	329
	Installing a Cable on an MX480 DPC, MPC, MIC, or PIC	330
	Replacing an MX480 FPC	332
	Removing an MX480 FPC	332
	Installing an MX480 FPC	335
	Replacing an MX480 MIC	337
	Removing an MX480 MIC	338
	Installing an MX480 MIC	340
	Installing an MX480 Dual-Wide MIC	342
	Replacing an MX480 MPC	345
	Removing an MX480 MPC	345
	Installing an MX480 MPC	348
	Replacing an MX480 PIC	350
	Removing an MX480 PIC	351
	Installing an MX480 PIC	353
	Replacing an MX480 AS MLC	355
	Removing an MX480 AS MLC	356
	Installing an MX480 AS MLC	358
	Replacing an MX480 AS MSC	359
	Removing an MX480 AS MSC	360
	Installing an MX480 AS MSC	361
	Replacing an MX480 AS MXC	363
	Removing an MX480 AS MXC	363
	Installing an MX480 AS MXC	364

Chapter 26	Replacing Power System Components	367
	Replacing an MX480 AC Power Supply	367
	Removing an MX480 AC Power Supply	367
	Installing an MX480 AC Power Supply	369
	Replacing an MX480 DC Power Supply	370
	Removing an MX480 DC Power Supply	370
	Installing an MX480 DC Power Supply	372
	Replacing an MX480 AC Power Supply Cord	376
	Disconnecting an MX480 AC Power Supply Cord	376
	Connecting an MX480 AC Power Supply Cord	376
	Replacing an MX480 DC Power Supply Cable	377
	Disconnecting an MX480 DC Power Supply Cable	377
	Connecting an MX480 DC Power Supply Cable	378
Chapter 27	Replacing Switch Fabric Components	381
	Replacing an MX480 SCB	381
	Removing an MX480 SCB	381
	Installing an MX480 SCB	383
	Upgrading an MX480 SCB	385
	Preparing for the Upgrade	385
	Upgrading the SCB in the Backup Routing Engine	387
	Upgrading the SCB in the Master Routing Engine	389
	Completing the SCB Upgrade	391
	Upgrading an MX480 SCB or SCBE to SCBE2	393
	Preparing the MX480 Router for the SCBE2 Upgrade	394
	Powering Off the MX480 Router	395
	Removing an MX480 Routing Engine from an SCB or SCBE	396
	Replacing the SCB or SCBE with SCBE2	396
	Installing an MX480 Routing Engine into an SCBE2	396
	Powering On the MX480 Router	397
	Completing the SCBE2 Upgrade	398
	Replacing an SFP or XFP Transceiver on an MX480 DPC, MPC, MIC, or PIC	399
	Removing an SFP or XFP Transceiver from an MX480 DPC, MPC, MIC, or PIC	399
	Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC	401
	Upgrading an MX480 SCB	402
	Preparing for the Upgrade	402
	Upgrading the SCB in the Backup Routing Engine	403
	Upgrading the SCB in the Master Routing Engine	405
	Completing the SCB Upgrade	407
Part 5	Maintaining the Chassis and Components	
Chapter 28	Routine Maintenance Procedures	413
	Routine Maintenance Procedures for the MX480 Router	413

Chapter 29	Maintaining Components	415
	Tools and Parts Required to Maintain the MX480 Router	415
	Maintaining the MX480 Air Filter	415
	Maintaining the MX480 Fan Tray	416
	Maintaining the MX480 Host Subsystem	418
	Maintaining MX480 DPCs	420
	Holding an MX480 DPC	422
	Storing an MX480 DPC	424
	Maintaining MX480 FPCs	425
	Holding an MX480 FPC	427
	Storing an MX480 FPC	429
	Maintaining MX480 MICs	430
	Maintaining MX480 MPCs	431
	Maintaining MX480 PICs	433
	Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs	434
	Maintaining the MX480 Power Supplies	435
Part 6	Troubleshooting Hardware	
Chapter 30	Troubleshooting Components	439
	Troubleshooting Resources for MX480 Routers	439
	Command-Line Interface	439
	Chassis and Interface Alarm Messages	440
	Alarm Relay Contacts	440
	Craft Interface LEDs	440
	Component LEDs	441
	Juniper Networks Technical Assistance Center	441
	Troubleshooting the MX480 Cooling System	442
	Troubleshooting the MX480 DPCs	442
	Troubleshooting the MX480 FPCs	444
	Troubleshooting the MX480 MICs	446
	Troubleshooting the MX480 MPCs	447
	Troubleshooting the MX480 PICs	449
	Troubleshooting the MX480 Power System	449
Part 7	Contacting Customer Support and Returning the Chassis or Components	
Chapter 31	Contacting Customer Support	457
	Contacting Customer Support	457
Chapter 32	Locating Component Serial Numbers	459
	Displaying MX480 Router Components and Serial Numbers	459
	MX480 Chassis Serial Number Label	461
	MX480 SCB Serial Number Label	462
	MX480 DPC Serial Number Label	463
	MX480 FPC Serial Number Label	464
	MX480 MIC Serial Number Label	465
	MX480 MPC Serial Number Label	467
	MX480 PIC Serial Number Label	468

	MX480 Power Supply Serial Number Label	468
	MX480 Routing Engine Serial Number Label	470
Chapter 33	Packing and Returning Components	473
	Contacting Customer Support to Obtain Return Material Authorization	473
	Guidelines for Packing Hardware Components for Shipment	474
	Returning a Hardware Component to Juniper Networks, Inc.	474
	Packing the MX480 Router for Shipment	475
Part 8	Safety and Compliance Information	
Chapter 34	General Safety Guidelines and Warnings	479
	General Safety Guidelines and Warnings	479
	Definitions of Safety Warning Levels	480
	Qualified Personnel Warning	482
	Fire Safety Requirements	483
	Fire Suppression	483
	Fire Suppression Equipment	483
	Warning Statement for Norway and Sweden	484
	Preventing Electrostatic Discharge Damage to an MX480 Router	484
Chapter 35	Installation and Maintenance Safety Guidelines and Warnings	487
	Installation Instructions Warning	487
	MX480 Chassis Lifting Guidelines	488
	Ramp Warning	489
	Rack-Mounting and Cabinet-Mounting Warnings	489
	Grounded Equipment Warning	493
Chapter 36	Radiation and Laser Warnings	495
	Laser and LED Safety Guidelines and Warnings	495
	General Laser Safety Guidelines	495
	Class 1 Laser Product Warning	496
	Class 1 LED Product Warning	496
	Laser Beam Warning	496
	Radiation from Open Port Apertures Warning	497
Chapter 37	Maintenance and Operational Safety Guidelines and Warnings	499
	Maintenance and Operational Safety Guidelines and Warnings	499
	Battery Handling Warning	499
	Jewelry Removal Warning	500
	Lightning Activity Warning	501
	Operating Temperature Warning	502
	Product Disposal Warning	503
Chapter 38	Electrical Safety Guidelines and Warnings	505
	General Electrical Safety Guidelines and Warnings	505
	Prevention of Electrostatic Discharge Damage	506
	AC Power Electrical Safety Guidelines	508
	AC Power Disconnection Warning	509
	DC Power Copper Conductors Warning	509
	DC Power Disconnection Warning	510

	DC Power Grounding Requirements and Warning	512
	DC Power Wiring Sequence Warning	513
	DC Power Wiring Terminations Warning	514
	Midplane Energy Hazard Warning	516
	Multiple Power Supplies Disconnection Warning	516
	Action to Take After an Electrical Accident	517
Chapter 39	Agency Approvals and Compliance Statements	519
	Agency Approvals for MX480 Routers	519
	Compliance Statements for EMC Requirements	520
	Canada	520
	European Community	520
	Israel	520
	Japan	521
	United States	521
	Compliance Statements for Environmental Requirements	521
	Compliance Statements for NEBS	521
	Compliance Statements for Acoustic Noise for the MX480 Router	521

List of Figures

Part 1	Overview	
Chapter 3	Chassis Components and Descriptions	9
	Figure 1: Front View of a Fully Configured Router Chassis	10
	Figure 2: Rear View of a Fully Configured AC-Powered Router Chassis	10
	Figure 3: Rear View of a Fully Configured DC-Powered Router Chassis	11
	Figure 4: Front Panel of the Craft Interface	14
	Figure 5: Alarm Relay Contacts	15
	Figure 6: Cable Management Brackets	19
	Figure 7: Cable Management Brackets Installed on the Router	19
Chapter 4	Cooling System Components and Descriptions	21
	Figure 8: Airflow Through the Chassis	21
	Figure 9: Fan Tray	22
	Figure 10: Air Filter	22
Chapter 5	Host Subsystem Components and Descriptions	25
	Figure 11: Midplane	26
	Figure 12: RE-S-1800 Routing Engine	27
	Figure 13: RE-S-X6-64G Routing Engine Front View	28
	Figure 14: RE-S-X6-64G-LT Routing Engine Front View	28
	Figure 15: RE-S-1800 Front View	30
	Figure 16: Routing Engine—RE-S-1800	30
	Figure 17: RE-S-X6-64G Routing Engine Front View	32
	Figure 18: RE-S-X6-64G Routing Engine LEDs	34
	Figure 19: RE-S-1800 Routing Engine	38
	Figure 20: RE-S-X6-64G Routing Engine LEDs	39
Chapter 6	Line Card Components and Descriptions	55
	Figure 21: Typical DPCs Supported on the Router	56
	Figure 22: DPC Installed Horizontally in the Router	56
	Figure 23: MX480 DPC Interface Port Mapping	58
	Figure 24: FPC Installed in the MX480 Router Chassis	63
	Figure 25: Typical FPCs Supported on the MX480 Router	64
	Figure 26: MX480 PIC Interface Port Mapping	67
	Figure 27: MX480 MIC Interface Port Mapping	78
	Figure 28: Typical MPC Supported on the MX Series Router	89
	Figure 29: MPC Installed Horizontally in the MX480 Router	89
	Figure 30: Application Services Modular Line Card (AS MLC)	94
	Figure 31: Application Services Modular Storage Card	96
	Figure 32: Application Services Modular Processing Card (AS MXC)	97
Chapter 7	Power System Components and Descriptions	99

	Figure 33: AC Power Supply	100
	Figure 34: High-Capacity AC Power Supply	101
	Figure 35: DC Power Supply	103
	Figure 36: High-Capacity DC Power Supply	103
Chapter 8	Switch Fabric Components and Descriptions	107
	Figure 37: SCB	108
	Figure 38: MX SCBE	110
	Figure 39: SCBE2	113
Part 2	Site Planning, Preparation, and Specifications	
Chapter 9	Preparation Overview	119
	Figure 40: Typical Open-Frame Rack	124
	Figure 41: Clearance Requirements for Airflow and Hardware Maintenance for an MX480 Router Chassis	125
	Figure 42: Airflow Through the Chassis	127
	Figure 43: Connecting AC Power to the Router	128
	Figure 44: Connecting DC Power to the Router	128
	Figure 45: Grounding Cable Lug	129
Chapter 12	AC Power Requirements, Specifications, and Guidelines	139
	Figure 46: AC Plug Types	155
Chapter 13	DC Power Requirements, Specifications, and Guidelines	157
	Figure 47: Typical DC Source Cabling to the Router	172
	Figure 48: DC Power Cable Lug	173
Part 3	Initial Installation and Configuration	
Chapter 14	Unpacking the MX480 Router	177
	Figure 49: Contents of the Shipping Crate	178
Chapter 15	Installing the Mounting Hardware	183
	Figure 50: Installing the Front-Mounting Hardware for a Four-Post Rack or Cabinet	184
	Figure 51: Installing the Mounting Hardware for an Open-Frame Rack	185
Chapter 16	Installing the MX480 Router	187
	Figure 52: Removing a Power Supply Before Installing the Router	190
	Figure 53: Removing the Fan Tray	191
	Figure 54: Removing an SCB	192
	Figure 55: Removing a DPC	193
	Figure 56: Removing an FPC	194
	Figure 57: Installing the Router in the Rack	195
	Figure 58: Reinstalling a Power Supply	197
	Figure 59: Reinstalling a Fan Tray	198
	Figure 60: Reinstalling an SCB	199
	Figure 61: Reinstalling a DPC	200
	Figure 62: Reinstalling an FPC	201
	Figure 63: Removing a Power Supply Before Installing the Router	203

	Figure 64: Removing the Fan Tray	204
	Figure 65: Removing an SCB	205
	Figure 66: Removing a DPC	206
	Figure 67: Removing an FPC	207
	Figure 68: Installing the Router in the Rack	209
	Figure 69: Reinstalling a Power Supply	211
	Figure 70: Reinstalling a Fan Tray	212
	Figure 71: Reinstalling an SCB	213
	Figure 72: Reinstalling a DPC	214
	Figure 73: Reinstalling an FPC	215
	Figure 74: Installing the Cable Management Brackets	216
Chapter 17	Connecting the MX480 Router to Power	217
	Figure 75: Connecting AC Power to the Router (110V)	220
	Figure 76: Connecting DC Power to the Router	224
	Figure 77: Connecting Power Cables to the DC Power Supply	228
Chapter 18	Connecting the MX480 Router to the Network	231
	Figure 78: Ethernet Port	232
	Figure 79: Routing Engine Ethernet Cable Connector	232
	Figure 80: Auxiliary and Console Ports	233
	Figure 81: Routing Engine Console and Auxiliary Cable Connector	233
	Figure 82: Alarm Relay Contacts	234
	Figure 83: Ethernet Port	235
	Figure 84: Routing Engine Ethernet Cable Connector	235
	Figure 85: Auxiliary and Console Ports	236
	Figure 86: Routing Engine Console and Auxiliary Cable Connector	236
	Figure 87: Alarm Relay Contacts	237
	Figure 88: Attaching a Cable to a DPC	238
	Figure 89: Attaching a Cable to a MIC	238
	Figure 90: Alarm Relay Contacts	239
Part 4	Installing and Replacing Components	
Chapter 21	Installing Components	251
	Figure 91: Installing the Craft Interface	252
	Figure 92: Installing the Air Filter	253
	Figure 93: Installing the Fan Tray	254
	Figure 94: Installing a Routing Engine	255
	Figure 95: Installing a DPC	258
	Figure 96: Attaching a Cable to a DPC	259
	Figure 97: Installing an FPC	263
	Figure 98: Installing the Septum	264
	Figure 99: Installing a MIC	266
	Figure 100: Removing the Septum	267
	Figure 101: Installing a Dual-Wide MIC	268
	Figure 102: Installing an MPC	271
	Figure 103: Installing a PIC	273
	Figure 104: Installing an AS MLC	275
	Figure 105: Installing an AS MSC	276

	Figure 106: Installing an AS MXC	278
	Figure 107: Installing an AC Power Supply in an MX480 Router	279
	Figure 108: Installing a DC Power Supply in the Router	282
	Figure 109: Connecting DC Power to the Router	283
	Figure 110: Installing an SCB	285
Chapter 22	Replacing Chassis Components	287
	Figure 111: Alarm Relay Contacts	288
	Figure 112: Removing the Craft Interface	288
	Figure 113: Installing the Craft Interface	289
	Figure 114: Alarm Relay Contacts	290
	Figure 115: Removing the Cable Management Brackets	291
	Figure 116: Cable Connector	292
	Figure 117: Ethernet Port	292
	Figure 118: Auxiliary and Console Ports	293
Chapter 23	Replacing Cooling System Components	295
	Figure 119: Removing the Air Filter	296
	Figure 120: Installing the Air Filter	297
	Figure 121: Removing the Fan Tray	299
	Figure 122: Installing the Fan Tray	300
Chapter 24	Replacing Host Subsystem Components	301
	Figure 123: Removing a Routing Engine	303
	Figure 124: Installing a Routing Engine	304
	Figure 125: RE-S-1800 Storage Drive Slots	305
	Figure 126: RE-S-X6-64G Storage Drive Slots	307
	Figure 127: Removing an SSD in the Routing Engine RE-S-X6-64G	308
	Figure 128: Installing an SSD in the Routing Engine RE-S-X6-64G	310
	Figure 129: Cable Connector	312
	Figure 130: Ethernet Port	312
	Figure 131: Auxiliary and Console Ports	313
	Figure 132: Removing a Routing Engine from an MX240 Router	315
	Figure 133: Removing a Routing Engine from an MX480 Router	315
	Figure 134: Removing a Routing Engine from an MX960 Router	316
	Figure 135: Installing a Routing Engine in an MX240 Router	317
	Figure 136: Installing a Routing Engine in an MX480 Router	318
	Figure 137: Installing a Routing Engine in an MX960 Router	318
Chapter 25	Replacing Line Card Components	323
	Figure 138: Removing a DPC	325
	Figure 139: Installing a DPC	327
	Figure 140: Attaching a Cable to a DPC	328
	Figure 141: Removing an FPC	334
	Figure 142: Installing an FPC	337
	Figure 143: Removing a MIC	339
	Figure 144: Removing a Dual-Wide MIC	339
	Figure 145: Installing the Septum	340
	Figure 146: Installing a MIC	342
	Figure 147: Removing the Septum	343

	Figure 148: Installing a Dual-Wide MIC	344
	Figure 149: Removing an MPC	347
	Figure 150: Installing an MPC	350
	Figure 151: Removing a PIC	352
	Figure 152: Installing a PIC	355
	Figure 153: Removing an AS MLC	357
	Figure 154: Installing an AS MLC	359
	Figure 155: Removing an AS MSC	361
	Figure 156: Installing an AS MSC	362
	Figure 157: Removing an AS MXC	364
	Figure 158: Installing an AS MXC	365
Chapter 26	Replacing Power System Components	367
	Figure 159: Removing an AC Power Supply	368
	Figure 160: Installing an AC Power Supply in an MX480 Router	370
	Figure 161: Removing a DC Power Supply from the Router	372
	Figure 162: Installing a DC Power Supply in the Router	375
	Figure 163: Connecting DC Power to the Router	375
	Figure 164: Connecting Power Cables to the DC Power Supply	379
Chapter 27	Replacing Switch Fabric Components	381
	Figure 165: Removing an SCB	382
	Figure 166: Installing an SCB	384
	Figure 167: Removing SFPs or XFPs	400
Part 5	Maintaining the Chassis and Components	
Chapter 29	Maintaining Components	415
	Figure 168: Do Not Grasp the Connector Edge	423
	Figure 169: Do Not Rest the DPC on an Edge	424
	Figure 170: Do Not Grasp the Connector Edge	427
	Figure 171: Do Not Carry an FPC with Only One Hand	428
	Figure 172: Do Not Rest the FPC on an Edge	429
	Figure 173: Do Not Stack FPCs	430
Part 6	Troubleshooting Hardware	
Chapter 30	Troubleshooting Components	439
	Figure 174: MX480 High-Capacity DC Power Supply Input Mode Switch.	452
Part 7	Contacting Customer Support and Returning the Chassis or Components	
Chapter 32	Locating Component Serial Numbers	459
	Figure 175: Serial Number ID Label	461
	Figure 176: MX480 Chassis Serial Number Label	462
	Figure 177: SCB Serial Number Label	463
	Figure 178: DPC Serial Number Label	464
	Figure 179: FPC Serial Number Label	465
	Figure 180: 2-Port MIC Serial Number Label	466
	Figure 181: 4-Port MIC Serial Number Label	466

	Figure 182: 20-Port MIC Serial Number Label	466
	Figure 183: 40-Port MIC Serial Number Label	466
	Figure 184: MPC Serial Number Label	467
	Figure 185: PIC Serial Number Label	468
	Figure 186: AC Power Supply Serial Number Label	469
	Figure 187: DC Power Supply Serial Number Label	469
	Figure 188: Routing Engine Serial Number Label	470
	Figure 189: RE-S-X6-64G Routing Engine Serial Number Label	470
Part 8	Safety and Compliance Information	
Chapter 34	General Safety Guidelines and Warnings	479
	Figure 190: Placing a Component into an Electrostatic Bag	485
Chapter 38	Electrical Safety Guidelines and Warnings	505
	Figure 191: Placing a Component into an Antistatic Bag	507

List of Tables

	About the Documentation	xxv
	Table 1: Notice Icons	xxvi
	Table 2: Text and Syntax Conventions	xxvi
Part 1	Overview	
Chapter 1	System Overview	3
	Table 3: MX480 Router Capacity	3
	Table 4: SCB Comparison	4
Chapter 2	MX480 Release Notes	5
	Table 5: Host Subsystem OFFLINE LED	7
Chapter 3	Chassis Components and Descriptions	9
	Table 6: MX480 Router Hardware Components and CLI Terminology	12
	Table 7: Alarm LEDs and Alarm Cutoff/Lamp Test Button	16
	Table 8: Host Subsystem LEDs on the Craft Interface	16
	Table 9: Power Supply LEDs on the Craft Interface	17
	Table 10: DPC and MPC LEDs on the Craft Interface	17
	Table 11: FPC LEDs on the Craft Interface	18
	Table 12: SCB LEDs on the Craft Interface	18
	Table 13: Fan LEDs on the Craft Interface	18
Chapter 5	Host Subsystem Components and Descriptions	25
	Table 14: Routing Engine LEDs	31
	Table 15: RE-S-X6-64G Routing Engine LEDs	34
	Table 16: Routing Engine Specifications	35
	Table 17: End-of-Life Routing Engine Specifications	37
	Table 18: RE-S-1800 Routing Engine LEDs	38
	Table 19: Routing Engine LEDs (RE-S-X6-64G)	39
	Table 20: M7i Routing Engines	40
	Table 21: M10i Routing Engines	41
	Table 22: M40e Routing Engines	41
	Table 23: M120 Routing Engines	42
	Table 24: M320 Routing Engines	42
	Table 25: MX5, MX10, MX40, and MX80 Routing Engine	43
	Table 26: MX104 Routing Engines	43
	Table 27: MX240 Supported Routing Engines	44
	Table 28: MX480 Supported Routing Engines	44
	Table 29: MX960 Supported Routing Engines	45
	Table 30: MX2008 Supported Routing Engines	46
	Table 31: MX2010 Supported Routing Engines	46

	Table 32: MX2020 Supported Routing Engines	47
	Table 33: MX10003 Supported Routing Engines	47
	Table 34: PTX1000 Routing Engines	48
	Table 35: PTX3000 Routing Engines	48
	Table 36: PTX5000 Routing Engines	48
	Table 37: T320 Routing Engines	49
	Table 38: T640 Routing Engines	49
	Table 39: T1600 Routing Engines	50
	Table 40: T4000 Routing Engines	51
	Table 41: TX Matrix Routing Engines	52
	Table 42: TX Matrix Plus Routing Engines	52
	Table 43: Routing Engines on TX Matrix Plus with 3D SIBs	52
Chapter 6	Line Card Components and Descriptions	55
	Table 44: DPCs Supported in MX240, MX480, and MX960 Routers	60
	Table 45: FPCs Supported by MX Series Routers	65
	Table 46: PICs Supported by MX240, MX480, and MX960 Routers	68
	Table 47: MIC/MPC1 Compatibility	70
	Table 48: MIC/MPC2 Compatibility	71
	Table 49: MPC/MPC3 Compatibility	73
	Table 50: MIC/MPC6 Compatibility	75
	Table 51: MIC/MPC8 Compatibility	76
	Table 52: MIC/MPC9 Compatibility	76
	Table 53: MIC/MPC10003 Compatibility	76
	Table 54: MICs Supported by MX240, MX480, MX960 and MX2008 Routers . .	80
	Table 55: MICs Supported by MX2010 and MX2020 Routers	82
	Table 56: MICs Supported by MX5, MX10, and MX40 Routers	84
	Table 57: MICs Supported by MX80 and MX104 Routers	86
	Table 58: MICs Supported by MX10003 Router	87
	Table 59: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers	91
	Table 60: AS MSC LEDs	97
	Table 61: AS MXC LEDs	98
Chapter 7	Power System Components and Descriptions	99
	Table 62: AC Power Supply LEDs	102
	Table 63: Power Supply Redundancy and Power Distribution	104
	Table 64: DC Power Supply LEDs	104
Chapter 8	Switch Fabric Components and Descriptions	107
	Table 65: SCB-MX LEDs	109
	Table 66: MX SCBE LEDs	112
	Table 67: SCBE2 LEDs	115
Part 2	Site Planning, Preparation, and Specifications	
Chapter 9	Preparation Overview	119
	Table 68: Physical Specifications	119
	Table 69: Router Environmental Specifications	121
	Table 70: Site Preparation Checklist	121

	Table 71: Grounding Cable Specifications	129
Chapter 10	Transceiver and Cable Specifications	131
	Table 72: Estimated Values for Factors Causing Link Loss	132
	Table 73: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces	134
Chapter 11	Cable and Pinout Specifications	137
	Table 74: RJ-45 Connector Pinout for the Routing Engine ETHERNET Port	137
	Table 75: RJ-45 Connector Pinout for the AUX and CONSOLE Ports	138
Chapter 12	AC Power Requirements, Specifications, and Guidelines	139
	Table 76: AC Power Supply Electrical Specifications	139
	Table 77: AC Power System Specifications	140
	Table 78: MX480 Router Common Component Power Requirements	140
	Table 79: FRU Power Requirements	141
	Table 80: MX480 DC Zoning	150
	Table 81: Sample Power Requirements for an MX480 Router	151
	Table 82: Calculating Power Budget for a MX480 AC Chassis	152
	Table 83: Calculating Power Budget for a MX480 DC Chassis	152
	Table 84: Calculating Input Power Examples	152
	Table 85: Calculating Thermal Output	153
	Table 86: AC Power Cord Specifications	154
Chapter 13	DC Power Requirements, Specifications, and Guidelines	157
	Table 87: Power Supply Electrical Specifications	157
	Table 88: Power System Specifications	158
	Table 89: MX480 Router Common Component Power Requirements	159
	Table 90: FRU Power Requirements	159
	Table 91: MX480 DC Zoning	168
	Table 92: Sample Power Requirements for an MX480 Router	169
	Table 93: Calculating Power Budget for a MX480 AC Chassis	170
	Table 94: Calculating Power Budget for a MX480 DC Chassis	170
	Table 95: Calculating Input Power Examples	170
	Table 96: Calculating Thermal Output	171
	Table 97: DC Power Cable Specifications	173
Part 3	Initial Installation and Configuration	
Chapter 14	Unpacking the MX480 Router	177
	Table 98: Parts List for a Fully Configured Router	179
	Table 99: Accessory Box Parts List	180
Chapter 15	Installing the Mounting Hardware	183
	Table 100: Four-Post Rack or Cabinet Mounting Hole Locations	183
Part 4	Installing and Replacing Components	
Chapter 20	Overview of Installing and Replacing Components	247
	Table 101: Field-Replaceable Units	248
	Table 102: Tools and Parts Required	248

About the Documentation

- Documentation and Release Notes on page xxv
- Supported Platforms on page xxv
- Documentation Conventions on page xxv
- Documentation Feedback on page xxvii
- Requesting Technical Support on page xxviii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks[®] technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- MX480

Documentation Conventions

Table 1 on page xxvi defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xxvi defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [community-ids]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.

- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <http://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [System Overview on page 3](#)
- [MX480 Release Notes on page 5](#)
- [Chassis Components and Descriptions on page 9](#)
- [Cooling System Components and Descriptions on page 21](#)
- [Host Subsystem Components and Descriptions on page 25](#)
- [Line Card Components and Descriptions on page 55](#)
- [Power System Components and Descriptions on page 99](#)
- [Switch Fabric Components and Descriptions on page 107](#)

CHAPTER 1

System Overview

- [MX480 Router Description on page 3](#)

MX480 Router Description

The MX480 3D Universal Edge Router is an Ethernet-optimized edge router that provides both switching and carrier-class Ethernet routing. The MX480 router enables a wide range of business and residential applications and services, including high-speed transport and VPN services, next-generation broadband multiplay services, high-speed Internet and data center internetworking.

The MX480 chassis provides redundancy and resiliency. The hardware system is fully redundant, including power supplies, Routing Engines, and Switch Control Boards (SCBs).

The MX480 router is eight rack units (U) tall. Five routers can be stacked in a single floor-to-ceiling rack, for increased port density per unit of floor space. The router provides eight slots that can be populated with up to six Dense Port Concentrators (DPCs) or Modular Port Concentrators (MPCs), three Flexible PIC Concentrators (FPCs), and two SCBs. See [Table 4 on page 4](#) for the supported SCBs. Each FPC holds up to two PICs and each MPC holds up to two Modular Interface Cards (MICs).

Fully populated, the MX480 router provides an aggregate switch fabric capacity of up to 5.76 Tbps and line-rate throughput for up to 240 10-Gigabit Ethernet ports, or 24 100-Gigabit Ethernet, or 72 40-Gigabit Ethernet ports.

[Table 3 on page 3](#) lists the MX480 router capacity.

Table 3: MX480 Router Capacity

Description	Capacity
System capacity	5.76 Tbps half duplex
Switch fabric capacity per slot	480 Gbps
MPCs and DPCs per chassis	6
Chassis per rack	6

Each DPC includes either two or four Packet Forwarding Engines. Each Packet Forwarding Engine enables a throughput of 10 Gbps. Many types of DPCs are available. For a list of the DPCs supported, see the [MX Series Interface Module Reference](#).

The MX480 supports up to 3 FPCs containing up to 6 PICs or up to 6 MPCs containing up to 12 MICs. For a list of the supported line cards, see the [MX Series Interface Module Reference](#).

Three SCBs are available for the MX480 routers—the SCB, the SCBE, and the SCBE2.

[Table 4 on page 4](#) lists the MX480 SCBs.

Table 4: SCB Comparison

Model Number	Description	Switch Fabric Capacity
SCBE2- MX-BB	Enhanced MX Switch Control Board (SCBE2)	5.76 Tbps (half-duplex)
SCBE-MX-BB	Enhanced Switch Control Board (SCBE)	2.72 Tbps
SCB-MX-BB	Switch Control Board (SCB)	1.44 Tbps

The connections between DPCs, FPCs, MPCs, and SCBs are organized in three groups:

- Switch fabric—Connects the interface cards and provides for packet transport between DPCs, FPCs, and MPCs.
- Control plane—Gigabit Ethernet links between the combined SCBs/Routing Engines and each DPC, FPC, or MPC. All board-to-board information is passed over Ethernet except for low-level status and commands.
- Management signals—Provide for low-level status diagnostic support.

Related Documentation

- [MX480 Component Redundancy on page 11](#)
- [MX480 Chassis Description on page 9](#)
- [MX480 Host Subsystem Description on page 25](#)
- [MX480 Craft Interface Description on page 14](#)
- [MX480 Power System Description on page 99](#)
- [MX480 Cooling System Description on page 21](#)
- [MX480 Router Physical Specifications on page 119](#)

CHAPTER 2

MX480 Release Notes

- [Outstanding Issues with the MX480 Router on page 5](#)
- [Errata with the MX480 Router Documentation on page 6](#)

Outstanding Issues with the MX480 Router

This topic lists outstanding hardware issues with the MX480 3D Universal Edge router. For information about software issues, see the Junos OS Release Notes.

- In Junos OS Release 10.0R2, if a third AC supply is inserted in an empty slot (even though the power supply is turned off and the AC cord is not plugged in), the operational power supplies' output voltage reading in the Junos OS can show an inaccurate number (60-61V instead of 57V) under some conditions, such as when the load is nearly 100% and the operating temperature exceeds 40C.
- There is an input mode switch on each MX480 DC high capacity power supply, covered by a small plate. The input mode switch tells the system what capacity feed is connected (60A or 70A), which in turn is used for power inventory management. When the input mode switch is set to '0' (zero): expect 60A feeds, with a voltage range of -39V to -72VDC. When the input mode switch is set to '1' (one), expect 70A feeds or 60A feed with minimum voltage range 42V and up. The default setting is 1

In Junos OS Releases 10.0R3, 10.1R2, and 10.2R1, the MX480 DC high capacity power supply input mode switch is not operating as expected, though this has no effect on the power supply operations, it will generate alarms incorrectly. [PR532230]



NOTE:

- All supplies should have the same feed setting.
 - Correct usage of the feed setting is required for all supplies in order to get the desired power inventory management.
-
- Juniper Networks strongly recommends that you install Junos OS Release 8.4R2 or later before deploying the MX480 router into service.

- The XFP cages and optics on the MX480 router are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place. [PR/98055]
- Do not mix AC and DC power supplies on an MX480 router. Mixing of AC supplies and DC supplies may damage your chassis. [PR/233340]

Related Documentation

- [Errata with the MX480 Router Documentation on page 6](#)

Errata with the MX480 Router Documentation

This topic lists outstanding documentation issues:

- The shut-down voltage and start-up voltages as stated in the following note in the MX480 hardware guides and MX480 Quick Start are not correct under all circumstances: [PR/273771]



NOTE: If the input voltage from the DC power source drops below -36.5 to -38.5 VDC, the router automatically shuts down. During automatic shutdown, the circuit remains active. When the input voltage returns to -40.0 to -41.0 VDC, the router automatically starts up again and the system returns to normal operation within 30 minutes. No operator intervention is required.

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. Allow at least 8 in. (20.3 cm) of clearance between side-cooled routers. Allow 5.5 in. (14 cm) between the side of the chassis and any non-heat-producing surface such as a wall. [PR/258887]
- When installing the router without a mechanical lift, remove and reinstall components from the chassis, first from the rear and then from the front. Components should be removed and reinstalled in the following order: power supplies, fan tray, SCBs, and DPCs. [PR/265034]
- Replace the air filter, located at the left rear of the router, every 6 months for optimum cooling system performance.
- Two threaded inserts (PEM nuts) are provided on the upper rear of the chassis for connecting the router to earth ground. The grounding points fit UNC 1/4–20 screws (American).
- The mounting shelf should be installed on the back of the rail as described in the [MX480 3D Universal Edge Router Hardware Guide](#).
- After installing a DC power cable or AC power cord, route the power cable or power cord along the cable restraint towards the left or right corner of the chassis. If needed, thread plastic cable ties, which you must provide, through the openings on the cable restraint to hold the power cord or cables in place.
- [Table 5 on page 7](#) describes the functions of the host subsystem **OFFLINE LED**.

Table 5: Host Subsystem OFFLINE LED

Label	Color	State	Description
OFFLINE	Red	On steadily	Host is installed but the Routing Engine is offline.
		Off	Host is not installed.

Related Documentation

- [Outstanding Issues with the MX480 Router on page 5](#)

CHAPTER 3

Chassis Components and Descriptions

- [MX480 Chassis Description on page 9](#)
- [MX480 Component Redundancy on page 11](#)
- [MX480 Router Hardware and CLI Terminology Mapping on page 12](#)
- [MX480 Craft Interface Description on page 14](#)
- [Alarm Relay Contacts on the MX480 Craft Interface on page 15](#)
- [Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface on page 15](#)
- [MX480 Component LEDs on the Craft Interface on page 16](#)
- [MX480 Cable Management Brackets on page 19](#)

MX480 Chassis Description

The router chassis is a rigid sheet metal structure that houses all the other router components (see [Figure 1 on page 10](#), [Figure 2 on page 10](#), and [Figure 3 on page 11](#)). The chassis measures 14.0 in. (35.6 cm) high, 17.45 in. (44.3 cm) wide, and 24.5 in. (62.2 cm) deep (from the front to the rear of the chassis). The chassis installs in standard 800-mm (or larger) enclosed cabinets, 19-in. equipment racks, or telco open-frame racks. Up to five routers can be installed in one standard 48-U rack if the rack can handle their combined weight, which can be greater than 818 lb (371.0 kg).

Figure 1: Front View of a Fully Configured Router Chassis

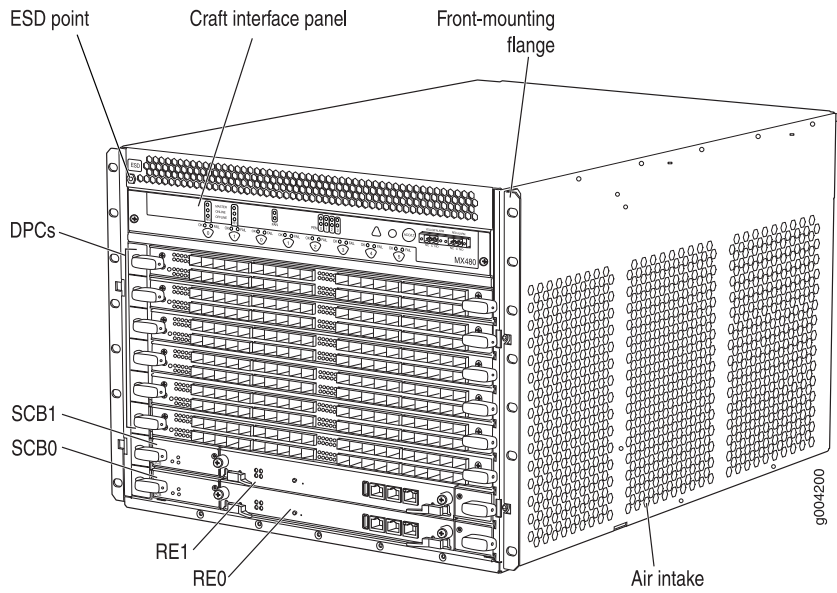


Figure 2: Rear View of a Fully Configured AC-Powered Router Chassis


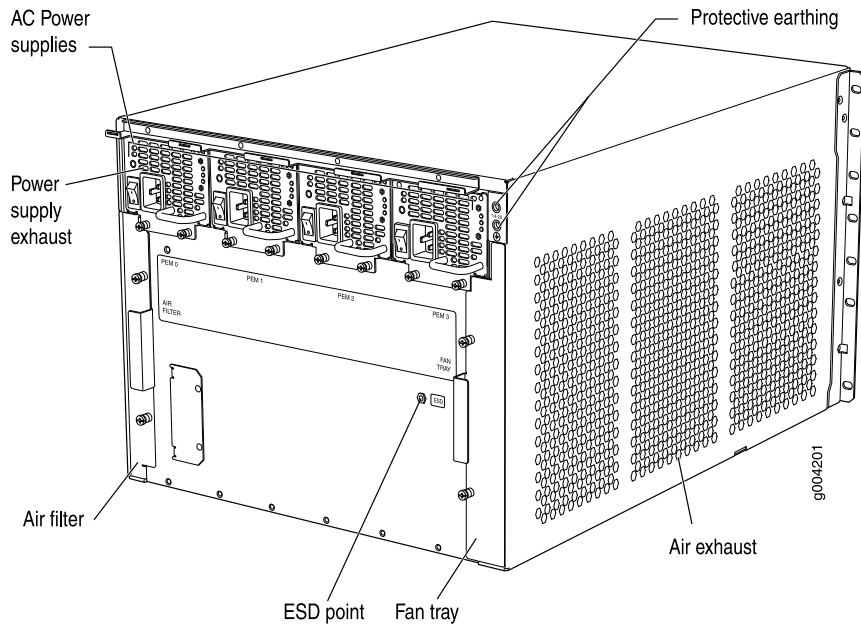


Figure 3: Rear View of a Fully Configured DC-Powered Router Chassis

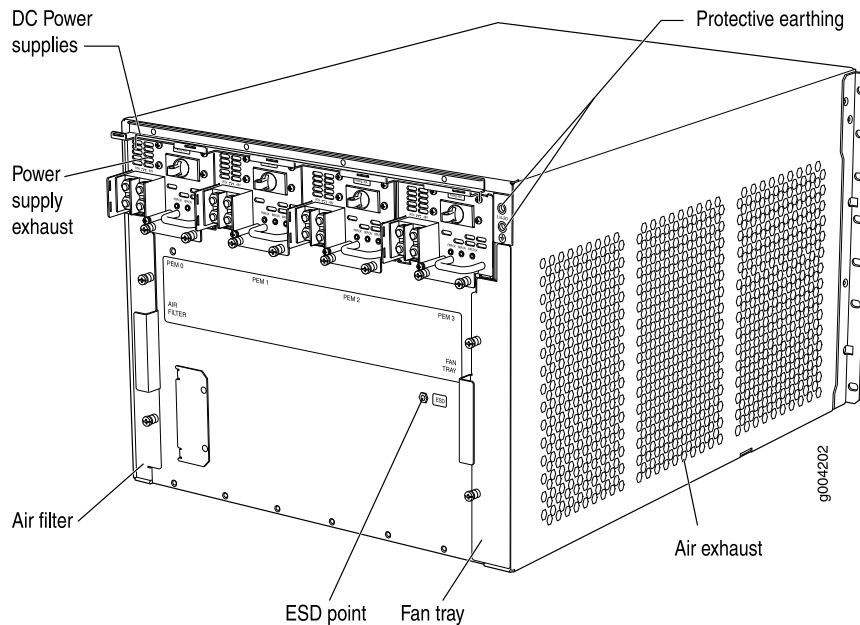

Related Documentation

- [MX480 Router Description on page 3](#)
- [MX480 Midplane Description on page 26](#)
- [MX480 Router Physical Specifications on page 119](#)

MX480 Component Redundancy

A fully configured router is designed so that no single point of failure can cause the entire system to fail. Only a fully configured router provides complete redundancy. All other configurations provide partial redundancy. The following major hardware components are redundant:

- **Host subsystem**—The host subsystem consists of a Routing Engine functioning together with an SCB. The router can have one or two host subsystems. If two host subsystems are installed, one functions as the master and the other functions as the backup. If the master host subsystem (or either of its components) fails, the backup can take over as the master. To operate, each host subsystem requires a Routing Engine installed directly into in an SCB.

If the Routing Engines are configured for *graceful switchover*, the backup Routing Engine automatically synchronizes its configuration and state with the master Routing Engine. Any update to the master Routing Engine state is replicated on the backup Routing Engine. If the backup Routing Engine assumes mastership, packet forwarding continues through the router without interruption. For more information about graceful switchover, see the *Junos OS Administration Library*.

- **Power supplies**—In the low-line (110 V) AC power configuration, the router contains three or four AC power supplies, located horizontally at the rear of the chassis in slots

PEMO through **PEM3** (left to right). Each AC power supply provides power to all components in the router. When three power supplies are present, they share power almost equally within a fully populated system. Four AC power supplies provide full power redundancy. If one power supply fails or is removed, the remaining power supplies instantly assume the entire electrical load without interruption. Three power supplies provide the maximum configuration with full power for as long as the router is operational.

In the high-line (220 V) AC power configuration, the router contains two or four AC power supplies located horizontally at the rear of the chassis in slots **PEMO** through **PEM3** (left to right). Each AC power supply provides power to all components in the router. When two or more power supplies are present, they share power almost equally within a fully populated system. Four AC power supplies provide full power redundancy. If one power supply fails or is removed, the remaining power supplies instantly assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.

In the DC configuration, two power supplies are required to supply power to a fully configured router. One power supply supports approximately half of the components in the router, and the other power supply supports the remaining components. The addition of two power supplies provides full power redundancy. If one power supply fails or is removed, the remaining power supplies instantly assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.

- Cooling system—The cooling system has redundant components, which are controlled by the host subsystem. If one of the fans fails, the host subsystem increases the speed of the remaining fans to provide sufficient cooling for the router indefinitely.

- Related Documentation**
- [MX480 Router Description on page 3](#)
 - [MX480 Chassis Description on page 9](#)

MX480 Router Hardware and CLI Terminology Mapping

The MX480 router supports the components in [Table 6 on page 12](#).

Table 6: MX480 Router Hardware Components and CLI Terminology

Component	Hardware Model Number	CLI Name	Description
Chassis	CHAS-BP-MX480	MX480	"MX480 Router Physical Specifications" on page 119 "MX480 Chassis Description" on page 9
Craft Interface Panel	CRAFT-MX480-S	Front Panel Display	"MX480 Craft Interface Description" on page 14

Cooling System

Table 6: MX480 Router Hardware Components and CLI Terminology (*continued*)

Component	Hardware Model Number	CLI Name	Description
Fan tray	FFANTRAY-MX480	Left Fan tray	"MX480 Cooling System Description" on page 21
High-capacity fan tray	FFANTRAY-MX480-HC	Enhanced Left Fan Tray	
Filter kit	FLTR-KIT-MX480	N/A	
Host Subsystem			"MX480 Host Subsystem Description" on page 25
Routing Engine	See "Supported Routing Engines by Router" on page 40.		"MX480 Routing Engine Description" on page 27
SCB	SCB-MX960	MX SCB	"MX480 SCB Description" on page 107
	SCBE-MX	Enhanced MX SCB	
Interface Modules			
DPC	See "DPCs Supported on MX240, MX480, and MX960 Routers" on page 60 in the <i>MX Series Interface Module Reference</i> .		"MX480 Dense Port Concentrator (DPC) Description" on page 55
FPC	MX-FPC2	MX FPC Type 2	"MX480 Flexible PIC Concentrator (FPC) Description" on page 63
	MX-FPC3	MX FPC Type 3	
MIC	See "MICs Supported by MX Series Routers" on page 80 in the <i>MX Series Interface Module Reference</i> .		"MX480 Modular Interface Card (MIC) Description" on page 76
MPC	See "MPCs Supported by MX Series Routers" on page 90 in the <i>MX Series Interface Module Reference</i> .		"MX480 Modular Port Concentrator (MPC) Description" on page 87
PIC	See "PICs Supported by MX240, MX480, and MX960 Routers" on page 68 in the <i>MX Series Interface Module Reference</i> .		"MX480 PIC Description" on page 66
Interface module blank panel	DPC-SCB-BLANK	N/A	
	MIC-BLANK		
Transceiver	See <i>MX Series Interface Module Reference</i>	Xcvr	"Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC" on page 285
Power System			"MX480 Power System Description" on page 99

Table 6: MX480 Router Hardware Components and CLI Terminology (continued)


Component	Hardware Model Number	CLI Name	Description
AC power supply	PWR-MX480-AC	AC Power Entry Module	"MX480 AC Power Supply Description" on page 100
	PWR-MX480-1200-AC	PS 1.2-1.7kW 100-240V AC in	
	PWR-MX480-2520-AC	PS 1.4-2.52kW; 90-264V AC in	
DC power supply	PWR-MX480-DC	DC Power Entry Module	"MX480 DC Power Supply Description" on page 102
	PWR-MX480-1600-DC	DC Power Entry Module	
	PWR-MX480-2400-DC	DC 2.4kW Power Entry Module	
Power supply blank panel	PWR-BLANK-MX480	N/A	"MX480 Power System Description" on page 99

- Related Documentation**
- [MX480 Router Description on page 3](#)
 - [MX480 DPC Port and Interface Numbering on page 57](#)
 - [MX480 MIC Port and Interface Numbering on page 77](#)
 - [MX480 PIC Port and Interface Numbering on page 66](#)
 - [MX Series Router Interface Names](#)

MX480 Craft Interface Description

The craft interface allows you to view status and troubleshooting information at a glance and to perform many system control functions. It is hot-insertable and hot-removable. The craft interface is located on the front of the router above the card cage and contains LEDs for the router components, the alarm relay contacts, and alarm cutoff button. See [Figure 4 on page 14](#).

Figure 4: Front Panel of the Craft Interface

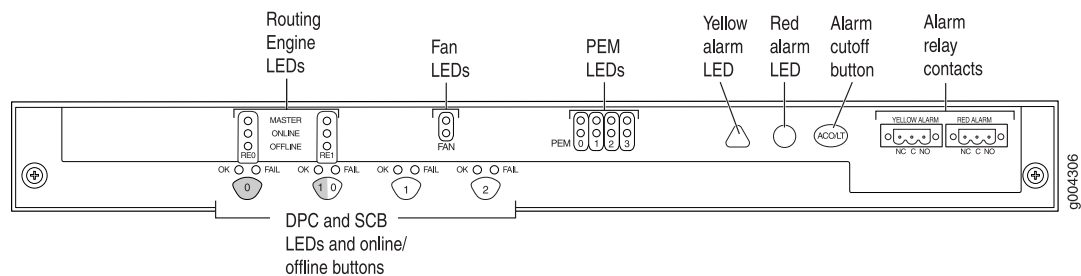



NOTE: At least one SCB must be installed in the router for the craft interface to obtain power.


Related Documentation

- [Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface on page 15](#)
- [MX480 Component LEDs on the Craft Interface on page 16](#)
- [Alarm Relay Contacts on the MX480 Craft Interface on page 15](#)

Alarm Relay Contacts on the MX480 Craft Interface

The craft interface has two alarm relay contacts for connecting the router to external alarm devices (see [Figure 5 on page 15](#)). Whenever a system condition triggers either the red or yellow alarm on the craft interface, the alarm relay contacts are also activated. The alarm relay contacts are located on the upper right of the craft interface.

Figure 5: Alarm Relay Contacts

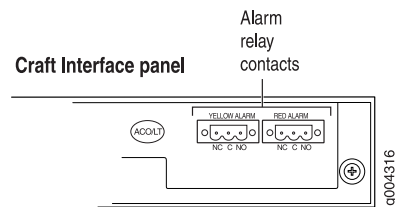

Related Documentation

- [MX480 Craft Interface Description on page 14](#)
- [Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface on page 15](#)
- [MX480 Component LEDs on the Craft Interface on page 16](#)

Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface




Two large alarm LEDs are located at the upper right of the craft interface. The circular red LED lights to indicate a critical condition that can result in a system shutdown. The triangular yellow LED lights to indicate a less severe condition that requires monitoring or maintenance. Both LEDs can be lit simultaneously.

A condition that causes an LED to light also activates the corresponding alarm relay contact on the craft interface.

To deactivate red and yellow alarms, press the button labeled **ACO/LT** (for “alarm cutoff/lamp test”), which is located to the right of the alarm LEDs. Deactivating an alarm turns off both LEDs and deactivates the device attached to the corresponding alarm relay contact on the craft interface.

[Table 7 on page 16](#) describes the alarm LEDs and alarm cutoff button in more detail.

Table 7: Alarm LEDs and Alarm Cutoff/Lamp Test Button

Shape	Color	State	Description
	Red	On steadily	Critical alarm LED—Indicates a critical condition that can cause the router to stop functioning. Possible causes include component removal, failure, or overheating.
	Yellow	On steadily	Warning alarm LED—Indicates a serious but nonfatal error condition, such as a maintenance alert or a significant increase in component temperature.
	–	–	Alarm cutoff/lamp test button—Deactivates red and yellow alarms. Causes all LEDs on the craft interface to light (for testing) when pressed and held.

- Related Documentation**
- [MX480 Craft Interface Description on page 14](#)
 - [MX480 Component LEDs on the Craft Interface on page 16](#)
 - [Alarm Relay Contacts on the MX480 Craft Interface on page 15](#)

MX480 Component LEDs on the Craft Interface

- [Host Subsystem LEDs on the MX480 Craft Interface on page 16](#)
- [Power Supply LEDs on the MX480 Craft Interface on page 17](#)
- [DPC and MPC LEDs on the MX480 Craft Interface on page 17](#)
- [FPC LEDs on the MX480 Craft Interface on page 17](#)
- [SCB LEDs on the MX480 Craft Interface on page 18](#)
- [Fan LEDs on the MX480 Craft Interface on page 18](#)

Host Subsystem LEDs on the MX480 Craft Interface

Each host subsystem has three LEDs, located on the upper left of the craft interface, that indicate its status. The LEDs labeled **RE0** show the status of the Routing Engine in slot **0** and the SCB in slot **0**. The LEDs labeled **RE1** show the status of the Routing Engine and SCB in slot **1**. [Table 5 on page 7](#) describes the functions of the host subsystem LEDs on the craft interface.

Table 8: Host Subsystem LEDs on the Craft Interface

Label	Color	State	Description
MASTER	Green	On steadily	Host is functioning as the master.
ONLINE	Green	On steadily	Host is online and is functioning normally.

Table 8: Host Subsystem LEDs on the Craft Interface (*continued*)

Label	Color	State	Description
OFFLINE	Red	On steadily	Host is installed but the Routing Engine is offline.
	–	Off	Host is not installed.

Power Supply LEDs on the MX480 Craft Interface

Each power supply has two LEDs on the craft interface that indicate its status. The LEDs, labeled **0** through **3**, are located on the upper left of the craft interface next to the **PEM** label. [Table 9 on page 17](#) describes the functions of the power supply LEDs on the craft interface.

Table 9: Power Supply LEDs on the Craft Interface

Label	Color	State	Description
PEM	Green	On steadily	Power supply is functioning normally.
	Red	On steadily	Power supply has failed or power input has failed.

DPC and MPC LEDs on the MX480 Craft Interface

Each DPC or MPC has LEDs on the craft interface that indicate its status. The LEDs, labeled **0** through **5**, are located along the bottom of the craft interface. [Table 10 on page 17](#) describes the functions of the LEDs.

Table 10: DPC and MPC LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	Card is functioning normally.
		Blinking	Card is transitioning online or offline.
		–	Off
FAIL	Red	On steadily	Card has failed.

FPC LEDs on the MX480 Craft Interface

An FPC takes up two DPC slots when installed in an MX Series router. The LEDs, labeled **0** through **5**, are located along the bottom of the craft interface. The LED corresponds to the lowest DPC slot number in which the FPC is installed. [Table 11 on page 18](#) describes the functions of the FPC LEDs.

Table 11: FPC LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	FPC is functioning normally.
		Blinking	FPC is transitioning online or offline.
		–	The slot is not online.
FAIL	Red	On steadily	FPC has failed.

SCB LEDs on the MX480 Craft Interface

Each SCB has two LEDs on the craft interface that indicates its status. The SCB LEDs, labeled 0 and 1, are located along the bottom of the craft interface. [Table 12 on page 18](#) describes the functions of the SCB LEDs.

Table 12: SCB LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	SCB: Fabric and control board functioning normally.
		Blinking	SCB is transitioning online or offline.
		–	The slot is not online.
FAIL	Red	On steadily	SCB has failed.

Fan LEDs on the MX480 Craft Interface

The fan LEDs are located on the top left of the craft interface. [Table 13 on page 18](#) describes the functions of the fan LEDs.

Table 13: Fan LEDs on the Craft Interface

Label	Color	State	Description
FAN	Green	On steadily	Fan is functioning normally.
		Red	Fan has failed.

Related Documentation

- [MX480 Craft Interface Description on page 14](#)
- [Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface on page 15](#)
- [Alarm Relay Contacts on the MX480 Craft Interface on page 15](#)

MX480 Cable Management Brackets

The cable management brackets (see [Figure 6 on page 19](#) and [Figure 7 on page 19](#)) consist of plastic dividers located on the left and right sides of each DPC, FPC, or MPC slot, and SCB slot. The cable management brackets allow you to route the cables outside the router and away from the DPCs, MPCs, MICs, PICs, and SCBs.

Figure 6: Cable Management Brackets


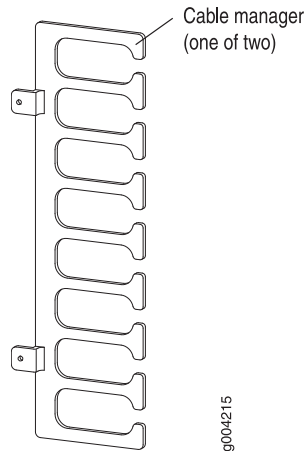


Figure 7: Cable Management Brackets Installed on the Router

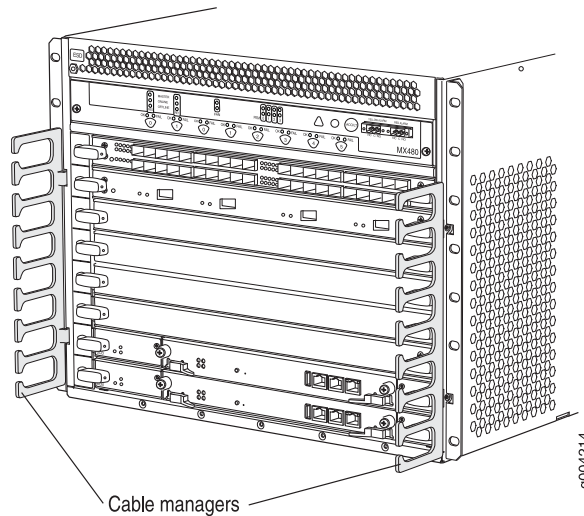

Related Documentation

- [Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs on page 434](#)
- [Replacing the MX480 Cable Management Brackets on page 291](#)

CHAPTER 4

Cooling System Components and Descriptions

- MX480 Cooling System Description on page 21
- MX480 Fan LED on page 23

MX480 Cooling System Description


The cooling system consists of the following components:

- Fan tray
- Air filter

The cooling system components work together to keep all router components within the acceptable temperature range (see [Figure 8 on page 21](#), [Figure 9 on page 22](#), and [Figure 10 on page 22](#)). The router has one fan tray and one air filter that install vertically in the rear of the router. The fan tray contains six fans. The MX Series high-capacity fan trays satisfy cooling requirements for high-density DPCs and MPCs, and must be upgraded for proper cooling.

The air intake to cool the chassis is located on the side of the chassis next to the air filter. Air is pulled through the chassis toward the fan tray, where it is exhausted out the side of the system. The air intake to cool the power supplies is located in the front of the router above the craft interface. The exhaust for the power supplies is located on the rear bulkhead power supplies.

Figure 8: Airflow Through the Chassis

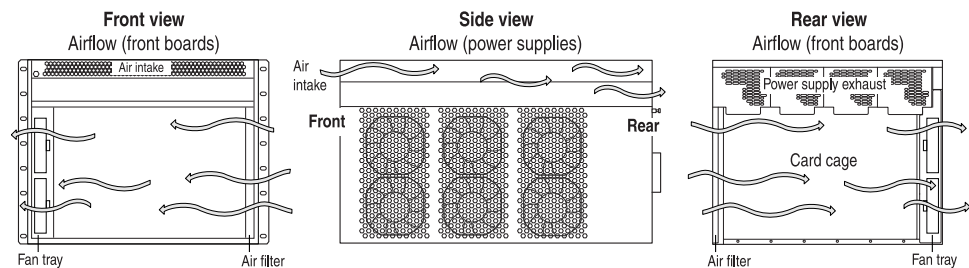

g004211

The host subsystem monitors the temperature of the router components. When the router is operating normally, the fans function at lower than full speed. If a fan fails or the ambient temperature rises above a threshold, the speed of the remaining fans is automatically adjusted to keep the temperature within the acceptable range. If the ambient maximum temperature specification is exceeded and the system cannot be adequately cooled, the Routing Engine shuts down the system by disabling output power from each power supply.

Figure 9: Fan Tray


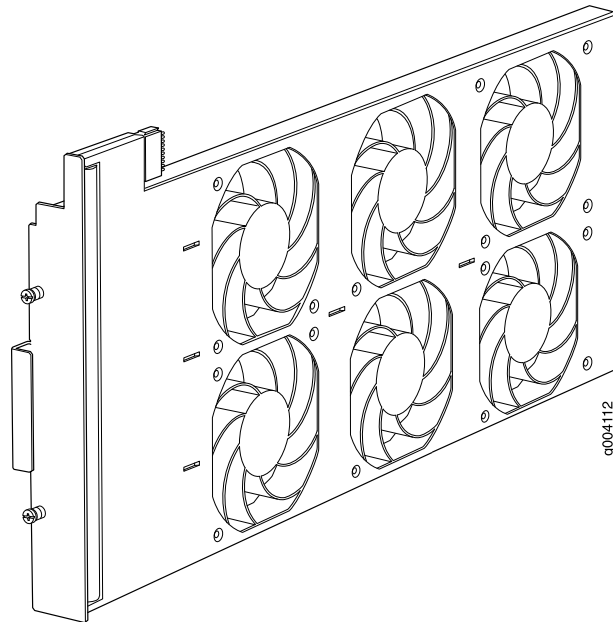


Figure 10: Air Filter

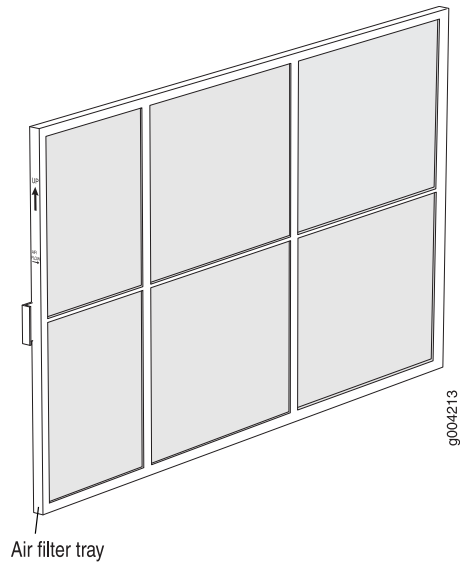

- Related Documentation**
- [MX480 Fan LED on page 23](#)
 - [Maintaining the MX480 Air Filter on page 415](#)
 - [Maintaining the MX480 Fan Tray on page 416](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

MX480 Fan LED

Each fan has an LED that displays its status. The fan LEDs are located on the top left of the craft interface. For more information, see [“Fan LEDs on the MX480 Craft Interface” on page 18](#).

- Related Documentation**
- [MX480 Cooling System Description on page 21](#)
 - [Maintaining the MX480 Fan Tray on page 416](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

CHAPTER 5

Host Subsystem Components and Descriptions

- [MX480 Host Subsystem Description on page 25](#)
- [MX480 Host Subsystem LEDs on page 26](#)
- [MX480 Midplane Description on page 26](#)
- [MX480 Routing Engine Description on page 27](#)
- [RE-S-1800 Routing Engine Description for MX Series on page 29](#)
- [RE-S-1800 Routing Engine LEDs on page 31](#)
- [RE-S-X6-64G Routing Engine Description on page 32](#)
- [RE-S-X6-64G Routing Engine LEDs on page 34](#)
- [Routing Engine Specifications on page 35](#)
- [MX480 Routing Engine LEDs on page 38](#)
- [Supported Routing Engines by Router on page 40](#)

MX480 Host Subsystem Description

The host subsystem provides the routing and system management functions of the router. You can install one or two host subsystems on the router. Each host subsystem functions as a unit; the Routing Engine must be installed directly into the Switch Control Board.



NOTE: We recommend that you install two host subsystems for redundant protection. If you install only one host subsystem, we recommend that you install it in slot 0.

Each host subsystem has three LEDs that display its status. The host subsystem LEDs are located in the middle of the craft interface.

Related Documentation

- [MX480 Host Subsystem LEDs on page 26](#)
- [Maintaining the MX480 Host Subsystem on page 418](#)
- [Taking an MX480 Host Subsystem Offline](#)

MX480 Host Subsystem LEDs

Each host subsystem has three LEDs that display its status. The host subsystem LEDs are located on the upper left of the craft interface. For more information, see [“Host Subsystem LEDs on the MX480 Craft Interface”](#) on page 16.

- Related Documentation**
- [MX480 Host Subsystem Description on page 25](#)
 - [Maintaining the MX480 Host Subsystem on page 418](#)
 - [Taking an MX480 Host Subsystem Offline](#)


MX480 Midplane Description

The midplane is located toward the rear of the chassis and forms the rear of the card cage (see [Figure 11 on page 26](#)). The line cards and SCBs install into the midplane from the front of the chassis, and the power supplies install into the midplane from the rear of the chassis. The cooling system components also connect to the midplane.

The midplane performs the following major functions:

- **Data path**—Data packets are transferred across the midplane between the line cards through the fabric ASICs on the SCBs.
- **Power distribution**—The router power supplies connect to the midplane, which distributes power to all the router components.
- **Signal path**—The midplane provides the signal path to the line cards, SCBs, Routing Engines, and other system components for monitoring and control of the system.

Figure 11: Midplane

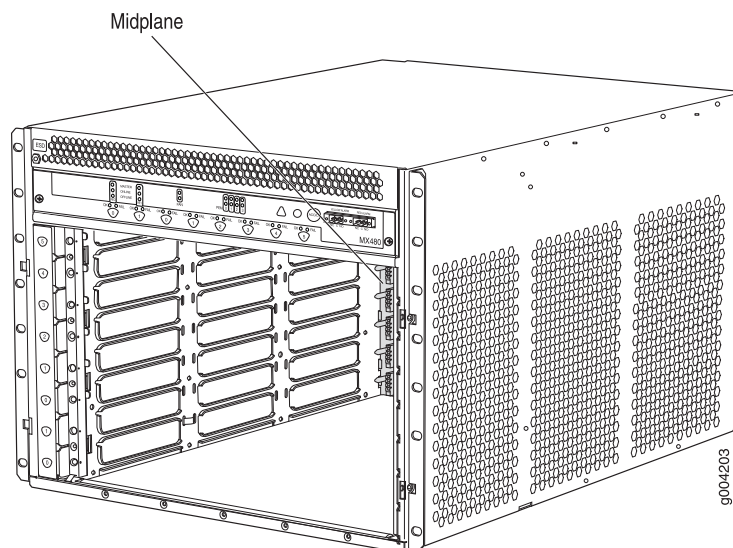

- Related Documentation**
- [MX480 Router Description on page 3](#)
 - [MX480 Chassis Description on page 9](#)
 - [MX480 Dense Port Concentrator \(DPC\) Description on page 55](#)
 - [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
 - [MX480 SCB Description on page 107](#)
 - [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
 - [MX480 Power System Description on page 99](#)

MX480 Routing Engine Description

The Routing Engine is an Intel-based PC platform that runs Junos OS. Software processes that run on the Routing Engine maintain the routing tables, manage the routing protocols used on the router, control the router interfaces, control some chassis components, and provide the interface for system management and user access to the router.

You can install one or two Routing Engines in the router. The Routing Engines install into the front of the chassis in horizontal slots in the SCBs labeled 0 and 1. If two Routing Engines are installed, one functions as the master and the other acts as the backup. If the master Routing Engine fails or is removed, and the backup is configured appropriately, the backup takes over as the master.

The Routing Engines are hot-pluggable. Each Routing Engine must be installed directly into an SCB. A USB port on the Routing Engine accepts a USB memory card that allows you to load Junos OS. [Figure 12 on page 27](#) shows RE-S-1800 Routing Engine and [Figure 13 on page 28](#) shows the RE-S-X6-64G Routing Engine.

Figure 12: RE-S-1800 Routing Engine



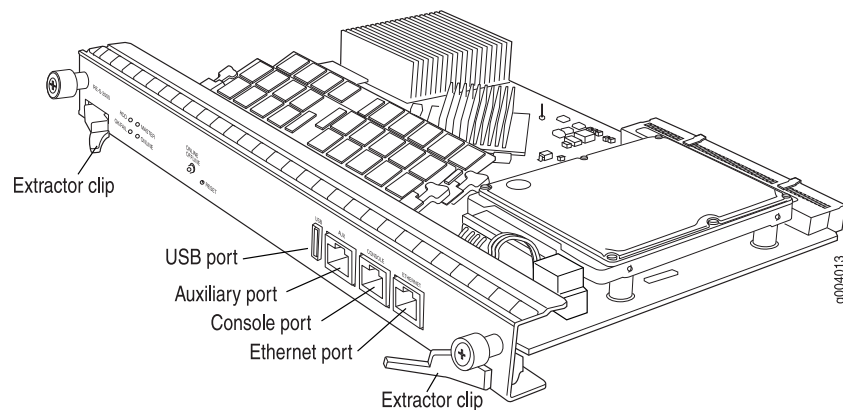


Figure 13: RE-S-X6-64G Routing Engine Front View

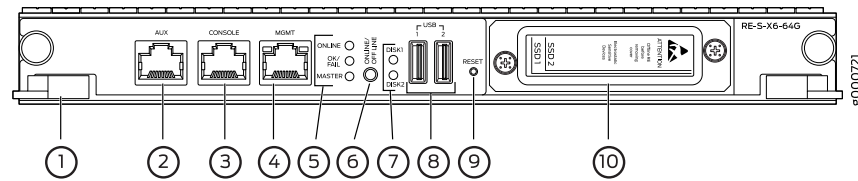

1—Extractor clips	6— ONLINE/OFFLINE Button
2—Auxiliary port (AUX)	7—SSD LEDs— DISK1 and DISK2
3—Console port (Con)	8—Ports— USB1 and USB2
4—Management port (MGMT)	9— RESET Button
5—LEDs— ONLINE , OK/FAIL , and MASTER	10—SSD card slot cover

Figure 14: RE-S-X6-64G-LT Routing Engine Front View

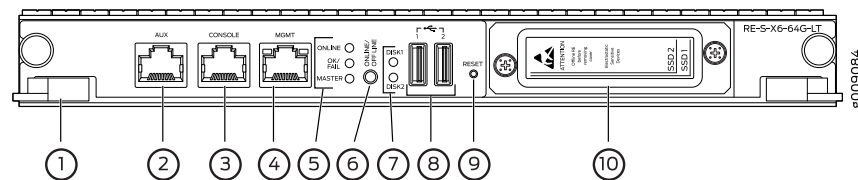

1—Extractor clips	6— ONLINE/OFFLINE Button
2—Auxiliary port (AUX)	7—SSD LEDs— DISK1 and DISK2
3—Console port (Con)	8—Ports— USB1 and USB2
4—Management port (MGMT)	9— RESET Button
5—LEDs— ONLINE , OK/FAIL , and MASTER	10—SSD card slot cover

Routing Engine Components



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

Routing Engine Interface Ports

Three ports, located on the right side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The ports with the indicated labels function as follows:

- **AUX**—Connects the Routing Engine to a laptop, modem, or other auxiliary device through a serial cable with an RJ-45 connector.
- **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.

- **ETHERNET or MGMT**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection) for out-of-band management. The port uses an autosensing RJ-45 connector to support 10-Mbps or 100-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: The LED on the left indicates speed—green for 1000-Mbps, yellow for 100-Mbps and when the LED is dark, it indicates 10-Mbps speed. The LED on the right indicates activity—flashing green when packets are passing through the port.

Routing Engine Boot Sequence

The Routing Engine boots from the storage media in this order: the USB device (if present), then the CompactFlash card, then the hard disk, then the LAN. The disk from which the router boots is called the *primary boot device*, and the other disk is the *alternate boot device*.



NOTE: If the router boots from an alternate boot device, a yellow alarm lights the LED on the router's craft interface.

Booting in a RE-S-X6-64G Routing Engine follows this sequence—the USB device, SSD1, SSD2, and LAN. SSD1 is the primary boot device. Boot sequence is tried twice for SSD1 and SSD2.

If the Routing Engines are configured for *graceful switchover*, the backup Routing Engine automatically synchronizes its configuration and state with the master Routing Engine. Any update to the master Routing Engine state is replicated on the backup Routing Engine. If the backup Routing Engine assumes mastership, packet forwarding continues through the router without interruption. For more information about graceful switchover, see the *Junos OS Administration Library*.



NOTE: If two Routing Engines are installed, they must both be the same hardware model.


Related Documentation

- [MX480 Router Description on page 3](#)
- [MX480 Routing Engine LEDs on page 38](#)
- [MX480 Host Subsystem Description on page 25](#)
- [MX480 SCB Description on page 107](#)

RE-S-1800 Routing Engine Description for MX Series

Figure 15 on page 30 shows the Routing Engine 1800.


Figure 15: RE-S-1800 Front View

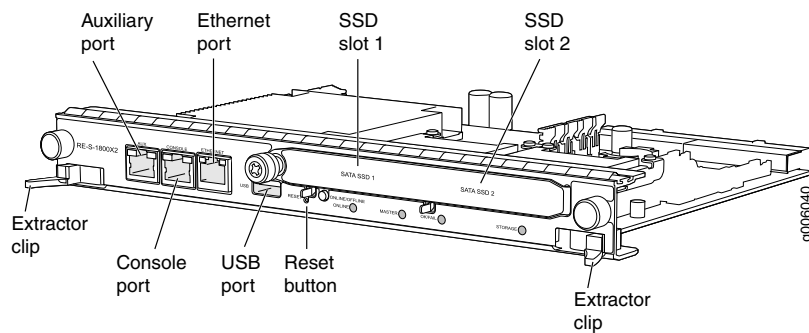

- [RE-S-1800 Routing Engine Components on page 30](#)
- [RE-S-1800 Routing Engine Boot Sequence on page 31](#)

RE-S-1800 Routing Engine Components

Figure 16 on page 30 shows the RE-S-1800 Routing Engine.

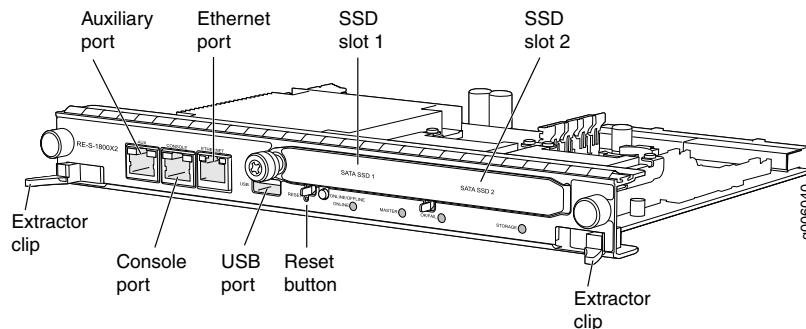

Each Routing Engine consists of the following components:

- CPU—Runs Junos OS to maintain the router's routing tables and routing protocols..
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- USB port—Provides a removable media interface through which you can install Junos OS manually. Junos OS supports USB version 1.0.
- CompactFlash card—Provides primary storage for software images, configuration files, and microcode. The CompactFlash card is fixed and is inaccessible from outside the router.
- Solid-state Drive (SSD)—Provides secondary storage for log files, memory dumps, and rebooting the system if the CompactFlash card fails.
- Interface ports—The **AUX**, **CONSOLE**, and **ETHERNET** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.
- EEPROM—Stores the serial number of the Routing Engine.

- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Takes the Routing Engine online or offline when pressed.
- Extractor clips—Used for inserting and extracting the Routing Engine.
- Captive screws—Secure the Routing Engine in place.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show chassis routing-engine` command.

RE-S-1800 Routing Engine Boot Sequence

The router is shipped with Junos OS preinstalled on the Routing Engine. There are three copies of software:

- One copy on the CompactFlash card in the Routing Engine.
- One copy on the hard disk in the Routing Engine.
- One copy on a USB flash drive that can be inserted into the slot on the Routing Engine faceplate.

The Routing Engine boots from the storage media in this order: the USB device (if present), then the CompactFlash card, then the Solid State Disk (SSD), then the LAN. Normally, the router boots from the copy of the software on the CompactFlash card.

Related Documentation

- [RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports](#)
- [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port](#)
- [Replacing an MX960 Routing Engine](#)
- [Supported Routing Engines by Router on page 40](#)

RE-S-1800 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **STORAGE**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 14 on page 31](#) describes the functions of the Routing Engine LEDs.

Table 14: Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the Master.
STORAGE	Green	Blinking	Indicates activity on the SSD or Compact Flash.

Table 14: Routing Engine LEDs (*continued*)

Label	Color	State	Description
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
OK/FAIL	Red	On steadily	Routing Engine has failed.


Related Documentation

- [MX240 Routing Engine Description](#)
- [MX480 Routing Engine Description on page 27](#)
- [MX960 Routing Engine Description](#)

RE-S-X6-64G Routing Engine Description

Figure 17 on page 32 shows the Routing Engine.

Figure 17: RE-S-X6-64G Routing Engine Front View

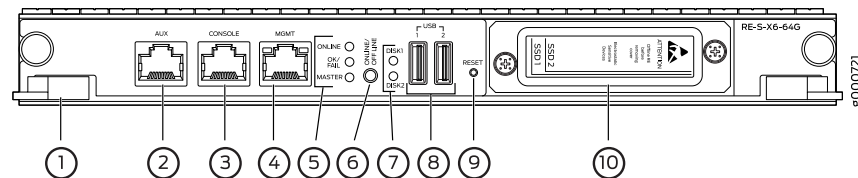

1—Extractor clips	6—ONLINE/OFFLINE button
2—Auxiliary port (AUX)	7—SSD LEDs—DISK1 and DISK2
3—Console port (CONSOLE)	8—Ports—USB1 and USB2
4—Management port (MGMT)	9—RESET button
5—LEDs—ONLINE, OK/FAIL, and MASTER	10—SSD card slot cover

- [RE-S-X6-64G Routing Engine Components on page 32](#)
- [RE-S-X6-64G Routing Engine Boot Sequence on page 33](#)

RE-S-X6-64G Routing Engine Components

In routers with dual Routing Engines, both Routing Engines must be RE-S-X6-64G Routing Engines.

Each RE-S-X6-64G Routing Engine (shown in [Figure 17 on page 32](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.

- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet interface between the Routing Engine and Switch Control Board.
- Two 50-GB slim solid-state drives—**SSD1** (primary) and **SSD2** (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.



NOTE: The **ONLINE/OFFLINE** button must be pressed for a minimum of 4 seconds for the power off or power on to occur.

- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—“[RE-S-X6-64G Routing Engine LEDs](#)” on page 34 describes the functions of these LEDs.



NOTE: For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

RE-S-X6-64G Routing Engine Boot Sequence

Booting in a RE-S-X6-64G Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN. SSD1 is the primary boot device. The boot sequence is tried twice for SSD1 and SSD2.


Related Documentation

- [Routing Engine Specifications on page 35](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem on page 313](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem on page 319](#)

RE-S-X6-64G Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. The LEDs—labeled **MASTER**, **DISK1**, **DISK2**, **ONLINE**, and **OK/FAIL**—are located on the faceplate of the Routing Engine. [Table 15 on page 34](#) describes the functions of the Routing Engine LEDs.

Figure 18: RE-S-X6-64G Routing Engine LEDs

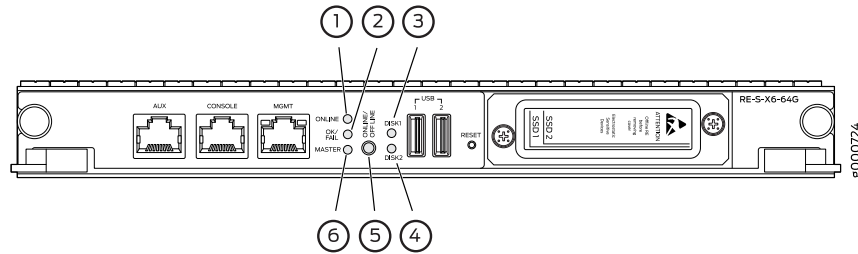

1—ONLINE LED	4—DISK2 LED
2—OK/FAIL LED	5—ONLINE/OFFLINE button
3—DISK1 LED	6—MASTER LED

Table 15: RE-S-X6-64G Routing Engine LEDs

Label	Color	State	Description
ONLINE	Green	Blinking slowly	Routing Engine is in the process of booting BIOS, and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
		-	Off
DISK1	Green	Blinking	Indicates presence of disk activity.
		-	Off
DISK2	Green	Blinking	Indicates presence of disk activity.
		-	Off
OK/FAIL	Green	On steadily	Routing Engine is powering up.
		Yellow	On steadily
MASTER	Blue	On steadily	This Routing Engine is the Master Routing Engine.

- Related Documentation**
- [MX240 Routing Engine Description](#)
 - [MX480 Routing Engine Description on page 27](#)

- *MX960 Routing Engine Description*

Routing Engine Specifications

Table 16 on page 35 lists the current specifications for Routing Engines supported on M Series, MX Series, and T Series routers. Table 17 on page 37 lists the specifications for end-of-life Routing Engines.



NOTE: For a list of the routing engines that are supported on the M Series, MX Series, T Series, and PTX routers, see “Supported Routing Engines by Router” on page 40.



NOTE: For information about PTX Series Routing Engine specifications, see *Routing Engines Supported on PTX Series Routers*. For information about

Table 16: Routing Engine Specifications

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support
RE-400-768	400-MHz Celeron	768 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	9.0
RE-A-1000-2048	1.0-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1
RE-A-2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1
RE-S-1300-2048	1.3-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2
RE-S-2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2
RE-C1800	1.8-GHz	8 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	T1600 router in a routing matrix: 9.6R2 Standalone T640 or T1600 router: 11.2
RE-C2600	2.6-GHz	16 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	TX Matrix Plus router: 9.6R2

Table 16: Routing Engine Specifications (*continued*)

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support
RE-A-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4
RE-S-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4
RE-S-1800x4	1800-MHz	8GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4
RE-S-MX104	1.8-GHz	4 GB	Gigabit Ethernet	–	8 GB NAND Flash	13.2
RE-B-1800x1-4G	1.73-GHz	4 GB	Gigabit Ethernet	64 GB SSD	4 GB CompactFlash card	12.1R2, 11.4R4, and 12.2R1
RE-MX2000-1800x4	1.8- GHz	16 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	12.3R2
RE-S-1800x4-32G-S	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1
RE-MX1800-32G-S	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> • 12.3R4 • 13.2R1
RE-S-X6-64G	2 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F4, 16.1
RE-S-X6-64G	2 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F4, 16.1
REMX2K-X8-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	15.1F5-S1, 16.1R2, and 16.2R1
REMX2008-X8-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F7
RE-S-2X00x6	1.6 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	17.3



NOTE: Use shielded CAT5e cable for connecting the AUX, CONSOLE, and MGMT ports in RE-S-X6-64G, REMX2K-X8-64G, and REMX2008-X8-64G Routing Engines.

Table 17: End-of-Life Routing Engine Specifications

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-333-256	333-MHz Pentium II	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	PSN-2003-01-063
RE-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	PSN-2003-01-063
RE-600-512	600-MHz Pentium III	512 MB	Fast Ethernet	30 GB hard disk	256 MB CompactFlash card	5.4	PSN-2004-07-019
RE-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	5.3	PSN-2008-02-018
RE-850-1536	850-MHz Pentium III	1536 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	7.2	PSN-2011-04-226
RE-M40	200-MHz Pentium	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.2	FA-HW-0101-001
RE-M40-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	10 GB hard disk	80 MB CompactFlash card	4.2	PSN-2003-01-063
RE-M40-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	30 GB hard disk	128 MB CompactFlash card	5.4	PSN-2004-11-020
RE-1600-2048	1.6-GHz Pentium M	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	6.2	PSN-2008-02-019



NOTE: The memory in [Table 16 on page 35](#) indicates the amount of total memory. To determine the amount of available memory, issue the `show chassis routing-engine` CLI command.

On routers that accept two Routing Engines, you cannot mix Routing Engine types except for a brief period (one minute or so) during an upgrade or downgrade to two Routing Engines of the same type.

Related Documentation

- [Supported Routing Engines by Router on page 40](#)

MX480 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **HDD**, **ONLINE**, and **FAIL**, are located directly on the faceplate of the Routing Engine. [Table 18 on page 38](#) and [Table 19 on page 39](#) describe the functions of the Routing Engine LEDs.

Figure 19: RE-S-1800 Routing Engine


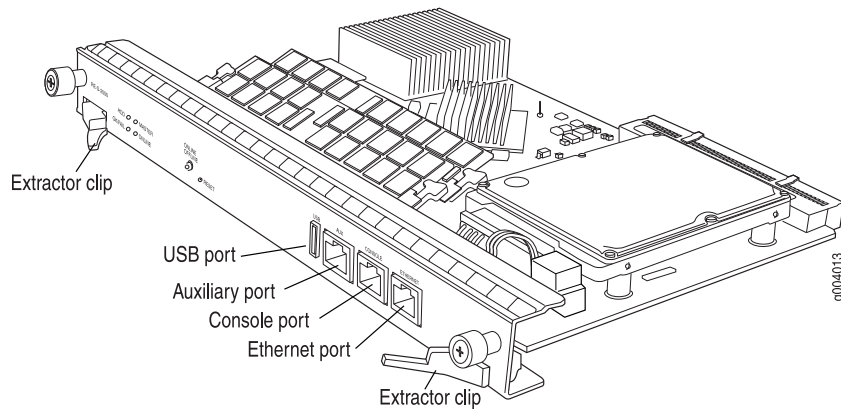


Table 18: RE-S-1800 Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the Master.
HDD	Green	Blinking	Indicates activity on the hard disk drive.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
FAIL	Red	On steadily	Routing Engine has failed.

Routing Engine LEDs (RE-S-X6-64G)

Figure 20: RE-S-X6-64G Routing Engine LEDs

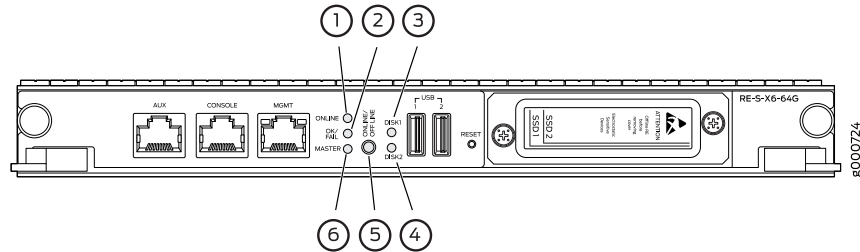

1—ONLINE LED	4—DISK2 LED
2—OK/FAIL LED	5—ONLINE/OFFLINE Button
3—DISK1 LED	6—MASTER LED

Table 19: Routing Engine LEDs (RE-S-X6-64G)

Label	Color	State	Description
ONLINE	Green	Blinking slowly	Routing Engine is in the process of booting BIOS, and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
		-	Off
DISK1	Green	Blinking	Indicates presence of the disk activity.
		-	Off
DISK2	Green	Blinking	Indicates presence of the disk activity.
		-	Off
OK/FAIL	Green	On steadily	Routing Engine is powering up.
		Yellow	On steadily
MASTER	Blue	On steadily	This Routing Engine is the Master Routing Engine.

- Related Documentation**
- [MX480 Routing Engine Description on page 27](#)
 - [Replacing an MX480 Routing Engine on page 301](#)

Supported Routing Engines by Router

The following tables list the Routing Engines that each router supports, the first supported release for the Routing Engine in the specified router, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine.

- [M7i Routing Engines on page 40](#)
- [M10i Routing Engines on page 41](#)
- [M40e Routing Engines on page 41](#)
- [M120 Routing Engines on page 41](#)
- [M320 Routing Engines on page 42](#)
- [MX5, MX10, MX40, and MX80 Routing Engine on page 43](#)
- [MX104 Routing Engines on page 43](#)
- [MX240 Routing Engines on page 43](#)
- [MX480 Routing Engines on page 44](#)
- [MX960 Routing Engines on page 45](#)
- [MX2008 Routing Engines on page 46](#)
- [MX2010 Routing Engines on page 46](#)
- [MX2020 Supported Routing Engines on page 47](#)
- [MX10003 Routing Engines on page 47](#)
- [PTX1000 Routing Engines on page 47](#)
- [PTX3000 Routing Engines on page 48](#)
- [PTX5000 Routing Engines on page 48](#)
- [T320 Routing Engines on page 49](#)
- [T640 Routing Engines on page 49](#)
- [T1600 Routing Engines on page 50](#)
- [T4000 Routing Engines on page 51](#)
- [TX Matrix Routing Engines on page 51](#)
- [TX Matrix Plus Routing Engines on page 52](#)
- [TX Matrix Plus \(with 3D SIBs\) Routing Engines on page 52](#)

M7i Routing Engines

Table 20 on page 40 lists the Routing Engines supported by the M7i router. The M7i router supports 32-bit Junos OS only.

Table 20: M7i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1

Table 20: M7i Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M10i Routing Engines

Table 21 on page 41 lists the Routing Engines supported by the M10i router. The M10i router supports 32-bit Junos OS only.

Table 21: M10i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: TSB16445)	RE-5.0	9.0	fxp0	fxp1 fxp2
RE-850-1536 (EOL details: TSB15553)	RE-850	7.2	fxp0	fxp1 fxp2
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

M40e Routing Engines

Table 22 on page 41 lists the Routing Engines supported by the M40e router.

Table 22: M40e Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-A-1000-2048	RE-A-1000	8.1	fxp0	fxp1 fxp2

M120 Routing Engines

Table 23 on page 42 lists the Routing Engines supported by the M120 router.

Table 23: M120 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1000-2048	RE-A-1000	8.0R2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.0R2	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	fxp1 fxp2
RE-A-1800X4-16G	RE-A-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

M320 Routing Engines

Table 24 on page 42 lists the Routing Engines supported by the M320 router.

Table 24: M320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 bcm0

Table 24: M320 Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1800X4-8G	RE-A-1800X4	<ul style="list-style-type: none"> • 11.4R5 • 12.1R3 • 12.2 	10.4	fxp0	em0 em1

MX5, MX10, MX40, and MX80 Routing Engine

Table 25 on page 43 lists the Routing Engines supported by the MX5, MX10, MX40, and MX80 routers.

Table 25: MX5, MX10, MX40, and MX80 Routing Engine

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	Routing Engine RE-MX80	12.3	-	fxp0	em0 em1

NOTE: em1 is used to communicate with the MS-MIC when it is inserted.

MX104 Routing Engines

Table 26 on page 43 lists the Routing Engines supported by MX104 routers.

Table 26: MX104 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-MX104	Routing Engine	13.2	-	fxp0	fxp1 fxp2

MX240 Routing Engines

Table 27 on page 44 lists the Routing Engines supported by MX240 routers.

Table 27: MX240 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	9.0	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	9.0	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800x2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0, em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0

MX480 Routing Engines

Table 28 on page 44 lists the Routing Engines supported by MX480 routers.

Table 28: MX480 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.4	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.4	–	fxp0	fxp1 fxp2

Table 28: MX480 Supported Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0

MX960 Routing Engines

Table 29 on page 45 lists the Routing Engines supported by MX960 routers.

Table 29: MX960 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: TSB16556)	RE-S-1300	8.2	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: TSB16735)	RE-S-2000	8.2	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: TSB16556)	RE-S-1800x2	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1

Table 29: MX960 Supported Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> 11.4R5 12.1R3 	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0

MX2008 Routing Engines

Table 30 on page 46 lists the Routing Engines supported by MX2008 routers.

Table 30: MX2008 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-64G	RE-MX2008-X8-64G	15.1F7	fxp0	ixlv0 ixlv1

MX2010 Routing Engines

Table 31 on page 46 lists the Routing Engines supported by MX2010 routers.

Table 31: MX2010 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1

Table 31: MX2010 Supported Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> 15.1F5-S1 16.1R2 16.2R1 	fxp0	ixlv0 ixlv1

MX2020 Supported Routing Engines

Table 32 on page 47 lists the Routing Engines supported by MX2020 routers.

Table 32: MX2020 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> 12.3R4 13.2R1 	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> 15.1F5-S1 16.1R2 16.2R1 	fxp0	ixlv0 ixlv1

MX10003 Routing Engines

Table 33 on page 47 lists the Routing Engines supported by MX10003 routers.

Table 33: MX10003 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10003-RE1	RE-S-2X00x6	17.3R1	fxp0	ixlv0 ixlv1

PTX1000 Routing Engines

Table 34 on page 48 lists the Routing Engine supported on the PTX1000.



NOTE: The PTX1000 supports 64-bit Junos OS only.

Table 34: PTX1000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX1000	<ul style="list-style-type: none"> 16.1X65-D30 17.2R1 	em0	bme0 em1

PTX3000 Routing Engines

Table 35 on page 48 lists the Routing Engines supported on the PTX3000.



NOTE: The PTX3000 supports 64-bit Junos OS only.

Table 35: PTX3000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	13.2R2	em0	ixgbe0 ixgbe1
RCB-PTX-X6-32G	RE-PTX-2X00x6	16.1R4	em0	ixlv0 ixlv1

PTX5000 Routing Engines

Table 36 on page 48 lists the Routing Engines supported on the PTX5000.



NOTE: The PTX5000 supports 64-bit Junos OS only.

Table 36: PTX5000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	12.1X48 12.3 13.2	em0	ixgbe0 ixgbe1
<p>NOTE: The PTX5000 does not support Junos OS Releases 12.1, 12.2, or 13.1.</p>				

Table 36: PTX5000 Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-PTX-X8-64G	RE-PTX-2X00x8	15.1F4	em0	ixlv0
		16.1R1		ixlv1
				em1

T320 Routing Engines

Table 37 on page 49 lists the Routing Engines supported by the T320 router.

Table 37: T320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	fxp0	fxp1 fxp2

T640 Routing Engines

Table 38 on page 49 lists the Routing Engines supported by the T640 router.

Table 38: T640 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	5.3	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0

Table 38: T640 Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.2	64-bit Junos OS on a standalone T640 router: 11.3	em0	bcm0
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.4R2	64-bit Junos OS on a standalone T640 router: 11.4R2	em0	bcm0
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		em1

T1600 Routing Engines

Table 39 on page 50 lists the Routing Engines supported by the T1600 router.



NOTE: (Two RE-DUO-C1800-8G or two RE-DUO-C1800-16G are required to connect to a Routing Matrix)

Table 39: T1600 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	8.5	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	8.5	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0

Table 39: T1600 Routing Engines (*continued*)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-TXP-LCC or RE-DUO-1800	32-bit Junos OS on a T1600 router in a routing matrix: 9.6 NOTE: Junos OS Releases 9.6 through 10.4 support RE-DUO-C1800-8G only during upgrade to a line-card chassis (LCC) in a routing matrix. 32-bit Junos OS on a standalone T1600 router: 11.1	64-bit Junos OS on a T1600 router in a routing matrix: 9.6 64-bit Junos OS on a standalone T1600 router: 11.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	em0	bcm0 em1

T4000 Routing Engines

Table 40 on page 51 lists the Routing Engines supported by the T4000 router.



NOTE: The T4000 router supports 64-bit Junos OS only.

Table 40: T4000 Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	Standalone T4000 router: 12.1 T4000 router in a routing matrix: 13.1	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	Standalone T4000 router: 12.1R2 T4000 router in a routing matrix: 13.1	em0	bcm0 em1

TX Matrix Routing Engines

Table 41 on page 52 lists the Routing Engines supported by the TX Matrix router.

Table 41: TX Matrix Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: TSB14373)	RE-3.0 or RE-3.0 (RE-600)	7.0	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: TSB14374)	RE-4.0 (RE-1600)	7.0	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1

TX Matrix Plus Routing Engines

Table 42 on page 52 lists the Routing Engines supported by the TX Matrix Plus router.

Table 42: TX Matrix Plus Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	32-bit Junos OS: 9.6	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

TX Matrix Plus (with 3D SIBs) Routing Engines

Table 43 on page 52 lists the Routing Engines supported by the TX Matrix Plus router with 3D SIBs.

Table 43: Routing Engines on TX Matrix Plus with 3D SIBs

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	-	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

- Related Documentation**
- [Routing Engine Specifications on page 35](#)
 - *Understanding Internal Ethernet Interfaces*
 - *Understanding Management Ethernet Interfaces*

CHAPTER 6

Line Card Components and Descriptions

- [Interface Modules—DPCs on page 55](#)
- [Interface Modules—FPCs and MICs on page 63](#)
- [Interface Modules—MPCs and MICs on page 69](#)

Interface Modules—DPCs

- [MX480 Dense Port Concentrator \(DPC\) Description on page 55](#)
- [MX480 DPC Port and Interface Numbering on page 57](#)
- [MX480 Dense Port Concentrator \(DPC\) LEDs on page 60](#)
- [DPCs Supported on MX240, MX480, and MX960 Routers on page 60](#)

MX480 Dense Port Concentrator (DPC) Description

A Dense Port Concentrator (DPC) is optimized for Ethernet density (see [Figure 21 on page 56](#)). The DPC assembly combines packet forwarding and Ethernet interfaces on a single board, with either two or four 10-Gbps Packet Forwarding Engines. Each Packet Forwarding Engine consists of one I-chip for Layer 3 processing and one Layer 2 network processor. The DPCs interface with the power supplies and Switch Control Boards (SCBs).


The DPC slots are located in the front of the router (see [Figure 21 on page 56](#)). The router has six dedicated DPC slots that are numbered **0** through **5**. A DPC can be installed in any DPC slot on the router. You can install any combination of DPC types in the router. If a slot is not occupied by a DPC, a DPC blank panel must be installed to shield the empty slot and to allow cooling air to circulate properly through the router.

DPCs are hot-removable and hot-insertable, as described in “[MX480 Field-Replaceable Units \(FRUs\)](#)” on page 247. When you install a DPC in an operating router, the Routing Engine downloads the DPC software, the DPC runs its diagnostics, and the Packet Forwarding Engines housed on the DPC are enabled. Forwarding on other DPCs continues uninterrupted during this process.

[Figure 21 on page 56](#) shows typical DPCs supported on the MX480 router. For more information about DPCs, see the [MX Series Interface Module Reference](#).

Figure 21: Typical DPCs Supported on the Router

DPC 40x1GE

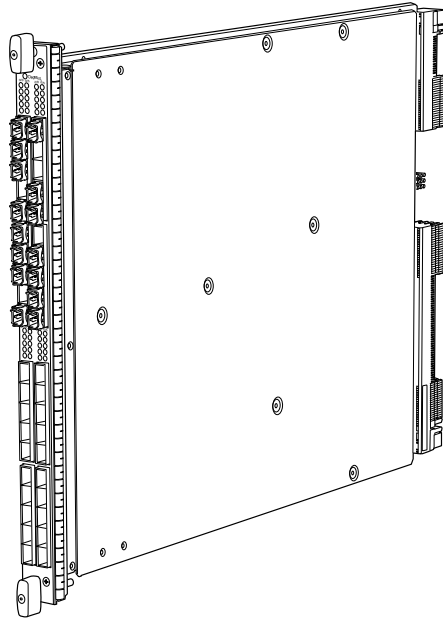

DPC 4x10GE


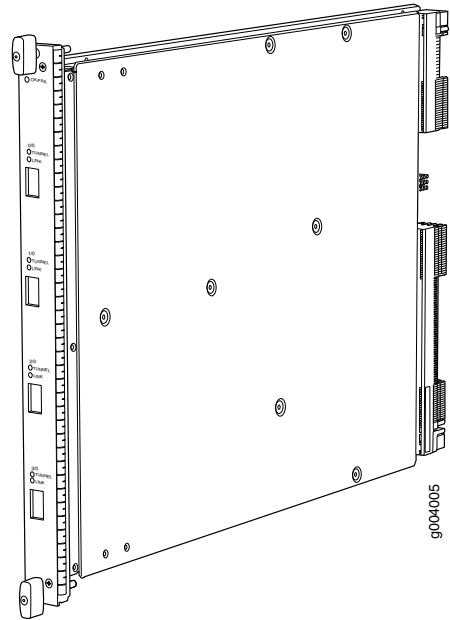


Figure 22: DPC Installed Horizontally in the Router

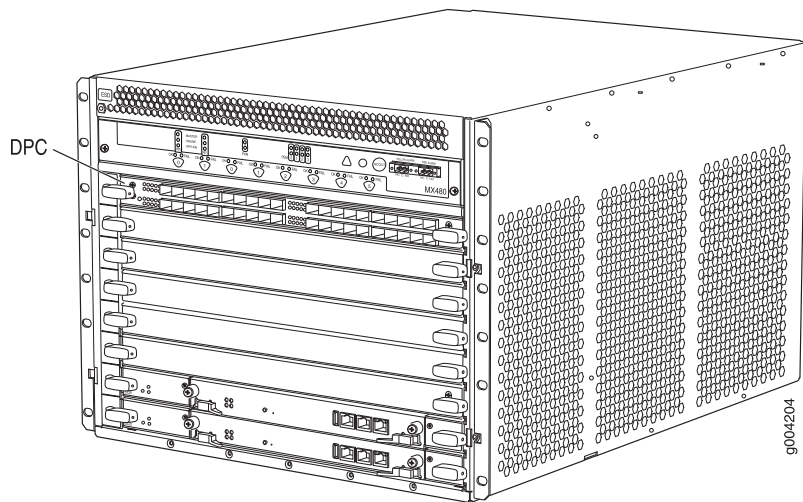

DPC Components

Each DPC consists of the following components:

- DPC cover, which functions as a ground plane and a stiffener.
- Fabric interfaces.
- Two Gigabit Ethernet interfaces that allow control information, route information, and statistics to be sent between the Routing Engine and the CPU on the DPCs.
- Two interfaces from the SCBs that enable the DPCs to be powered on and controlled.

- Physical DPC connectors.
- Two or four Packet Forwarding Engines.
- Midplane connectors and power circuitry.
- Processor subsystem, which includes a 1.2-GHz CPU, system controller, and 1 GB of SDRAM.
- Online button—Takes the DPC online or offline when pressed.
- LEDs on the DPC faceplate. For more information about LEDs on the DPC faceplate, see the [MX Series Interface Module Reference](#).

Two LEDs, located on the craft interface above the DPC, display the status of the DPC and are labeled **OK** and **FAIL**.

- See Also**
- [MX480 Dense Port Concentrator \(DPC\) LEDs on page 60](#)
 - [DPC and MPC LEDs on the MX480 Craft Interface on page 17](#)
 - [Replacing an MX480 DPC on page 323](#)

MX480 DPC Port and Interface Numbering

Each port on a DPC corresponds to a unique interface name in the CLI.

In the syntax of an interface name, a hyphen (-) separates the media type from the DPC number (represented as an **FPC** in the CLI). The DPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the logical PIC number. The last number in the interface matches the port number on the DPC. Slashes (/) separate the DPC number from the logical PIC number and port number.

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface
 - *so*—SONET/SDH interface
 - *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see [Interface Naming Overview](#).

- *fpc*—Slot in which the DPC is installed. On the MX480 router, the DPCs are represented in the CLI as **FPC 0** through **FPC 5**.
- *pic*—Logical PIC on the DPC. The number of logical PICs varies depending on the type of DPC. For example, a:
 - 20-port Gigabit Ethernet DPC has two logical PICs, numbered 0 through 1.
 - 40-port Gigabit Ethernet DPC has four logical PICs, numbered 0 through 3.
 - 2-port 10-Gigabit Ethernet DPC has two logical PICs, numbered 0 through 1.
 - 4-port 10-Gigabit Ethernet DPC has four logical PICs, numbered 0 through 3.


For more information on specific DPCs, see “DPCs Supported on MX240, MX480, and MX960 Routers” on page 60 in the *MX Series Interface Module Reference*.

- *port*—Port number.

The MX480 router supports up to six DPCs that install horizontally and are numbered 0 through 5 from bottom to top.

Figure 23 on page 58 shows a 40-port Gigabit Ethernet DPC with SFP installed in slot 3 on the MX480 router.

Figure 23: MX480 DPC Interface Port Mapping

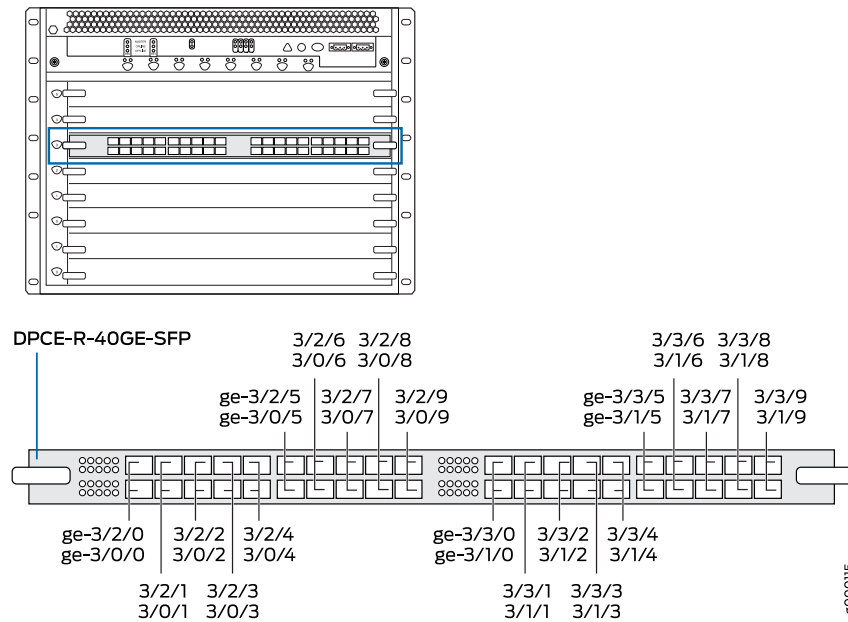

The DPC contains four logical PICs, numbered **PIC 0** through **PIC 3** in the CLI. Each logical PIC contains 10 ports numbered **0** through **9**.

The `show chassis hardware` command output displays a 40-port Gigabit Ethernet DPC with SFP (**DPCE-R-40GE-SFP**) installed in DPC slot **3**. The DPC (**DPCE 40x 1GE R**) is shown as **FPC 3** in the CLI. The DPC’s four logical PICs — **10x 1GE(LAN)** — are shown as **PIC 0** through **PIC 3**.

```
user@host> show chassis hardware
```

```
...
FPC 3          REV 07   750-018122  KB8222          DPCE 40x 1GE R
CPU           REV 06   710-013713  KA9010          DPC PMB
PIC 0
  Xcvr 0      REV 01   740-011782  PCH2NU4        SFP-SX
  Xcvr 1      REV 01   740-011782  PCH2P4R        SFP-SX
  Xcvr 2      REV 01   740-011782  PCH2NYL        SFP-SX
  Xcvr 3      REV 01   740-011782  PCH2UW6        SFP-SX
  Xcvr 4      REV 01   740-011782  PCH2P4N        SFP-SX
  Xcvr 5      REV 01   740-011782  PCH2UME        SFP-SX
  Xcvr 6      REV 01   740-011613  PCE1H5P        SFP-SX
```

```

Xcvr 7      REV 01  740-011782  PCH2UFG      SFP-SX
Xcvr 8      REV 02  740-011613  AM0947SEYU2  SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEYTQ  SFP-SX
PIC 1
Xcvr 0      REV 01  740-011782  PCH2UYF      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P4L      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2UCL      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2P4X      SFP-SX
Xcvr 4      REV 01  740-011782  PCH2P1E      SFP-SX
Xcvr 5      REV 01  740-011782  PCH2UD2      SFP-SX
Xcvr 6      REV 01  740-011782  PCH2PLC      SFP-SX
Xcvr 7      REV 01  740-011782  PCH2UDJ      SFP-SX
Xcvr 8      REV 02  740-011613  AM0947SEX7S  SFP-SX
PIC 2
Xcvr 0      REV 01  740-011782  PCH2NV7      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P6Q      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2NUG      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2P10      SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEXBT  SFP-SX
PIC 3
Xcvr 0      REV 01  740-011782  PCH2PL4      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P1K      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2PLM      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2UFF      SFP-SX
Xcvr 8      REV 02  740-011613  AM1003SFV5S  SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEBX   SFP-SX
...

```

The `show interfaces terse` command output displays the Gigabit Ethernet interfaces that correspond to the 40 ports located on the DPC.

```
user@host>show interfaces terse ge-3*
```

Interface	Admin	Link	Proto	Local	Remote
ge-3/0/0	up	up			
ge-3/0/1	up	down			
ge-3/0/2	up	up			
ge-3/0/3	up	up			
ge-3/0/4	up	up			
ge-3/0/5	up	up			
ge-3/0/6	up	up			
ge-3/0/7	up	up			
ge-3/0/8	up	up			
ge-3/0/9	up	up			
ge-3/1/0	up	down			
ge-3/1/1	up	down			
ge-3/1/2	up	down			
ge-3/1/3	up	down			
ge-3/1/4	up	up			
ge-3/1/5	up	up			
ge-3/1/6	up	up			
ge-3/1/7	up	up			
ge-3/1/8	up	up			
ge-3/1/9	up	down			
ge-3/2/0	up	down			
ge-3/2/1	up	down			
ge-3/2/2	up	down			
ge-3/2/3	up	down			
ge-3/2/4	up	down			
ge-3/2/5	up	down			

ge-3/2/6	up	down
ge-3/2/7	up	down
ge-3/2/8	up	down
ge-3/2/9	up	down
ge-3/3/0	up	down
ge-3/3/1	up	down
ge-3/3/2	up	down
ge-3/3/3	up	down
ge-3/3/4	up	down
ge-3/3/5	up	down
ge-3/3/6	up	down
ge-3/3/7	up	down
ge-3/3/8	up	down
ge-3/3/9	up	down

See Also • [MX480 Router Hardware and CLI Terminology Mapping on page 12](#)

MX480 Dense Port Concentrator (DPC) LEDs

Two LEDs, located on the craft interface above the DPC, display the status of the DPC and are labeled **OK** and **FAIL**. For more information about the DPC LEDs on the craft interface, see “[DPC and MPC LEDs on the MX480 Craft Interface](#)” on page 17.

Each DPC also has LEDs located on the faceplate. For more information about LEDs on the DPC faceplate, see the “LEDs” section for each DPC in the [MX Series Interface Module Reference](#).

See Also • [MX480 Dense Port Concentrator \(DPC\) Description on page 55](#)

- [Maintaining MX480 DPCs on page 420](#)
- [Replacing an MX480 DPC on page 323](#)

DPCs Supported on MX240, MX480, and MX960 Routers



NOTE: These DPCs have all been announced as End of Life (EOL). The End of Support (EOS) milestone dates for each model are published at http://www.juniper.net/support/eol/mseries_hw.html.

Table 44 on page 60 lists the DPCs supported by the MX240, MX480, and MX960 routers.

Table 44: DPCs Supported in MX240, MX480, and MX960 Routers

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC	First Junos OS Release
----------	------------------	-------	----------------------------	------------------------

Gigabit Ethernet

Table 44: DPCs Supported in MX240, MX480, and MX960 Routers (*continued*)

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC	First Junos OS Release
<i>Gigabit Ethernet DPC with SFP</i>	DPC-R-40GE-SFP EOL (see PSN-2009-06-400)	40	40 Gbps	8.2
<i>Gigabit Ethernet Enhanced DPC with SFP</i>	DPCE-R-40GE-SFP EOL (see PSN-TSB16810)	40	40 Gbps	8.4
<i>Gigabit Ethernet Enhanced Ethernet Services DPC with SFP</i>	DPCE-X-40GE-SFP EOL (see PSN-TSB16810)	40	40 Gbps	8.4
<i>Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP</i>	DPCE-X-Q-40GE-SFP EOL (see PSN-2013-02-851)	40	40 Gbps	8.5
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-20GE-SFP EOL (see PSN-2013-02-851)	20	20 Gbps	9.1
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-40GE-SFP EOL (see PSN-2011-07-314)	40	40 Gbps	8.5
<i>10-Gigabit Ethernet DPC with XFP</i>	DPC-R-4XGE-XFP EOL (see PSN-2009-06-400)	4	40 Gbps	8.2
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-2XGE-XFP EOL (see PSN-2011-02-314)	2	20 Gbps	9.1
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-4XGE-XFP EOL (see PSN-TSB16810)	4	40 Gbps	8.4
<i>10-Gigabit Ethernet Enhanced Ethernet Services DPC with XFP</i>	DPCE-X-4XGE-XFP EOL (see PSN-TSB16810)	4	40 Gbps	8.4

Table 44: DPCs Supported in MX240, MX480, and MX960 Routers (*continued*)

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC	First Junos OS Release
<i>10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP</i>	DPCE-X-Q-4XGE-XFP EOL (see PSN-2013-02-851)	4	40 Gbps	8.5
<i>10-Gigabit Ethernet Enhanced Queuing IP Services DPC with XFP</i>	DPCE-R-Q-4XGE-XFP EOL (see PSN-2011-02-314)	4	40 Gbps	8.5
Mult-Rate Ethernet				
<i>Multi-Rate Ethernet Enhanced DPC with SFP and XFP</i>	DPCE-R-20GE-2XGE EOL (see PSN-TSB16810)	22	40 Gbps	9.2
<i>Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP</i>	DPCE-X-20GE-2XGE EOL (see PSN-2011-02-314)	22	40 Gbps	9.2
<i>Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP</i>	DPCE-R-Q-20GE-2XGE EOL (see PSN-TSB16810)	22	40 Gbps	9.3
Tri-Rate Ethernet				
<i>Tri-Rate Enhanced DPC</i>	DPCE-R-40GE-TX EOL (see PSN-2013-02-851)	40	40 Gbps	9.1
<i>Tri-Rate Enhanced Ethernet Services DPC</i>	DPCE-X-40GE-TX EOL (see PSN-2011-07-315)	40	40 Gbps	9.1
Services				
<i>Multiservices DPC</i>	MS-DPC EOL (see PSN-TSB16812)	2 (Not supported)	–	9.3

- See Also**
- *MX Series DPC Overview*
 - *Protocols and Applications Supported by DPCs and Enhanced DPCs (DPC and DPCE-R)*
 - *Protocols and Applications Supported by Enhanced Ethernet Services DPCs (DPCE-X)*

- *Protocols and Applications Supported by Enhanced Queuing IP Services DPCs (DPCE-R-Q)*
- *Protocols and Applications Supported by Enhanced Queuing Ethernet Services DPCs (DPCE-X-Q)*
- *Protocols and Applications Supported by the Multiservices DPC (MS-DPC)*


Interface Modules—FPCs and MICs

- [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
- [MX480 Flexible PIC Concentrator \(FPC\) LEDs on page 65](#)
- [FPCs Supported by MX240, MX480, and MX960 Routers on page 65](#)
- [MX480 PIC Description on page 66](#)
- [MX480 PIC Port and Interface Numbering on page 66](#)
- [MX480 PIC LEDs on page 68](#)
- [PICs Supported by MX240, MX480, and MX960 Routers on page 68](#)

MX480 Flexible PIC Concentrator (FPC) Description

A Flexible PIC Concentrator (FPC) occupies two DPC slots on an MX Series router. The router has six dedicated DPC slots that are numbered 0 through 5, bottom to top. Up to three FPCs can be installed horizontally on the front of the router (see [Figure 24 on page 63](#)). The interface corresponds to the lowest numbered DPC slot for which the FPC is installed.

Figure 24: FPC Installed in the MX480 Router Chassis

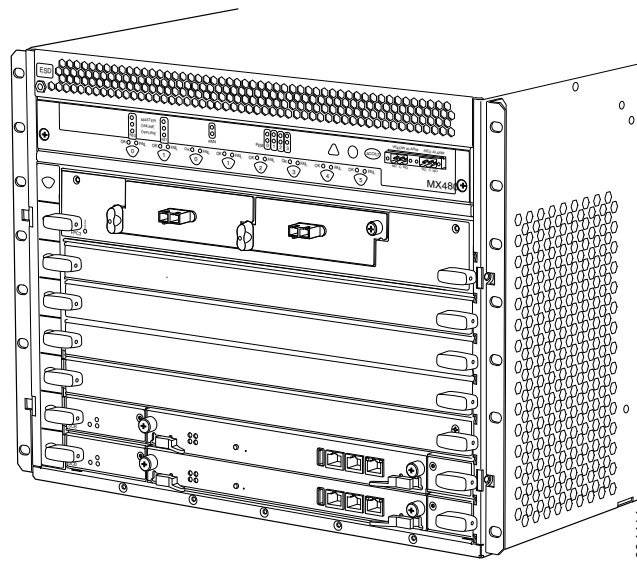

[Figure 25 on page 64](#) shows the typical FPCs supported on the MX480 router.

- Two LEDs, located on the craft interface above the FPC, that display the status of the FPC and are labeled **OK** and **FAIL**
- FPC online/offline button, located on the craft interface above the FPC

- See Also**
- [MX480 Flexible PIC Concentrator \(FPC\) LEDs on page 65](#)
 - [Maintaining MX480 FPCs on page 425](#)
 - [MX480 FPC Terminology](#)
 - [Troubleshooting the MX480 FPCs on page 444](#)
 - [Replacing an MX480 FPC on page 332](#)

MX480 Flexible PIC Concentrator (FPC) LEDs

Two LEDs, located on the craft interface above the FPC, that display the status of the FPC and are labeled **OK** and **FAIL**. For more information about the FPC LEDs located on the craft interface, see “[FPC LEDs on the MX480 Craft Interface](#)” on page 17.

- See Also**
- [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
 - [Maintaining MX480 FPCs on page 425](#)
 - [MX480 FPC Terminology](#)
 - [Troubleshooting the MX480 FPCs on page 444](#)
 - [Replacing an MX480 FPC on page 332](#)

FPCs Supported by MX240, MX480, and MX960 Routers

An FPC occupies two slots when installed in an MX240, MX480, or MX960 router. The maximum number of supported FPCs varies per router:

- MX960 router—6 FPCs
- MX480 router—3 FPCs
- MX240 router—1 FPC

[Table 45 on page 65](#) lists FPCs supported by MX Series routers.

Table 45: FPCs Supported by MX Series Routers

FPC Type	FPC Name	FPC Model Number	Maximum Number of PICs Supported	Maximum Throughput per FPC (Full-duplex)	First Junos OS Release
3	FPC3	MX-FPC3	2	20 Gbps	9.4
2	FPC2	MX-FPC2	2	10 Gbps	9.5

- See Also**
- [MX Series FPC and PIC Overview](#)
 - [PICs Supported by MX240, MX480, and MX960 Routers on page 68](#)
 - [High Availability Features](#)

MX480 PIC Description

PICs provide the physical connection to various network media types, receiving incoming packets from the network and transmitting outgoing packets to the network. During this process, each PIC performs framing and line-speed signaling for its media type. Before transmitting outgoing data packets, the PICs encapsulate the packets received from the FPCs. Each PIC is equipped with an ASIC that performs control functions specific to the media type of that PIC.

PICs are hot-removable and hot-insertable. Up to two PICs can be installed in the slots in each FPC. Up to three FPCs can be installed in an MX480 router. PICs used in a Type 2 FPC have captive screws at their upper and lower corners. PICs used in a Type 3 FPC have an upper ejector handle and a lower captive screw.

- See Also**
- [PICs Supported by MX240, MX480, and MX960 Routers on page 68](#)
 - [Replacing an MX480 PIC on page 350](#)

MX480 PIC Port and Interface Numbering

Each port on a PIC corresponds to a unique interface name in the CLI.

In the syntax of an interface name, a hyphen (-) separates the media type from the FPC number (represented as an **FPC** in the CLI). The FPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the PIC number. The last number in the interface matches the port number on the PIC. Slashes (/) separate the FPC number from the PIC number and port number:

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface
 - *so*—SONET/SDH interface
 - *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see *Interface Naming Overview*.

- *fpc*—Lowest slot number in which the FPC is installed. On the MX480 router, FPCs occupy two line card slots and are represented in the CLI as **FPC 0** through **FPC 4**.
- *pic*—PIC number, 0 or 1 depending on the FPC slot.


For more information on specific PICs, see “PICs Supported by MX240, MX480, and MX960 Routers” on page 68 in the *MX Series Interface Module Reference*.

- *port*—Port number.

The MX480 supports up to three FPCs that install horizontally and are numbered from bottom to top.

Figure 26 on page 67 shows a Channelized OC12/STM4 Enhanced IQ (IQE) PIC with SFP installed in PIC slot 0 of an FPC installed in slot 3 and slot 4.

Figure 26: MX480 PIC Interface Port Mapping

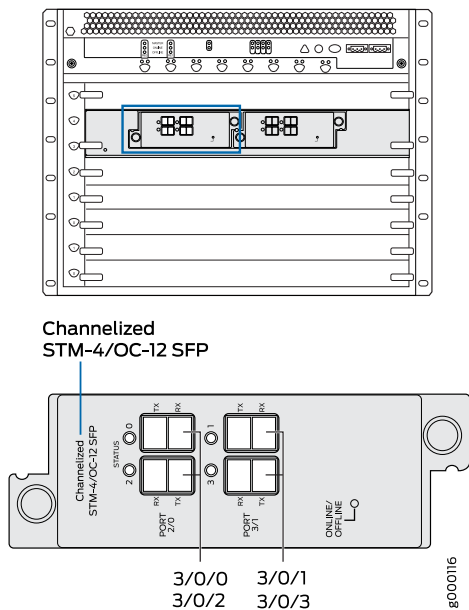

The `show chassis hardware` command output displays a Channelized OC12/STM4 Enhanced IQ (IQE) PIC (4x CHOC12 IQE SONET) installed in MX FPC Type 2.

```
user@host> show chassis hardware
```

```
...
FPC 3          REV 01   710-024386   JW9571          MX FPC Type 2
CPU           REV 03   710-022351   KE2986          DPC PMB
PIC 0         REV 00   750-022630   DS1284          4x CHOC12 IQE SONET
  Xcvr 0      REV 01   740-011782   PB821SG         SFP-SX
  Xcvr 1      REV 01   740-011782   PB829Q6         SFP-SX
  Xcvr 2      REV 01   740-011613   P9F15NQ         SFP-SX
  Xcvr 3      REV 01   740-011782   P7N036X         SFP-SX...
```

The `show interfaces terse` command output displays the channelized SONET OC12 interfaces (`coc12`), that correspond to the four ports located on the PIC.

```
user@host>show interfaces terse
```

```
...
coc12-3/0/0          up    up
```

```

1c-3/0/0          up    up
1c-3/0/0.32769   up    up    vpls
pfe-3/0/0        up    up
pfe-3/0/0.16383  up    up    inet
                                     inet6

pfh-3/0/0        up    up
pfh-3/0/0.16383  up    up    inet
coc12-3/0/1      up    up
coc12-3/0/2      up    up
coc12-3/0/3      up    up
...

```

See Also • [MX480 Router Hardware and CLI Terminology Mapping on page 12](#)

MX480 PIC LEDs

Each PIC has LEDs located on the faceplate. For more information about LEDs on the PIC faceplate, see the “LEDs” section for each PIC in the [MX Series Interface Module Reference](#).

See Also • [PICs Supported by MX240, MX480, and MX960 Routers on page 68](#)

- [MX480 PIC Description on page 66](#)
- [Replacing an MX480 PIC on page 350](#)
- [Maintaining MX480 PICs on page 433](#)

PICs Supported by MX240, MX480, and MX960 Routers

Table 46 on page 68 lists the PICs supported by MX240, MX480, and MX960 routers.

Table 46: PICs Supported by MX240, MX480, and MX960 Routers

PIC Name	PIC Model Number	Ports	Type	First Junos OS Release
Channelized IQ PICs				
<i>Channelized OC12/STM4 Enhanced IQ (IQE) PIC with SFP</i>	PB-4CHOC12-STM4-IQE-SFP	4	2	9.5
<i>Channelized OC48/STM16 Enhanced IQ (IQE) PIC with SFP</i>	PB-1CHOC48-STM16-IQE	1	2	9.5
SONET/SDH PICs				
<i>SONET/SDH OC3/STM1 (Multi-Rate) PIC with SFP</i>	PB-4OC3-1OC12-SON2-SFP	4	2	9.5
<i>SONET/SDH OC12/STM4 (Multi-Rate) PIC with SFP</i>	PB-4OC3-4OC12-SON-SFP	4	2	9.5
<i>SONET/SDH OC48/STM16 Enhanced IQ (IQE) PIC with SFP</i>	PC-4OC48-STM16-IQE-SFP	4	3	10.4R2

Table 46: PICs Supported by MX240, MX480, and MX960 Routers (*continued*)

PIC Name	PIC Model Number	Ports	Type	First Junos OS Release
<i>SONET/SDH OC48/STM16 (Multi-Rate) PIC with SFP</i>	PB-1OC48-SON-B-SFP	1	2	9.5
<i>SONET/SDH OC48/STM16 PIC with SFP</i>	PC-4OC48-SON-SFP	4	3	9.4
<i>SONET/SDH OC192c/STM64 PIC</i>	PC-1OC192-SON-VSR	1	3	9.4
<i>SONET/SDH OC192c/STM64 PIC with XFP</i>	PC-1OC192-SON-XFP	1	3	9.4

- See Also**
- [MX Series FPC and PIC Overview](#)
 - [FPCs Supported by MX240, MX480, and MX960 Routers on page 65](#)
 - [High Availability Features](#)

Interface Modules—MPCs and MICs

- [MIC/MPC Compatibility on page 69](#)
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
- [MX480 MIC Port and Interface Numbering on page 77](#)
- [MX480 Modular Interface Card \(MIC\) LEDs on page 80](#)
- [MICs Supported by MX Series Routers on page 80](#)
- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
- [MX480 Modular Port Concentrator \(MPC\) LEDs on page 90](#)
- [MPCs Supported by MX Series Routers on page 90](#)
- [MX480 Application Services Modular Line Card Description on page 93](#)
- [MX480 Application Services Modular Storage Card Description on page 96](#)
- [MX480 Application Services Modular Processing Card Description on page 97](#)
- [MX480 AS MSC LEDs on page 97](#)
- [MX480 AS MXC LEDs on page 98](#)

MIC/MPC Compatibility

The following tables provide a compatibility matrix for the MICs currently supported by MPC1, MPC2, MPC3, MPC6, MPC8, and MPC9 on MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 routers. Each table lists the first Junos OS release in which the MPC supports the MIC. For example, Junos OS Release 10.2 is the first release in which the MX-MPC1-3D supports the Gigabit Ethernet MIC with SFP. An en dash indicates that the MIC is not supported.

Table 47: MIC/MPC1 Compatibility

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-8OC3-2OC12-ATM <i>(ATM MIC with SFP)</i>	—	—	12.1	12.1R4
MIC-3D-20GE-SFP <i>(Gigabit Ethernet MIC with SFP)</i>	10.2	11.2R4	10.2	11.2R4
MIC-3D-20GE-SFP-E <i>(Gigabit Ethernet MIC with SFP (E))</i>	13.2R2	13.2R2	13.2R2	13.2R2
MIC-3D-2XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	10.2	11.2R4	10.2	11.2R4
MIC-3D-4XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	—	—	—	—
MIC-3D-40GE-TX <i>(Tri-Rate MIC)</i>	10.2	11.2R4	10.2	11.2R4
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 <i>(SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	11.2	11.2R4	11.2	11.2R4
MIC-3D-4COC3-1COC12-CE <i>(Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP)</i>	—	—	12.2	12.2
MIC-3D-1OC192-XFP <i>(SONET/SDH OC192/STM64 MIC with XFP)</i>	12.2	12.2	12.2	12.2

Table 47: MIC/MPC1 Compatibility (*continued*)

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G (Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)	—	—	11.4	11.4
MIC-3D-16CHE1-T1-CE (Channelized E1/T1 Circuit Emulation MIC)	13.2	13.2	12.3	12.3
	NOTE: Support for Non-Channelized MIC only.	NOTE: Support for Non-Channelized MIC only.		
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B (DS3/E3 MIC) NOTE: You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.	11.4	11.4	11.4	11.4
MS-MIC-16G (Multiservices MIC)	13.2	13.2	13.2	13.2

Table 48: MIC/MPC2 Compatibility

MIC Name	MPC2	MPC2E	MPC2E NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E NG Q
MIC-3D-8OC3-2OC12-ATM (ATM MIC with SFP)	—	—	14.1R4, 14.2R3 with Junos Continuity 15.1	12.1	12.1R4	12.1	12.1R4	—	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-20GE-SFP (Gigabit Ethernet MIC with SFP)	10.1	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.1	11.2R4	10.1	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 48: MIC/MPC2 Compatibility (continued)

MIC Name	MPC2	MPC2E	MPC2E NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E NG Q
MIC-3D-20GE-SFP-E <i>(Gigabit Ethernet MIC with SFP (E))</i>	13.2R2	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	13.2R2	13.2R2	13.2R2	13.2R2	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-2XGE-XFP <i>(10-Gigabit Ethernet MIC with XFP)</i>	10.2	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.2	11.2R4	10.2	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	10.1	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.1	11.2R4	10.1	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-40GE-TX <i>(Tri-Rate MIC)</i>	10.2	11.2R4	14.1R4, 14.2R3 with Junos Continuity 15.1	10.2	11.2R4	10.2	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 <i>(SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	11.4	11.4	14.1R4, 14.2R3 with Junos Continuity 15.1	11.4	11.4	11.4	11.4	-	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4COC3-1COC12-CE <i>(Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP)</i>	—	—	—	12.2	12.2	12.2	12.2	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-1OC192-XFP <i>(SONET/SDH OC192/STM64 MIC with XFP)</i>	12.2	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	12.2	12.2	12.2	12.2	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 48: MIC/MPC2 Compatibility (continued)

MIC Name	MPC2	MPC2E	MPC2E NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E NG Q
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G (Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)	—	—	15.1 with flexible queuing option	11.4	11.4	11.4	11.4	—	15.1 14.1R4, 14.2R3 with Junos Continuity
MIC-3D-16CHE1-T1-CE (Channelized E1/T1 Circuit Emulation MIC)	13.2 NOTE: Support for Non-Channelized MIC only.	13.2 NOTE: Support for Non-Channelized MIC only.	15.1 with flexible queuing option	12.3	12.3	12.3	12.3	—	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B (DS3/E3 MIC) NOTE: You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.	11.4	11.4	14.1R4, 14.2R3 with Junos Continuity 15.1	11.4	11.4	11.4	11.4	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1
MS-MIC-16G (Multiservices MIC) NOTE: Only one MS-MIC-16G can be installed into any MPC.	13.2	13.2	14.1R4, 14.2R3 with Junos Continuity 15.1	13.2	13.2	13.2	13.2	13.2	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 49: MPC/MPC3 Compatibility

MIC Name	MPC3E	MPC3E NG	MPC3E NG Q
MIC-3D-8OC3-2OC12-ATM (ATM MIC with SFP)	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-20GE-SFP (Gigabit Ethernet MIC with SFP)	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 49: MPC/MPC3 Compatibility (*continued*)

MIC Name	MPC3E	MPC3E NG	MPC3E NG Q
MIC-3D-20GE-SFP-E <i>(Gigabit Ethernet MIC with SFP (E))</i>	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-1X100GE-CFP <i>(100-Gigabit Ethernet MIC with CFP)</i>	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-2XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4XGE-XFP <i>(10-Gigabit Ethernet MICs with XFP)</i>	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-10XGE-SFP+ <i>(10-Gigabit Ethernet MIC with SFP+ (10 Ports))</i>	12.3	14.1R4, 14.2 R3 and Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-2X40GE-QSFP+ <i>(40-Gigabit Ethernet MIC with QSFP+)</i>	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-1X100GE-CXP <i>(100-Gigabit Ethernet MIC with CXP)</i>	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-100G-DWDM <i>(100-Gigabit DWDM OTN MIC with CFP2-ACO)</i>	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1
MIC-3D-4OC3OC12-10C48 MIC-3D-8OC3OC12-4OC48 <i>(SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	13.3	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-10C192-XFP <i>(SONET/SDH OC192/STM64 MIC with XFP)</i>	13.3	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 49: MPC/MPC3 Compatibility (continued)

MIC Name	MPC3E	MPC3E NG	MPC3E NG Q
MIC-3D-4COC3-1COC12-CE <i>(Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP)</i>	—	—	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-16CHE1-T1-CE <i>(Channelized E1/T1 Circuit Emulation MIC)</i>	—	15.1 with flexible queuing option	15.1
MS-MIC-16G <i>(Multiservices MIC)</i>	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
<p>NOTE: On MPC3E, the installation of the Multiservices MIC (MS-MIC-16G) with MIC3-3D-2X40GE-QSFPP, MIC3-3D-10XGE-SFPP, or MIC3-3D-1X100GE-CFP does not meet the NEBS criteria.</p> <p>NOTE: Only one MS-MIC-16G can be installed into any MPC.</p>			
MIC-3D-40GE-TX <i>Tri-Rate MIC</i>	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 <i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G <i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	—	15.1 with flexible queuing option	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B <i>DS3/E3 MIC</i>	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
<p>NOTE: You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.</p>			

Table 50: MIC/MPC6 Compatibility

MIC Name	MPC6E
MIC6-10G <i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	13.3R2

Table 50: MIC/MPC6 Compatibility (*continued*)

MIC Name	MPC6E
MIC6-10G-OTN <i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	13.3R3
MIC6-100G-CXP <i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	13.3R2
MIC6-100G-CFP2 <i>100-Gigabit Ethernet MIC with CFP2</i>	13.3R3

Table 51: MIC/MPC8 Compatibility

MIC Name	MPC8E
MIC-MRATE <i>MIC MRATE</i>	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later

Table 52: MIC/MPC9 Compatibility

MIC Name	MPC9E
MIC-MRATE <i>MIC MRATE</i>	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later

Table 53: MIC/MPC10003 Compatibility

MIC Name	MPC10003
Multi-Rate Ethernet MIC <i>Multi-Rate Ethernet MIC</i>	17.3

- See Also**
- [MICs Supported by MX Series Routers on page 80](#)
 - [Junos Continuity Software User Guide \(Junos OS Release 14.1R4 and Later Releases\)](#)

MX480 Modular Interface Card (MIC) Description

Modular Interface Cards (MICs) install into Modular Port Concentrators (MPCs) and provide the physical connections to various network media types. MICs allow different physical interfaces to be supported on a single line card. You can install MICs of different media types on the MPC as long as the MPC supports those MICs.

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the MPCs encapsulate the packets received.

MICs are hot-removable and hot-insertable. You can install up to two MICs in the slots in each MPC.

- See Also**
- [MICs Supported by MX Series Routers on page 80](#)
 - [MX480 Modular Interface Card \(MIC\) LEDs on page 80](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MIC on page 337](#)

MX480 MIC Port and Interface Numbering

Each port on a MIC corresponds to a unique interface name in the CLI.



NOTE: Fixed configuration MPCs, that is, MPCs with built-in MICs follow the port numbering of DPCs.

In the syntax of an interface name, a hyphen (-) separates the media type from the MPC number (represented as an **FPC** in the CLI). The MPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the logical PIC number. The last number in the interface matches the port number on the MIC. Slashes (/) separate the MPC number from the logical PIC number and port number:

type-fpc/pic/port

- *type*—Media type, which identifies the network device. For example:
 - *ge*—Gigabit Ethernet interface
 - *so*—SONET/SDH interface
 - *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see *Interface Naming Overview*.

- *fpc*—Slot in which the MPC is installed. On the MX480 router, the MPCs are represented in the CLI as **FPC 0** through **FPC 5**.
- *pic*—Logical PIC on the MIC, numbered 0 or 1 when installed in slot 0, and 2 or 3 when installed in slot 1. The number of logical PICs varies depending on the type of MIC. For example, a:
 - 20-port Gigabit Ethernet MIC has two logical PICs, numbered 0 and 1 when installed in slot 0, or 2 and 3 when installed in slot 1.

- 4-port 10-Gigabit Ethernet MIC has two logical PICs numbered 0 and 1 when installed in slot 0, or 2 and 3 when installed in slot 1.
- 100-Gigabit Ethernet MIC with CFP has one logical PIC numbered 0 when installed in slot 0, or 2 when installed in slot 1.

For more information on specific MICs, see “MICs Supported by MX Series Routers” on page 80 in the *MX Series Interface Module Reference*.

- *port*—Port number.



NOTE: The MIC number is not included in the interface name.


The MX480 router supports up to six MPCs that install horizontally and are numbered from bottom to top. Each MPC accepts up to two MICs.

Figure 27 on page 78 shows a 20-port Gigabit Ethernet MIC with SFP installed in slot 0 of an MPC in slot 3.




NOTE: The 20-port Gigabit Ethernet MIC with SFP-E has a different port numbering. See *Gigabit Ethernet MIC with SFP (E)*

Figure 27: MX480 MIC Interface Port Mapping

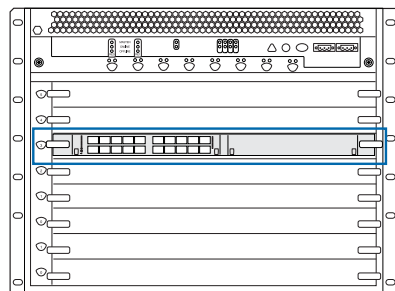

MIC-3D-20GE-SFP

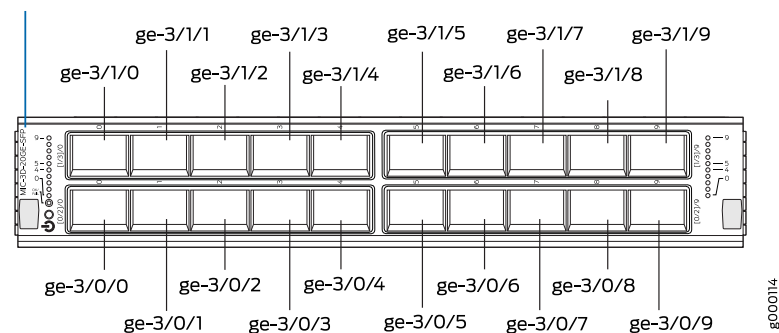

The MIC contains two logical PICs, numbered **PIC 0** through **PIC 1** in the CLI. Each logical PIC contains 10 ports numbered **0** through **9**.

The following sample CLI output displays a 20-port Gigabit Ethernet MIC with SFP — **3D 20x 1GE(LAN) SFP** — installed in slot 0 of an MPC in slot 3.

```
user@host> show chassis hardware
```

```
...
FPC 3          REV 28   750-031090   YH8181          MPC Type 2 3D EQ
  CPU          REV 06   711-030884   YH9437          MPC PMB 2G
  MIC 0        REV 22   750-028392   YD0439          3D 20x 1GE(LAN) SFP
    PIC 0      BUILTIN   BUILTIN        10x 1GE(LAN) SFP
      Xcvr 0    REV 01   740-011613   PCE14D5         SFP-SX
      Xcvr 1    REV 01   740-011782   P9C280T         SFP-SX
      Xcvr 2    REV 01   740-011782   P9C2512         SFP-SX
      Xcvr 3    REV 02   740-011613   AM0951SFF3Z     SFP-SX
      Xcvr 4    REV 02   740-011613   AM0951SFF33     SFP-SX
      Xcvr 5    REV 02   740-011613   AM0951SFF3Y     SFP-SX
      Xcvr 6    REV 02   740-011613   AM0951SFF4B     SFP-SX
      Xcvr 7    REV 01   740-011613   E08H01273       SFP-SX
      Xcvr 8    REV 02   740-011613   AM0951SFFWK     SFP-SX
    PIC 1      BUILTIN   BUILTIN        10x 1GE(LAN) SFP
      Xcvr 0    REV 01   740-011613   E08H00516       SFP-SX
      Xcvr 1    REV 01   740-011613   E08G03648       SFP-SX
      Xcvr 2    REV 01   740-011613   E08H00514       SFP-SX
...
```

The **show chassis hardware** command output shows an MPC (**MPC Type 23DEQ**) installed in slot 3 and is shown as **FPC 3** in the CLI. The MIC's two logical PICs — **10x 1GE(LAN) SFP** — are shown as **PIC 0** and **PIC 1**.

The **show interfaces terse** command output displays the Gigabit Ethernet interfaces, that correspond to the 20 ports located on the MIC.

```
user@host>show interfaces terse ge-3*
```

Interface	Admin	Link	Proto	Local	Remote
ge-3/0/0	up	down			
ge-3/0/1	up	down			
ge-3/0/2	up	down			
ge-3/0/3	up	up			
ge-3/0/4	up	up			
ge-3/0/5	up	up			
ge-3/0/6	up	up			
ge-3/0/7	up	up			
ge-3/0/8	up	up			
ge-3/0/9	up	down			
ge-3/1/0	up	up			
ge-3/1/1	up	up			
ge-3/1/2	up	up			
ge-3/1/3	up	down			
ge-3/1/4	up	down			
ge-3/1/5	up	down			
ge-3/1/6	up	down			
ge-3/1/7	up	down			
ge-3/1/8	up	down			
ge-3/1/9	up	down			

- See Also**
- [MX480 Router Hardware and CLI Terminology Mapping on page 12](#)

MX480 Modular Interface Card (MIC) LEDs

Each MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the [MX Series Interface Module Reference](#).

- See Also**
- [MICs Supported by MX Series Routers on page 80](#)
 - [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MIC on page 337](#)

MICs Supported by MX Series Routers

The following tables list the first supported Junos OS release for the MX Series.

- [Table 54 on page 80](#) lists the first supported Junos OS release for MICs on MX240, MX480, MX960, and MX2008 routers.
- [Table 55 on page 82](#) lists the first supported Junos OS release for MICs on MX2010 and MX2020 routers.
- [Table 56 on page 84](#) list the first supported Junos OS release for MICs on MX5, MX10, and MX40 routers.
- [Table 57 on page 86](#) lists the first supported Junos OS release for MICs on MX80 and MX104 routers.
- [Table 58 on page 87](#) lists the first supported Junos OS release for MICs on MX10003 router.

Table 54: MICs Supported by MX240, MX480, MX960 and MX2008 Routers

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	15.1F7
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	15.1F7
Circuit Emulation				

Table 54: MICs Supported by MX240, MX480, MX960 and MX2008 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	12.3	15.1F7
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.1	15.1F7
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	15.1F7
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	10.2	15.1F7
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	10.1	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFPP	10	12.3	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	-	15.1F7
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	-	15.1F7
40-Gigabit Ethernet				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFP	2	12.2	15.1F7
100-Gigabit Ethernet				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	1	12.1	15.1F7
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.2	15.1F7
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	-	15.1F7
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	-	15.1F7
100-Gigabit DWDM OTN				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F7

Table 54: MICs Supported by MX240, MX480, MX960 and MX2008 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
Multi-Rate				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2	15.1F7
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	15.1F7
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	15.1F7
<i>MIC MRATE (12-Port Multi-Rate MIC with QSFP+)</i>	MIC-MRATE	12	-	15.1F7
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	10.2	15.1F7
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	15.1F7
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	15.1F7

Table 55: MICs Supported by MX2010 and MX2020 Routers

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.3	12.3
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	12.3	12.3
Circuit Emulation				

Table 55: MICs Supported by MX2010 and MX2020 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	–	–
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	12.3	12.3
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	13.3
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	12.3	12.3
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFP+	10	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	13.3R2	13.3R2
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	13.3R3	13.3R3
40-Gigabit Ethernet				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFP+	2	12.3	12.3
100-Gigabit Ethernet				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	13.3R2	13.3R2
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	13.3R3	13.3R3
100-Gigabit DWDM OTN				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F5 15.1F6 17.1R1
Multi-Rate				

Table 55: MICs Supported by MX2010 and MX2020 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	12.3	12.3
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	12.3	12.3
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.3	12.3
<i>MIC MRATE (12-Port Multi-Rate MIC with QSFP+)</i>	MIC-MRATE	12	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later 	<ul style="list-style-type: none"> • 15.1F5 with Junos Continuity • 16.1R1 and later
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	12.3	12.3
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	13.2
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.3	12.3

Table 56: MICs Supported by MX5, MX10, and MX40 Routers

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
ATM					
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	12.1	12.1
DS3/E3					
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	11.4	11.4
Circuit Emulation					
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2	13.2R2

Table 56: MICs Supported by MX5, MX10, and MX40 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1-T1-CE-H	16	–	–	–
Gigabit Ethernet					
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	11.2R4	11.2R4	11.2R4
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	–	–	–
10-Gigabit Ethernet					
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	11.2R4	11.2R4	11.2R4
Multi-Rate					
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2R4	11.2R4	11.2R4
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2R4	11.2R4	11.2R4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	11.4	11.4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	11.4	11.4
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	12.2	12.2
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)</i>	MIC-4COC3-1COC12-CE-H	–	–	–	–
Tri-Rate					
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	–	11.2R4	11.2R4
Services					
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2 Rear slot only.	13.2 Rear slot only.	13.2 Rear slot only.

Table 56: MICs Supported by MX5, MX10, and MX40 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
SONET/SDH					
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	12.2	12.2

Table 57: MICs Supported by MX80 and MX104 Routers

MIC Name	MIC Model Number	Ports	MX80	MX104
ATM				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	13.3
DS3/E3				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	13.3
Circuit Emulation				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1-T1-CE-H	16	–	13.2R2
Gigabit Ethernet				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.2	13.2R2
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	–	13.2R2
10-Gigabit Ethernet				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	10.2	13.2R2
Multi-Rate				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	11.2	13.3
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	11.2	13.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	11.4	13.3

Table 57: MICs Supported by MX80 and MX104 Routers (*continued*)

MIC Name	MIC Model Number	Ports	MX80	MX104
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	11.4	13.3
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	13.2R2
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)</i>	MIC-4COC3-1COC12-CE-H	-	-	13.2R2
Tri-Rate				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	10.2	13.2R2
Services				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	13.3R2
			Rear slot only. Supported on the modular MX80 and fixed MX80-48T	
SONET/SDH				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.2	13.3

Table 58: MICs Supported by MX10003 Router

MIC Name	MIC Model Number	Ports	MX10003
Multi-Rate			
<i>Multi-Rate Ethernet MIC</i>	JNP-MIC1	12	17.3
<i>Multi-Rate Ethernet MIC</i>	JNP-MIC1-MACSEC	12	17.3

- See Also**
- [MX Series MIC Overview](#)
 - [MIC/MPC Compatibility on page 69](#)

MX480 Modular Port Concentrator (MPC) Description

Modular Port Concentrators (MPCs) provide packet forwarding services. The MPCs are inserted into a slot in a router. Modular Interface Cards (MICs) provide the physical interfaces and install into the MPCs. You can install up to two MICs of different media types on the same MPC as long as the MPC supports those MICs.

A specialized fixed configuration MPC provides higher port density over MICs and combines packet forwarding and Ethernet interfaces onto a single line card. The fixed configuration MPC is inserted into a slot in a router and contains no slots for MICs.

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the MPCs encapsulate the packets received. Each MPC is equipped with up to four Junos Trio chipsets, which perform control functions tailored to the MPC's media type. The MPCs interface with the power supplies and Switch Control Boards (SCBs). You must install redundant SCBs to support full line-rate.

The MX480 router supports up to six MPCs. You must install a high-capacity fan tray to use an MPC. For power requirements, see ["Calculating Power Requirements for MX480 Routers" on page 149](#).

The router has six dedicated line card slots for DPCs, MPCs, or FPCs that are numbered 0 through 5 bottom to top. An MPC can be installed in any slot on the router that supports MPCs. You can install any combination of line card types in the router.

When a slot is not occupied by an MPC or other line card, you must insert a blank DPC panel to fill the empty slot and ensure proper cooling of the system.

MPCs are hot-removable and hot-insertable. When you install an MPC in an operating router, the Routing Engine downloads the MPC software, the MPC runs its diagnostics, and the Packet Forwarding Engines housed on the MPC are enabled. Forwarding on other MPCs continues uninterrupted during this process.

[Figure 29 on page 89](#) shows a typical MPC supported on the MX480 router. For more information about MPCs, see the [MX Series Interface Module Reference](#).

Figure 28: Typical MPC Supported on the MX Series Router


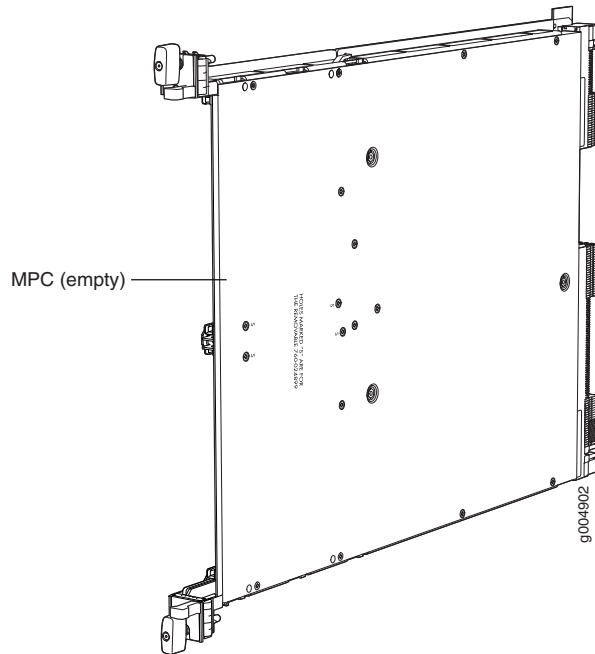


Figure 29: MPC Installed Horizontally in the MX480 Router

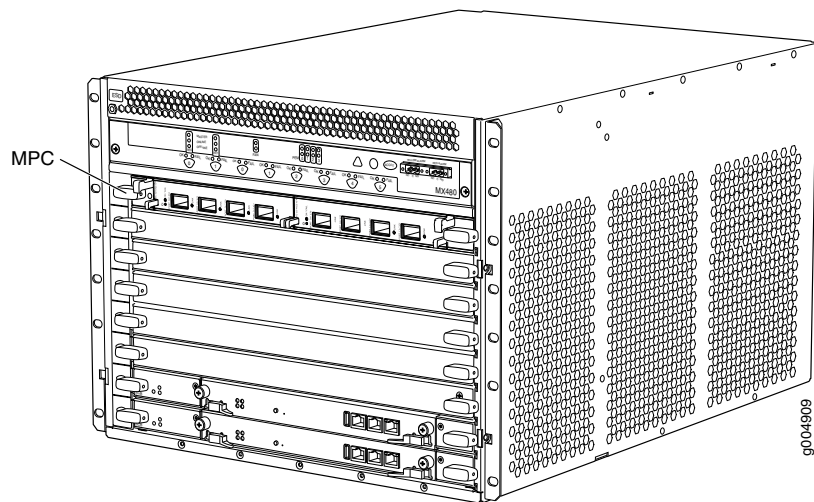

MPC Components

Each MPC consists of the following components:

- MPC card carrier, which includes two MIC slots (excludes the fixed configuration MPC).
- Fabric interfaces.
- Two Gigabit Ethernet interfaces that allow control information, route information, and statistics to be sent between the Routing Engine and the CPU on the MPCs.
- Two interfaces from the SCBs that enable the MPCs to be powered on and controlled.

- Physical MPC connectors.
- Up to four Junos Trio chipsets, which perform control functions tailored to the MPC's media type.
- Midplane connectors and power circuitry.
- Processor subsystem, which includes a 1.5-GHz CPU, system controller, and 1 GB of SDRAM.
- Online button which takes the MPC online or offline when pressed.
- **OK/Fail** LED on the MPC faceplate. For more information about LEDs on the MPC faceplate, see the [MX Series Interface Module Reference](#).

Two LEDs, located on the craft interface above the MPC, display the status of the line cards and are labeled **OK** and **FAIL**.

- See Also**
- [MPCs Supported by MX Series Routers on page 90](#)
 - [MX480 Modular Port Concentrator \(MPC\) LEDs on page 90](#)
 - [MX480 Field-Replaceable Units \(FRUs\) on page 247](#)
 - [Replacing an MX480 MPC on page 345](#)

MX480 Modular Port Concentrator (MPC) LEDs

Two LEDs, located on the craft interface above the MPC, display the status of the line cards and are labeled **OK** and **FAIL**. For more information about the line card LEDs on the craft interface, see “[DPC and MPC LEDs on the MX480 Craft Interface](#)” on page 17.

Each MPC also has LEDs located on the faceplate. For more information about LEDs on the MPC faceplate, see the “LEDs” section for each MPC in the [MX Series Interface Module Reference](#).

- See Also**
- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
 - [Maintaining MX480 MPCs on page 431](#)
 - [Troubleshooting the MX480 MPCs on page 447](#)
 - [Replacing an MX480 MPC on page 345](#)

MPCs Supported by MX Series Routers

[Table 59 on page 91](#) lists the MPCs and their first supported Junos OS release on MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 routers.

Table 59: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers
Fixed Configuration MPCs						
<i>16x10GE MPC</i>	MPC-3D-16XGE-SFP	10.0R2	15.1F7	12.3	12.3	–
<i>Multiservices MPC</i>	MS-MPC	13.2R4	15.1F7	15.1	15.1	–
<i>32x10GE MPC4E</i>	MPC4E-3D-32XGE-SFP	12.3R2	15.1F7	12.3R2	12.3R2	–
<i>2x100GE + 8x10GE MPC4E</i>	MPC4E-3D-2CGE-8XGE	12.3R2	15.1F7	12.3R2	12.3R2	–
<i>6x40GE + 24x10GE MPC5E</i>	MPC5E-3D-6CGE-24XGE	13.3R2	15.1F7	13.3R2	13.3R2	–
<i>6x40GE + 24x10GE MPC5EQ</i>	MPC5EQ-3D-6CGE-24XGE	13.3R2	15.1F7	13.3R2	13.3R2	–
<i>2x100GE + 4x10GE MPC5E</i>	MPC5E-3D-2CGE-4XGE	13.3R3	15.1F7	13.3R3	13.3R3	–
<i>2x100GE + 4x10GE MPC5EQ</i>	MPC5EQ-3D-2CGE-4XGE	13.3R3	15.1F7	13.3R3	13.3R3	–
<i>MPC7E (Multi-Rate)</i>	MPC7E-MR	<ul style="list-style-type: none"> 15.1F4 with Junos Continuity 16.1R1 and later 	15.1F7	<ul style="list-style-type: none"> 15.1F4 with Junos Continuity 16.1R1 and later 	<ul style="list-style-type: none"> 15.1F4 with Junos Continuity 16.1R1 and later 	–
<i>MPC7E 10G</i>	MPC7E-10G	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	15.1F7	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	–
MPCs						
<i>MPC1</i>	MX-MPC3D	10.2	15.1F7	12.3	12.3	–

Table 59: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers (*continued*)

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers
MPC1E	MX-MPC1E3D	11.2R4	15.1F7	12.3	12.3	–
MPC1Q	MX-MPC1DQ	10.2	15.1F7	12.3	12.3	–
MPC1EQ	MX-MPC1DQ	11.2R4	15.1F7	12.3	12.3	–
MPC2	MX-MPC23D	10.1	15.1F7	12.3	12.3	–
MPC2E	MX-MPC2E3D	11.2R4	15.1F7	12.3	12.3	–
MPC2Q	MX-MPC2DQ	10.1	15.1F7	12.3	12.3	–
MPC2EQ	MX-MPC2DQ	11.2R4	15.1F7	12.3	12.3	–
MPC2EQ	MX-MPC2EQ	10.1	15.1F7	12.3	12.3	–
MPC2EQ	MX-MPC2EQ	11.2R4	15.1F7	12.3	12.3	–
MPC2EP	MX-MPC2EP	12.2	15.1F7	12.3	12.3	–
MPC2ENG	MX-MPC2ENG	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–
MPC2ENGQ	MX-MPC2ENGQ	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–
MPC3E	MX-MPC3E3D	12.1	15.1F7	12.3	12.3	–
MPC3ENG	MX-MPC3ENG	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–
MPC3ENGQ	MX-MPC3ENGQ	14.1R4, 14.2R3 and Junos Continuity 15.1	15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1	–

Table 59: MPCs Supported by MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 Routers (*continued*)

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers	First Junos OS Release on MX10003 Routers
MPC6E	MX2-MPC6E	–	15.1F7	13.3R2	13.3R2	–
MPC8E	MX2-MPC8E	–	15.1F7	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	–
MPC9E	MX2-MPC9E	–	15.1F7	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	<ul style="list-style-type: none"> 15.1F5 with Junos Continuity 16.1R1 and later 	–
MX10003 MPC (Multi-Rate)	MX003-MPC03	–	–	–	–	17.3


- See Also**
- [MX Series MPC Overview](#)
 - [MIC/MPC Compatibility on page 69](#)
 - [MX Series MIC Overview](#)
 - [MICs Supported by MX Series Routers on page 80](#)
 - [Junos Continuity Software Overview](#)
 - [Pathfinder: Hardware Supported by Junos Continuity Software](#)

MX480 Application Services Modular Line Card Description

The Application Services Modular Line Card (AS MLC) is an X86-based card for MX960, MX480, and MX240 routers to deliver integrated application service solutions. The first application that network operators can take advantage of is the Junos Content Encore system, a high-throughput, solid state storage platform for media rich content delivery. Additionally, the AS MLC can serve as the platform for Juniper Networks JunosV App Engine, powering a host of network applications directly embedded into your MX Series 3D Universal Edge Routers.

The AS MLC is modular and decouples CPU and storage in individual field-upgradeable units. The AS MLCs are designed to enable application throughput up to 50 Gbps and a storage capacity of 400 gigabytes (GB) of NAND Flash.

Figure 30: Application Services Modular Line Card (AS MLC)

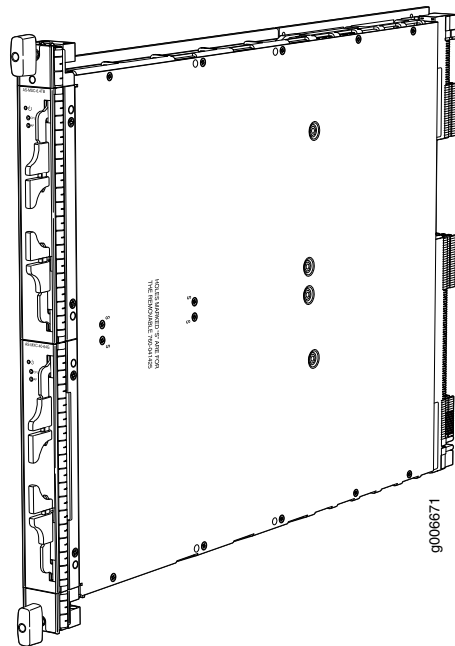

MX480 AS MLC Function

The AS MLC provides modular processing and modular storage. Installed on the AS MLC, the Junos Content Encore system operates as a caching application, in either HTTP reverse proxy mode or HTTP transparent proxy mode, to manage client requests for content and the distribution of the content to clients from origin servers. In the future, the AS MLC will run other Juniper Networks router services and applications, and serve as a virtualized platform for third-party applications. The AS MLC provides Ethernet switching and high-speed fabric interface to MX routers. Graceful Routing Engine switchover is also supported on the AS MLC.

Integrated with application forwarding on MX Series routers, the AS MLC provides increased service flexibility with reduced power and space requirements for the network infrastructure.

AS MLC Components

Each AS MLC consists of the following components:

- AS MLC Modular Carrier Card (AS MCC), which fits horizontally in front of the MX480 router, includes two slots for the Application Services Modular Storage Card (AS MSC) and Application Services Modular Processing Card (AS MXC)
- AS MXC with 64 GB RAM for processing
- AS MSC with 400 GB of NAND Flash capacity for modular storage



NOTE: The AS MCC, AS MXC, and AS MSC are hot-removable and hot-insertable.

- Switch fabric interfaces to the chassis
- XM ASIC chip, which owns and manages the packet data memory built from external DDR3 memory chips, the fabric queuing system, a portion of the WAN queuing system, and the host queuing system
- LU ASIC chip, which performs all functions relating to header processing including input processing, route lookup, classification, filtering, policing, accounting, encapsulation, and statistics
- Midplane connectors and power circuitry
- Processor Mezzanine Board (PMB), which contains the host processor and supporting peripherals.
- LED on the AS MCC, which displays the status of the AS MLC

MX480 SCB, Power Supply, and Cooling System Requirements for AS MLC

Each MX480 router requires specific SCB, power supply, and cooling system models to run the AS MLC:

- SCB—Enhanced MX Switch Control Board (SCBE-MX). See [“MX480 SCBE Description” on page 110](#) for details
- Power supply:
 - 2520W AC power supply—Model PWR-MX480-2520-AC
 - 2400W DC power supply—Model PWR-MX480-2400-DC
- Power requirement for AS MLC:
 - AS MCC—191W
 - AS MXC—259W
 - AS MSC—50W
- Cooling system—Required fan and fan tray models:
 - Fans:
 - For AC power supply: PWR-FAN-MX480-AC-HC-U and PWR-MX480-2520-AC-S
 - For DC power supply: PWR-FAN-MX480-DC-HC-U and PWR-MX480-2520-DC-S
 - Fan tray—FFANTRAY-MX480-HC

- See Also**
- [Replacing an MX480 AS MLC on page 355](#)
 - [Replacing an MX480 AS MSC on page 359](#)
 - [Replacing an MX480 AS MXC on page 363](#)

MX480 Application Services Modular Storage Card Description

Application Services Modular Storage Card (AS MSC) is a NAND Flash--based card that is inserted into the upper slot of the Application Services Modular Line Card (AS MLC). The AS MSC (see [Figure 31 on page 96](#)) serves as the second tier caching storage for platforms such as the Junos Content Encore system. This card is equivalent to a PIC or a Modular Interface Card (MIC) and provides a maximum of 3.6 Gbps read and 2 Gbps of write memory.


The AS MSC has the following features:

- 400 GB NAND Flash memory
- Up to 48K of write cycle
- Multilevel cell (MLC) NAND memory support
- Best-in-class NAND controller for maximum performance and reliability

AS MSCs are hot-removable and hot-insertable. One AS MSC can be installed in the top slot of each AS MLC. Each AS MSC has these components:

- SATA-3 controller—An eight-port, 6 Gbps SAS/SATA controller.
- NAND Flash controller— NAND Flash and NAND Flash controller are used in an AS MSC.
- Control plane—Inter-integrated circuit control plane that allows Peripheral Component Interconnect Express (PCIe) control.
- LEDs—Two LEDs display the status of the AS MSC and storage.
- Online/offline button—To power on or power off the AS MSC.

Figure 31: Application Services Modular Storage Card

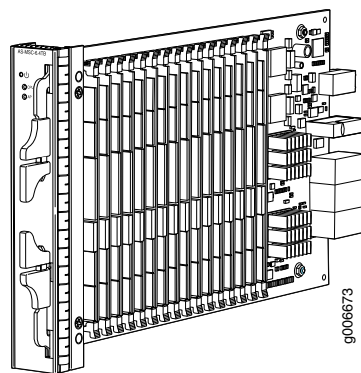

- See Also**
- [MX480 AS MSC LEDs on page 97](#)
 - [Replacing an MX480 AS MSC on page 359](#)


MX480 Application Services Modular Processing Card Description

The Application Services Modular Processing Card (AS MXC) is a pluggable X86-based card that can be inserted into the lower slot of the Application Services Modular Line Card (AS MLC). The AS MXC serves as the processing card for the Junos Content Encore system and contains the two X86, Intel 8-core processors with interface ability greater than 80 Gbps. The AS MXC (see [Figure 32 on page 97](#)) is equivalent to a PIC or MIC (Modular Interface Card).

AS MXCs are hot-removable and hot-insertable. One MXC can be installed in the lower slot of each AS MLC. Each MXC has these components:

- Two 8-core Intel processors—Contains eight execution cores with Ring Interconnect architecture. Each core supports two threads, up to 16 threads per socket.
- 64 GB DRAM—On DIMM sockets.
- LEDs—Two LEDs on the faceplate display the CPU and application status.

Figure 32: Application Services Modular Processing Card (AS MXC)

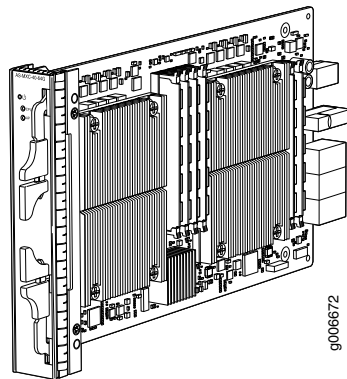

- See Also**
- [MX480 AS MXC LEDs on page 98](#)
 - [Replacing an MX480 AS MXC on page 363](#)

MX480 AS MSC LEDs

Two LEDs (**CPU** and **AP**) indicate the status of the AS MSC and are located on the AS MSC. [Table 60 on page 97](#) describes the functions of the AS MSC LEDs.

Table 60: AS MSC LEDs

Label	Color	State	Description
CPU	Green	On steadily	AS MSC operates normally.
	Red	On steadily	AS MSC has an error or has failed.
–	–	Off	AS MSC is offline.

Table 60: AS MSC LEDs (*continued*)

Label	Color	State	Description
AP	Green	On steadily	AS MSC storage operation is normal.
	Red	On steadily	AS MSC storage operation has an error.
	–	Off	AS MSC storage operation is not activated.

- See Also**
- [MX480 Application Services Modular Storage Card Description on page 96](#)
 - [Replacing an MX480 AS MSC on page 359](#)

MX480 AS MXC LEDs

Two LEDs (**CPU** and **AP**) indicate the status of the AS MXC and are located on the AS MXC. [Table 61 on page 98](#) describes the functions of the AS MXC LEDs.

Table 61: AS MXC LEDs

Label	Color	State	Description
CPU	Green	On steadily	AS MXC operates normally.
	Red	On steadily	AS MXC has an error or has failed.
	–	Off	AS MXC is offline.
AP	Green	On steadily	AS MXC applications operation is normal.
	Red	On steadily	AS MXC applications operation has an error.
	–	Off	AS MXC applications are not activated.

- See Also**
- [MX480 Application Services Modular Processing Card Description on page 97](#)
 - [Replacing an MX480 AS MXC on page 363](#)

CHAPTER 7

Power System Components and Descriptions

- [MX480 Power System Description on page 99](#)
- [MX480 AC Power Supply Description on page 100](#)
- [MX480 AC Power Supply LEDs on page 102](#)
- [MX480 DC Power Supply Description on page 102](#)
- [MX480 DC Power Supply LEDs on page 104](#)

MX480 Power System Description

The MX480 router uses either AC or DC power supplies. The MX480 router is configurable with two, three, or four AC power supplies or two or four DC power supplies. The power supplies connect to the midplane, which distributes the different output voltages produced by the power supplies to the router components, depending on their voltage requirements. Each power supply is cooled by its own internal cooling system.



CAUTION: The router cannot be powered from AC and DC power supplies simultaneously.

Redundant power supplies are hot-removable and hot-insertable, as described in “[MX480 Field-Replaceable Units \(FRUs\)](#)” on page 247.



CAUTION: When you remove a power supply from a router that uses a nonredundant power supply configuration, the router might shut down depending on your configuration.



NOTE:

Enhanced AC and DC power supplies are an upgrade for the MX480 router, and satisfy power requirements for higher-density DPCs. When upgrading to enhanced power supplies, always upgrade power supplies in adjacent slots.



NOTE: Routers configured with DC power supplies are shipped with a blank panel installed over the power distribution modules. Routers configured with AC power supplies have no blank panel.

Related Documentation

- [MX480 AC Power Supply Description on page 100](#)
- [MX480 DC Power Supply Description on page 102](#)
- [Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies on page 219](#)
- [Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies on page 221](#)
- [Replacing an MX480 AC Power Supply on page 367](#)
- [MX480 Chassis Grounding Specifications on page 127](#)
- [MX480 Router Grounding Cable Lug Specifications](#)

MX480 AC Power Supply Description

Each AC power supply weighs approximately 5.0 lb (2.3 kg) and consists of one AC appliance inlet, an AC input switch, a fan, and LEDs to monitor the status of the power supply. [Figure 33 on page 100](#) shows the power supply. For existing power supplies, each inlet requires a dedicated AC power feed and a dedicated 15 A (250 VAC) circuit breaker.

For high-capacity power supplies, each inlet requires a dedicated AC power feed and a dedicated 16.0 A @ 100 VAC or 16.0 A @ 200 VAC circuit breaker, or as required by local code.

The maximum inrush current for a high-capacity AC power supply is 49A at 264VAC.

Figure 33: AC Power Supply


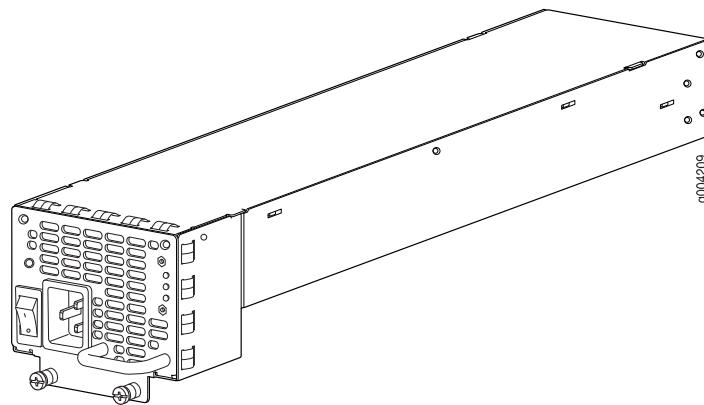


Figure 34: High-Capacity AC Power Supply



For more information about the AC power specifications, see the [MX480 3D Universal Edge Router Hardware Guide](#).

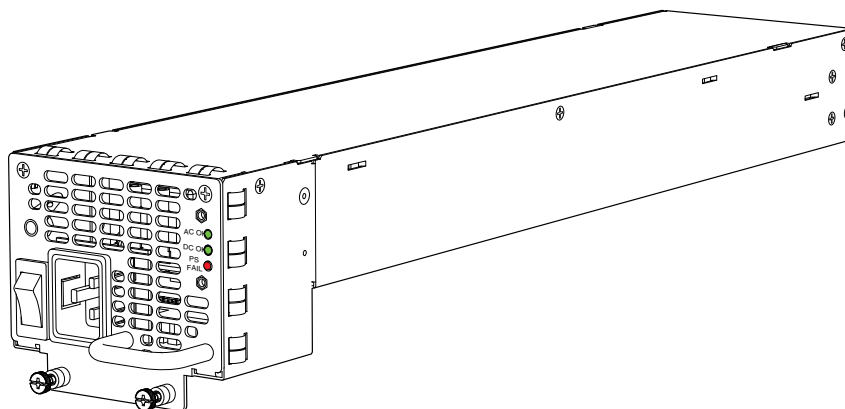

WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.

AC Power Supply Configurations

The MX480 high-capacity and normal-capacity power supplies each support either of the following AC power configurations:

- In the low-line (110 V) AC power configuration, the MX480 router contains three or four AC power supplies (see [Figure 33 on page 100](#)), located horizontally at the rear of the chassis in slots **PEM0** through **PEM3** (left to right). Each AC power supply provides power to all components in the router. When three power supplies are present, they share power almost equally within a fully populated system. Four AC power supplies provide full power redundancy. If one power supply fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Three power supplies provide the maximum configuration with full power for as long as the router is operational. The low-line configuration requires three power supplies and the fourth power supply provides redundancy. With high-capacity power supplies, you must have a minimum of three power supplies installed in the router.
- In the high-line (220 V) AC power configuration, the MX480 router contains two or four AC power supplies (see [Figure 33 on page 100](#)), located horizontally at the rear of the chassis in slots **PEM0** through **PEM3** (left to right). In a high-line AC power configuration, each AC power supply provides power to all components in the router. When two or more power supplies are present, they share power almost equally within a fully populated system. Four AC power supplies provide full power redundancy. If one power supply fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Two power supplies provide the maximum

configuration with full power for as long as the router is operational. In the two-PEM high-line configuration, slots **PEM0** and **PEM1** or **PEM2** and **PEM3** are used. The high-line configuration requires two power supplies, with the third and fourth providing redundancy. With high-capacity power supplies, you must have a minimum of two power supplies installed in the router.

- Related Documentation**
- [MX480 Chassis Description on page 9](#)
 - [MX480 Power System Description on page 99](#)
 - [MX480 AC Power Supply LEDs on page 102](#)

MX480 AC Power Supply LEDs

Each AC power supply faceplate contains three LEDs that indicate the status of the power supply (see [Table 62 on page 102](#)). The power supply status is also reflected in two LEDs on the craft interface. In addition, a power supply failure triggers the red alarm LED on the craft interface.

Table 62: AC Power Supply LEDs

Label	Color	State	Description
AC OK	Yellow	Off	AC power input voltage is below 78 VAC.
	Green	On	AC power input voltage is within 78–264 VAC.
DC OK	Green	Off	DC power outputs generated by the power supply are not within the normal operating ranges.
		On	DC power outputs generated by the power supply are within the normal operating ranges.
PS FAIL	Red	Off	Power supply is functioning normally.
		On	Power supply is not functioning normally and its output voltage is out of regulation limits. Check AC OK and DC OK LEDs for more information.

- Related Documentation**
- [MX480 Chassis Description on page 9](#)
 - [MX480 Power System Description on page 99](#)
 - [MX480 AC Power Supply Description on page 100](#)

MX480 DC Power Supply Description

Each DC power supply weighs approximately 3.8 lb (1.7 kg) and consists of one DC input (–48 VDC and return), one 40 A (–48 VDC) circuit breaker, a fan, and LEDs to monitor the status of the power supply. [Figure 35 on page 103](#) shows the power supply. Each DC

power supply has a single DC input (-48 VDC and return) that requires a dedicated circuit breaker.

For high capacity power supplies, we recommend that you provision 60 A or 70 A per feed, depending on the selected DIP switch setting.

Figure 35: DC Power Supply


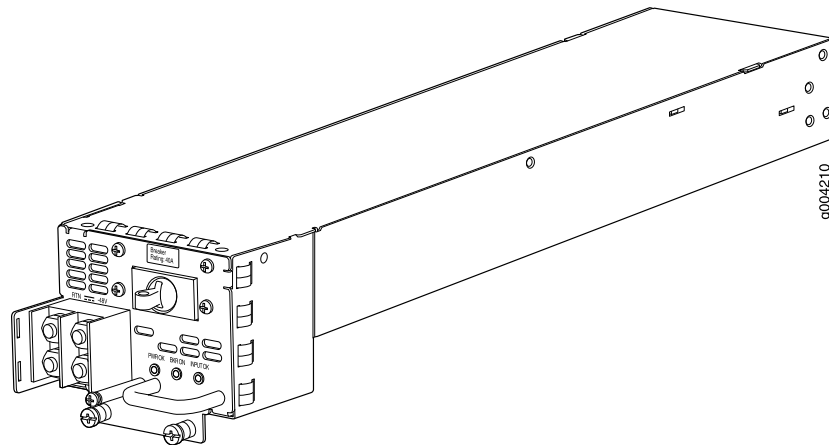


Figure 36: High-Capacity DC Power Supply

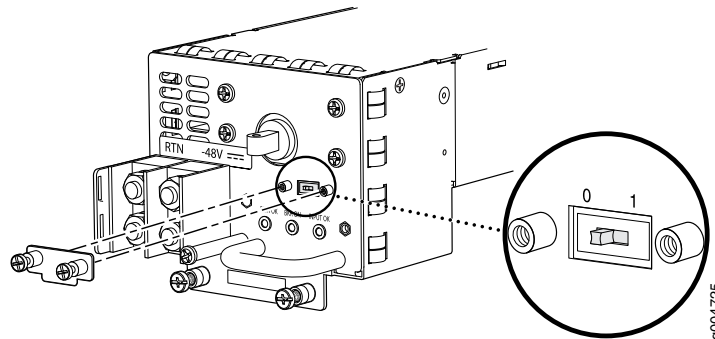

DC Power Supply Configurations

In the DC power configuration, the MX480 router contains either two or four DC power supplies (see [Figure 35 on page 103](#)) located at the rear of the chassis in slots **PEM0** through **PEM3** (left to right). You can upgrade your DC power system from two to four power supplies.

Four power supplies provide full redundancy. If a DC power supply in a redundant configuration is removed or fails, its redundant power supply takes over without interruption. The DC power supply in **PEM2** serves as redundant to the DC power supply in slot **PEM0**, and the DC power supply in **PEM3** serves as redundant to the DC power supply in slot **PEM1**. If only two DC power supplies are installed, they must be installed in slots **PEM0** and **PEM1** or in slots **PEM2** and **PEM3**.

[Table 63 on page 104](#) shows the components that are powered by each DC power supply slot. It applies to existing and high-capacity power supplies.

Table 63: Power Supply Redundancy and Power Distribution

DC Power Supply Slot	Power Supply Provides Power to the Following Components
PEM0	Fan tray, DPC slots 0 and 1, and SCB slots 0 and 1
PEM1	Fan tray and DPC slots 2 through 5
PEM2	Fan tray, DPC slots 0 and 1, and SCB slots 0 and 1
PEM3	Fan tray and DPC slots 2 through 5

Related Documentation

- [Power Supply LEDs on the MX480 Craft Interface on page 17](#)
- [MX480 Power System Description on page 99](#)
- [MX480 AC Power Supply Description on page 100](#)
- [MX480 DC Power Supply LEDs on page 104](#)
- [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)

MX480 DC Power Supply LEDs

Each DC power supply faceplate contains three LEDs that indicate the status of the power supply (see [Table 64 on page 104](#)). The power supply status is also reflected in two LEDs on the craft interface. In addition, a power supply failure triggers the red alarm LED on the craft interface.



NOTE: An SCB must be present for the PWR OK LED to go on.

Table 64: DC Power Supply LEDs

Label	Color	State	Description
PWR OK	Green	Off	Power supply is not functioning normally. Check the INPUT OK LED for more information.

Table 64: DC Power Supply LEDs (*continued*)

Label	Color	State	Description
		On	Power supply is functioning normally.
	Yellow	On	The main output voltage is out of range (lower limit: 37.5 V to 39.5 V; upper limit: 72.5 V to 76 V).
BRKR ON	Green	Off	DC power supply circuit breaker is turned off.
		On	DC power input is present and the DC power supply circuit breaker is turned on.
INPUT OK	Green	Off	DC input to the PEM is not present.
		On	DC input is present and is connected in correct polarity.
	Yellow	On	DC input is present, but not in valid operating range or connected in reverse polarity.

Related Documentation

- [Power Supply LEDs on the MX480 Craft Interface on page 17](#)
- [MX480 Power System Description on page 99](#)
- [MX480 AC Power Supply Description on page 100](#)
- [MX480 DC Power Supply Description on page 102](#)
- [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)

CHAPTER 8

Switch Fabric Components and Descriptions

- [MX480 SCB Description on page 107](#)
- [SCB-MX LEDs on page 109](#)
- [MX480 SCBE Description on page 110](#)
- [MX480 SCBE LEDs on page 111](#)
- [MX480 SCBE2 Description on page 113](#)
- [MX480 SCBE2 LEDs on page 114](#)


MX480 SCB Description

The SCB provides the following functions:

- Powers on and powers off DPCs, FPCs, and MPCs
- Controls clocking, system resets, and booting
- Monitors and controls system functions, including fan speed, board power status, PDM status and control, and the craft interface
- Provides interconnections to all the DPCs, FPCs, and MPCs within the chassis through the switch fabrics integrated into the SCB

The Routing Engine installs directly into a slot on the SCB (see [Figure 37 on page 108](#)).

Figure 37: SCB

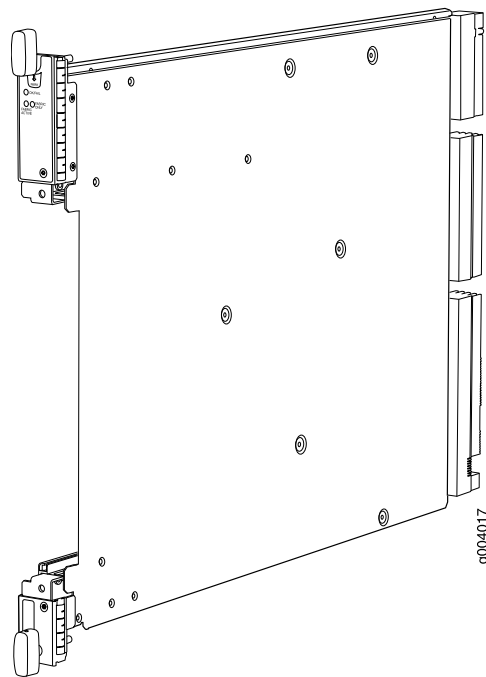

SCB Slots

You can install one or two. The SCBs install horizontally into the front of the chassis in the slots labeled **0** and **1**. If any slots are empty, you must install a blank panel.

SCB Redundancy

If two SCBs are installed, one SCB functions as the master SCB and the other as its backup. If the master fails or is removed, the backup restarts and becomes the master.

SCB Components

Each SCB consists of the following components:

- Chassis management Ethernet switch
- I2C bus logic, used for low-level communication with each component
- Component redundancy circuitry
- Control Board/Routing Engine mastership mechanism
- Gigabit Ethernet switch that is connected to the embedded CPU complex on all components
- Switch fabric—Provides the switching functions for the DPCs, FPCs, and MPCs
- Control field-programmable gate array (FPGA)—Provides the Peripheral Component Interconnect (PCI) interface to the Routing Engine
- 1000Base-T Ethernet controller—Provides a 1-Gbps Ethernet link between the Routing Engines

- Ethernet switch—Provides 1-Gbps link speeds between the Routing Engine and the DPCs, FPCs, and MPCs
- Circuits for chassis management and control
- Power circuits for the Routing Engine and SCB
- LEDs—Provide status

Related Documentation

- [MX480 Host Subsystem Description on page 25](#)
- [MX480 Routing Engine Description on page 27](#)
- [SCB-MX LEDs on page 109](#)

SCB-MX LEDs

FABRIC ACTIVE, **FABRIC ONLY**, and **OK/FAIL** LEDs indicate the status of the SCB-MX. Refer to [Table 65 on page 109](#).

Table 65: SCB-MX LEDs

Label	Color	State	Description
FABRIC ACTIVE	Green	On steadily	Fabric is in active mode.
FABRIC ONLY	Green	On steadily	SCB-MX operates in fabric-only mode.
	–	Off	SCB-MX operates in fabric/control board mode.
OK/FAIL	Green	On steadily	SCB-MX is online.
	Red	On steadily	SCB-MX has failed.
	–	Off	SCB-MX is offline.

Each SCB-MX also has two LEDs on the craft interface that indicate its status. The SCB-MX LEDs, labeled 0 and 1, are located along the bottom of the craft interface. For more information about the SCB-MX LEDs on the craft interface, see [“SCB LEDs on the MX480 Craft Interface” on page 18](#).

Related Documentation

- [MX-Series Switch Control Board \(SBC\) Overview](#)
- [SCBE2-MX Description](#)
- [SCBE2-MX LEDs](#)


MX480 SCBE Description

The MX SCBE serves the carrier Ethernet services router and carrier Ethernet transport markets that require higher-capacity traffic support demanding greater interface density (slot and capacity scale), as well as improved services. The upgraded SCB is supported on MX960, MX480, and MX240 routers. Some key attributes of the MX SCBEs are:

- 160 Gbps/slot bandwidth with redundant fabric support, and improved fabric performance by using the next-generation fabric (XF) chip
- A central clocking module and a centralized clocking architecture that supports clock cleanup and distribution. The Stratum 3 clock module performs clock monitoring, filtering, and holdover in a centralized chassis location
- Full performance with fabric redundancy for higher capacity line cards such as 16x10GE and MPC3

The Routing Engine installs directly into a slot on the MX SCBE (see [Figure 38 on page 110](#)).

Figure 38: MX SCBE

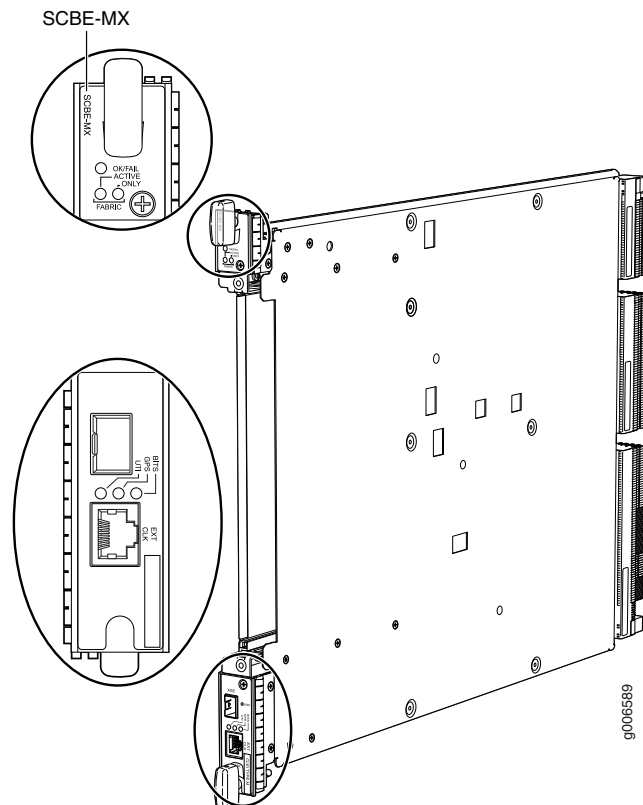

MX SCBE Slots

You can install one or two MX SCBEs. The MX SCBEs install horizontally into the front of the chassis in the slots labeled **0** and **1**. If any slots are empty, you must install a blank panel.

MX SCBE Redundancy

If two MX SCBEs are installed, one MX SCBE functions as the master MX SCBE and the other as its backup. If the master fails or is removed, the backup restarts and becomes the master.

MX SCBE Components

Each MX SCBE consists of the following components:

- I2C bus logic, used for low-level communication with each component
- Component redundancy circuitry
- Control Board/Routing Engine mastership mechanism
- Gigabit Ethernet switch that is connected to the embedded CPU complex on all components
- External clock interface—Allows BITS or GPS clock source input to the centralized timing circuit, or allows centralized timing to be output to BITS or GPS
- Switch fabric—Provides the switching functions for the DPCs, FPCs, and MPCs
- Control field-programmable gate array (FPGA)—Provides the Peripheral Component Interconnect (PCI) interface to the Routing Engine
- 1000Base-T Ethernet controller—Provides a 1-Gbps Ethernet link between the Routing Engines
- Circuits for chassis management and control
- Power circuits for the Routing Engine and SCBE
- LEDs—Provide status of the SCBE and clocking interface

Related Documentation

- [MX480 SCB Description on page 107](#)
- [MX480 SCBE LEDs on page 111](#)
- [Upgrading an MX480 SCB on page 385](#)

MX480 SCBE LEDs

The **FABRIC ACTIVE**, **FABRIC ONLY**, and **OK/FAIL** LEDs indicate the status of the MX SCBE. The **BITS**, **GPS**, and **UTI** LEDs, located next to the **EXT CLK** port, indicate the status of the respective clocking interface. [Table 66 on page 112](#) describes the functions of the MX SCBE LEDs.

Table 66: MX SCBE LEDs

Label	Color	State	Description
FABRIC ACTIVE	Green	On steadily	Fabric is in active mode.
FABRIC ONLY	Green	On steadily	MX SCBE operates in fabric-only mode.
	–	Off	MX SCBE operates in fabric/control board mode.
OK/FAIL	Green	On steadily	MX SCBE is online.
	Red	On steadily	MX SCBE has failed.
	–	Off	MX SCBE is offline.
	Red	On steadily	GPS clocking interface has failed.
	–	Off	GPS clocking interface is offline.
NOTE: The LEDs BITS , GPS , and UTI are not currently supported.			
BITS	Green	On steadily	Building-integrated timing supply (BITS) clocking interface is active.
	Red	On steadily	BITS clocking interface has failed.
	–	Off	BITS clocking interface is offline.
GPS	Green	On steadily	Global positioning system (GPS) clocking interface is active.
	Red	On steadily	GPS clocking interface has failed.
	–	Off	GPS clocking interface is offline.
UTI	Green	On steadily	Universal Timing Interface (UTI) clocking interface is active.
	Red	On steadily	UTI clocking interface has failed.
	–	Off	UTI clocking interface is offline.

Related Documentation

- [MX480 SCBE Description on page 110](#)
- [MX480 Host Subsystem Description on page 25](#)
- [Upgrading an MX480 SCB on page 385](#)


MX480 SCBE2 Description

The Switch Control Board (SCBE2) serves the carrier Ethernet services router and carrier Ethernet transport markets that require higher-capacity traffic support, demanding greater interface density (slot and capacity scale) as well as improved services. The upgraded SCB is supported on MX960, MX480, and MX240 routers. Some key attributes of the SCBE2 are:

- A bandwidth of up to 340 Gbps per slot with redundant fabric support and 480 Gbps per slot without redundancy, and improved fabric performance on account of using the next-generation fabric (XF2) chip.
- A central clocking module and a centralized clocking architecture that support clock cleanup and distribution. The Stratum 3 clock module performs clock monitoring, filtering, and holdover at a centralized chassis location.
- Full performance with fabric redundancy for higher-capacity line cards such as MPC4.
- Support for MPC line cards only.
- Two 10-Gigabit Ethernet SFP+ ports. SFP+ port 0 can be used to connect an external device as a Route Reflector. SFP+ port 1 is unused.
- Support for cross-coupling of clock input (which requires an enhanced midplane: CHAS-BP3-MX480-S). You can configure the system such that one SCBE2 supports a GPS interface, and the other SCBE2 supports a BITS interface.

The Routing Engine is installed directly into a slot on the SCBE2 (see [Figure 39 on page 113](#)).

Figure 39: SCBE2

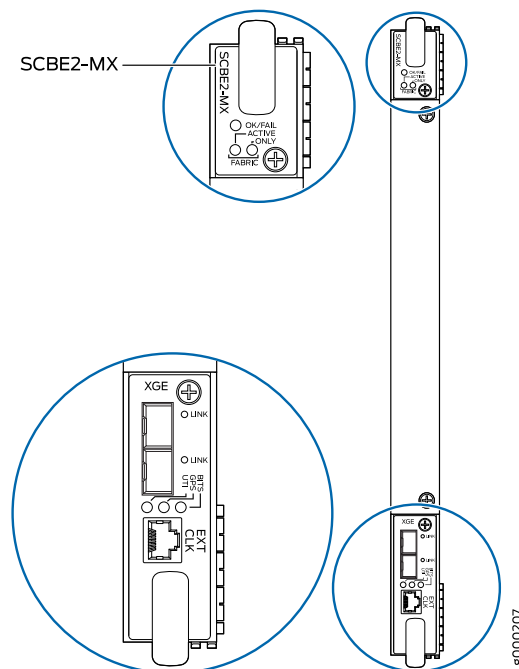

SCBE2 Slots

You can install either one or two SCBE2s. SCBE2s are installed horizontally into the front of the chassis in the slots labeled **0** and **1**. If any slots are empty, you must install a blank panel.

SCBE2 Redundancy

The control boards operate in redundancy fabric mode by default. You can configure the control board to be in redundancy mode or in increased fabric bandwidth mode.

For the MX480 router in redundant fabric mode, four of the fabric planes from the first SCBE2 will be in Active mode, and four from the second SCBE2 will be in Spare mode. Whereas, in an increased fabric bandwidth mode, all the eight fabric planes will be in Active mode.

SCBE2 Components

Each SCBE2 consists of the following components:

- I2C bus logic, used for low-level communication with each component
- Component-redundancy circuitry
- Control Board/Routing Engine mastership mechanism
- Gigabit Ethernet switch that is connected to the embedded CPU complex on all components
- External clock interface—Allows BITS or GPS clock source input to the centralized timing circuit, or allows centralized timing to be output to BITS or GPS
- Switch fabric—Provides switching functions for the MPCs
- Control field-programmable gate array (FPGA)—Provides the Peripheral Component Interconnect (PCI) interface to the Routing Engine
- 1000Base-T Ethernet controller—Provides a 1-Gbps Ethernet link between the Routing Engines
- Circuits for chassis management and control
- Power circuits for the Routing Engine and SCBE2
- LEDs—Provide status of the SCBE2 and clocking interface

Related
Documentation

MX480 SCBE2 LEDs

FABRIC ACTIVE, **FABRIC ONLY**, and **OK/FAIL** LEDs indicate the status of the SCBE2. The **BITS**, **GPS**, and **UTI** LEDs, located next to the **EXT CLK** port, indicate the status of the respective clocking interface. The **LINK** LED located next to the two Ethernet ports,

indicate the status of the respective SFP+ interface. [Table 67 on page 115](#) describes the functions of the SCBE2 LEDs.

Table 67: SCBE2 LEDs

Label	Color	State	Description
FABRIC ACTIVE	Green	On steadily	Fabric is in active mode.
FABRIC ONLY	Green	On steadily	SCBE2 operates in fabric-only mode.
	–	Off	SCBE2 operates in fabric or control-board mode.
OK/FAIL	Green	On steadily	SCBE2 is online.
	Red	On steadily	SCBE2 has failed.
	–	Off	SCBE2 is offline.
BITS	Green	On steadily	Building-integrated timing supply (BITS) clocking interface is active.
	Red	On steadily	BITS clocking interface has failed.
	–	Off	BITS clocking interface is offline.
GPS	Green	On steadily	Global positioning system (GPS) clocking interface is active.
	Red	On steadily	GPS clocking interface has failed.
	–	Off	GPS clocking interface is offline.
UTI	Green	On steadily	Universal Timing Interface (UTI) clocking interface is active.
	Red	On steadily	UTI clocking interface has failed.
	–	Off	UTI clocking interface is offline.
LINK	Green	On steadily	Port is enabled and link is established.
	–	Off	Port is disabled or no link is established.

Related Documentation

PART 2

Site Planning, Preparation, and Specifications

- [Preparation Overview on page 119](#)
- [Transceiver and Cable Specifications on page 131](#)
- [Cable and Pinout Specifications on page 137](#)
- [AC Power Requirements, Specifications, and Guidelines on page 139](#)
- [DC Power Requirements, Specifications, and Guidelines on page 157](#)

CHAPTER 9

Preparation Overview

- [MX480 Router Physical Specifications on page 119](#)
- [MX480 Router Environmental Specifications on page 121](#)
- [MX480 Site Preparation Checklist on page 121](#)
- [MX480 Router Rack Requirements on page 122](#)
- [MX480 Router Clearance Requirements for Airflow and Hardware Maintenance on page 125](#)
- [MX480 Router Cabinet Size and Clearance Requirements on page 126](#)
- [MX480 Router Cabinet Airflow Requirements on page 126](#)
- [MX480 Chassis Grounding Specifications on page 127](#)

MX480 Router Physical Specifications

Table 68 on page 119 summarizes the physical specifications for the router chassis.

Table 68: Physical Specifications

Description	Weight	Width	Depth	Height
Chassis dimensions	Chassis with midplane, fan tray, air filter, and cable management brackets: 65.5 lb (29.7 kg) Maximum configuration: 221.03 lb (100.26 kg)	17.45 in. (44.3 cm)	24.5 in. (62.2 cm) (from front to chassis rear) Total depth (including cable management brackets) 27.75 in. (70.5 cm)	14.0 in. (35.6 cm)
Routing Engine (RE-S-1800)	2.4 lb (1.1 kg)	11 in (27.9 cm)	7.75 in (19.7 cm)	1.25 in (3.2 cm)
Routing Engine (RE-S-X6-64G)	2.69 lb (1.18 kg)	10.7 in (27.18 cm)	7.47 in (18.97 cm)	1.19 in (3.02 cm)
SCB	9.6 lb (4.4 kg) (with Routing Engine installed)	17 in (43.2 cm)	22 in (55.9 cm)	1.25 in (3.2 cm)

Table 68: Physical Specifications (*continued*)

Description	Weight	Width	Depth	Height
SCBE	9.6 lb (4.4 kg) (with Routing Engine installed)	17 in (43.2 cm)	22 in (55.9 cm)	1.25 in (3.2 cm)
SCBE2	9.6 lb (4.4 kg) (with Routing Engine installed)	17 in (43.2 cm)	22 in (55.9 cm)	1.25 in (3.2 cm)
DPC	Maximum up to 14.5 lb (6.6 kg) Blank panel in DPC slot: 9 lb	17 in (43.2 cm)	22 in (55.9 cm)	1.25 in (3.2 cm)
FPC	FPC2: 13 lb (5.9 kg) FPC3: 14 lb (6.5 kg)	17 in (43.2 cm)	22 in (55.9 cm)	2.5 in (6.4 cm)
PIC	2 lb (0.9 kg)	7.75 in (28.3 cm)	11.125 in (19.7 cm)	4.125 in (10.5 cm)
MPC (fixed configuration)	18.35 lb (8.3 kg)	17 in (43.2 cm)	22 in (55.9 cm)	1.25 in (3.2 cm)
MPC (without MICs)	14 lb (6.4 kg)	17 in (43.2 cm)	22 in (55.9 cm)	1.25 in (3.2 cm)
MIC	Maximum up to 1.2 lb (0.54 kg)	6.25 in (15.9 cm)	6.8 in (17.3 cm)	1.25 in (3.2 cm)
Craft interface	1.1 lb (0.5 kg)	21.25 in (54 cm)	8.5 in (21.6 cm)	6.25 in (15.9 cm)
Fan tray	6.8 lb (3.08 kg)	17 in (43.2 cm)	22 in (55.9 cm)	1.5 in (3.8 cm)
Air filter	1.0 lb (0.5 kg)	0.31 in (0.8 cm)	22.23 in (56.5 cm)	10.1 in (25.6 cm)
Cable management brackets	0.3 lb (0.14 kg)	0.25 in (0.6 cm)	4.5 in (11.4 cm)	9.9 in (25.0 cm)
DC power supply	3.8 lb (1.7 kg)	14.5 in (36.8 cm)	4 in (10.2 cm)	1.75 in (4.4 cm)
High-capacity DC power supply	6.2 lb (2.81 kg)	14.5 in (36.8 cm)	4 in (10.2 cm)	1.75 in (4.4 cm)
AC power supply	5.0 lb (2.3 kg)	14.5 in (36.8 cm)	4 in (10.2 cm)	1.75 in (4.4 cm)
High-capacity AC power supply	6.6 lb (2.99 kg)	14.5 in (36.8 cm)	4 in (10.2 cm)	1.75 in (4.4 cm)

- Related Documentation**
- [MX480 Chassis Lifting Guidelines on page 488](#)
 - [MX480 Router Description on page 3](#)
 - [MX480 Chassis Description on page 9](#)

MX480 Router Environmental Specifications

Table 69 on page 121 specifies the environmental specifications required for normal router operation. In addition, the site should be as dust-free as possible.

Table 69: Router Environmental Specifications

Description	Value
Altitude	No performance degradation to 10,000 ft (3048 m)
Relative humidity	Normal operation ensured in relative humidity range of 5% to 90%, noncondensing
Temperature	Normal operation ensured in temperature range of 32°F (0°C) to 104°F (40°C) Nonoperating storage temperature in shipping container: –40°F (–40°C) to 158°F (70°C)
Seismic	Designed to meet Telcordia Technologies Zone 4 earthquake requirements
Maximum thermal output	AC power: 11,322 BTU/hour (3,318 W) DC power: 9,632 BTU/hour (2,823 W) NOTE: These specifications are estimates and subject to change.



NOTE: Install the router only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code, ANSI/NFPA 70.

Related Documentation

- [Tools and Parts Required to Maintain the MX480 Router on page 415](#)
- [In Case of an Electrical Accident](#)

MX480 Site Preparation Checklist

The checklist in Table 70 on page 121 summarizes the tasks you must perform when preparing a site for router installation.

Table 70: Site Preparation Checklist

Item or Task	For More Information	Performed By	Date
Verify that environmental factors such as temperature and humidity do not exceed router tolerances.	"MX480 Router Environmental Specifications" on page 121		

Table 70: Site Preparation Checklist (*continued*)

Item or Task	For More Information	Performed By	Date
Select the type of rack or cabinet.	"MX480 Router Rack Requirements" on page 122, "MX480 Router Cabinet Size and Clearance Requirements" on page 126		
Plan rack or cabinet location, including required space clearances.	"MX480 Router Rack Requirements" on page 122, "MX480 Router Clearance Requirements for Airflow and Hardware Maintenance" on page 125, "MX480 Router Cabinet Size and Clearance Requirements" on page 126		
If a rack is used, secure rack to floor and building structure.	"MX480 Router Rack Requirements" on page 122		
Acquire cables and connectors.			
Locate sites for connection of system grounding.	"MX480 Chassis Grounding Specifications" on page 127, <i>MX480 Router Grounding Cable Lug Specifications</i> , <i>MX480 Router Grounding Cable Specifications</i>		
Measure distance between external power sources and router installation site.			
Calculate the optical power budget and optical power margin.	"Calculating Power Budget and Power Margin for Fiber-Optic Cables" on page 131		

- Related Documentation**
- [MX480 Router Rack Requirements on page 122](#)
 - [MX480 Router Clearance Requirements for Airflow and Hardware Maintenance on page 125](#)
 - [MX480 Router Cabinet Size and Clearance Requirements on page 126](#)

MX480 Router Rack Requirements

The router can be installed in a rack. Many types of racks are acceptable, including four-post (telco) racks and open-frame racks. An example of an open-frame rack appears in Figure 40 on page 124.

- [Rack Size and Strength on page 123](#)
- [Spacing of Mounting Bracket Holes on page 124](#)
- [Connection to Building Structure on page 124](#)

Rack Size and Strength

The router is designed for installation in a 19-in. rack as defined in *Cabinets, Racks, Panels, and Associated Equipment* (document number EIA-310-D) published by the Electronic Components Industry Association (ECIA) (<http://www.ecianow.org>).

With the use of adapters or approved wing devices to narrow the opening between the rails, the router fits into a 600-mm-wide rack or cabinet, as defined in the four-part *Equipment Engineering (EE); European telecommunications standard for equipment practice* (document number ETSI EN 300 119) published by the European Telecommunications Standards Institute (<http://www.etsi.org>).

The rack rails must be spaced widely enough to accommodate the router chassis's external dimensions: 14.0 in. (356 mm) high, 24.5 in. (622 mm) deep, and 17.45 in. (443 mm) wide. The spacing of rails and adjacent racks must also allow for the clearances around the router and rack that are specified in “[MX480 Router Clearance Requirements for Airflow and Hardware Maintenance](#)” on page 125.


In general, a center-mount rack is preferable to a front-mount rack because the more even distribution of weight in the center-mount rack provides greater stability.

For instructions about installing the mounting hardware, see “[Installing the MX480 Router Mounting Hardware for a Rack or Cabinet](#)” on page 183.

The chassis height of 14.0 in. (35.6 cm) is approximately 8 U. A U is the standard rack unit defined in *Cabinets, Racks, Panels, and Associated Equipment* (document number EIA-310-D) published by the Electronic Components Industry Association (ECIA) (<http://www.ecianow.org>). You can stack five MX480 routers in a rack that has at least 48 U (84 in. or 2.13 m) of usable vertical space.

The rack must be strong enough to support the weight of the fully configured router, up to 163.5 lb (74.2 kg). If you stack five fully configured routers in one rack, it must be capable of supporting up to 818 lb (371.0 kg).

Figure 40: Typical Open-Frame Rack

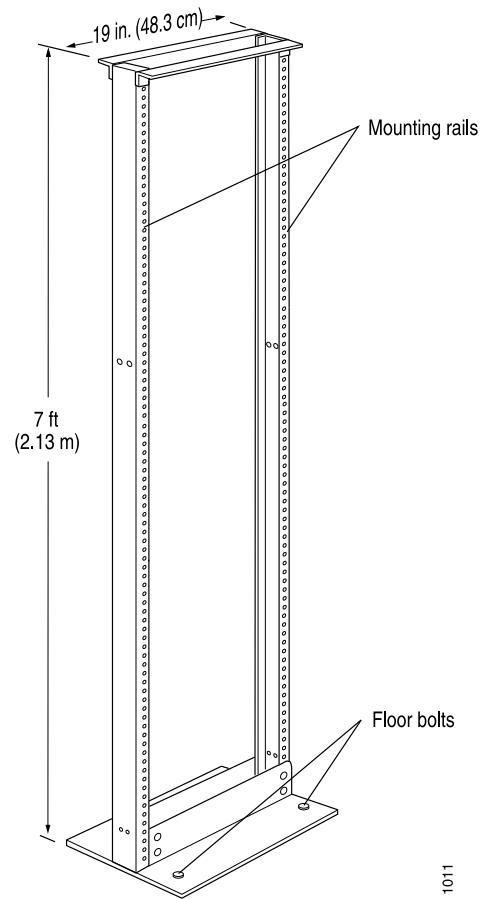

Spacing of Mounting Bracket Holes

The router can be mounted in any rack that provides holes or hole patterns spaced at 1 U (1.75 in.) increments. The mounting brackets used to attach the chassis to a rack are designed to fasten to holes spaced at those distances.

Connection to Building Structure

Always secure the rack to the structure of the building. If your geographical area is subject to earthquakes, bolt the rack to the floor. For maximum stability, also secure the rack to ceiling brackets.

- Related Documentation**
- [MX480 Site Preparation Checklist on page 121](#)
 - *Installation Safety Warnings for Juniper Networks Devices*


MX480 Router Clearance Requirements for Airflow and Hardware Maintenance

When planning the installation site, you need to allow sufficient clearance around the rack (see [Figure 41 on page 125](#)):

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. Allow at least 8 in. (20.3 cm) of clearance between side-cooled routers. Allow 5.5 in. (14 cm) between the side of the chassis and any non-heat-producing surface such as a wall.
- For service personnel to remove and install hardware components, there must be adequate space at the front and back of the router. At least 24 in. (61 cm) is required both in front of and behind the router. NEBS GR-63 recommends that you allow at least 30 in. (72.6 cm) in front of the rack and 24 in. (61.0 cm) behind the rack.

Airflow must always be from front to back with respect to the rack. If the device has side to rear airflow, then provisions must be made to ensure that fresh air from the front of the rack is supplied to the inlets, and exhaust exits the rear of the rack. The device must not interfere with the cooling of other systems in the rack. Fillers must be used as appropriate in the rack to ensure there is no recirculation of heated exhaust air back to the front of the rack. Care must also be taken around cables to ensure that no leakage of air in situations where recirculation may result.

Figure 41: Clearance Requirements for Airflow and Hardware Maintenance for an MX480 Router Chassis

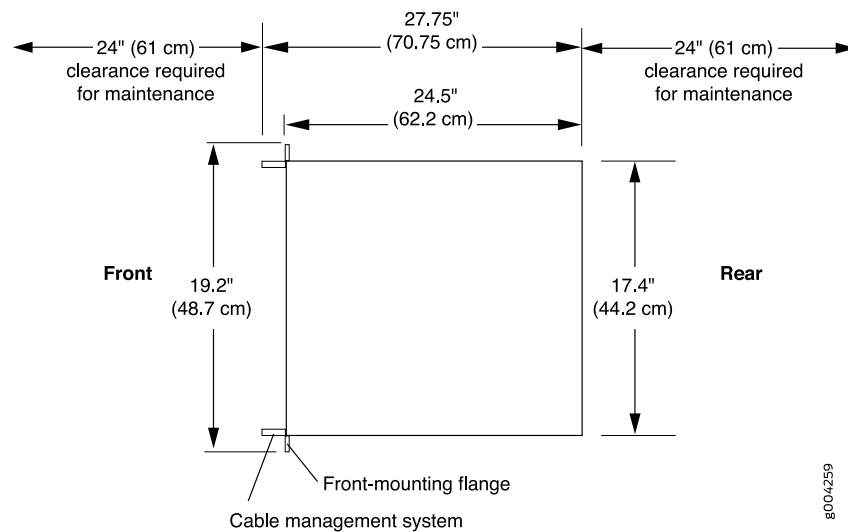

Related Documentation

- [MX480 Site Preparation Checklist on page 121](#)
- *Installation Safety Warnings for Juniper Networks Devices*

MX480 Router Cabinet Size and Clearance Requirements

The minimum size cabinet that can accommodate the router is 482 mm wide and 800 mm deep. A cabinet larger than the minimum requirement provides better airflow and reduces the chance of overheating. To accommodate a single router, the cabinet must be at least 13 U high. If you provide adequate cooling air and airflow clearance, you can stack five routers in a cabinet that has at least 48 U (84 in. or 2.13 m) of usable vertical space.

The minimum front and rear clearance requirements depend on the mounting configuration you choose. The minimum total clearance inside the cabinet is 30.7 in. between the inside of the front door and the inside of the rear door.

Related Documentation


- [MX480 Site Preparation Checklist on page 121](#)
- [MX480 Router Cabinet Airflow Requirements on page 126](#)
- *Installation Safety Warnings for Juniper Networks Devices*

MX480 Router Cabinet Airflow Requirements

Before you install the router in a cabinet, you must ensure that ventilation through the cabinet is sufficient to prevent overheating. Consider the following requirements to when planning for chassis cooling:

- Ensure that the cool air supply you provide through the cabinet can adequately dissipate the thermal output of the router.
- Ensure that the cabinet allows the chassis hot exhaust air to exit from the cabinet without recirculating into the router. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top allows the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust. For an illustration of chassis airflow, see [Figure 42 on page 127](#).
- Install the router as close as possible to the front of the cabinet so that the cable management brackets just clear the inside of the front door. This maximizes the clearance in the rear of the cabinet for critical airflow.
- Route and dress all cables to minimize the blockage of airflow to and from the chassis.

Figure 42: Airflow Through the Chassis

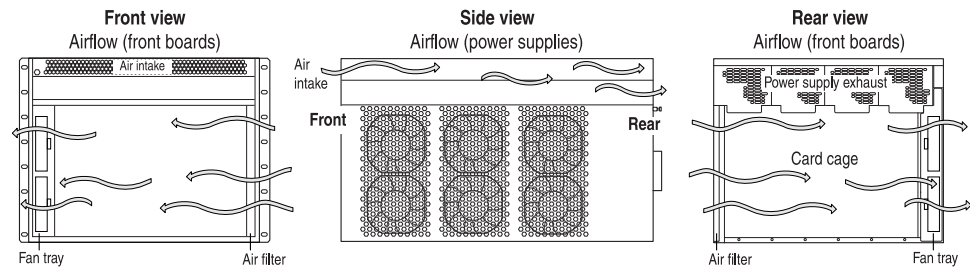

9004211

- Related Documentation**
- [MX480 Site Preparation Checklist on page 121](#)
 - [Installation Safety Warnings for Juniper Networks Devices](#)

MX480 Chassis Grounding Specifications

- [MX480 Chassis Grounding Points Specifications on page 127](#)
- [MX480 Router Grounding Cable Lug Specifications on page 128](#)
- [MX480 Router Grounding Cable Specifications on page 129](#)

MX480 Chassis Grounding Points Specifications

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, the router must be adequately grounded before power is connected. To ground AC-powered and DC-powered routers, you must connect a grounding cable to earth ground and then attach it to the chassis grounding points using the two screws provided.

Two threaded inserts (PEM nuts) are provided on the upper rear of the chassis for connecting the router to earth ground. The grounding points fit UNC 1/4–20 screws (American). The grounding points are spaced at 0.625-in. (15.86-mm) centers (see [Figure 43 on page 128](#) or [Figure 44 on page 128](#)).



NOTE: Additional grounding is provided to an AC-powered router when you plug its power supplies into grounded AC power receptacles.

Figure 43: Connecting AC Power to the Router


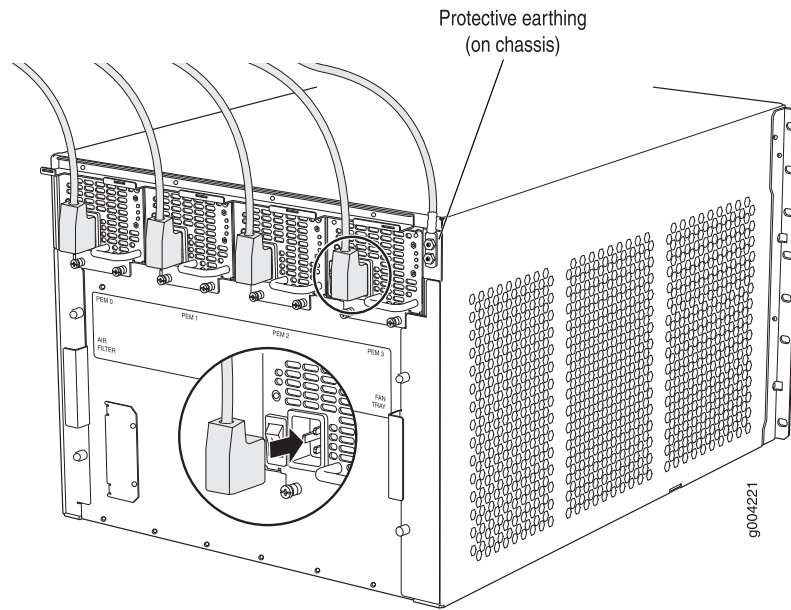



Figure 44: Connecting DC Power to the Router

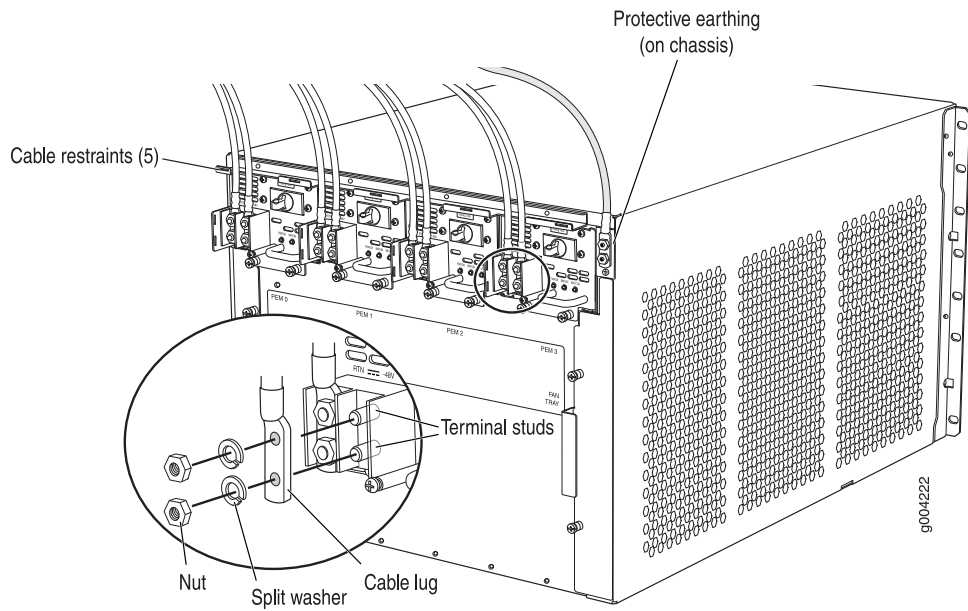

MX480 Router Grounding Cable Lug Specifications

The accessory box shipped with the router includes one cable lug that attaches to the grounding cable (see [Figure 45 on page 129](#)) and two UNC 1/4–20 screws used to secure the grounding cable to the grounding points.

Figure 45: Grounding Cable Lug

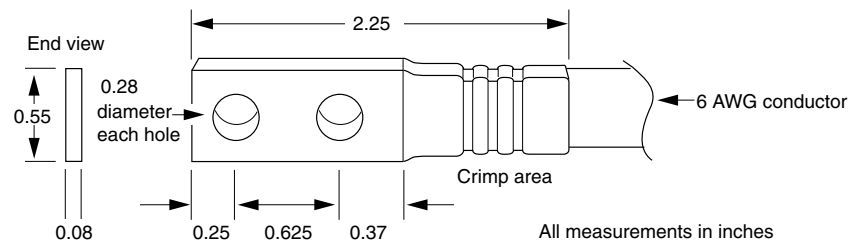

CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



NOTE: The same cable lug is used for the DC power cables.

MX480 Router Grounding Cable Specifications

The grounding cable that you provide must meet the specifications in [Table 71 on page 129](#).

Table 71: Grounding Cable Specifications

Cable Type	Quantity and Specification
Grounding	One 6-AWG (13.3 mm ²), minimum 60°C wire, or as required by the local code



WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.

Related Documentation

- [Tools and Parts Required for MX480 Router Grounding and Power Connections on page 217](#)
- [Grounding the MX480 Router on page 218](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Transceiver and Cable Specifications

- [Calculating Power Budget and Power Margin for Fiber-Optic Cables](#) on page 131
- [Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion](#) on page 133
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers](#) on page 134

Calculating Power Budget and Power Margin for Fiber-Optic Cables

Use the information in this topic and the specifications for your optical interface to calculate the power budget and power margin for fiber-optic cables.



TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

To calculate the power budget and power margin, perform the following tasks:

1. [Calculating Power Budget for Fiber-Optic Cable](#) on page 131
2. [Calculating Power Margin for Fiber-Optic Cable](#) on page 132

Calculating Power Budget for Fiber-Optic Cable

To ensure that fiber-optic connections have sufficient power for correct operation, you need to calculate the link's power budget, which is the maximum amount of power it can transmit. When you calculate the power budget, you use a worst-case analysis to provide a margin of error, even though all the parts of an actual system do not operate at the worst-case levels. To calculate the worst-case estimate of power budget (P_B), you assume minimum transmitter power (P_T) and minimum receiver sensitivity (P_R):

$$P_B = P_T - P_R$$

The following hypothetical power budget equation uses values measured in decibels (dB) and decibels referred to one milliwatt (dBm):

$$P_B = P_T - P_R$$

$$P_B = -15 \text{ dBm} - (-28 \text{ dBm})$$

$$P_B = 13 \text{ dB}$$

Calculating Power Margin for Fiber-Optic Cable

After calculating a link's power budget, you can calculate the power margin (P_M), which represents the amount of power available after subtracting attenuation or link loss (LL) from the power budget (P_B). A worst-case estimate of P_M assumes maximum LL:

$$P_M = P_B - LL$$

P_M greater than zero indicates that the power budget is sufficient to operate the receiver.

Factors that can cause link loss include higher-order mode losses, modal and chromatic dispersion, connectors, splices, and fiber attenuation. [Table 72 on page 132](#) lists an estimated amount of loss for the factors used in the following sample calculations. For information about the actual amount of signal loss caused by equipment and other factors, refer to vendor documentation.

Table 72: Estimated Values for Factors Causing Link Loss

Link-Loss Factor	Estimated Link-Loss Value
Higher-order mode losses	Single-mode—None Multimode—0.5 dB
Modal and chromatic dispersion	Single-mode—None Multimode—None, if product of bandwidth and distance is less than 500 MHz-km
Connector	0.5 dB
Splice	0.5 dB
Fiber attenuation	Single-mode—0.5 dB/km Multimode—1 dB/km

The following sample calculation for a 2-km-long multimode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 72 on page 132](#) to calculate link loss (LL) as the sum of fiber attenuation (2 km @ 1 dB/km, or 2 dB) and loss for five connectors (0.5 dB per connector, or 2.5 dB) and two splices (0.5 dB per splice, or 1 dB) as well as higher-order mode losses (0.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 2 \text{ km (1 dB/km)} - 5 (0.5 \text{ dB}) - 2 (0.5 \text{ dB}) - 0.5 \text{ dB}$$

$$P_M = 13 \text{ dB} - 2 \text{ dB} - 2.5 \text{ dB} - 1 \text{ dB} - 0.5 \text{ dB}$$

$$P_M = 7 \text{ dB}$$

The following sample calculation for an 8-km-long single-mode link with a power budget (P_B) of 13 dB uses the estimated values from [Table 72 on page 132](#) to calculate link loss (LL) as the sum of fiber attenuation (8 km @ 0.5 dB/km, or 4 dB) and loss for seven connectors (0.5 dB per connector, or 3.5 dB). The power margin (P_M) is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 8 \text{ km} (0.5 \text{ dB/km}) - 7(0.5 \text{ dB})$$

$$P_M = 13 \text{ dB} - 4 \text{ dB} - 3.5 \text{ dB}$$

$$P_M = 5.5 \text{ dB}$$

In both examples, the calculated power margin is greater than zero, indicating that the link has sufficient power for transmission and does not exceed the maximum receiver input power.

Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion

This topic describes signal loss, attenuation, and dispersion in fiber-optic cable. For information about calculating power budget and power margin for fiber-optic cable, see [“Calculating Power Budget and Power Margin for Fiber-Optic Cables” on page 131](#).

- [Signal Loss in Multimode and Single-Mode Fiber-Optic Cable on page 133](#)
- [Attenuation and Dispersion in Fiber-Optic Cable on page 133](#)

Signal Loss in Multimode and Single-Mode Fiber-Optic Cable

Multimode fiber is large enough in diameter to allow rays of light to reflect internally (bounce off the walls of the fiber). Interfaces with multimode optics typically use LEDs as light sources. However, LEDs are not coherent sources. They spray varying wavelengths of light into the multimode fiber, which reflects the light at different angles. Light rays travel in jagged lines through a multimode fiber, causing signal dispersion. When light traveling in the fiber core radiates into the fiber cladding, higher-order mode loss results. Together these factors limit the transmission distance of multimode fiber compared with single-mode fiber.

Single-mode fiber is so small in diameter that rays of light can reflect internally through one layer only. Interfaces with single-mode optics use lasers as light sources. Lasers generate a single wavelength of light, which travels in a straight line through the single-mode fiber. Compared with multimode fiber, single-mode fiber has higher bandwidth and can carry signals for longer distances.

Exceeding the maximum transmission distances can result in significant signal loss, which causes unreliable transmission.

Attenuation and Dispersion in Fiber-Optic Cable

Correct functioning of an optical data link depends on modulated light reaching the receiver with enough power to be demodulated correctly. *Attenuation* is the reduction in power of the light signal as it is transmitted. Attenuation is caused by passive media

components, such as cables, cable splices, and connectors. Although attenuation is significantly lower for optical fiber than for other media, it still occurs in both multimode and single-mode transmission. An efficient optical data link must have enough light available to overcome attenuation.

Dispersion is the spreading of the signal over time. The following two types of dispersion can affect an optical data link:

- Chromatic dispersion—Spreading of the signal over time resulting from the different speeds of light rays.
- Modal dispersion—Spreading of the signal over time resulting from the different propagation modes in the fiber.

For multimode transmission, modal dispersion, rather than chromatic dispersion or attenuation, usually limits the maximum bit rate and link length. For single-mode transmission, modal dispersion is not a factor. However, at higher bit rates and over longer distances, chromatic dispersion rather than modal dispersion limits maximum link length.

An efficient optical data link must have enough light to exceed the minimum power that the receiver requires to operate within its specifications. In addition, the total dispersion must be less than the limits specified for the type of link in Telcordia Technologies document GR-253-CORE (Section 4.3) and International Telecommunications Union (ITU) document G.957.

When chromatic dispersion is at the maximum allowed, its effect can be considered as a power penalty in the power budget. The optical power budget must allow for the sum of component attenuation, power penalties (including those from dispersion), and a safety margin for unexpected losses.

Routing Engine Interface Cable and Wire Specifications for MX Series Routers

Table 73 on page 134 lists the specifications for the cables that connect to management ports and the wires that connect to the alarm relay contacts.



NOTE: In routers where the Routing Engine (RE) and Control Board (CB) are integrated into a single board, a CB-RE is known as Routing and Control Board (RCB). The RCB is a single FRU that provides RE and CB functionality.

Table 73: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces

Port	Cable Specification	Cable/Wire Supplied	Maximum Length	Router Receptacle
Routing Engine console or auxiliary interface	RS-232 (EIA-232) serial cable	1.83-m length with RJ-45/DB-9 connectors	1.83 m	RJ-45 female

Table 73: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces (*continued*)

Port	Cable Specification	Cable/Wire Supplied	Maximum Length	Router Receptacle
Routing Engine Ethernet interface	Category 5 cable or equivalent suitable for 100Base-T operation	One 4.57-m length with RJ-45/RJ-45 connectors	100 m	RJ-45 autosensing
Alarm relay contacts	Wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm ²)	No	None	—

Related Documentation

- [Understanding Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion on page 133](#)
- [Calculating Power Budget and Power Margin for Fiber-Optic Cables on page 131](#)

Cable and Pinout Specifications

- [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port on page 137](#)
- [RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports on page 138](#)

RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port

The port on the Routing Engine labeled **ETHERNET** is an autosensing 10/100-Mbps Ethernet RJ-45 receptacle that accepts an Ethernet cable for connecting the Routing Engine to a management LAN (or other device that supports out-of-band management). [Table 74 on page 137](#) describes the RJ-45 connector pinout.

Table 74: RJ-45 Connector Pinout for the Routing Engine ETHERNET Port

Pin	Signal
1	TX+
2	TX-
3	RX+
4	Termination network
5	Termination network
6	RX-
7	Termination network
8	Termination network

Related Documentation

- [MX480 Routing Engine Description on page 27](#)
- [RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports on page 138](#)

RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports

The ports on the Routing Engine labeled **AUX** and **CONSOLE** are asynchronous serial interfaces that accept an RJ-45 connector. The ports connect the Routing Engine to an auxiliary or console management device. [Table 75 on page 138](#) describes the RJ-45 connector pinout.

Table 75: RJ-45 Connector Pinout for the AUX and CONSOLE Ports

Pin	Signal	Description
1	RTS	Request to Send
2	DTR	Data Terminal Ready
3	TXD	Transmit Data
4	Ground	Signal Ground
5	Ground	Signal Ground
6	RXD	Receive Data
7	DSR/DCD	Data Set Ready
8	CTS	Clear to Send

Related Documentation

- [MX480 Routing Engine Description on page 27](#)
- [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port on page 137](#)

AC Power Requirements, Specifications, and Guidelines

- AC Electrical Specifications for the MX480 Router on page 139
- Power Requirements for an MX480 Router on page 140
- Calculating Power Requirements for MX480 Routers on page 149
- AC Power Circuit Breaker Requirements for the MX480 Router on page 153
- AC Power Cord Specifications for the MX480 Router on page 153

AC Electrical Specifications for the MX480 Router

Table 76 on page 139 lists the AC power supply electrical specifications; Table 77 on page 140 lists the AC power system specifications.

Table 76: AC Power Supply Electrical Specifications

Item	Specification
Normal-Capacity Power Supplies	
Maximum output power	1027 W (low line) 1590 W (high line)
AC input voltage	Operating range: 100 – 240 VAC (nominal)
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	11.0 A @ 200 VAC or 14.5 A @ 110 VAC maximum
Efficiency	85% (low line and high line) <small>NOTE: This value is at full load and nominal voltage.</small>
High-Capacity Power Supplies	
Maximum output power	1167 W (low line) 2050 W (high line)

Table 76: AC Power Supply Electrical Specifications (*continued*)

Item	Specification
AC input voltage	Operating range: 100 – 240 VAC (nominal)
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	16 A @ 110 VAC maximum 15.1 A @ 200 VAC maximum
Efficiency	84% (low line) 89% (high line)
NOTE: This value is at full load and nominal voltage.	

Table 77: AC Power System Specifications

Item	Normal Capacity–Low Line	Normal-Capacity–High Line	High-Capacity–Low Line	High-Capacity–High Line
Redundancy	3+1	2+2	3+1	2+2
Output power (maximum) per power supply	1027 W	3200 W	1167 W	2050 W
Output power (maximum) per system	3081 W	3200 W	3501 W	4100 W

- Related Documentation**
- [Calculating Power Requirements for MX480 Routers on page 149](#)
 - [AC Power Circuit Breaker Requirements for the MX480 Router on page 153](#)
 - [AC Power Cord Specifications for the MX480 Router on page 153](#)

Power Requirements for an MX480 Router

The following tables list the MX480 component power requirements. [Table 78 on page 140](#) lists the MX480 base system power requirement. [Table 79 on page 141](#) lists the FRU power requirements for Switch Control Boards (SCBs), Routing Engines, Modular Port Concentrators (MPCs), Modular Interface Cards (MICs), and Dense Port Concentrators (DPCs). In addition, [Table 79 on page 141](#) lists the MPC power requirements with MICs and optics at various operating temperatures.

Table 78: MX480 Router Common Component Power Requirements

Component	Power Requirement (Watts)
Base system	40 W
Normal-capacity cooling system	110 W

Table 78: MX480 Router Common Component Power Requirements (*continued*)

Component	Power Requirement (Watts)
High-capacity cooling system	160 W



NOTE: The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 79: FRU Power Requirements

Component	Part Number	Maximum Power Requirement
Switch Control Boards (SCBs)		
SCB	SCB-MX960 (applies to MX240, MX480, and MX960)	150 W
SCBE	SCBE-MX (applies to MX240, MX480, and MX960)	160 W at 55° C 130 W at 40° C 120 W at 25° C
SCBE2	SCBE2-MX (applies to MX240, MX480, and MX960)	185 W at 55° C 160 W at 40° C 155 W at 25° C
Routing Engines		
Routing Engines	RE-S-1300-2048	90 W
	RE-S-1800X2-8G	
	RE-S-1800X4-8G	
	RE-S-1800X2-16G	
	RE-S-1800X4-16G	
	RE-S-1800X4-32G	
	RE-S-2000-4096	
	RE-S-X6-64G	
Fixed Configuration MPCs		
16x10GE MPC	MPC-3D-16GE-SFP	440 W at 55° C ambient
	MPC-3D-16GE-SFP-RB	423 W at 25° C ambient

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
<i>Multiservices MPC</i>	MS-MPC-128G	590 W
<i>32x10GE MPC4E</i>	MPC4E-32GE-SFP	610 W With optics: 607 W at 55° C, with SFPP ZR optics 584 W at 40° C, with SFPP ZR optics 565 W at 25° C, with SFPP ZR optics
<i>2x100GE + 8x10GE MPC4E</i>	MPC4E-20GE-8GE	610 W With optics: 607 W at 55° C, with SFPP ZR and CFP LR4 optics 584 W at 40° C, with SFPP ZR and CFP LR4 optics 565 W at 25° C, with SFPP ZR and CFP LR4 optics
<i>6x40GE + 24x10GE MPC5E</i>	MPC5E-40G10G	With optics: 607 W at 55° C
<i>6x40GE + 24x10GE MPC5EQ</i>	MPC5EQ-40G10G	541 W at 40° C 511 W at 25° C
<i>2x100GE + 4x10GE MPC5E</i>	MPC5E-100G10G	With optics: 607 W at 55° C
<i>2x100GE + 4x10GE MPC5EQ</i>	MPC5EQ-100G10G	541 W at 40° C 511 W at 25° C
<i>MPC7E (Multi-Rate)</i>	MPC7E-MRATE	With optics: 545 W at 55° C 465 W at 40° C 440 W at 25° C
MPCs		
<i>MPC1</i>	MX-MPC1-3D	165 W
<i>MPC1E</i>	MX-MPC1E-3D	With MICs and optics: 239 W at 55° C 227 W at 40° C 219 W at 25° C

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC1 Q</i>	MX-MPC1-3D-Q	175 W
<i>MPC1E Q</i>	MX-MPC1E-3D-Q	With MICs and optics: 249 W at 55° C 237 W at 40° C 228 W at 25° C
<i>MPC2</i>	MX-MPC2-3D	274 W
<i>MPC2E</i>	MX-MPC2E-3D	With MICs and optics: 348 W at 55° C 329 W at 40° C 315 W at 25° C
<i>MPC2 Q</i>	MX-MPC2-3D-Q	294 W
<i>MPC2E Q</i>	MX-MPC2E-3D-Q	With MICs and optics: 368 W at 55° C
<i>MPC2 EQ</i>	MX-MPC2-3D-EQ	347 W at 40° C
<i>MPC2E EQ</i>	MX-MPC2E-3D-EQ	333 W at 25° C
<i>MPC2E P</i>	MX-MPC2E-3D-P	294 W With MICs and optics: 368 W at 55° C 347 W at 40° C 333 W at 25° C
<i>MPC2E NG</i>	MPC2E-3D-NG	474 W With MICs and optics: 474 W at 55° C 417 W at 40° C 400 W at 25° C
<i>MPC2E NG Q</i>	MPC2E-3D-NG-Q	529 W With MICs and optics: 529 W at 55° C 460 W at 40° C 438 W at 25° C

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC3E</i>	MX-MPC3E-3D	440 W With MICs and optics: 500 W at 55° C, two 40W MICs 485 W at 40° C, two CFP MICs with LR4 optics 473 W at 25° C, two CFP MICs with LR4 optics
<i>MPC3E NG</i>	MPC3E-3D-NG	534 W With MICs and optics: 534 W at 55° C 485 W at 40° C 461 W at 25° C
<i>MPC3E NG Q</i>	MPC3E-3D-NG-Q	583 W With MICs and optics: 583 W at 55° C 532 W at 40° C 503 W at 25° C
MICs		
ATM MIC with SFP	MPC3E-3D-20GE-8XGE	610 W With optics: 607 W at 55° C, with SFPP ZR and CFP LR4 optics 584 W at 40° C, with SFPP ZR and CFP LR4 optics 565 W at 25° C, with SFPP ZR and CFP LR4 optics
Gigabit Ethernet MIC with SFP	MIC-3D-20-GE-SFP	37 W
10-Gigabit Ethernet MIC with XFP	2-Port: MIC-3D-2XGE-XFP 4-Port: MIC-3D-4XGE-XFP	2-Port: 29 W 4-Port: 37 W
10-Gigabit Ethernet MIC with SFP+	MIC3-3D-10XGE-SFP+	24.2 W at 55° C with SR and LR optics 29.8 W at 55° C with ER optics 29.8 W at 40° C with ZR optics

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
40-Gigabit Ethernet MIC with QSFP+	MC3-3D-2X40GE-QSFP	18 W
100-Gigabit Ethernet MIC with CFP	MC3-3D-1X100GE-CFP	40 W
100-Gigabit Ethernet MIC with CXP	MC3-3D-1X100GE-CXP	20 W
100-Gigabit DWDM OTN MIC with CFP2	MIC3-100G-DWDM	With optics: 91 W at 55° C 83 W at 25° C
Multiservices MIC	MS-MIC-16G	60 W
SONET/SDH OC3/STM1 Multi-Rate MIC	4-Port: MC3-4OC3002-10C48	4-Port: 24 W at 55° C 22.75 W at 40° C 21.5 W at 25° C
	8-Port: MC3-8OC3002-10C48	8-Port: 29 W at 55° C 27.75 W at 40° C 26.5 W at 25° C
SONET/SDH OC192/STM64 MIC with XFP	MIC-3D-1OC192-XFP	41 W at 55° C 38.5 W at 40° C 36 W at 25° C

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Channelized SONET/SDH OC3/STM1 Multi-Rate MIC	4-Port: MIC-3D-40C3D-002	4-Port: 41 W at 55° C 40 W at 40° C 39 W at 25° C
	8-Port: MIC-3D-80C3D-002	8-Port: 52 W at 55° C 50.5 W at 40° C 49 W at 25° C
Tri-Rate MIC	MIC-3D-40GE-TX	41 W
DS3/E3 MIC	MIC-3D-8DS3-E3	36 W at 55° C
	MIC-3D-80DS3-E3-B	35 W at 40° C 34 W at 25° C
Channelized E1/T1 Circuit Emulation MIC	MIC-3D-16CHEI-T1-CE	29.08 W at 55° C 27.84 W at 40° C 26.55 W at 25° C
Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP	MIC-3D-40C3D-002-CE	36.48 W at 55° C
		35.04 W at 40° C
		33.96 W at 25° C
DPCs		
Gigabit Ethernet DPC with SFP	DPC-R-40GE-SFP	335 W
Gigabit Ethernet Enhanced DPC with SFP	DPCE-R-40GE-SFP	335 W
	DPCE-X-40GE-SFP	

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP (40-Port)	DPCE-R-Q-40GE-SFP DPCE-X-Q-40GE-SFP	365 W
Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP (20-Port)	DPCE-R-Q-20GE-SFP	200 W
10-Gigabit Ethernet DPC with XFP	DPC-R-4XGE-XFP	310 W
10-Gigabit Ethernet Enhanced DPC with XFP (2-Port)	DPCE-R-2XGE-XFP	175 W
10-Gigabit Ethernet Enhanced DPC with XFP (4-Port)	DPCE-R-4XGE-XFP DPCE-X-4XGE-XFP	310 W
10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP or Enhanced Queuing IP Services DPC with XFP	DPCE-R-Q-4XGE-XFP DPCE-X-Q-4XGE-XFP	330 W

Table 79: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Multi-Rate Ethernet Enhanced DPC with SFP and XFP or Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP	DPCE-R-20GE-2XGE DPCE-X-20GE-2XGE	333 W
Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP	DPCE-R-Q-20GE-2XGE	335 W
Tri-Rate Enhanced DPC or Tri-Rate Enhanced Ethernet Services DPC	DPCE-R-40GE-TX DPCE-X-40GE-TX	320 W
Multiservices DPC	MS-DPC	265 W
FPCs		
FPC Type 2	MX-FPC2	190 W (with PICs and optics)
FPC Type 3	MX-FPC3	265 W (with PICs and optics)

Related Documentation

- [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)
- [AC Electrical Specifications for the MX480 Router on page 139](#)
- [Calculating Power Requirements for MX480 Routers on page 149](#)

Calculating Power Requirements for MX480 Routers

The information in this topic helps you determine which power supplies are suitable for various configurations, as well as which power supplies are not suitable because output power is exceeded. You determine suitability by subtracting the total power draw from the maximum output of the power supplies. Afterward, the required input power is calculated. Finally, you calculate the thermal output. A sample configuration is provided in [Table 81 on page 151](#).

We recommend that you provision power according to the maximum input current listed in the power supply electrical specifications (see [“AC Electrical Specifications for the MX480 Router” on page 139](#) and [“DC Power Supply Electrical Specifications for the MX480 Router” on page 157](#)).

Use the following procedures to calculate the power requirement:

1. Calculate the power requirement.
2. Evaluate the power budget.
3. Calculate input power.
4. Calculate thermal output (BTUs) for cooling requirements.

Both normal-capacity and high-capacity MX480 chassis with DC power supplies are zoned, meaning that certain components are powered by specific power supplies (see [Table 80 on page 150](#) for information on zoning). When calculating power requirements, be sure that there is adequate power for each zone.

For an AC-powered chassis, there is one overall zone. Two AC power supplies are mandatory for high-line, and three AC power supplies are mandatory for low-line power.

Table 80: MX480 DC Zoning

Zone	Power Supply (PEM)	Components Receiving Power
Zone 0	PEM 0 or 2	<ul style="list-style-type: none"> Fan Tray DPC/MPC slots 0 and 1 SCB slots 0 and 1
Zone 1	PEM 1 or 3	<ul style="list-style-type: none"> Fan Tray DPC slots 2 through 5

The following sample configuration shows a DC-powered MX480 with:

- Two 16-port 10-Gigabit Ethernet MPCs with SFP+ (slots 0 and 1)
- Two SCBs with two (redundant) RE-1800x2 routing engines (SCB slot 0 and SCB slot 1)
- One DPCE-R-4XGE-XFP (slot 3)
- High-capacity cooling system



NOTE: The high-capacity cooling system satisfies cooling requirements of MPCs, and must be used for proper cooling.

1. Calculate the power requirements (usage) using the values in “Power Requirements for an MX480 Router” on page 140 as shown in Table 81 on page 151.

Table 81: Sample Power Requirements for an MX480 Router

Chassis Component	Part Number	Power Requirement	Zone
Base system	MX480BASE-DC-HIGH	40 W	Zone 0 and Zone 1
High-capacity cooling system	FFANTRAY-MX480-HC	160 W	Zone 0 and Zone 1
MPC - Slot 2	MPC-3D-16XGE-SFPP-R-B	440 W	Zone 1
MPC - Slot 1	MPC-3D-16XGE-SFPP-R-B	440 W	Zone 0
SCB 1	SCBE2-MX with	185 W	Zone 0
	RE-S-1800X2-8G	90 W	
SCB 0	SCBE2 with	185 W	Zone 0
	RE-S-1800X2-8G	90 W	
DPC - Slot 3	DPCE-R-4XGE-XFP	310 W	Zone 1
Zone 0 total output power		1090 W	
Zone 1 total output power		850 W	
Zone 0 total output power (excluding cooling system)		1010 W	
Zone 1 total output power (excluding cooling system)		770 W	

2. Evaluate the power budget. In the case of a DC-powered chassis, evaluate the budget for each zone. In this step, we check the required power against the maximum output power of available power supply options.



NOTE: The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 82 on page 152 lists the power supplies, their maximum output power, and unused power (or a power deficit) for MX480 AC chassis. Table 83 on page 152 lists the power supplies, their maximum output power, and unused power (or a power deficit) for MX480 DC chassis. See “AC Electrical Specifications for the MX480 Router” on page 139 and “DC Power Supply Electrical Specifications for the MX480 Router” on page 157 for more information about the MX480 power supply electrical specifications.

Table 82: Calculating Power Budget for a MX480 AC Chassis

Power Supply	Maximum System Output Power	Unused Power ¹
MX480 AC Normal-capacity (low-line)	3081 W	2071 W
MX480 AC Normal-capacity (high-line)	3200 W	2190 W
MX480 AC High-capacity (low-line)	3501 W	2491 W
MX480 AC High-capacity (high-line)	4100 W	3090 W

¹ For this configuration, output power excluding the cooling system is 1360 W.

Table 83: Calculating Power Budget for a MX480 DC Chassis

Power Supply	Maximum System Output Power	Zone 0 Unused Power ¹	Zone 1 Unused Power ²
MX480 DC Normal-capacity	3200 W	2190 W	2430 W
MX480 DC High-capacity (DIP=0)	4800 W	3790 W	4030 W
NOTE: The DIP switch position is expected input current; the correct feeds must be present to obtain the desired output power.			
MX480 DC High-capacity (DIP=1)	5200 W	4190W	4430W
NOTE: The DIP switch position is expected input current; the correct feeds must be present to obtain the desired output power.			

¹ For this configuration, output power excluding the cooling system is 1010 W.

² For this configuration, output power excluding the cooling system is 770 W.

- Calculate input power. In this step, the input power requirements for the example configuration are calculated. To do this, divide the total output requirement by the efficiency of the power supply as shown in [Table 84 on page 152](#).

Table 84: Calculating Input Power Examples

Power Supply	Power Supply Efficiency ¹	Input Power Requirement ²
MX480 AC Normal-capacity (high-line)	85 %	1282 W
MX480 AC High-capacity (high-line)	89 %	1225 W
MX480 DC Normal-capacity	~98 %	1112 W ³
MX480 DC High-capacity	~98 %	1112 W ³

¹ These values are at full load and nominal voltage.

² For this configuration, total power is 1090 W.

³ Zone 0 requirement.

4. Calculate thermal output (BTUs). To calculate this, multiply the input power requirement (in watts) by 3.41.

Table 85: Calculating Thermal Output

Power Supply	Thermal Output (BTUs per hour)
MX480 AC Normal-capacity (high-line)	$1282 * 3.41 = 4372$ BTU/hr
MX480 AC High-capacity (high-line)	$1225 * 3.41 = 4177$ BTU/hr
MX480 DC Normal-capacity	$1112 * 3.41 = 3792$ BTU/hr ¹
MX480 DC High-capacity	$1112 * 3.41 = 3792$ BTU/hr ¹

¹ Zone 0 output.

- Related Documentation**
- [Power Requirements for an MX480 Router on page 140](#)
 - [AC Electrical Specifications for the MX480 Router on page 139](#)
 - [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)

AC Power Circuit Breaker Requirements for the MX480 Router

Each AC power supply has a single AC appliance inlet located on the power supply that requires a dedicated AC power feed. We recommend that you use a customer site circuit breaker rated for 15 A (250 VAC) minimum for each AC power supply, or as required by local code. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure.

- Related Documentation**
- [AC Electrical Specifications for the MX480 Router on page 139](#)
 - [Calculating Power Requirements for MX480 Routers on page 149](#)
 - [AC Power Cord Specifications for the MX480 Router on page 153](#)

AC Power Cord Specifications for the MX480 Router

Each AC power supply has a single AC appliance inlet located on the power supply that requires a dedicated AC power feed. Most sites distribute power through a main conduit that leads to frame-mounted power distribution panels, one of which can be located at the top of the rack that houses the router. An AC power cord connects each power supply to the power distribution panel.


You can order detachable AC power cords, each approximately 8 ft (2.5 m) long that supply AC power to the router. The C19 appliance coupler at the female end of the cord inserts into the AC appliance inlet coupler, type C20 (right angle) as described by International Electrotechnical Commission (IEC) standard 60320. The plug at the male end of the power cord fits into the power source receptacle that is standard for your geographical location.

[Table 86 on page 154](#) provides specifications and [Figure 46 on page 155](#) depicts the plug on the AC power cord provided for each country or region.

Table 86: AC Power Cord Specifications

Country	Model Number	Electrical Specification	Plug Type
Australia	CBL-M-PWR-RA-AU	240 VAC, 50 Hz AC	SAA/3/15
China	CBL-M-PWR-RA-CH	220 VAC, 50 Hz AC	CH2-16P
Europe (except Denmark, Italy, Switzerland, and United Kingdom)	CBL-M-PWR-RA-EU	220 or 230 VAC, 50 Hz AC	CEE 7/7
Italy	CBL-M-PWR-RA-IT	230 VAC, 50 Hz AC	CEI 23-16/VII
Japan	CBL-PWR-RA-JP15	125 VAC, 50 or 60 Hz AC	JIS 8303
	CBL-M-PWR-RA-JP	220 VAC, 50 or 60 Hz AC	NEMA L6-20P
North America	CBL-PWR-RA-US15	125 VAC, 60 Hz AC	NEMA 5-15P
	CBL-PWR-RA-TWLK-US15	125 VAC, 60 Hz AC	NEMA L5-15P
	CBL-M-PWR-RA-US	250 VAC, 60 Hz AC	NEMA 6-20
	CBL-M-PWR-RA-TWLK-US	250 VAC, 60 Hz AC	NEMA L6-20P
United Kingdom	CBL-M-PWR-RA-UK	240 VAC, 50 Hz AC	BS89/13

Figure 46: AC Plug Types

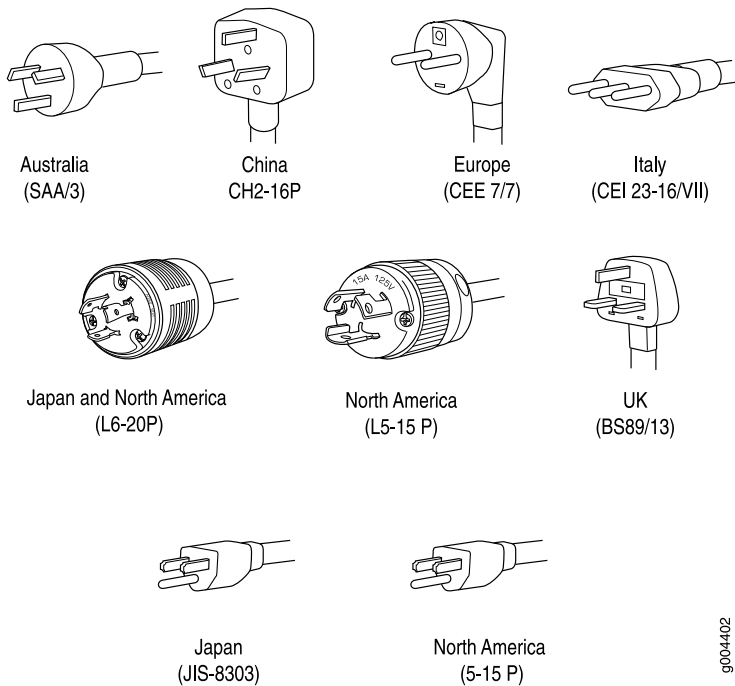

WARNING: The AC power cord for the router is intended for use with the router only and not for any other use.



WARNING:

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

9017253

Translation from Japanese: The attached power cable is only for this product. Do not use the cable for another product.



NOTE: In North America, AC power cords must not exceed 4.5 m (approximately 14.75 ft) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). You can order AC power cords that are in compliance.



.....

WARNING: The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.

.....



.....

CAUTION: Power cords and cables must not block access to device components or drape where people could trip on them.

.....

Related Documentation

- [Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies on page 219](#)
- [Replacing an MX480 AC Power Supply Cord on page 376](#)
- [AC Electrical Specifications for the MX480 Router on page 139](#)
- [Calculating Power Requirements for MX480 Routers on page 149](#)
- [AC Power Circuit Breaker Requirements for the MX480 Router on page 153](#)

DC Power Requirements, Specifications, and Guidelines

- DC Power Supply Electrical Specifications for the MX480 Router on page 157
- Power Requirements for an MX480 Router on page 158
- Calculating Power Requirements for MX480 Routers on page 167
- DC Power Circuit Breaker Requirements for the MX480 Router on page 171
- DC Power Source Cabling for the MX480 Router on page 172
- DC Power Cable Specifications for the MX480 Router on page 173

DC Power Supply Electrical Specifications for the MX480 Router

Table 87 on page 157 lists the DC power supply electrical specifications.
Table 88 on page 158 lists the DC power system specifications.

Table 87: Power Supply Electrical Specifications

Item	Specification
Normal-Capacity Power Supplies	
Maximum output power	1600 W
DC input current rating	33.3 A @ -48 V nominal operating voltage
Maximum Input Current	40 A
DC input voltage	Operating Range: -40.5 VDC to -72 VDC Nominal: -48 VDC
Efficiency	~98%
<i>NOTE:</i> This value is at full load and nominal voltage.	
Internal Circuit Breaker	40 A
High-Capacity Power Supplies	

Table 87: Power Supply Electrical Specifications (*continued*)

Item	Specification	
Maximum Input Current	60 A (DIP=0)	70 A (DIP=1)
Maximum output power	2240 W	2440 W
DC input current rating	50 A @ -48 VDC normal operating voltage	54.2 A @ -48 VDC normal operating voltage
DC input voltage	Operating Range: -40.5 VDC to -72 VDC Nominal: -48 VDC	
Efficiency	~98%	

NOTE: This value is at full load and nominal voltage.

Table 88: Power System Specifications

Item	Normal-Capacity	High-Capacity	
Redundancy	2+2	2+2	
Output power (maximum) per supply	1600 W	60 A (DIP=0)	70 A (DIP=1)
		2240 W	2440 W
Output power (maximum) per system	3200 W	4800 W	5200 W

- Related Documentation**
- [Calculating Power Requirements for MX480 Routers on page 149](#)
 - [DC Power Circuit Breaker Requirements for the MX480 Router on page 171](#)

Power Requirements for an MX480 Router

The following tables list the MX480 component power requirements. [Table 78 on page 140](#) lists the MX480 base system power requirement. [Table 79 on page 141](#) lists the FRU power requirements for Switch Control Boards (SCBs), Routing Engines, Modular Port Concentrators (MPCs), Modular Interface Cards (MICs), and Dense Port Concentrators (DPCs). In addition, [Table 79 on page 141](#) lists the MPC power requirements with MICs and optics at various operating temperatures.

Table 89: MX480 Router Common Component Power Requirements

Component	Power Requirement (Watts)
Base system	40 W
Normal-capacity cooling system	110 W
High-capacity cooling system	160 W



NOTE: The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 90: FRU Power Requirements

Component	Part Number	Maximum Power Requirement
Switch Control Boards (SCBs)		
SCB	SCB-MX960 (applies to MX240, MX480, and MX960)	150 W
SCBE	SCBE-MX (applies to MX240, MX480, and MX960)	160 W at 55° C 130 W at 40° C 120 W at 25° C
SCBE2	SCBE2-MX (applies to MX240, MX480, and MX960)	185 W at 55° C 160 W at 40° C 155 W at 25° C
Routing Engines		
Routing Engines	RE-S-1300-2048	90 W
	RE-S-1800X2-8G	
	RE-S-1800X4-8G	
	RE-S-1800X2-16G	
	RE-S-1800X4-16G	
	RE-S-1800X4-32G	
	RE-S-2000-4096	
	RE-S-X6-64G	

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Fixed Configuration MPCs		
16x10GE MPC	MPC3D-16XGE-SFPP	440 W at 55° C ambient
	MPC3D-16XGE-SFPRB	423 W at 25° C ambient
Multiservices MPC	MS-MPC-128G	590 W
32x10GE MPC4E	MPC4E-32XGE-SFPP	610 W
		With optics: 607 W at 55° C, with SFPP ZR optics
		584 W at 40° C, with SFPP ZR optics
		565 W at 25° C, with SFPP ZR optics
2x100GE + 8x10GE MPC4E	MPC4E-2XGE-8XGE	610 W
		With optics: 607 W at 55° C, with SFPP ZR and CFP LR4 optics
		584 W at 40° C, with SFPP ZR and CFP LR4 optics
		565 W at 25° C, with SFPP ZR and CFP LR4 optics
6x40GE + 24x10GE MPC5E	MPC5E-40G10G	With optics: 607 W at 55° C
	MPC5EQ-40G10G	541 W at 40° C
		511 W at 25° C
2x100GE + 4x10GE MPC5E	MPC5E-100G10G	With optics: 607 W at 55° C
	MPC5EQ-100G10G	541 W at 40° C
		511 W at 25° C
MPC7E (Multi-Rate)	MPC7E-MRATE	With optics: 545 W at 55° C
		465 W at 40° C
		440 W at 25° C
MPCs		

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC1</i>	MX-MPC1-3D	165 W
<i>MPC1E</i>	MX-MPC1E-3D	With MICs and optics: 239 W at 55° C 227 W at 40° C 219 W at 25° C
<i>MPC1 Q</i>	MX-MPC1-3D-Q	175 W
<i>MPC1E Q</i>	MX-MPC1E-3D-Q	With MICs and optics: 249 W at 55° C 237 W at 40° C 228 W at 25° C
<i>MPC2</i>	MX-MPC2-3D	274 W
<i>MPC2E</i>	MX-MPC2E-3D	With MICs and optics: 348 W at 55° C 329 W at 40° C 315 W at 25° C
<i>MPC2 Q</i>	MX-MPC2-3D-Q	294 W
<i>MPC2E Q</i>	MX-MPC2E-3D-Q	With MICs and optics: 368 W at 55° C
<i>MPC2 EQ</i>	MX-MPC2-3D-EQ	347 W at 40° C
<i>MPC2E EQ</i>	MX-MPC2E-3D-EQ	333 W at 25° C
<i>MPC2E P</i>	MX-MPC2E-3D-P	294 W With MICs and optics: 368 W at 55° C 347 W at 40° C 333 W at 25° C
<i>MPC2E NG</i>	MPC2E-3D-NG	474 W With MICs and optics: 474 W at 55° C 417 W at 40° C 400 W at 25° C

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC2E NG Q</i>	MPC2E-3D-NG-Q	529 W With MICs and optics: 529 W at 55° C 460 W at 40° C 438 W at 25° C
<i>MPC3E</i>	MX-MPC3E-3D	440 W With MICs and optics: 500 W at 55° C, two 40W MICs 485 W at 40° C, two CFP MICs with LR4 optics 473 W at 25° C, two CFP MICs with LR4 optics
<i>MPC3E NG</i>	MPC3E-3D-NG	534 W With MICs and optics: 534 W at 55° C 485 W at 40° C 461 W at 25° C
<i>MPC3E NG Q</i>	MPC3E-3D-NG-Q	583 W With MICs and optics: 583 W at 55° C 532 W at 40° C 503 W at 25° C
MICs		
ATM MIC with SFP	MPC4E-3D-20-GE-SFP	610 W 35 W With optics: 607 W at 55° C, with SFPP ZR and CFP LR4 optics 584 W at 40° C, with SFPP ZR and CFP LR4 optics 565 W at 25° C, with SFPP ZR and CFP LR4 optics
Gigabit Ethernet MIC with SFP	MIC-3D-20-GE-SFP	37 W

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
10-Gigabit Ethernet MIC with XFP	2-Port: MIC-3D-2XGE-XFP	2-Port: 29 W 4-Port: 37 W
	4-Port: MIC-3D-4XGE-XFP	
10-Gigabit Ethernet MIC with SFP+	MIC-3D-10XGE-SFP	24.2 W at 55° C with SR and LR optics
		29.8 W at 55° C with ER optics
		29.8 W at 40° C with ZR optics
40-Gigabit Ethernet MIC with QSFP+	MIC-3D-40GE-QSFP	18 W
100-Gigabit Ethernet MIC with CFP	MIC-3D-100GE-CFP	40 W
100-Gigabit Ethernet MIC with CXP	MIC-3D-100GE-CXP	20 W
100-Gigabit DWDM OTN MIC with CFP2	MIC-3-100G-DWDM	With optics: 91 W at 55° C
		83 W at 25° C
Multiservices MIC	MS-MIC-16G	60 W
SONET/SDH OC3/STM1 Multi-Rate MIC	4-Port: MIC-3D-4OC3/STM1	4-Port: 24 W at 55° C 22.75 W at 40° C 21.5 W at 25° C
	8-Port: MIC-3D-8OC3/STM1	8-Port: 29 W at 55° C 27.75 W at 40° C 26.5 W at 25° C
SONET/SDH OC192/STM64 MIC with XFP	MIC-3D-10C192-XFP	41 W at 55° C
		38.5 W at 40° C
		36 W at 25° C

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Channelized SONET/SDH OC3/STM1 Multi-Rate MIC	4-Port: MIC-3D-40C3D-002	4-Port: 41 W at 55° C 40 W at 40° C 39 W at 25° C
	8-Port: MIC-3D-80C3D-002	8-Port: 52 W at 55° C 50.5 W at 40° C 49 W at 25° C
Tri-Rate MIC	MIC-3D-40GE-TX	41 W
DS3/E3 MIC	MIC-3D-8DS3-E3	36 W at 55° C
	MIC-3D-80DS3-E3-B	35 W at 40° C 34 W at 25° C
Channelized E1/T1 Circuit Emulation MIC	MIC-3D-16CHEI-T1-CE	29.08 W at 55° C 27.84 W at 40° C 26.55 W at 25° C
Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP	MIC-3D-40C3D-002-CE	36.48 W at 55° C
		35.04 W at 40° C
		33.96 W at 25° C
DPCs		
Gigabit Ethernet DPC with SFP	DPC-R-40GE-SFP	335 W
Gigabit Ethernet Enhanced DPC with SFP	DPCE-R-40GE-SFP	335 W
	DPCE-X-40GE-SFP	

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP (40-Port)	DPCE-R-Q-40GE-SFP DPCE-X-Q-40GE-SFP	365 W
Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP (20-Port)	DPCE-R-Q-20GE-SFP	200 W
10-Gigabit Ethernet DPC with XFP	DPC-R-4XGE-XFP	310 W
10-Gigabit Ethernet Enhanced DPC with XFP (2-Port)	DPCE-R-2XGE-XFP	175 W
10-Gigabit Ethernet Enhanced DPC with XFP (4-Port)	DPCE-R-4XGE-XFP DPCE-X-4XGE-XFP	310 W
10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP or Enhanced Queuing IP Services DPC with XFP	DPCE-R-Q-4XGE-XFP DPCE-X-Q-4XGE-XFP	330 W

Table 90: FRU Power Requirements (*continued*)

Component	Part Number	Maximum Power Requirement
Multi-Rate Ethernet Enhanced DPC with SFP and XFP or Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP	DPCE-R-20GE-2XGE DPCE-X-20GE-2XGE	333 W
Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP	DPCE-R-Q-20GE-2XGE	335 W
Tri-Rate Enhanced DPC or Tri-Rate Enhanced Ethernet Services DPC	DPCE-R-40GE-TX DPCE-X-40GE-TX	320 W
Multiservices DPC	MS-DPC	265 W
FPCs		
FPC Type 2	MX-FPC2	190 W (with PICs and optics)
FPC Type 3	MX-FPC3	265 W (with PICs and optics)

Related Documentation

- [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)
- [AC Electrical Specifications for the MX480 Router on page 139](#)
- [Calculating Power Requirements for MX480 Routers on page 149](#)

Calculating Power Requirements for MX480 Routers

The information in this topic helps you determine which power supplies are suitable for various configurations, as well as which power supplies are not suitable because output power is exceeded. You determine suitability by subtracting the total power draw from the maximum output of the power supplies. Afterward, the required input power is calculated. Finally, you calculate the thermal output. A sample configuration is provided in [Table 81 on page 151](#).

We recommend that you provision power according to the maximum input current listed in the power supply electrical specifications (see [“AC Electrical Specifications for the MX480 Router” on page 139](#) and [“DC Power Supply Electrical Specifications for the MX480 Router” on page 157](#)).

Use the following procedures to calculate the power requirement:

1. Calculate the power requirement.
2. Evaluate the power budget.
3. Calculate input power.
4. Calculate thermal output (BTUs) for cooling requirements.

Both normal-capacity and high-capacity MX480 chassis with DC power supplies are zoned, meaning that certain components are powered by specific power supplies (see [Table 80 on page 150](#) for information on zoning). When calculating power requirements, be sure that there is adequate power for each zone.

For an AC-powered chassis, there is one overall zone. Two AC power supplies are mandatory for high-line, and three AC power supplies are mandatory for low-line power.

Table 91: MX480 DC Zoning

Zone	Power Supply (PEM)	Components Receiving Power
Zone 0	PEM 0 or 2	<ul style="list-style-type: none"> Fan Tray DPC/MPC slots 0 and 1 SCB slots 0 and 1
Zone 1	PEM 1 or 3	<ul style="list-style-type: none"> Fan Tray DPC slots 2 through 5

The following sample configuration shows a DC-powered MX480 with:

- Two 16-port 10-Gigabit Ethernet MPCs with SFP+ (slots 0 and 1)
- Two SCBs with two (redundant) RE-1800x2 routing engines (SCB slot 0 and SCB slot 1)
- One DPCE-R-4XGE-XFP (slot 3)
- High-capacity cooling system



NOTE: The high-capacity cooling system satisfies cooling requirements of MPCs, and must be used for proper cooling.

1. Calculate the power requirements (usage) using the values in “Power Requirements for an MX480 Router” on page 140 as shown in Table 81 on page 151.

Table 92: Sample Power Requirements for an MX480 Router

Chassis Component	Part Number	Power Requirement	Zone
Base system	MX480BASE-DC-HIGH	40 W	Zone 0 and Zone 1
High-capacity cooling system	FFANTRAY-MX480-HC	160 W	Zone 0 and Zone 1
MPC - Slot 2	MPC-3D-16XGE-SFPP-R-B	440 W	Zone 1
MPC - Slot 1	MPC-3D-16XGE-SFPP-R-B	440 W	Zone 0
SCB 1	SCBE2-MX with	185 W	Zone 0
	RE-S-1800X2-8G	90 W	
SCB 0	SCBE2 with	185 W	Zone 0
	RE-S-1800X2-8G	90 W	
DPC - Slot 3	DPCE-R-4XGE-XFP	310 W	Zone 1
Zone 0 total output power		1090 W	
Zone 1 total output power		850 W	
Zone 0 total output power (excluding cooling system)		1010 W	
Zone 1 total output power (excluding cooling system)		770 W	

2. Evaluate the power budget. In the case of a DC-powered chassis, evaluate the budget for each zone. In this step, we check the required power against the maximum output power of available power supply options.



NOTE: The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 82 on page 152 lists the power supplies, their maximum output power, and unused power (or a power deficit) for MX480 AC chassis. Table 83 on page 152 lists the power supplies, their maximum output power, and unused power (or a power deficit) for MX480 DC chassis. See “AC Electrical Specifications for the MX480 Router” on page 139 and “DC Power Supply Electrical Specifications for the MX480 Router” on page 157 for more information about the MX480 power supply electrical specifications.

Table 93: Calculating Power Budget for a MX480 AC Chassis

Power Supply	Maximum System Output Power	Unused Power ¹
MX480 AC Normal-capacity (low-line)	3081 W	2071 W
MX480 AC Normal-capacity (high-line)	3200 W	2190 W
MX480 AC High-capacity (low-line)	3501 W	2491 W
MX480 AC High-capacity (high-line)	4100 W	3090 W

¹ For this configuration, output power excluding the cooling system is 1360 W.

Table 94: Calculating Power Budget for a MX480 DC Chassis

Power Supply	Maximum System Output Power	Zone 0 Unused Power ¹	Zone 1 Unused Power ²
MX480 DC Normal-capacity	3200 W	2190 W	2430 W
MX480 DC High-capacity (DIP=0)	4800 W	3790 W	4030 W
NOTE: The DIP switch position is expected input current; the correct feeds must be present to obtain the desired output power.			
MX480 DC High-capacity (DIP=1)	5200 W	4190W	4430W
NOTE: The DIP switch position is expected input current; the correct feeds must be present to obtain the desired output power.			

¹ For this configuration, output power excluding the cooling system is 1010 W.

² For this configuration, output power excluding the cooling system is 770 W.

3. Calculate input power. In this step, the input power requirements for the example configuration are calculated. To do this, divide the total output requirement by the efficiency of the power supply as shown in [Table 84 on page 152](#).

Table 95: Calculating Input Power Examples

Power Supply	Power Supply Efficiency ¹	Input Power Requirement ²
MX480 AC Normal-capacity (high-line)	85 %	1282 W
MX480 AC High-capacity (high-line)	89 %	1225 W
MX480 DC Normal-capacity	~98 %	1112 W ³
MX480 DC High-capacity	~98 %	1112 W ³

¹ These values are at full load and nominal voltage.

² For this configuration, total power is 1090 W.

³ Zone 0 requirement.

4. Calculate thermal output (BTUs). To calculate this, multiply the input power requirement (in watts) by 3.41.

Table 96: Calculating Thermal Output

Power Supply	Thermal Output (BTUs per hour)
MX480 AC Normal-capacity (high-line)	$1282 * 3.41 = 4372$ BTU/hr
MX480 AC High-capacity (high-line)	$1225 * 3.41 = 4177$ BTU/hr
MX480 DC Normal-capacity	$1112 * 3.41 = 3792$ BTU/hr ¹
MX480 DC High-capacity	$1112 * 3.41 = 3792$ BTU/hr ¹

¹ Zone 0 output.

- Related Documentation**
- [Power Requirements for an MX480 Router on page 140](#)
 - [AC Electrical Specifications for the MX480 Router on page 139](#)
 - [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)

DC Power Circuit Breaker Requirements for the MX480 Router

Each DC power supply has a single DC input (–48 VDC and return) that requires a dedicated circuit breaker. If you plan to operate a maximally configured DC-powered router with normal-capacity power supplies, we recommend that you use a dedicated customer site circuit breaker rated for 40 A (–48 VDC) minimum, or as required by local code. If you plan to operate a maximally configured DC-powered router with high-capacity power supplies, we recommend that you use a circuit breaker rated for 70 A (–48 VDC), or as required by local code.


If you plan to operate a DC-powered router at less than the maximum configuration, we recommend that you provision a circuit breaker according to respective National Electrical Code and customer site internal standards to maintain proper level of protection for the current specified above or each DC power supply rated for at least 125% of the continuous current that the system draws at –48 VDC.

- Related Documentation**
- [DC Power Supply Electrical Specifications for the MX480 Router on page 157](#)
 - [Calculating Power Requirements for MX480 Routers on page 149](#)

DC Power Source Cabling for the MX480 Router

Figure 47 on page 172 shows a typical DC source cabling arrangement.

Figure 47: Typical DC Source Cabling to the Router

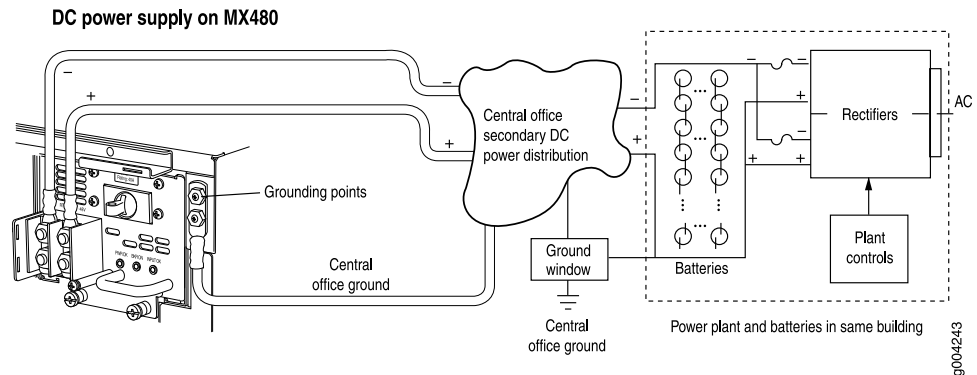

The DC power supplies in **PEM0** and **PEM1** must be powered by dedicated power feeds derived from feed **A**, and the DC power supplies in **PEM2** and **PEM3** must be powered by dedicated power feeds derived from feed **B**. This configuration provides the commonly deployed **A/B** feed redundancy for the system.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (-) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



WARNING: For field-wiring connections, use copper conductors only.



CAUTION: Power cords and cables must not block access to device components or drape where people could trip on them.


Related Documentation

- [In Case of an Electrical Accident](#)
- [MX480 DC Power Supply Description on page 102](#)
- [Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies on page 221](#)
- [Replacing an MX480 DC Power Supply Cable on page 377](#)

DC Power Cable Specifications for the MX480 Router

DC Power Cable Lug Specifications—The accessory box shipped with the router includes the cable lugs that attach to the terminal studs of each power supply (see [Figure 48 on page 173](#)).

Figure 48: DC Power Cable Lug

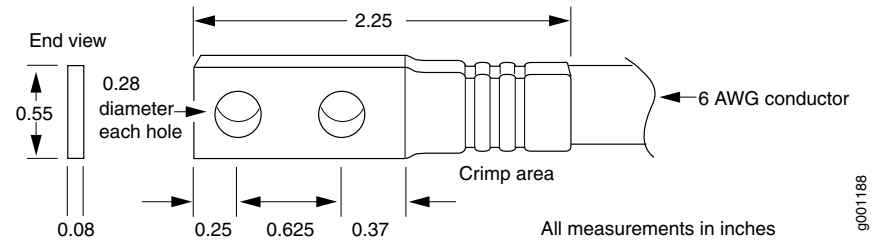

CAUTION: Before router installation begins, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



NOTE: The same cable lug is used for the grounding cable.

DC Power Cable Specifications—[Table 97 on page 173](#) summarizes the specifications for the power cables, which you must supply.

Table 97: DC Power Cable Specifications

Cable Type	Quantity and Specification
Power	Eight 6-AWG (13.3 mm ²), minimum 60°C wire, or as required by the local code

Related Documentation

- [DC Power Source Cabling for the MX480 Router on page 172](#)
- [MX480 DC Power Supply Description on page 102](#)

PART 3

Initial Installation and Configuration

- [Unpacking the MX480 Router on page 177](#)
- [Installing the Mounting Hardware on page 183](#)
- [Installing the MX480 Router on page 187](#)
- [Connecting the MX480 Router to Power on page 217](#)
- [Connecting the MX480 Router to the Network on page 231](#)
- [Initially Configuring the MX480 Router on page 241](#)

Unpacking the MX480 Router

- [Tools and Parts Required to Unpack the MX480 Router on page 177](#)
- [Unpacking the MX480 Router on page 177](#)
- [Verifying the MX480 Router Parts Received on page 179](#)

Tools and Parts Required to Unpack the MX480 Router

To unpack the router and prepare for installation, you need the following tools:

- Phillips (+) screwdriver, number 2
- 1/2-in. or 13-mm open-end or socket wrench to remove bracket bolts from the shipping pallet
- Blank panels to cover any slots not occupied by a component

Related Documentation

- [Unpacking the MX480 Router on page 177](#)
- [Verifying the MX480 Router Parts Received on page 179](#)

Unpacking the MX480 Router

The router is shipped in a wooden crate. A wooden pallet forms the base of the crate. The router chassis is bolted to this pallet. Quick Start installation instructions and a cardboard accessory box are also included in the shipping crate.

The shipping container measures 21 in. (53.3 cm) high, 23.5 in. (60.0 cm) wide, and 32.5 in. (82.5 cm) deep. The total weight of the container containing the router and accessories can range from 93 lb (42.2 kg) to 169 lb (76.7 kg).




NOTE: The router is maximally protected inside the shipping crate. Do not unpack it until you are ready to begin installation.

To unpack the router (see [Figure 49 on page 178](#)):

1. Move the shipping crate to a staging area as close to the installation site as possible, where you have enough room to remove the components from the chassis. While the chassis is bolted to the pallet, you can use a forklift or pallet jack to move it.
2. Position the shipping crate with the arrows pointing up.
3. Open all the latches on the shipping crate.
4. Remove the front door of the shipping crate cover and set it aside.
5. Slide the remainder of the shipping crate cover off the pallet.
6. Remove the foam covering the top of the router.
7. Remove the accessory box and the Quick Start installation instructions.
8. Verify the parts received against the lists.
9. Remove the vapor corrosion inhibitor (VCI) packs attached to the pallet, being careful not to break the VCI packs open.
10. To remove the brackets holding the chassis on the pallet, use a 1/2-in. socket wrench and a number 2 Phillips screwdriver to remove the bolts and screws from the brackets.
11. Store the brackets and bolts inside the accessory box.
12. Save the shipping crate cover, pallet, and packing materials in case you need to move or ship the router at a later time.

Figure 49: Contents of the Shipping Crate

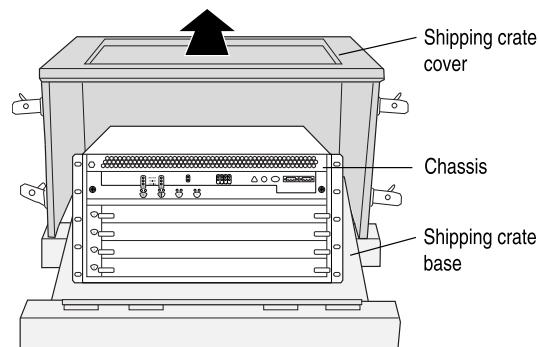

- Related Documentation**
- [Verifying the MX480 Router Parts Received on page 179](#)
 - [Installing the MX480 Router Mounting Hardware for a Rack or Cabinet on page 183](#)
 - [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
 - [Tools Required to Install the MX480 Router with a Mechanical Lift](#)
 - [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)

Verifying the MX480 Router Parts Received

A packing list is included in each shipment. Check the parts in the shipment against the items on the packing list. The packing list specifies the part numbers and descriptions of each part in your order.

If any part is missing, contact a customer service representative.

A fully configured router contains the router chassis with installed components, listed in [Table 98 on page 179](#), and an accessory box, which contains the parts listed in [Table 99 on page 180](#). The parts shipped with your router can vary depending on the configuration you ordered.

Table 98: Parts List for a Fully Configured Router

Component	Quantity
Chassis, including midplane, craft interface, and center-mounting brackets	1
DPCs	Up to 6
FPCs	Up to 3
MPCs	Up to 6
MICs	Up to 12
PICs	Up to 6
Routing Engines	1 or 2
SCBs	1 or 2
Power supplies	Up to 4
Fan tray	1
Air filter	1
Air filter tray	1

Table 98: Parts List for a Fully Configured Router (continued)

Component	Quantity
Quick start installation instructions	1
Small mounting shelf	1
Blank panels for slots without components installed	One blank panel for each slot not occupied by a component

Table 99: Accessory Box Parts List

Part	Quantity
Screws to mount chassis and small shelf	22
DC power terminal Lugs, 6-AWG	9
RJ-45-to-DB-9 cable to connect the router through the serial port	1
Cable management brackets	2
Terminal block plug, 3-pole, 5.08 mm spacing, 12A, to connect the router alarms	2
Label, accessories contents, MX480	1
USB flash drive with Junos OS	1
Read me first document	1
Affidavit for T1 connection	1
Juniper Networks Product Warranty	1
End User License Agreement	1
Document sleeve	1
3 in. x 5 in. pink bag	2
9 in. x 12 in. pink bag, ESD	2
Accessory Box, 19 in. x 12 in. x 3 in.	1
Ethernet cable, RJ-45/RJ-45, 4-pair stranded UTP, Category 5E, 15'	1
ESD wrist strap with cable	1

- Related Documentation**
- [Tools and Parts Required to Unpack the MX480 Router on page 177](#)
 - [Unpacking the MX480 Router on page 177](#)

Installing the Mounting Hardware

- [Installing the MX480 Router Mounting Hardware for a Rack or Cabinet on page 183](#)
- [Moving the Mounting Brackets for Center-Mounting the MX480 Router on page 185](#)

Installing the MX480 Router Mounting Hardware for a Rack or Cabinet

The router can be installed in a four-post rack or cabinet or an open-frame rack. Install the mounting hardware on the rack before installing the router.

Install the mounting shelf, which is included in the shipping container, before installing the router. We recommend that you install the mounting shelf because the weight of a fully loaded chassis can be up to 128 lb (58.1 kg).

[Table 100 on page 183](#) specifies the holes in which you insert cage nuts and screws to install the mounting hardware required (an X indicates a mounting hole location). The hole distances are relative to one of the standard U divisions on the rack. The bottom of all mounting shelves is at 0.04 in. (0.02 U) above a “U” division.

Table 100: Four-Post Rack or Cabinet Mounting Hole Locations

Hole	Distance Above U Division		Mounting Shelf
4	2.00 in. (5.1 cm)	1.14 U	X
3	1.51 in. (3.8 cm)	0.86 U	X
2	0.88 in. (2.2 cm)	0.50 U	X
1	0.25 in. (0.6 cm)	0.14 U	X

To install the mounting shelf on the front rails of a four-post rack or cabinet, or the rails of an open-frame rack:

1. If needed, install cage nuts in the holes specified in [Table 100 on page 183](#).
2. On the back of each rack rail, partially insert a mounting screw into the lowest hole specified in [Table 100 on page 183](#).

3. Install the small shelf on the back of the rack rails. Rest the bottom slot of each flange on a mounting screw.
4. Partially insert the remaining screws into the open holes in each flange of the small shelf (see [Figure 50 on page 184](#) or [Figure 51 on page 185](#)).
5. Tighten all the screws completely.

Figure 50: Installing the Front-Mounting Hardware for a Four-Post Rack or Cabinet


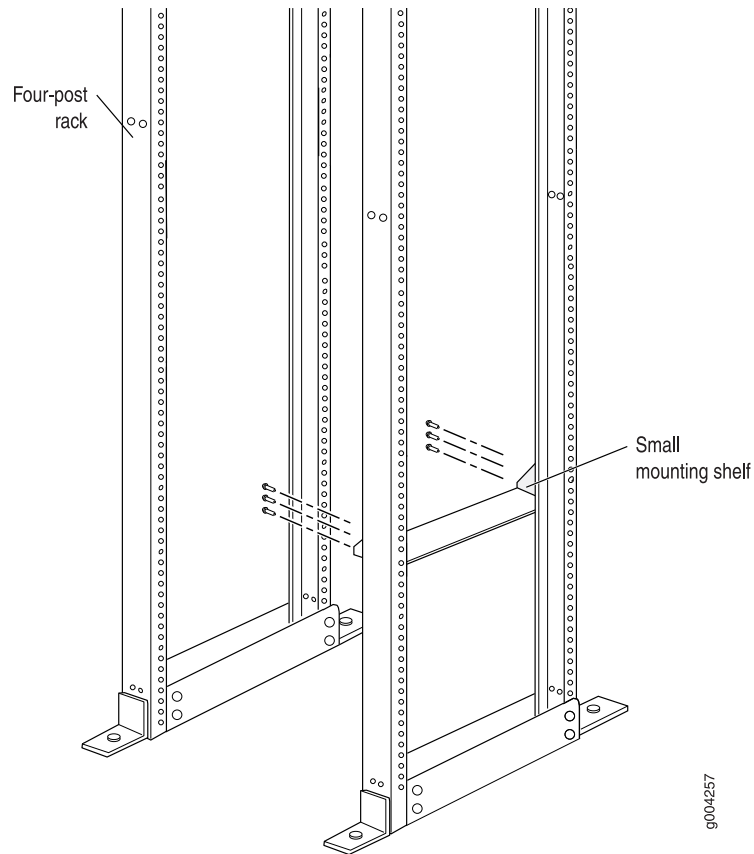


Figure 51: Installing the Mounting Hardware for an Open-Frame Rack

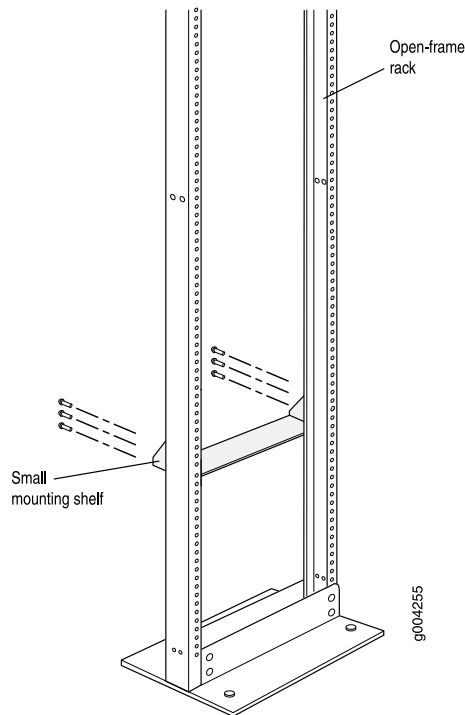

Related Documentation

- [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
- [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)

Moving the Mounting Brackets for Center-Mounting the MX480 Router

Two removable mounting brackets are attached to the mounting holes closest to the front of the chassis. You can move the pair of brackets to another position on the side of the chassis for center-mounting the router.

To move the mounting brackets from the front of the chassis toward the center of the chassis:

1. Remove the three screws at the top and center of the bracket.
2. Pull the top of the bracket slightly away from the chassis. The bottom of the bracket contains a tab that inserts into a slot in the chassis.
3. Pull the bracket away from the chassis so that the tab is removed from the chassis slot.
4. Insert the bracket tab into the slot in the bottom center of the chassis.

5. Align the bracket with the two mounting holes located toward the top center of the chassis.

There is no mounting hole in the center of the chassis that corresponds to the hole in the center of the bracket.

6. Insert the two screws at the top of the bracket and tighten each partially.

Two screws are needed for mounting the bracket on the center of the chassis. You do not need the third screw.

7. Tighten the two screws completely.

8. Repeat the procedure for the other bracket.

**Related
Documentation**

- [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
- [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)

CHAPTER 16

Installing the MX480 Router

- [Installing an MX480 Router Overview on page 187](#)
- [Tools Required to Install the MX480 Router with a Mechanical Lift on page 188](#)
- [Removing Components from the MX480 Router Before Installing It with a Lift on page 189](#)
- [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
- [Reinstalling Components in the MX480 Router After Installing It with a Lift on page 196](#)
- [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)
- [Removing Components from the MX480 Router Before Installing It Without a Lift on page 202](#)
- [Installing the MX480 Chassis in the Rack Manually on page 208](#)
- [Reinstalling Components in the MX480 Router After Installing It Without a Lift on page 210](#)
- [Installing the MX480 Router Cable Management Bracket on page 215](#)

Installing an MX480 Router Overview

To install the router:

1. Prepare the installation site.
 - See [“MX480 Site Preparation Checklist” on page 121](#).
2. Review the safety guidelines and warnings.
 - *General Safety Guidelines for Juniper Networks Devices*
 - *General Safety Warnings for Juniper Networks Devices*
3. Unpack the router and verify that all parts have been received.
 - a. See [“Unpacking the MX480 Router” on page 177](#).
 - b. See [“Verifying the MX480 Router Parts Received” on page 179](#).
4. Install the mounting hardware.

See [“Installing the MX480 Router Mounting Hardware for a Rack or Cabinet”](#) on page 183.

5. Install the router.

See [“Installing the MX480 Router Using a Mechanical Lift”](#) on page 194.

6. Connect cables to external devices.

See [“Connecting the MX480 Router to Management and Alarm Devices”](#) on page 231.

7. Connect the grounding cable.

See [“Grounding the MX480 Router”](#) on page 218.

8. Connect the power cables.

- [Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies](#) on page 219
- [Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies](#) on page 221

9. Power on the router.

- [Powering On an AC-Powered MX480 Router](#) on page 220
- [Powering On a DC-Powered MX480 Router with Normal Capacity Power Supplies](#) on page 224

10. Perform the initial system configuration.

See [“Initially Configuring the MX480 Router”](#) on page 241.

**Related
Documentation**

- [Tools and Parts Required to Unpack the MX480 Router](#) on page 177

Tools Required to Install the MX480 Router with a Mechanical Lift

To install the router, you need the following tools:

- Mechanical lift
- Phillips (+) screwdrivers, numbers 1 and 2
- 7/16-in. (11 mm) nut driver
- ESD grounding wrist strap

**Related
Documentation**

- [Installing the MX480 Router Using a Mechanical Lift](#) on page 194
- [Removing Components from the MX480 Router Before Installing It with a Lift](#) on page 189

- [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
- [Reinstalling Components in the MX480 Router After Installing It with a Lift on page 196](#)

Removing Components from the MX480 Router Before Installing It with a Lift

To make the router light enough to install with a lift, you must first remove most components from the chassis. The procedures for removing components from the chassis are for initial installation only, and assume that you have not connected power cables to the router. The following procedures describe how to remove components from the chassis, first from the rear and then from the front:

1. [Removing the Power Supplies Before Installing the MX480 Router with a Lift on page 189](#)
2. [Removing the Fan Tray Before Installing the MX480 Router with a Lift on page 190](#)
3. [Removing the SCBs Before Installing the MX480 Router with a Lift on page 191](#)
4. [Removing the DPCs Before Installing the MX480 Router with a Lift on page 192](#)
5. [Removing the FPCs Before Installing the MX480 Router with a Lift on page 193](#)

Removing the Power Supplies Before Installing the MX480 Router with a Lift


Remove the leftmost power supply first and then work your way to the right. To remove the AC or DC power supplies for each power supply (see [Figure 52 on page 190](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. On an AC-powered router, switch the AC input switch on each power supply to the off (O) position. On a DC-powered router, Move the DC circuit breaker on each DC power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Loosen the captive screws on the bottom edge of the power supply faceplate.
4. Pull the power supply straight out of the chassis.

Figure 52: Removing a Power Supply Before Installing the Router

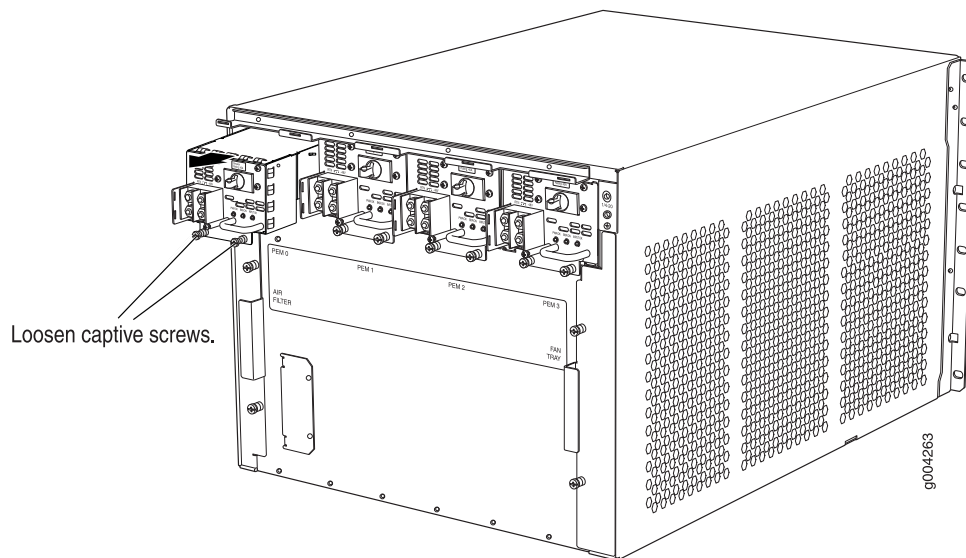


Removing the Fan Tray Before Installing the MX480 Router with a Lift

To remove the fan tray (see [Figure 53 on page 191](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.
4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

Figure 53: Removing the Fan Tray

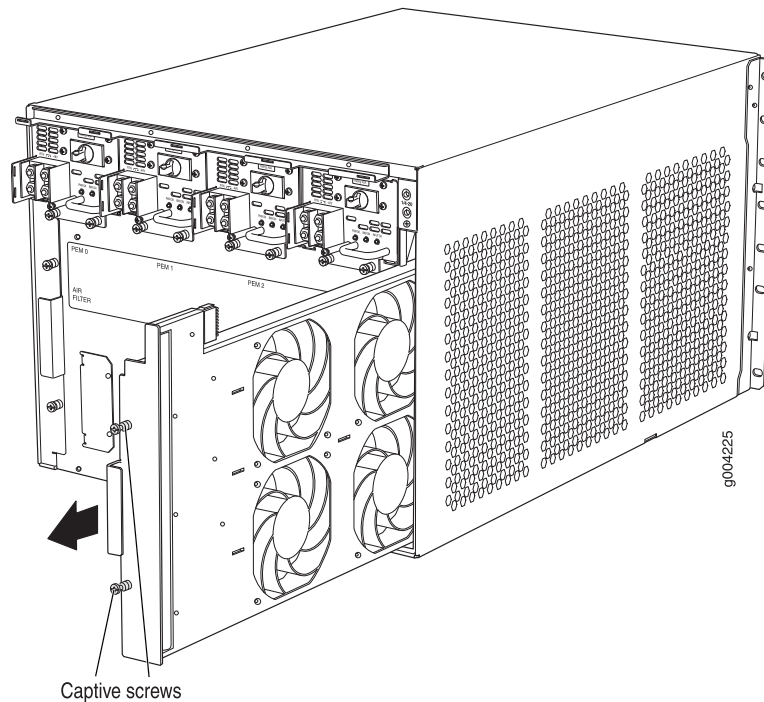

Removing the SCBs Before Installing the MX480 Router with a Lift

To remove the SCBs (see [Figure 54](#) on [page 192](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
4. Grasp the ejector handles, and slide the SCB about halfway out of the chassis.
5. Place one hand underneath the SCB to support it, and slide it completely out of the chassis. Place it on the antistatic mat.



CAUTION: Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

6. Repeat the procedure for each SCB.

Figure 54: Removing an SCB

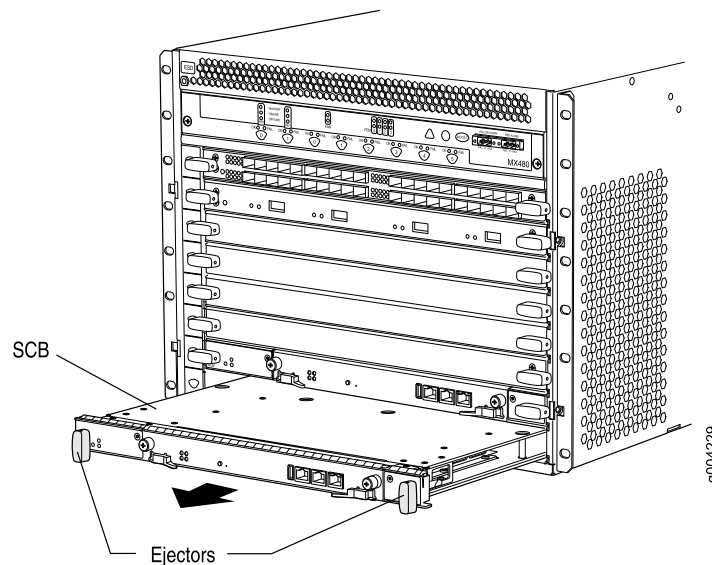

Removing the DPCs Before Installing the MX480 Router with a Lift

To remove a DPC (see [Figure 55 on page 193](#)):

1. Have ready an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC using an optical interface on the DPC that you are removing.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the DPC.
4. Grasp the handles, and slide the DPC straight out of the card cage halfway.
5. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.




CAUTION: The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack DPC on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

Figure 55: Removing a DPC

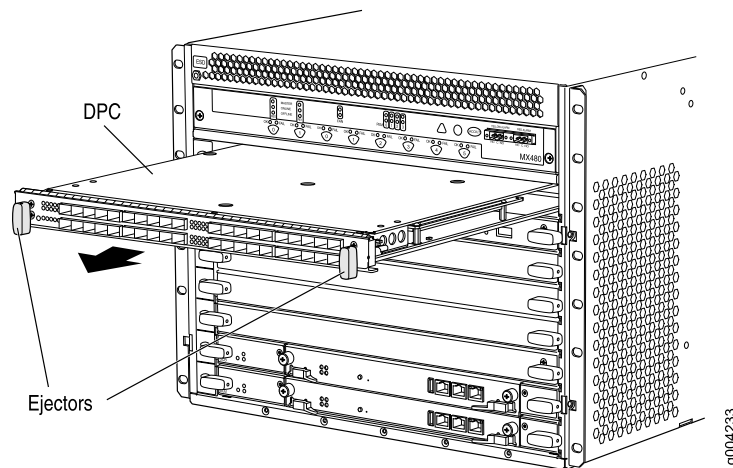

Removing the FPCs Before Installing the MX480 Router with a Lift

To remove an FPC (see [Figure 56 on page 194](#)):


1. Have ready an antistatic mat for the FPC. Also have ready rubber safety caps for each PIC using an optical interface on the PIC that you are removing.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
4. Grasp the handles, and slide the FPC straight out of the card cage halfway.
5. Place one hand around the front of the FPC and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Figure 56: Removing an FPC

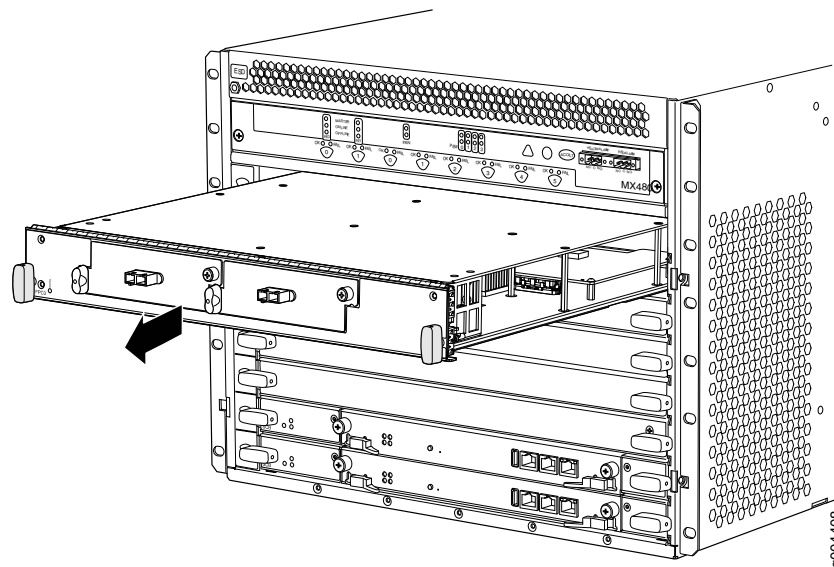

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Tools Required to Install the MX480 Router with a Mechanical Lift on page 188](#)
- [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
- [Reinstalling Components in the MX480 Router After Installing It with a Lift on page 196](#)

Installing the MX480 Router Using a Mechanical Lift

Because of the router's size and weight—up to 163.5 lb (74.2 kg) depending on the configuration—we strongly recommend that you install the router using a mechanical lift. To make the router light enough to install with a lift, you must first remove most components from the chassis.




CAUTION: Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.

To install the router using a lift (see [Figure 57 on page 195](#)):

1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.
2. Load the router onto the lift, making sure it rests securely on the lift platform.
3. Using the lift, position the router in front of the rack or cabinet, centering it in front of the mounting shelf.

4. Lift the chassis approximately 0.75 in. above the surface of the mounting shelf and position it as close as possible to the shelf.
5. Carefully slide the router onto the mounting shelf so that the bottom of the chassis and the mounting shelf overlap by approximately two inches.
6. Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets of the chassis align with the holes in the rack rails.
7. Move the lift away from the rack.
8. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
9. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

Figure 57: Installing the Router in the Rack

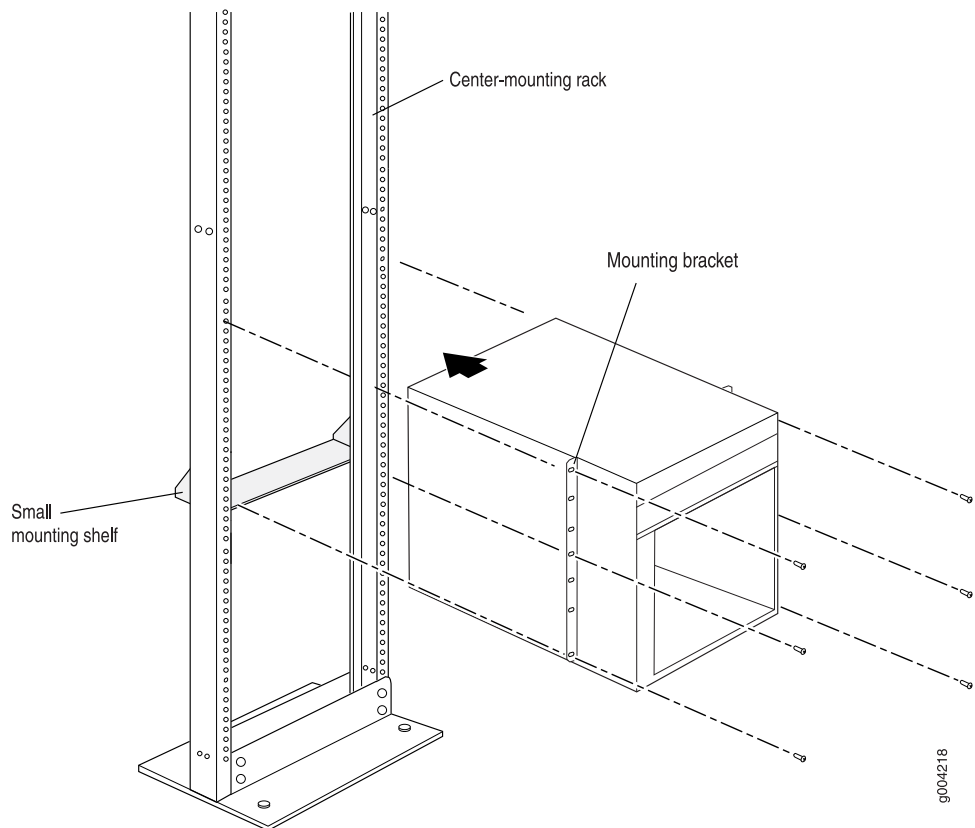



NOTE: This illustration depicts the router being installed in an open-frame rack. For an illustration of the mounting hardware required for a four-post rack or cabinet.

Related Documentation

- [MX480 Site Preparation Checklist on page 121](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Tools Required to Install the MX480 Router with a Mechanical Lift on page 188](#)
- [Removing Components from the MX480 Router Before Installing It with a Lift on page 189](#)
- [Reinstalling Components in the MX480 Router After Installing It with a Lift on page 196](#)

Reinstalling Components in the MX480 Router After Installing It with a Lift

After the router is installed in the rack, you reinstall the removed components before booting and configuring the router. The following procedures describe how to reinstall components in the chassis, first in the rear and then in the front:

1. [Reinstalling the Power Supplies After Installing the MX480 Router with a Lift on page 196](#)
2. [Reinstalling the Fan Tray After Installing the MX480 Router with a Lift on page 197](#)
3. [Reinstalling the SCBs After Installing the MX480 Router with a Lift on page 198](#)
4. [Reinstalling the DPCs After Installing the MX480 Router with a Lift on page 199](#)
5. [Reinstalling the FPCs After Installing the MX480 Router with a Lift on page 200](#)

Reinstalling the Power Supplies After Installing the MX480 Router with a Lift


Reinstall the rightmost power supply first and then work your way to the left. To reinstall the AC or DC power supplies, follow this procedure for each power supply (see [Figure 58 on page 197](#), which shows the installation of the DC power supplies):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. On an AC-powered router, switch the AC input switch on each power supply to the off (O) position. On a DC-powered router, Move the DC circuit breaker on each DC power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten the captive screws.

Figure 58: Reinstalling a Power Supply

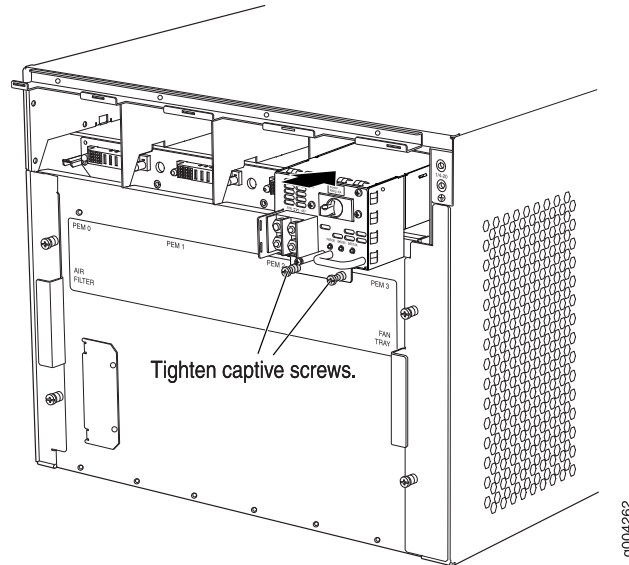


Reinstalling the Fan Tray After Installing the MX480 Router with a Lift

To reinstall the fan tray (see [Figure 59 on page 198](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray on each side, and insert it straight into the chassis. Note the correct orientation by the "this side up" label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 59: Reinstalling a Fan Tray

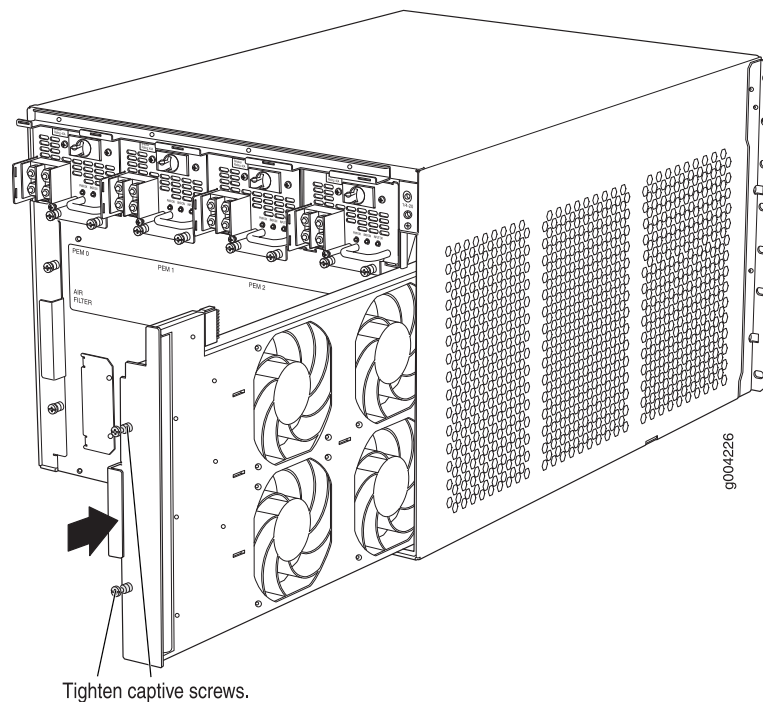

Reinstalling the SCBs After Installing the MX480 Router with a Lift


To reinstall an SCB (see [Figure 60](#) on page 199):



CAUTION: Before removing or replacing an SCB, ensure that the ejector handles are stored vertically and pressed toward the center of the SCB.

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles, and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in their proper position, horizontally and toward the center of the board. To avoid blocking the visibility of the LEDs position the ejectors over the PARK icon.

Figure 60: Reinstalling an SCB

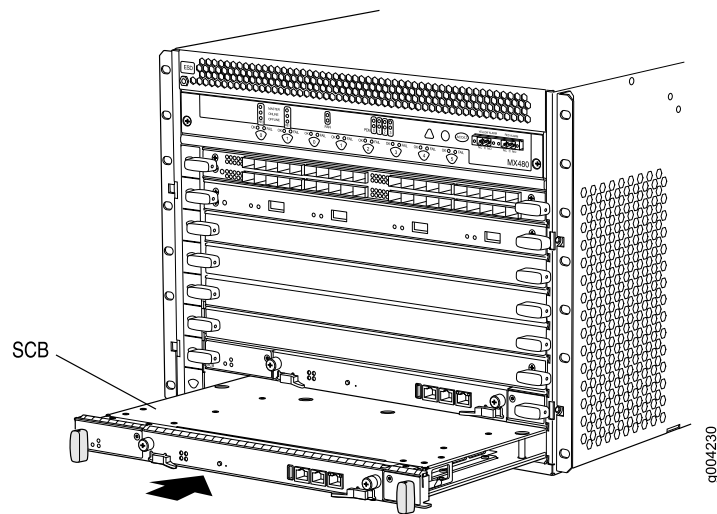


Reinstalling the DPCs After Installing the MX480 Router with a Lift

To reinstall a DPC (see [Figure 61](#) on page 200):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place, and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the DPC is fully seated.

Figure 61: Reinstalling a DPC

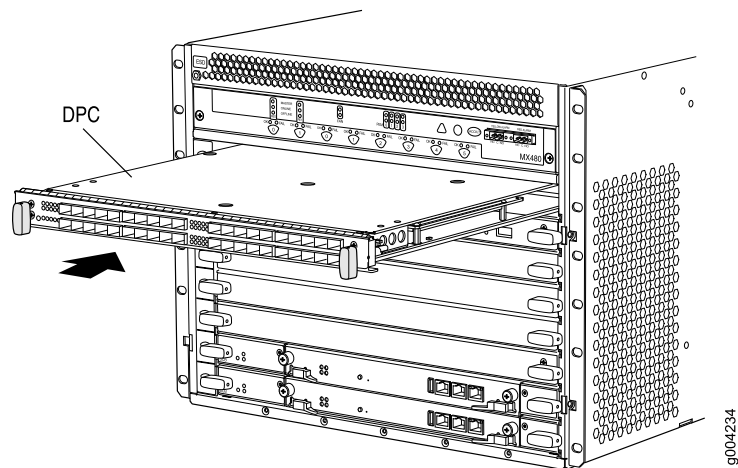


Reinstalling the FPCs After Installing the MX480 Router with a Lift

To reinstall an FPC (see [Figure 62 on page 201](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the two DPC slots on the router where the FPC will be installed.
4. Verify that each fiber-optic transceiver on the PIC is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the FPC so that the faceplate faces you.
6. Lift the FPC into place, and carefully align the sides of the FPC with the guides inside the card cage.
7. Slide the FPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the FPC is fully seated.

Figure 62: Reinstalling an FPC

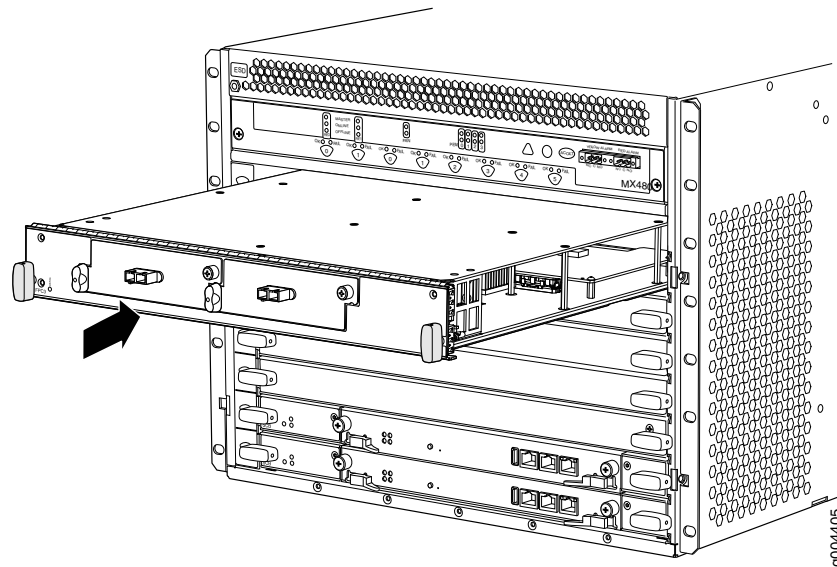

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Tools Required to Install the MX480 Router with a Mechanical Lift on page 188](#)
- [Removing Components from the MX480 Router Before Installing It with a Lift on page 189](#)
- [Installing the MX480 Router Using a Mechanical Lift on page 194](#)
- [Installing the MX480 Router Cable Management Bracket on page 215](#)

Tools Required to Install the MX480 Router Without a Mechanical Lift

To install the router, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 7/16-in. (11 mm) nut driver
- ESD grounding wrist strap

Related Documentation

- [Removing Components from the MX480 Router Before Installing It Without a Lift on page 202](#)
- [Installing the MX480 Chassis in the Rack Manually on page 208](#)
- [Reinstalling Components in the MX480 Router After Installing It Without a Lift on page 210](#)

Removing Components from the MX480 Router Before Installing It Without a Lift

If you cannot use a mechanical lift to install the router (the preferred method), you can install it manually. To make the router light enough to install manually, you first remove most components from the chassis. The procedures for removing components from the chassis are for initial installation only, and assume that you have not connected power cables to the router. The following procedures describe how to remove components from the chassis, first from the rear and then from the front:

1. [Removing the Power Supplies Before Installing the MX480 Router Without a Lift on page 202](#)
2. [Removing the Fan Tray Before Installing the MX480 Router Without a Lift on page 203](#)
3. [Removing the SCBs Before Installing the MX480 Router Without a Lift on page 204](#)
4. [Removing the DPCs Before Installing the MX480 Router Without a Lift on page 205](#)
5. [Removing the FPCs Before Installing the MX480 Router Without a Lift on page 206](#)

Removing the Power Supplies Before Installing the MX480 Router Without a Lift


Remove the leftmost power supply first and then work your way to the right. To remove the AC or DC power supplies for each power supply (see [Figure 63 on page 203](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. On an AC-powered router, switch the AC input switch on each power supply to the off (O) position. On a DC-powered router, Move the DC circuit breaker on each DC power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Loosen the captive screws on the bottom edge of the power supply faceplate.
4. Pull the power supply straight out of the chassis.

Figure 63: Removing a Power Supply Before Installing the Router

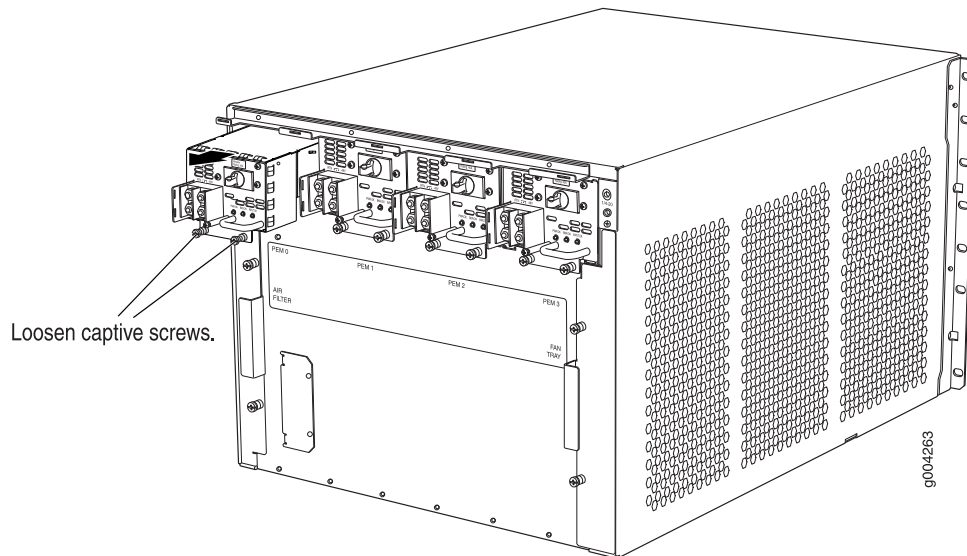


Removing the Fan Tray Before Installing the MX480 Router Without a Lift

To remove the fan tray (see [Figure 64 on page 204](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.
4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

Figure 64: Removing the Fan Tray

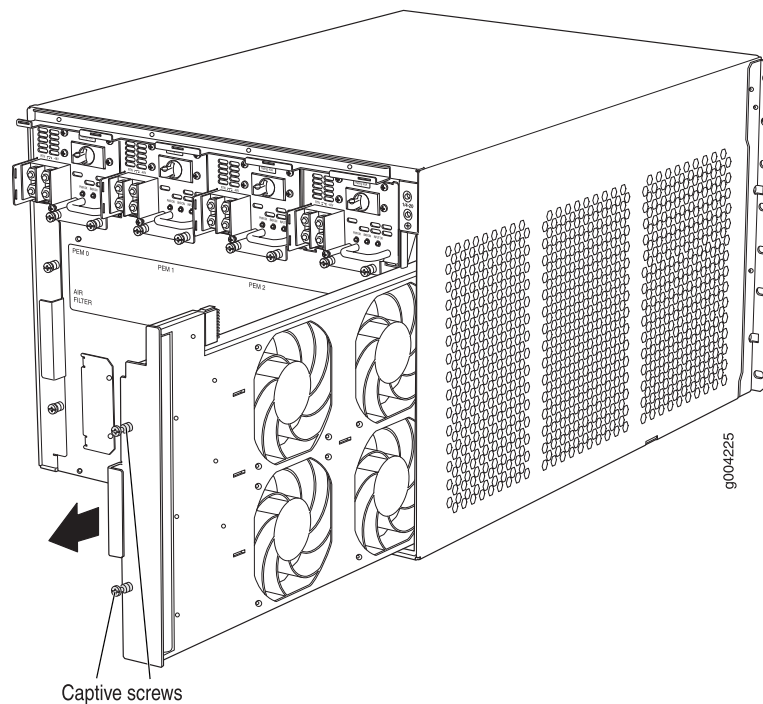

Removing the SCBs Before Installing the MX480 Router Without a Lift

To remove the SCBs (see Figure 65 on page 205):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
4. Grasp the ejector handles, and slide the SCB about halfway out of the chassis.
5. Place one hand underneath the SCB to support it, and slide it completely out of the chassis. Place it on the antistatic mat.



CAUTION: Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

6. Repeat the procedure for each SCB.

Figure 65: Removing an SCB

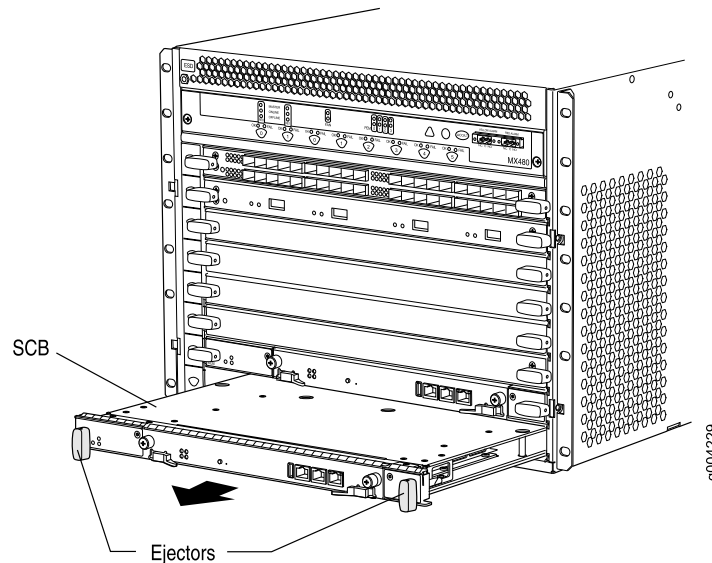

Removing the DPCs Before Installing the MX480 Router Without a Lift

To remove a DPC (see [Figure 66 on page 206](#)):

1. Have ready an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC using an optical interface on the DPC that you are removing.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the DPC.
4. Grasp the handles, and slide the DPC straight out of the card cage halfway.
5. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.




CAUTION: The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack DPC on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

Figure 66: Removing a DPC

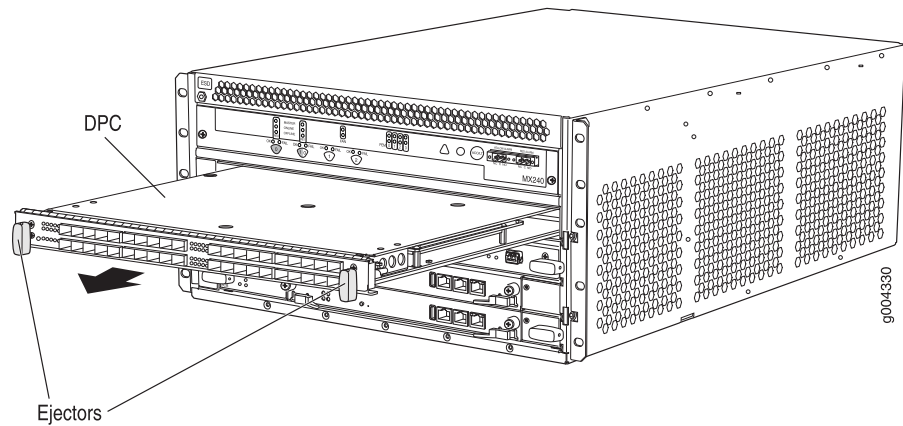

Removing the FPCs Before Installing the MX480 Router Without a Lift

To remove an FPC (see [Figure 67 on page 207](#)):


1. Have ready an antistatic mat for the FPC. Also have ready rubber safety caps for each PIC using an optical interface on the PIC that you are removing.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
4. Grasp the handles, and slide the FPC straight out of the card cage halfway.
5. Place one hand around the front of the FPC and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Figure 67: Removing an FPC

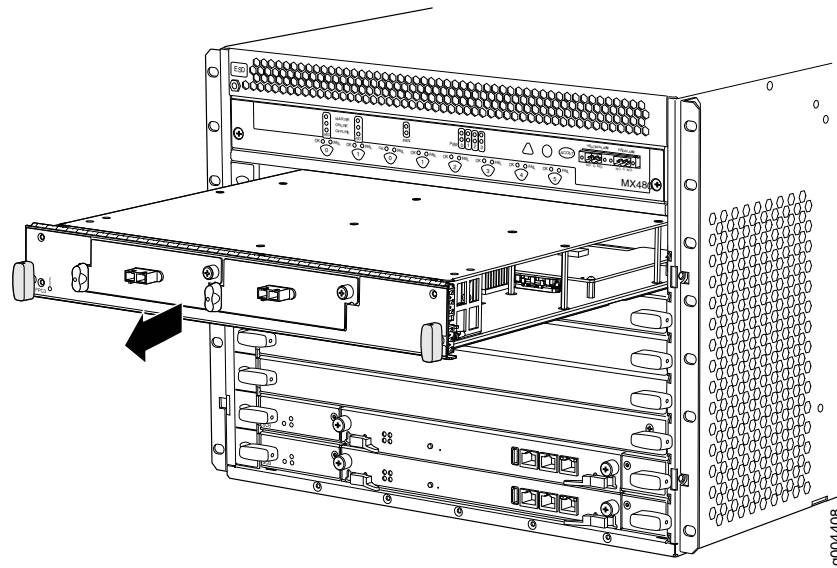**Related Documentation**

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)
- [Installing the MX480 Chassis in the Rack Manually on page 208](#)
- [Reinstalling Components in the MX480 Router After Installing It Without a Lift on page 210](#)

Installing the MX480 Chassis in the Rack Manually

To install the router in the rack (see [Figure 68 on page 209](#)):



CAUTION: If you are installing more than one router in a rack, install the lowest one first. Installing a router in an upper position in a rack or cabinet requires a lift.



CAUTION: Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.



CAUTION: Lifting the chassis and mounting it in a rack requires two people. The empty chassis weighs approximately 65.5 lb (29.7 kg).


1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.
2. Position the router in front of the rack or cabinet, centering it in front of the mounting shelf. Use a pallet jack if one is available.
3. With one person on each side, hold onto the bottom of the chassis and carefully lift it onto the mounting shelf.



WARNING: To prevent injury, keep your back straight and lift with your legs, not your back. Avoid twisting your body as you lift. Balance the load evenly, and be sure that your footing is solid.

4. Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets of the chassis align with the holes in the rack rails.
5. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
6. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

Figure 68: Installing the Router in the Rack

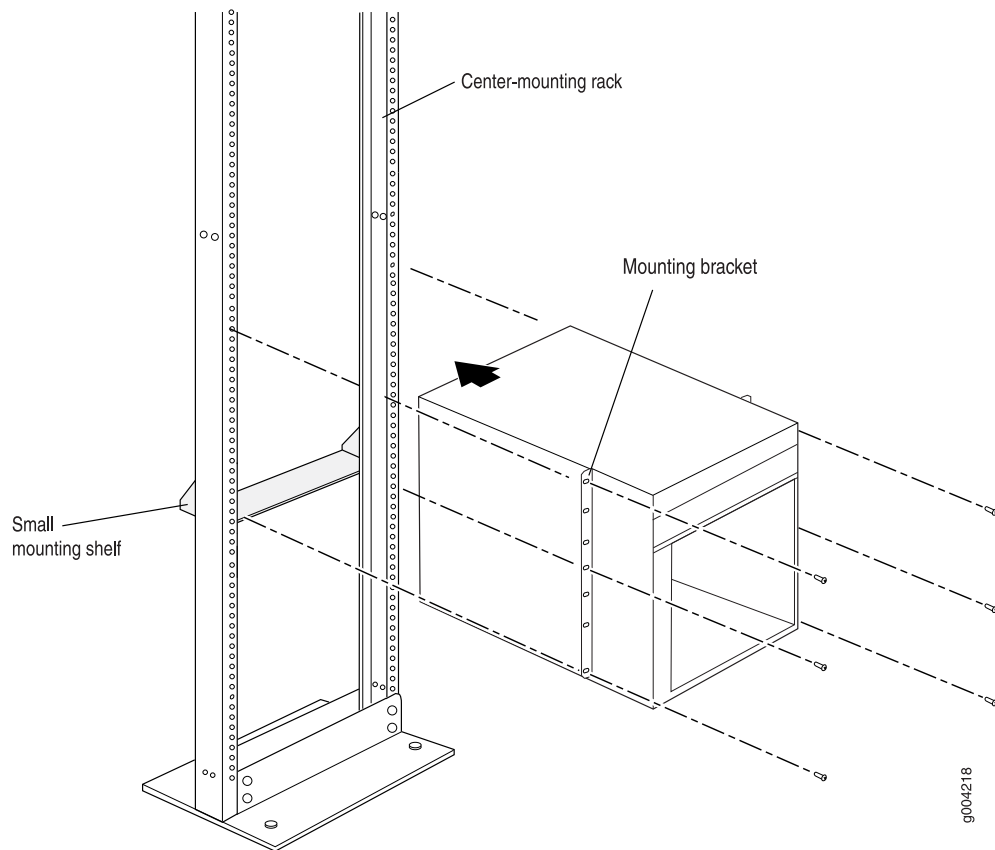

NOTE: This illustration depicts the router being installed in an open-frame rack.

Related Documentation

- [MX480 Site Preparation Checklist on page 121](#)
- [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)
- [Removing Components from the MX480 Router Before Installing It Without a Lift on page 202](#)
- [Reinstalling Components in the MX480 Router After Installing It Without a Lift on page 210](#)

Reinstalling Components in the MX480 Router After Installing It Without a Lift

After the router is installed in the rack, you reinstall the removed components before booting and configuring the router. The following procedures describe how to reinstall components in the chassis, first in the rear and then in the front:

1. [Reinstalling the Power Supplies After Installing the MX480 Router Without a Lift on page 210](#)
2. [Reinstalling the Fan Tray After Installing the MX480 Router Without a Lift on page 211](#)
3. [Reinstalling the SCBs After Installing the MX480 Router Without a Lift on page 212](#)
4. [Reinstalling the DPCs After Installing the MX480 Router Without a Lift on page 213](#)
5. [Reinstalling the FPCs After Installing the MX480 Router Without a Lift on page 214](#)

Reinstalling the Power Supplies After Installing the MX480 Router Without a Lift


Reinstall the rightmost power supply first, and then work your way to the left. To reinstall the AC or DC power supplies, follow this procedure for each power supply (see [Figure 69 on page 211](#), which shows the installation of the DC power supplies):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. On an AC-powered router, switch the AC input switch on each power supply to the off (O) position. On a DC-powered router, Move the DC circuit breaker on each DC power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten the captive screws.

Figure 69: Reinstalling a Power Supply

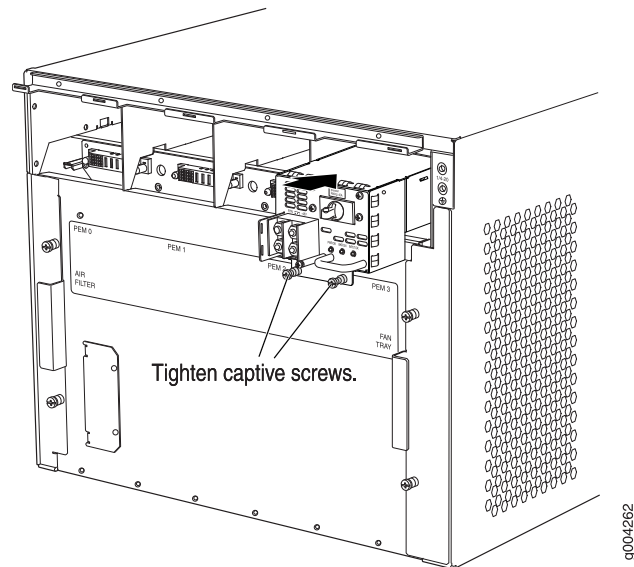


Reinstalling the Fan Tray After Installing the MX480 Router Without a Lift

To reinstall the fan tray (see [Figure 70 on page 212](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray on each side, and insert it straight into the chassis. Note the correct orientation by the "this side up" label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 70: Reinstalling a Fan Tray

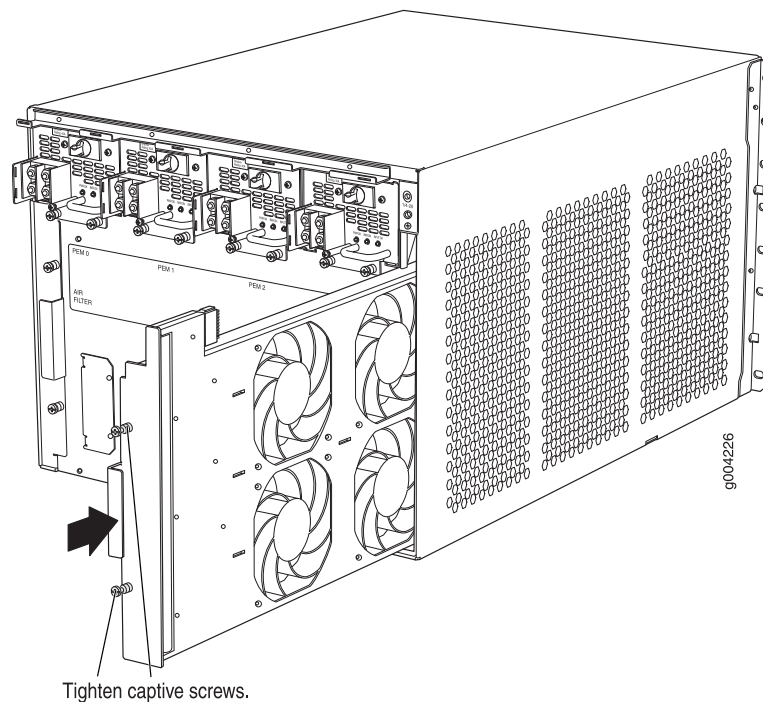

Reinstalling the SCBs After Installing the MX480 Router Without a Lift


To reinstall an SCB (see [Figure 71](#) on page 213):



CAUTION: Before removing or replacing an SCB, ensure that the ejector handles are stored vertically and pressed toward the center of the SCB.

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles, and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in their proper position, horizontally and toward the center of the board. To avoid blocking the visibility of the LEDs position the ejectors over the PARK icon.

Figure 71: Reinstalling an SCB

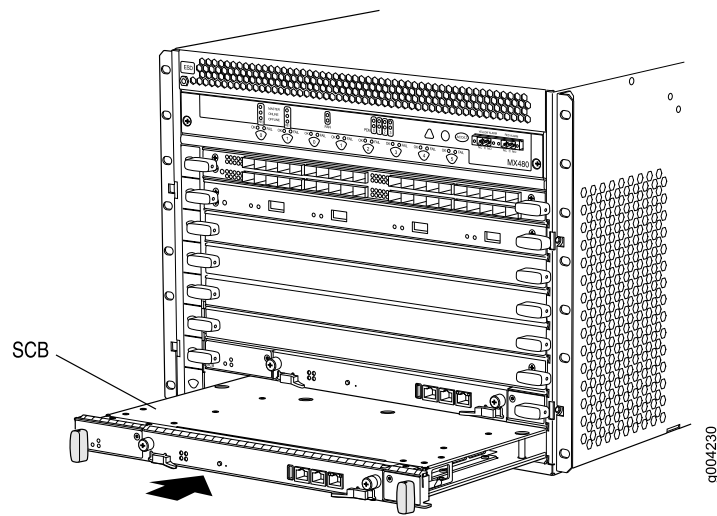


Reinstalling the DPCs After Installing the MX480 Router Without a Lift

To reinstall a DPC (see [Figure 72 on page 214](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place, and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the DPC is fully seated.

Figure 72: Reinstalling a DPC

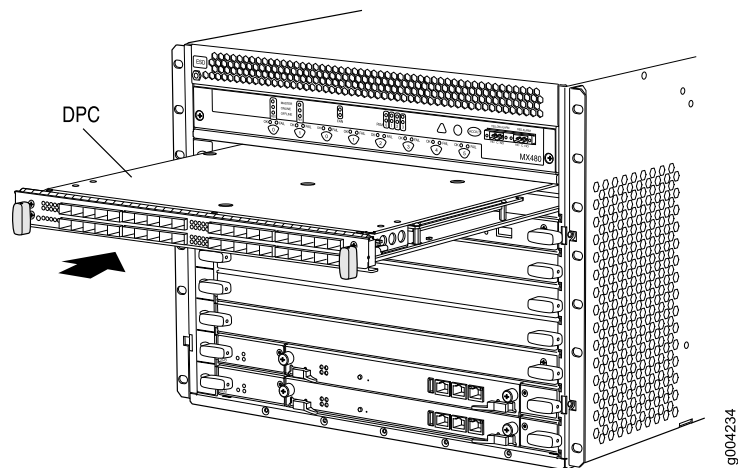


Reinstalling the FPCs After Installing the MX480 Router Without a Lift

To reinstall a DPC (see [Figure 73 on page 215](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the two DPC slots on the router where the FPC will be installed.
4. Verify that each fiber-optic transceiver on the PIC is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the FPC so that the faceplate faces you.
6. Lift the FPC into place, and carefully align the sides of the FPC with the guides inside the card cage.
7. Slide the FPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the FPC is fully seated.

Figure 73: Reinstalling an FPC

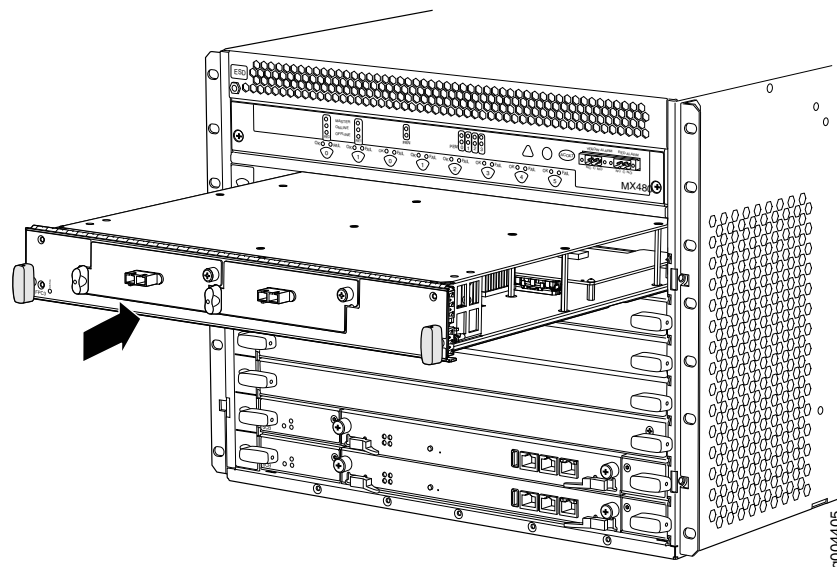

Related Documentation


- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Tools Required to Install the MX480 Router Without a Mechanical Lift on page 201](#)
- [Removing Components from the MX480 Router Before Installing It Without a Lift on page 202](#)
- [Installing the MX480 Chassis in the Rack Manually on page 208](#)

Installing the MX480 Router Cable Management Bracket

The cable management brackets attach to both sides of the router. To install the cable management brackets (see [Figure 74 on page 216](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Position the cable management brackets on the front sides of the chassis.
3. Insert the tabs into the slots.
4. Tighten the captive screws completely.

Figure 74: Installing the Cable Management Brackets

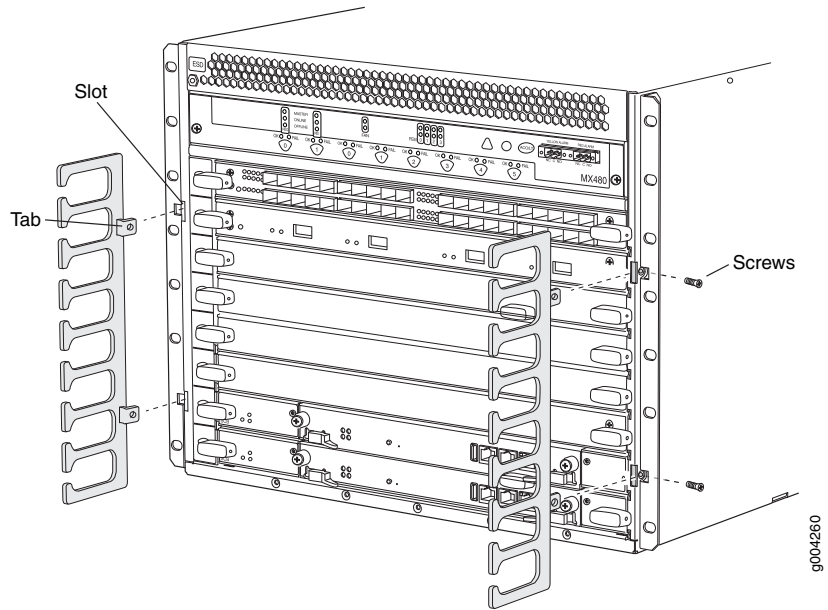

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting the MX480 Router to Power

- Tools and Parts Required for MX480 Router Grounding and Power Connections on page 217
- Grounding the MX480 Router on page 218
- Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies on page 219
- Powering On an AC-Powered MX480 Router on page 220
- Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies on page 221
- Powering On a DC-Powered MX480 Router with Normal Capacity Power Supplies on page 224
- Powering Off the MX480 Router on page 226
- Connecting an MX480 AC Power Supply Cord on page 226
- Connecting an MX480 DC Power Supply Cable on page 227

Tools and Parts Required for MX480 Router Grounding and Power Connections

To ground and provide power to the router, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 2.5-mm flat-blade (–) screwdriver
- 7/16-in. (11 mm) hexagonal-head external drive socket wrench, or nut driver, with a torque range between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm), for tightening nuts to terminal studs on each power supply on a DC-powered router.
- Wire cutters
- Electrostatic discharge (ESD) grounding wrist strap



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs. Use an appropriately-sized driver or socket wrench, with a maximum torque capacity

of 50 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

**Related
Documentation**

- [Grounding the MX480 Router on page 218](#)
- [MX480 Chassis Grounding Specifications on page 127](#)
- [Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies on page 219](#)
- [Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies on page 221](#)

Grounding the MX480 Router

You ground the router by connecting a grounding cable to earth ground and then attaching it to the chassis grounding points using UNC 1/4-20 two screws. You must provide the grounding cable (cable lugs are supplied with the router). To ground the router:

1. Verify that a licensed electrician has attached the cable lug provided with the router to the grounding cable.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Ensure that all grounding surfaces are clean and brought to a bright finish before grounding connections are made.
4. Connect the grounding cable to a proper earth ground.
5. Detach the ESD grounding strap from the site ESD grounding point.
6. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Place the grounding cable lug over the grounding points on the upper rear of the chassis. The bolts are sized for UNC 1/4-20 bolts.
8. Secure the grounding cable lug to the grounding points, first with the washers, then with the screws.
9. Dress the grounding cable and verify that it does not touch or block access to router components, and that it does not drape where people could trip on it.

- Related Documentation**
- [MX480 Chassis Grounding Specifications on page 127](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Connecting Power to an AC-Powered MX480 Router with Normal-Capacity Power Supplies



CAUTION: Do not mix AC and DC power supplies within the same router. Damage to the router might occur.

You connect AC power to the router by attaching power cords from the AC power sources to the AC appliance inlets located on the power supplies. For power cord and AC power specifications, see [“AC Power Cord Specifications for the MX480 Router” on page 153](#).

To connect the AC power cords to the router (see [Figure 75 on page 220](#)):


1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Locate the power cords shipped with the router, which should have a plug appropriate for your geographical location (see [“AC Power Cord Specifications for the MX480 Router” on page 153](#)).
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Connect the power cord to the power supply.
5. Insert the power cord plug into an external AC power source receptacle.



NOTE: Each power supply must be connected to a dedicated AC power feed and a dedicated external circuit breaker.

6. Route the power cord along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cord in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.
7. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
8. Repeat Step 2 through Step 6 for the remaining power supplies.

Figure 75: Connecting AC Power to the Router (110V)

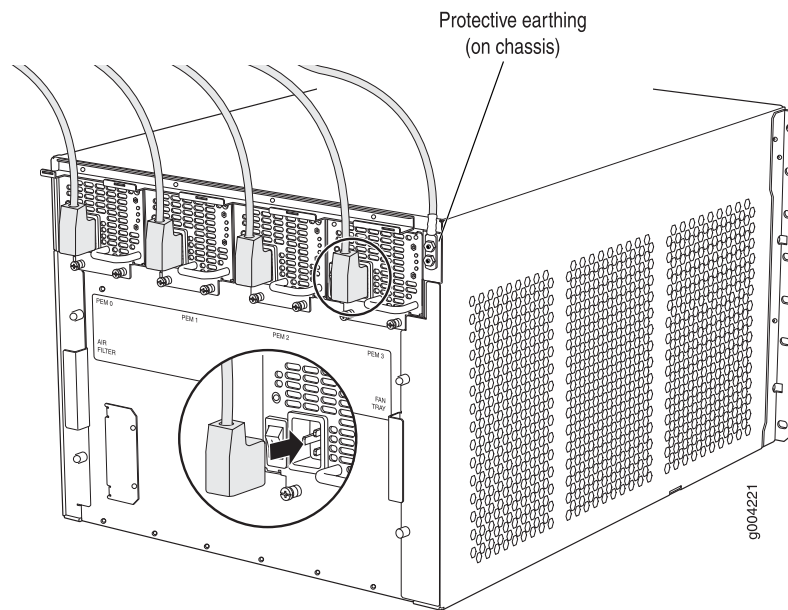**Related Documentation**

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Powering On an AC-Powered MX480 Router

To power on an AC-powered router:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Verify that the power supplies are fully inserted in the chassis.
3. Verify that each AC power cord is securely inserted into its appliance inlet.
4. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
5. Turn on the power to the external management device.
6. Switch on the dedicated customer site circuit breakers for the power supplies. Follow the ESD and safety instructions for your site.
7. Move the AC input switch on each power supply to the on (I) position and observe the status LEDs on each power supply faceplate. If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures.



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on. After powering on a power supply, wait at least 60 seconds before turning it off.

If the system is completely powered off when you power on the power supply, the Routing Engine (or RCB) boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI `request system halt` command.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

8. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Connecting the MX480 Router to Management and Alarm Devices on page 231](#)
- [Replacing an MX480 AC Power Supply on page 367](#)

Connecting Power to a DC-Powered MX480 Router with Normal Capacity Power Supplies



CAUTION: Do not mix AC and DC power supplies within the same router. Damage to the router might occur.



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

You connect DC power to the router by attaching power cables from the external DC power sources to the terminal studs on the power supply faceplates. You must provide the power cables (the cable lugs are supplied with the router).

To connect the DC source power cables to the router:

1. Switch off the dedicated customer site circuit breakers. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the DC circuit breaker on the power supply faceplate to the off (O) position.
4. Remove the clear plastic cover protecting the terminal studs on the faceplate.
5. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the **-48V** and **RTN** DC cables to chassis ground:
 - The cable with very large resistance (indicating an open circuit) to chassis ground is **-48V**.
 - The cable with very low resistance (indicating a closed circuit) to chassis ground is **RTN**.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (-) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.

6. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
7. Secure each power cable lug to the terminal studs, first with the flat washer, then with the nut (see [Figure 76 on page 224](#)). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)
 - a. Secure each positive (+) DC source power cable lug to the **RTN** (return) terminal.
 - b. Secure each negative (-) DC source power cable lug to the **-48V** (input) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin

freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.




CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

The DC power supplies in slots **PEM0** and **PEM1** must be powered by dedicated power feeds derived from feed **A**, and the DC power supplies in slots **PEM2** and **PEM3** must be powered by dedicated power feeds derived from feed **B**. This configuration provides the commonly deployed **A/B** feed redundancy for the system.

8. Route the power cables along the cable restraint toward the left or right corner of the chassis. If needed, thread plastic cable ties, which you must provide, through the openings on the cable restraint to hold the power cables in place.
9. Replace the clear plastic cover over the terminal studs on the faceplate.
10. Verify that the power cables are connected correctly, that they are not touching or blocking access to router components, and that they do not drape where people could trip on them.
11. Repeat Steps 3 through 10 for the remaining power supplies.

Figure 76: Connecting DC Power to the Router

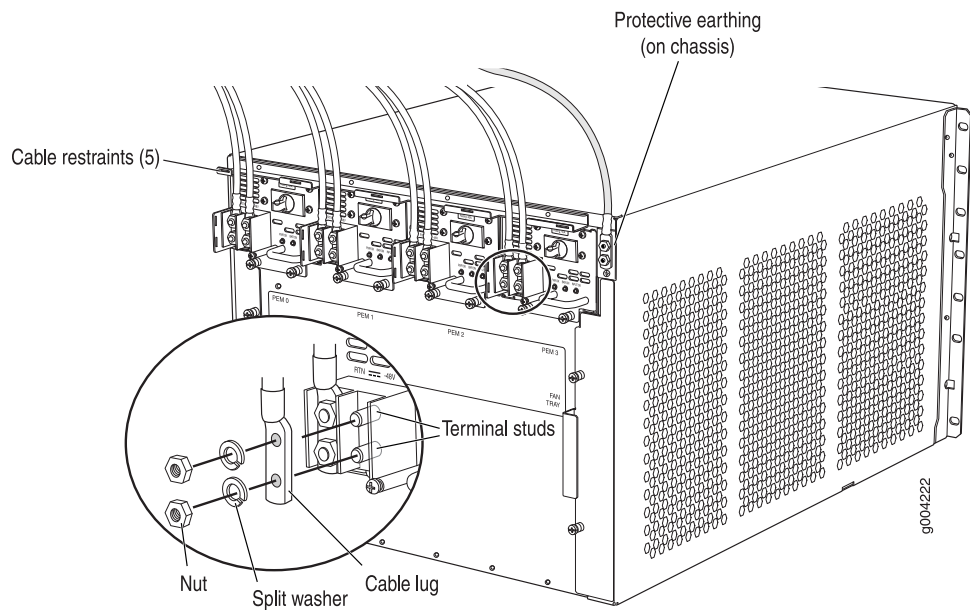

Related Documentation

- [DC Power Cable Specifications for the MX480 Router on page 173](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Powering On a DC-Powered MX480 Router with Normal Capacity Power Supplies

To power on a DC-powered router:

1. Verify that an external management device is connected to one of the Routing Engine ports (**CONSOLE**, **AUX**, or **ETHERNET**).
2. Turn on the power to the external management device.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Verify that the power supplies are fully inserted in the chassis.
5. Verify that the source power cables are connected to the appropriate terminal: the positive (+) source cable to the return terminal (labeled **RETURN**) and the negative (-) source cable to the input terminal (labeled **-48V**).
6. Switch on the dedicated customer site circuit breakers to provide power to the DC power cables.

7. Check the **INPUT OK** LED is lit steadily green to verify that power is present.
8. If power is not present:
 - Verify that the fuse is installed correctly and turn on the breaker at the battery distribution fuse board or fuse bay.
 - Check the voltage with a meter at the terminals of the power supply for correct voltage level and polarity.
9. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures described in [“Replacing an MX480 DC Power Supply” on page 370](#).

10. Verify that the **BREAKER ON** LED is lit green steadily.
11. Verify that the **PWR OK** LED is lit green steadily, indicating the power supply is correctly installed and functioning normally.

If the power supply is not functioning normally, repeat the installation and cabling procedures described in [“Replacing an MX480 DC Power Supply” on page 370](#).



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on. After powering on a power supply, wait at least 60 seconds before turning it off.

If the system is completely powered off when you power on the power supply, the Routing Engine (or RCB) boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI request system halt command.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the show chassis command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

12. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.

- Related Documentation**
- [Installing an MX480 DC High-Capacity Power Supply](#)
 - [Connecting the MX480 Router to Management and Alarm Devices on page 231](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Powering Off the MX480 Router



NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.

To power off the router:

1. On the external management device connected to the Routing Engine, issue the **request system halt both-routing-engines** operational mode command. The command shuts down the Routing Engines cleanly, so their state information is preserved. (If the router contains only one Routing Engine, issue the **request system halt** command.)

```
user@host> request system halt both-routing-engines
```

2. Wait until a message appears on the console confirming that the operating system has halted. For more information about the command, see the [CLI Explorer](#).
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power supply faceplate to the off (O) position.

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Connecting an MX480 AC Power Supply Cord

To connect the AC power cord:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see [“AC Power Cord Specifications for the MX480 Router” on page 153](#)).
2. Connect the power cord to the power supply.
3. Route the power cord along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cord in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.

4. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
5. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker for the power supply. Follow the ESD and connection instructions for your site.
6. Switch the AC input switch on the each power supply to the on (—) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Replacing an MX480 AC Power Supply on page 367](#)
- [Disconnecting an MX480 AC Power Supply Cord on page 376](#)
- [AC Electrical Specifications for the MX480 Router on page 139](#)

Connecting an MX480 DC Power Supply Cable



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To connect a power cable for a DC power supply:

1. Locate a replacement power cable that meets the specifications defined in “[DC Power Cable Specifications for the MX480 Router](#)” on page 173.
2. Verify that a licensed electrician has attached a cable lug to the replacement power cable.
3. Verify that the **INPUT OK** LED is off.
4. Secure the power cable lug to the terminal studs, first with the flat washer, then with the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut (see [Figure 77 on page 228](#)). Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)




CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut

is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

Figure 77: Connecting Power Cables to the DC Power Supply

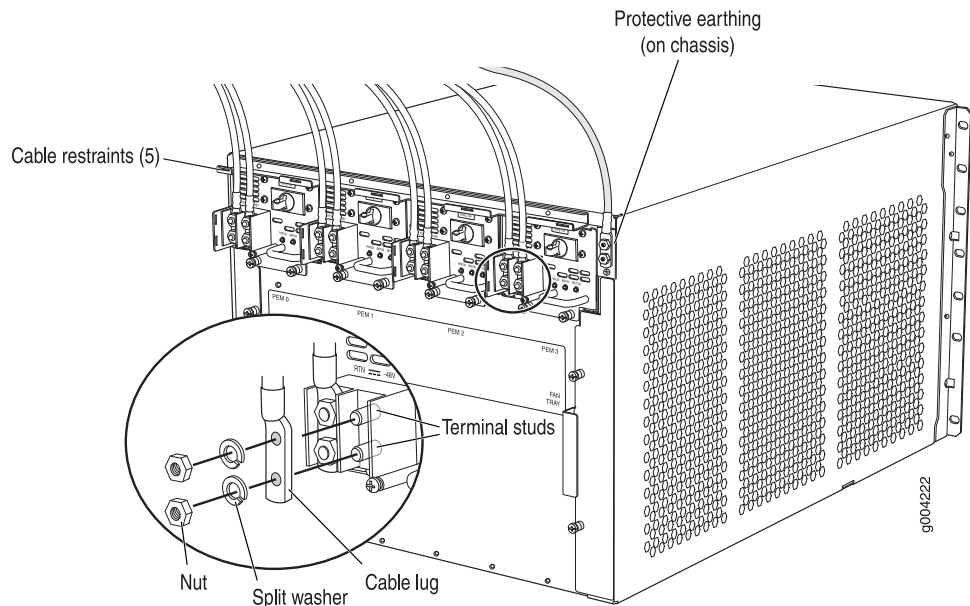

5. Route the power cable along the cable restraint toward the left or right corner of the chassis. If needed, thread plastic cable ties, which you must provide, through the openings on the cable restraint to hold the power cable in place.
6. Verify that the DC power cable is connected correctly, that it does not touch or block access to router components, and that it does not drape where people could trip on it.
7. Replace the clear plastic cover over the terminal studs on the faceplate.
8. Attach the power cable to the DC power source.

9. Turn on the dedicated customer site circuit breaker to the power supply.
10. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.

**Related
Documentation**

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Replacing an MX480 DC Power Supply on page 370](#)
- [Disconnecting an MX480 DC Power Supply Cable on page 377](#)
- [MX480 DC Power Supply Description on page 102](#)

CHAPTER 18

Connecting the MX480 Router to the Network

- [Tools and Parts Required for MX480 Router Connections on page 231](#)
- [Connecting the MX480 Router to Management and Alarm Devices on page 231](#)
- [Connecting the MX480 Router to a Network for Out-of-Band Management on page 234](#)
- [Connecting the MX480 Router to a Management Console or Auxiliary Device on page 235](#)
- [Connecting the MX480 Router to an External Alarm-Reporting Device on page 236](#)
- [Connecting DPC, MPC, MIC, or PIC Cables to the MX480 Router on page 237](#)
- [Connecting the Alarm Relay Wires to the MX480 Craft Interface on page 239](#)

Tools and Parts Required for MX480 Router Connections

To connect the router to management devices and line cards, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 2.5-mm flat-blade (–) screwdriver
- 2.5-mm Phillips (+) screwdriver
- Wire cutters
- Electrostatic discharge (ESD) grounding wrist strap

Related Documentation

- [Connecting the MX480 Router to Management and Alarm Devices on page 231](#)

Connecting the MX480 Router to Management and Alarm Devices

- [Connecting the MX480 Router to a Network for Out-of-Band Management on page 232](#)
- [Connecting the MX480 Router to a Management Console or Auxiliary Device on page 232](#)
- [Connecting the MX480 Router to an External Alarm-Reporting Device on page 233](#)

Connecting the MX480 Router to a Network for Out-of-Band Management

To connect the Routing Engine to a network for out-of-band management, connect an Ethernet cable with RJ-45 connectors to the **ETHERNET** port on the Routing Engine. One Ethernet cable is provided with the router. To connect to the **ETHERNET** port on the Routing Engine:

1. Turn off the power to the management device.
2. Plug one end of the Ethernet cable (Figure 79 on page 232 shows the connector) into the **ETHERNET** port on the Routing Engine. Figure 78 on page 232 shows the port.
3. Plug the other end of the cable into the network device.

Figure 78: Ethernet Port


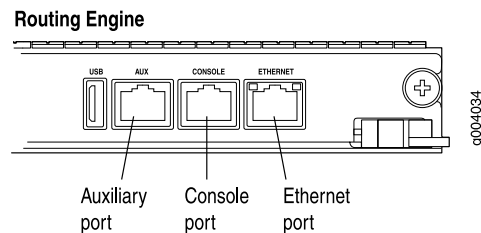


Figure 79: Routing Engine Ethernet Cable Connector



See Also • [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting the MX480 Router to a Management Console or Auxiliary Device

To use a system console to configure and manage the Routing Engine, connect it to the appropriate **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. One serial cable with an RJ-45 connector and a DB-9 connector is provided with the router. To connect a device to the **CONSOLE** port and another device to the **AUX** port, you must supply an additional cable.

To connect a management console or auxiliary device:

1. Turn off the power to the console or auxiliary device.
2. Plug the RJ-45 end of the serial cable (Figure 81 on page 233 shows the connector) into the **AUX** port or **CONSOLE** port on the Routing Engine. Figure 80 on page 233 shows the ports.

3. Plug the female DB-9 end into the device's serial port.

**NOTE:**

For console devices, configure the serial port to the following values:

- Baud rate—9600
- Parity—N
- Data bits—8
- Stop bits—1
- Flow control—none

Figure 80: Auxiliary and Console Ports


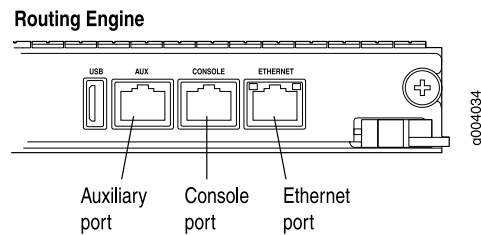


Figure 81: Routing Engine Console and Auxiliary Cable Connector



- See Also**
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 134](#)
 - [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting the MX480 Router to an External Alarm-Reporting Device

To connect the router to external alarm-reporting devices, attach wires to the **RED** and **YELLOW** relay contacts on the craft interface. (See [Figure 82 on page 234](#).) A system condition that triggers the red or yellow alarm LED on the craft interface also activates the corresponding alarm relay contact.


The terminal blocks that plug into the alarm relay contacts are supplied with the router. They accept wire of any gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²), which is not provided. Use the gauge of wire appropriate for the external device you are connecting.

To connect an external device to an alarm relay contact (see [Figure 82 on page 234](#)):

1. Prepare the required length of wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²).
2. While the terminal block is not plugged into the relay contact, use a 2.5-mm flat-blade screwdriver to loosen the small screws on its side. With the small screws on its side facing left, insert wires into the slots in the front of the block based on the wiring for the external device. Tighten the screws to secure the wire.
3. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
4. Attach the other end of the wires to the external device.

To attach a reporting device for the other kind of alarm, repeat the procedure.

Figure 82: Alarm Relay Contacts

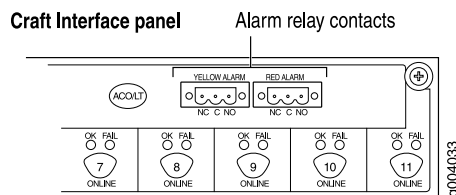

- See Also**
- [Tools and Parts Required for MX480 Router Connections on page 231](#)

Related Documentation

- [Tools and Parts Required for MX480 Router Connections on page 231](#)
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 134](#)

Connecting the MX480 Router to a Network for Out-of-Band Management

To connect the Routing Engine to a network for out-of-band management, connect an Ethernet cable with RJ-45 connectors to the **ETHERNET** port on the Routing Engine. One Ethernet cable is provided with the router. To connect to the **ETHERNET** port on the Routing Engine:

1. Turn off the power to the management device.
2. Plug one end of the Ethernet cable ([Figure 79 on page 232](#) shows the connector) into the **ETHERNET** port on the Routing Engine. [Figure 78 on page 232](#) shows the port.
3. Plug the other end of the cable into the network device.

Figure 83: Ethernet Port


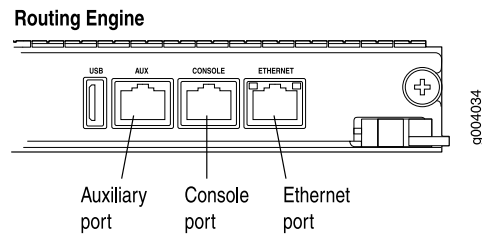


Figure 84: Routing Engine Ethernet Cable Connector



Related Documentation

- [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting the MX480 Router to a Management Console or Auxiliary Device

To use a system console to configure and manage the Routing Engine, connect it to the appropriate **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. One serial cable with an RJ-45 connector and a DB-9 connector is provided with the router. To connect a device to the **CONSOLE** port and another device to the **AUX** port, you must supply an additional cable.

To connect a management console or auxiliary device:

1. Turn off the power to the console or auxiliary device.
2. Plug the RJ-45 end of the serial cable ([Figure 81 on page 233](#) shows the connector) into the **AUX** port or **CONSOLE** port on the Routing Engine. [Figure 80 on page 233](#) shows the ports.
3. Plug the female DB-9 end into the device's serial port.



NOTE:

For console devices, configure the serial port to the following values:

- Baud rate—9600
- Parity—N
- Data bits—8
- Stop bits—1
- Flow control—none

Figure 85: Auxiliary and Console Ports


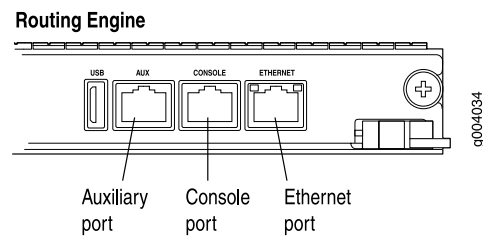


Figure 86: Routing Engine Console and Auxiliary Cable Connector



Related Documentation

- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 134](#)
- [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting the MX480 Router to an External Alarm-Reporting Device

To connect the router to external alarm-reporting devices, attach wires to the **RED** and **YELLOW** relay contacts on the craft interface. (See [Figure 82 on page 234](#).) A system condition that triggers the red or yellow alarm LED on the craft interface also activates the corresponding alarm relay contact.


The terminal blocks that plug into the alarm relay contacts are supplied with the router. They accept wire of any gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²), which is not provided. Use the gauge of wire appropriate for the external device you are connecting.

To connect an external device to an alarm relay contact (see [Figure 82 on page 234](#)):

1. Prepare the required length of wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²).
2. While the terminal block is not plugged into the relay contact, use a 2.5-mm flat-blade screwdriver to loosen the small screws on its side. With the small screws on its side facing left, insert wires into the slots in the front of the block based on the wiring for the external device. Tighten the screws to secure the wire.
3. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
4. Attach the other end of the wires to the external device.

To attach a reporting device for the other kind of alarm, repeat the procedure.

Figure 87: Alarm Relay Contacts

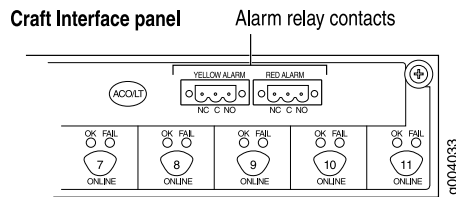

Related Documentation

- [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting DPC, MPC, MIC, or PIC Cables to the MX480 Router

To connect the DPCs, MPCs, MICs, or PICs to the network (see [Figure 88 on page 238](#) and [Figure 89 on page 238](#)):

1. Have ready a length of the type of cable used by the component. For cable specifications, see the *MX Series Interface Module Reference*.
2. Remove the rubber safety plug from the cable connector port.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the faceplate.



NOTE: The XFP cages and optics on the components are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place.

4. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.

Figure 88: Attaching a Cable to a DPC


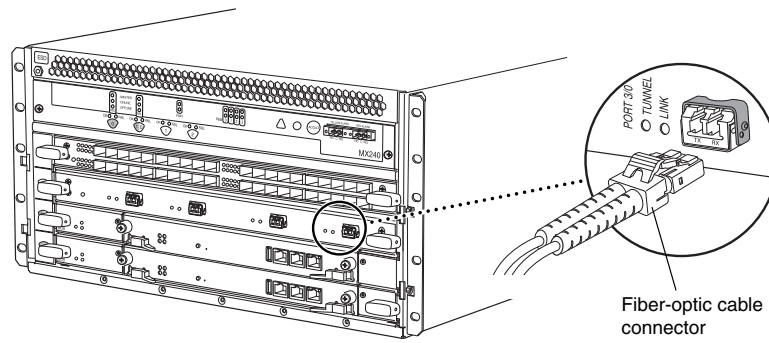


Figure 89: Attaching a Cable to a MIC

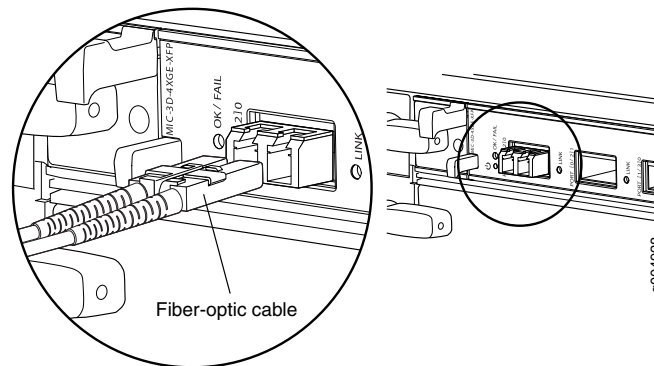

Related Documentation


- [Tools and Parts Required for MX480 Router Connections on page 231](#)

Connecting the Alarm Relay Wires to the MX480 Craft Interface

To connect the alarm relay wires between a router and an alarm-reporting device (see [Figure 90 on page 239](#)):

1. Prepare the required length of replacement wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²).
2. Insert the replacement wires into the slots in the front of the block. Use a 2.5-mm flat-blade screwdriver to tighten the screws and secure the wire.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
5. Attach the other end of the wires to the external device.

Figure 90: Alarm Relay Contacts

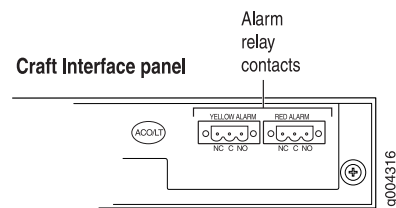

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Disconnecting the Alarm Relay Wires from the MX480 Craft Interface on page 287](#)
- [Removing the MX480 Craft Interface on page 288](#)
- [Installing the MX480 Craft Interface on page 251](#)

Initially Configuring the MX480 Router

- [Initially Configuring the MX480 Router on page 241](#)

Initially Configuring the MX480 Router

The MX240 router is shipped with Junos OS preinstalled and ready to be configured when the MX240 router is powered on. There are three copies of the software: one on a CompactFlash card in the Routing Engine, one on a rotating hard disk in the Routing Engine, and one on a USB flash drive that can be inserted into the slot in the Routing Engine faceplate.

When the router boots, it first attempts to start the image on the USB flash drive. If a USB flash drive is not inserted into the Routing Engine or the attempt otherwise fails, the router next tries the CompactFlash card (if installed), and finally the hard disk.

You configure the router by issuing Junos OS command-line interface (CLI) commands, either on a console device attached to the **CONSOLE** port on the Routing Engine, or over a telnet connection to a network connected to the **ETHERNET** port on the Routing Engine.

Gather the following information before configuring the router:

- Name the router will use on the network
- Domain name the router will use
- IP address and prefix length information for the Ethernet interface
- IP address of a default router
- IP address of a DNS server
- Password for the root user

This procedure connects the router to the network but does not enable it to forward traffic. For complete information about enabling the router to forward traffic, including examples, see the Junos OS configuration guides.

To configure the software:

1. Verify that the router is powered on.
2. Log in as the “root” user. There is no password.

3. Start the CLI.

```
root# cli
root@>
```

4. Enter configuration mode.

```
cli> configure
[edit]
root@#
```

5. Configure the name of the router. If the name includes spaces, enclose the name in quotation marks (" ").

```
[edit]
root@# set system host-name host-name
```

6. Create a management console user account.

```
[edit]
root@# set system login user user-name authentication plain-text-password
New password: password
Retype new password: password
```

7. Set the user account class to super-user.

```
[edit]
root@# set system login user user-name class super-user
```

8. Configure the router's domain name.

```
[edit]
root@# set system domain-name domain-name
```

9. Configure the IP address and prefix length for the router's Ethernet interface.

```
[edit]
root@# set interfaces fxp0 unit 0 family inet address address/prefix-length
```

10. Configure the IP address of a backup router, which is used only while the routing protocol is not running.

```
[edit]
root@# set system backup-router address
```

11. Configure the IP address of a DNS server.

```
[edit]
root@# set system name-server address
```

12. Set the root authentication password by entering either a clear-text password, an encrypted password, or an SSH public key string (DSA or RSA).

```
[edit]
root@# set system root-authentication plain-text-password
New password: password
Retype new password: password
```

or

```
[edit]
root@# set system root-authentication encrypted-password encrypted-password
```

or

```
[edit]
root@# set system root-authentication ssh-dsa public-key
```

or

```
[edit]
root@# set system root-authentication ssh-rsa public-key
```

13. (Optional) Configure the static routes to remote subnets with access to the management port. Access to the management port is limited to the local subnet. To access the management port from a remote subnet, you need to add a static route to that subnet within the routing table. For more information about static routes, see the *Junos OS Administration Library*.

```
[edit]
root@# set routing-options static route remote-subnet next-hop destination-IP retain
no-readvertise
```

14. Configure the telnet service at the [edit system services] hierarchy level.

```
[edit]
root@# set system services telnet
```

15. (Optional) Display the configuration to verify that it is correct.

```
[edit]
root@# show
system {
  host-name host-name;
  domain-name domain-name;
  backup-router address;
  root-authentication {
    authentication-method (password | public-key);
  }
  name-server {
    address;
  }
}
interfaces {
  fxp0 {
    unit 0 {
      family inet {
        address address/prefix-length;
      }
    }
  }
}
```

```
}  
}
```

16. Commit the configuration to activate it on the router.

```
[edit]  
root@# commit
```

17. (Optional) Configure additional properties by adding the necessary configuration statements. Then commit the changes to activate them on the router.

```
[edit]  
root@host# commit
```

18. When you have finished configuring the router, exit configuration mode.

```
[edit]  
root@host# exit  
root@host>
```



NOTE: To reinstall Junos OS, you boot the router from the removable media. Do not insert the removable media during normal operations. The router does not operate normally when it is booted from the removable media.

When the router boots from the storage media (removable media, CompactFlash card, or hard disk) it expands its search in the `/config` directory of the routing platform for the following files in the following order: `juniper.conf` (the main configuration file), `rescue.conf` (the rescue configuration file), and `juniper.conf.1` (the first rollback configuration file). When the search finds the first configuration file that can be loaded properly, the file loads and the search ends. If none of the file can be loaded properly, the routing platform does not function properly. If the router boots from an alternate boot device, Junos OS displays a message indicating this when you log in to the router.

Related Documentation

- [Powering On an AC-Powered MX480 Router on page 220](#)
- [Powering On a DC-Powered MX480 Router with Normal Capacity Power Supplies on page 224](#)

PART 4

Installing and Replacing Components

- [Overview of Installing and Replacing Components on page 247](#)
- [Installing Components on page 251](#)
- [Replacing Chassis Components on page 287](#)
- [Replacing Cooling System Components on page 295](#)
- [Replacing Host Subsystem Components on page 301](#)
- [Replacing Line Card Components on page 323](#)
- [Replacing Power System Components on page 367](#)
- [Replacing Switch Fabric Components on page 381](#)

Overview of Installing and Replacing Components

- [MX480 Field-Replaceable Units \(FRUs\) on page 247](#)
- [Tools and Parts Required to Replace MX480 Hardware Components on page 248](#)

MX480 Field-Replaceable Units (FRUs)

Field-replaceable units (FRUs) are router components that can be replaced at the customer site. Replacing most FRUs requires minimal router downtime. The router uses the following types of FRUs:

- Hot-removable and hot-insertable FRUs—You can remove and replace these components without powering off the router or disrupting the routing functions.
- Hot-pluggable FRUs—You can remove and replace these components without powering off the router, but the routing functions of the system are interrupted when the component is removed.

[Table 101 on page 248](#) lists the FRUs for the MX960 router. Before you replace an SCB or a Routing Engine, you must take the host subsystem offline.

Table 101: Field-Replaceable Units

Hot-Removable and Hot-Insertable FRUs	Hot-Pluggable FRUs
<ul style="list-style-type: none"> • Air filter • Craft interface • Backup Switch Control Board (SCB) (if redundant) • Master Switch Control Board (SCB) (if nonstop active routing is configured) • Backup Routing Engine (if redundant) • Master Routing Engine (if nonstop active routing is configured) • Dense Port Concentrators (DPCs) • Flexible PIC Concentrators (FPCs) • Modular Port Concentrators (MPCs) • Modular Interface Cards (MICs) • PICs • AC and DC power supplies (if redundant) • Fan tray 	<ul style="list-style-type: none"> • Master Switch Control Board (SCB) (if nonstop active routing is not configured) • Master Routing Engine (if nonstop active routing is not configured) • Switch Control Board (SCB) (nonredundant) • Routing Engine (nonredundant) • Solid-state drives (SSDs) of Routing Engines

Related Documentation

- [MX480 Component Redundancy on page 11](#)
- [Tools and Parts Required to Replace MX480 Hardware Components on page 248](#)

Tools and Parts Required to Replace MX480 Hardware Components

To replace hardware components, you need the tools and parts listed in [Table 102 on page 248](#).

Table 102: Tools and Parts Required

Tool or Part	Components
2.5-mm flat-blade (–) screwdriver	<ul style="list-style-type: none"> • Alarm relay terminal block
7/16-in. (11 mm) nut driver or socket wrench	<ul style="list-style-type: none"> • DC power supply • Cables and connectors
Blank panels (if component is not reinstalled)	<ul style="list-style-type: none"> • DPC • FPC • PIC • MPC • MIC • Power supply • Routing Engine • SCB

Table 102: Tools and Parts Required (*continued*)

Tool or Part	Components
Electrostatic bag or antistatic mat	<ul style="list-style-type: none"> • Craft Interface • DPC • FPC • PIC • MPC • MIC • Routing Engine • SCB
Electrostatic discharge (ESD) grounding wrist strap	<ul style="list-style-type: none"> • All
Flat-blade (–) screwdriver	<ul style="list-style-type: none"> • DPC • Cables and connectors
Phillips (+) screwdrivers, numbers 1 and 2	<ul style="list-style-type: none"> • Air filter • Craft interface • Fan tray • SCB • Routing Engine • Cables and connectors
Rubber safety cap	<ul style="list-style-type: none"> • DPC • MPC • MIC • PIC
Wire cutters	<ul style="list-style-type: none"> • Cables and connectors • DC power supply

Related Documentation

- [MX480 Component Redundancy on page 11](#)
- [MX480 Field-Replaceable Units \(FRUs\) on page 247](#)

CHAPTER 21

Installing Components

- Installing the MX480 Craft Interface on page 251
- Installing the MX480 Air Filter on page 252
- Installing the MX480 Fan Tray on page 253
- Installing an MX480 Routing Engine on page 254
- Installing an MX480 DPC on page 256
- Installing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 259
- Installing an MX480 FPC on page 261
- Installing an MX480 MIC on page 264
- Installing an MX480 Dual-Wide MIC on page 266
- Installing an MX480 MPC on page 269
- Installing an MX480 PIC on page 271
- Installing an MX480 AS MLC on page 274
- Installing an MX480 AS MSC on page 275
- Installing an MX480 AS MXC on page 277
- Installing an MX480 AC Power Supply on page 278
- Installing an MX480 DC Power Supply on page 280
- Installing an MX480 SCB on page 283
- Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC on page 285


Installing the MX480 Craft Interface

To install the craft interface (see [Figure 91 on page 252](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the craft interface with one hand, and hold the bottom edge of the craft interface with the other hand to support its weight.
3. Orient the ribbon cable so that it plugs into the connector socket. The connector is keyed and can be inserted only one way.

4. Align the bottom of the craft interface with the sheet metal above the card cage and press it into place.
5. Tighten the screws on the left and right corners of the craft interface faceplate.
6. Reattach any external devices connected to the craft interface.

Figure 91: Installing the Craft Interface

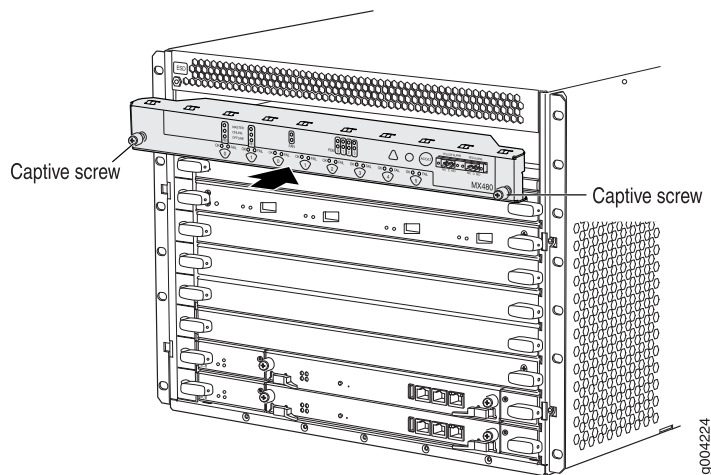

Related Documentation


- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing the MX480 Craft Interface on page 288](#)
- [Connecting the Alarm Relay Wires to the MX480 Craft Interface on page 239](#)

Installing the MX480 Air Filter

To install the air filter (see [Figure 92 on page 253](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Locate the up arrow and ensure that the air filter is right side up.
3. Slide the air filter straight into the chassis until it stops.
4. Align the captive screws of the air filter cover with the mounting holes on the chassis.
5. Tighten the captive screws on the air filter cover.

Figure 92: Installing the Air Filter

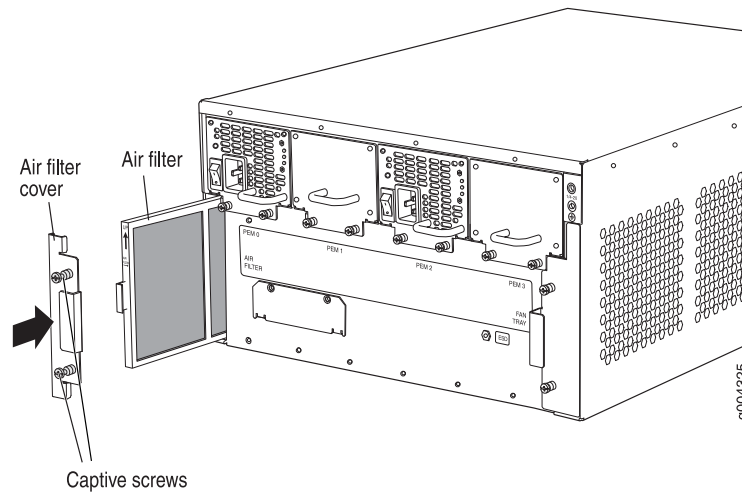

Related Documentation


- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing the MX480 Air Filter on page 295](#)
- [Maintaining the MX480 Air Filter on page 415](#)
- [MX480 Cooling System Description on page 21](#)
- [Troubleshooting the MX480 Cooling System on page 442](#)

Installing the MX480 Fan Tray

To install the fan tray (see [Figure 93 on page 254](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray handle, and insert it straight into the chassis. Note the correct orientation by the **this side up** label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 93: Installing the Fan Tray

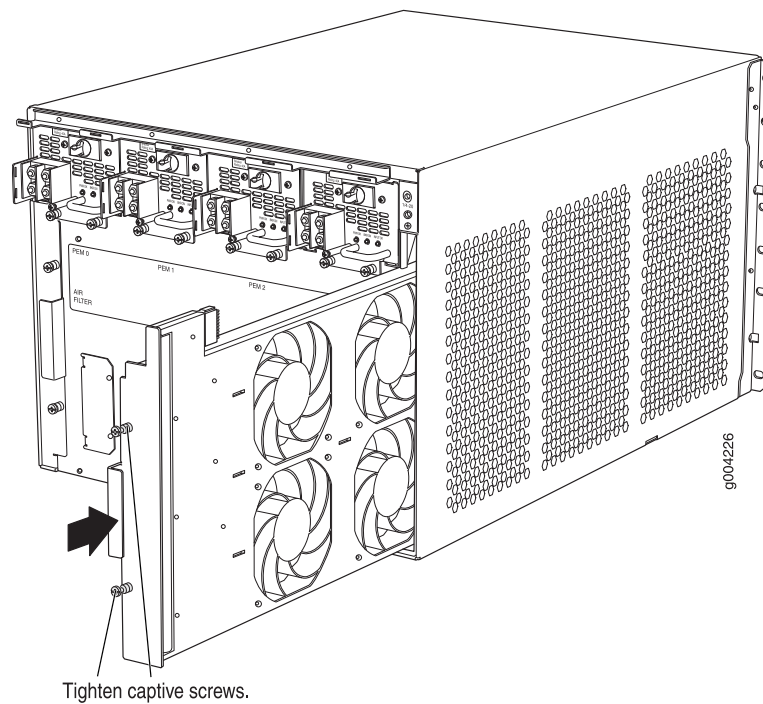

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing the MX480 Fan Tray on page 298](#)
- [Maintaining the MX480 Fan Tray on page 416](#)
- [MX480 Cooling System Description on page 21](#)
- [Troubleshooting the MX480 Cooling System on page 442](#)

Installing an MX480 Routing Engine

To install a Routing Engine into an SCB (see [Figure 94 on page 255](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it.
4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCB.

5. Slide the Routing Engine into the SCB until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.
6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the left and right of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

The Routing Engine might require several minutes to boot.


After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **REO**, and **REI** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED lights steadily. If the red **FAIL** LED lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

To check the status of the Routing Engine, use the CLI command:

```
user@host> show chassis routing-engine
Routing Engine status:      Slot 0:      Current state      Master ...
```

For more information about using the CLI, see the Junos OS documentation.

Figure 94: Installing a Routing Engine

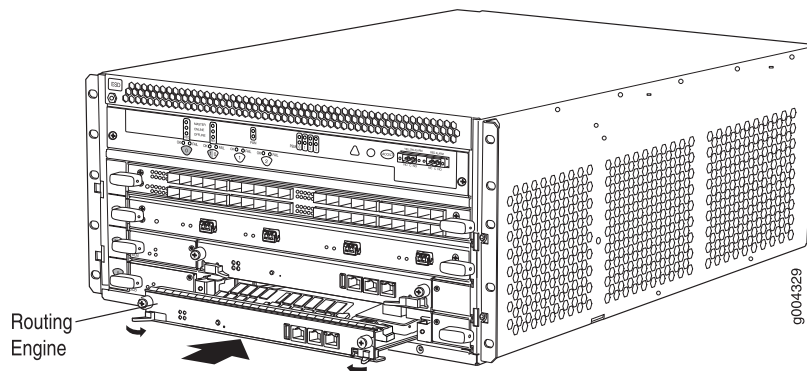

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Replacing Connections to MX480 Routing Engine Interface Ports on page 311](#)
- [Removing an MX480 Routing Engine on page 301](#)
- [Removing an MX480 Routing Engine on page 301](#)

Installing an MX480 DPC

A DPC weighs up to 14.5 lb (6.6 kg). Be prepared to accept its full weight.

To install a DPC (see [Figure 95 on page 258](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered with a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you vertically.
6. Lift the DPC into place, and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the DPC is fully seated.
9. Remove the rubber safety cap from each fiber-optic transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

10. Insert the cables into the cable connector ports on each DPC (see [Figure 96 on page 259](#)).
11. Arrange the cable in the standard or extended cable manager to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

12. Use one of the following methods to bring the DPC online:

- Press and hold the corresponding DPC online button on the craft interface until the green **OK** LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED turns green, wait at least 30 seconds before removing the DPC again, removing a DPC from a different slot, or inserting a DPC in a different slot.


You can also verify that the DPC is functioning correctly by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands.

Figure 95: Installing a DPC

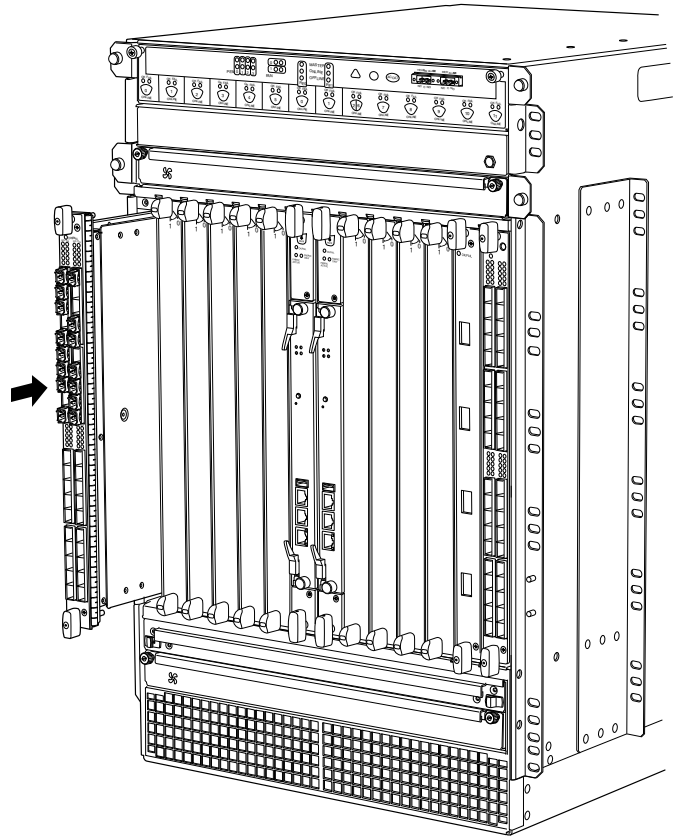

9004053

Figure 96: Attaching a Cable to a DPC

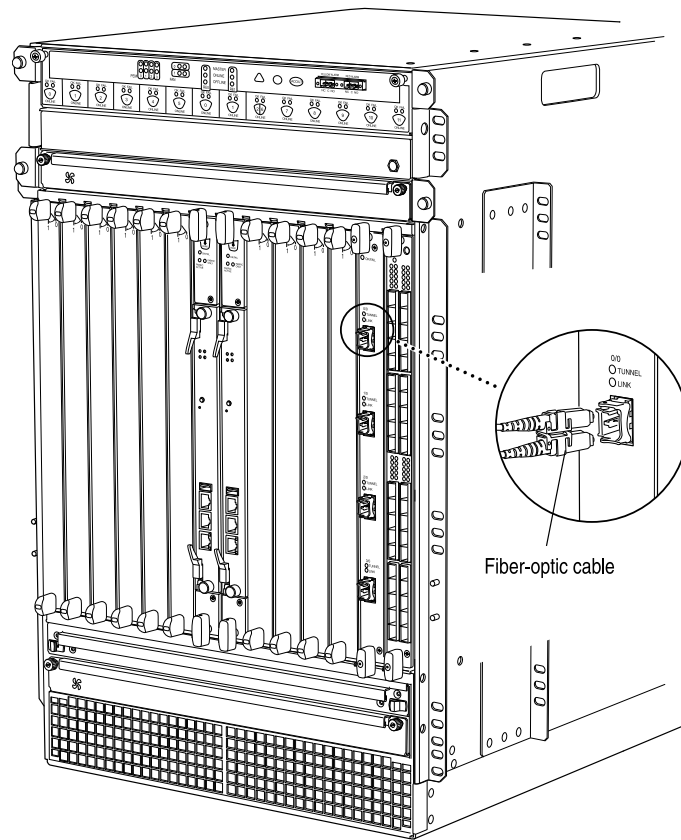

- Related Documentation**
- [Removing an MX480 DPC on page 323](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Installing a Cable on an MX480 DPC, MPC, MIC, or PIC

To install a cable:

1. Have ready a length of the type of cable used by the DPC, MPC, MIC, or PIC. For cable specifications, see the [MX Series Interface Module Reference](#).
2. If the cable connector port is covered by a rubber safety plug, remove the plug.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the component faceplate.
4. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

5. Insert the other end of the cable into the destination port.
6. Repeat the previous steps for any additional cables.
7. If the component is offline (its failure indicator LED is lit), use one of the following methods to bring the it online:
 - To bring a DPC or an MPC online:
 - Press and hold the corresponding online button on the craft interface until the green **OK** LED next to the button lights steadily, in about 5 seconds.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```

For more information about the command, see the [CLI Explorer](#).
 - To bring a PIC online:
 - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in an FPC2 or FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
 - Issue the following CLI command:

```
user@host>request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a MIC online:
 - Press the MIC offline/online button until the MIC LED lights green.
 - Issue the following CLI command:

```
user@host>request chassis mic fpc-slot mpc-slot pic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning indicator LED confirms that the component is online. You can also verify correct DPC or MPC functioning by issuing the **show chassis fpc** command or correct MIC or the PIC functioning by issuing the **show chassis fpc pic-status** command.

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 329](#)
- [Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs on page 434](#)

Installing an MX480 FPC

An FPC takes up two DPC slots on the MX480 router. Up to three FPCs can be installed horizontally in the front of the router. The FPCs are hot-insertable and hot-removable. An empty FPC3 weighs 14 lb (6.5 kg). A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To install an FPC (see [Figure 97 on page 263](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat.
3. Take each PIC to be installed in the replacement FPC out of its electrostatic bag, and identify the slot on the FPC where it will be connected.
4. Verify that each fiber-optic PIC has a rubber safety cap covering the PIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each PIC into the appropriate slot on the FPC.
6. Locate the slots in the card cage in which you plan to install the FPC.

7. Orient the FPC so that the faceplate faces you.
8. Lift the FPC into place, and carefully align the sides of the FPC with the guides inside the card cage.



CAUTION: When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the FPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles, and rotate them clockwise simultaneously until the FPC is fully seated.
11. If any of the PICs on the FPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each PIC on the FPC.
13. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

14. Use one of the following methods to bring the FPC online:
 - Press and hold the FPC online/offline button until the green OK LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.

- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED lights steadily, wait at least 30 seconds before removing the FPC again, removing an FPC from a different slot, or inserting an FPC in a different slot.

You can also verify correct FPC and PIC functioning by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands described in “[Maintaining MX480 FPCs](#)” on page 425 and “[Maintaining MX480 PICs](#)” on page 433.

Figure 97: Installing an FPC

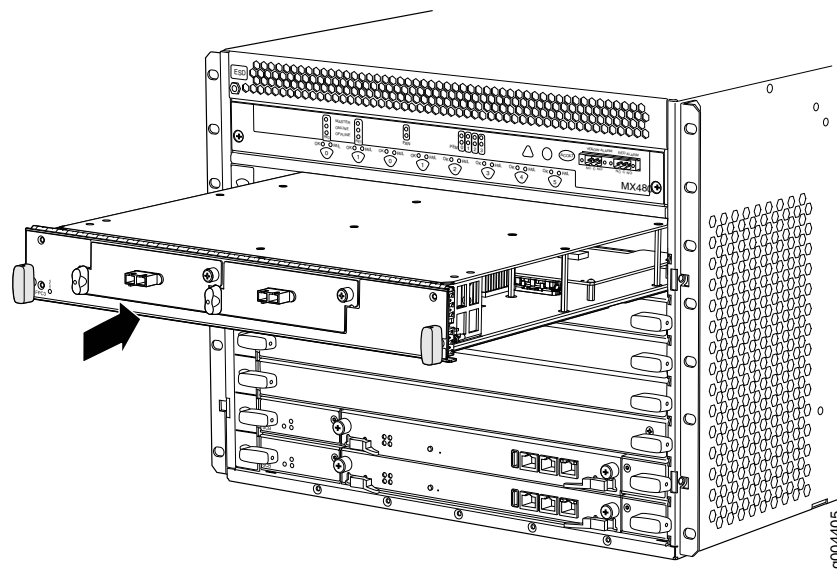

Related Documentation


- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Installing an MX480 PIC on page 271](#)
- [Removing an MX480 FPC on page 332](#)
- [Holding an MX480 FPC on page 427](#)
- [Storing an MX480 FPC on page 429](#)
- [Maintaining MX480 FPCs on page 425](#)

Installing an MX480 MIC

To install a MIC (see [Figure 99 on page 266](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If you have used a dual-wide MIC and are now replacing it with two “single” MICs, install the septum (see [Figure 98 on page 264](#)):
 - a. Place the MPC on a flat surface (If necessary, remove the MPC from the router as described in [“Removing an MX480 MPC” on page 345](#)).
 - b. Position the septum in the center of the MPC so that it lines up with holes labeled **S** on the top of the MPC.
 - c. Insert a screw into each of the two holes labeled **S**, and then tighten completely.
 - d. On the bottom of the MPC, insert a screw into each of the four holes labeled **S**, and then tighten completely.
 - e. Install the MPC as described in [“Installing an MX480 MPC” on page 269](#).

Figure 98: Installing the Septum

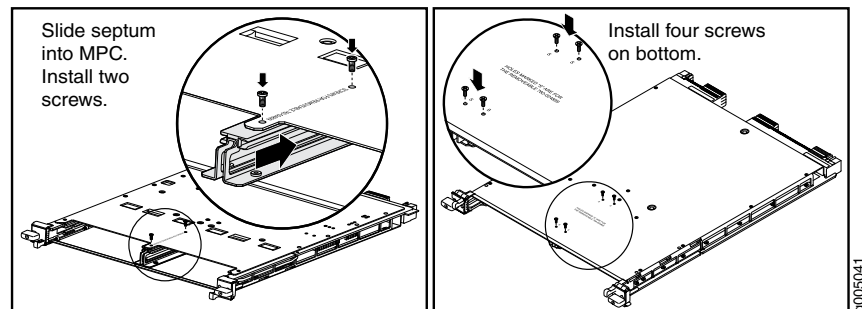

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. On the MPC, pull the ejector lever that is adjacent to the MIC you are installing away from the MPC faceplate.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.
6. Slide the MIC into the MPC until it is firmly seated in the MPC.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector lever is engaged by pushing it toward the MPC faceplate.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.
10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


11. Use one of the following methods to bring the MIC online:
 - Press the MIC offline/online button until the MIC OK/FAIL LED lights green.
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the **show chassis fpc pic-status** command described in [“Maintaining MX480 MICs” on page 430](#).

Figure 99: Installing a MIC

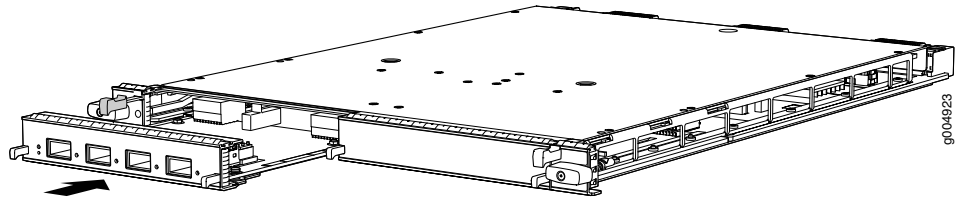

Related Documentation


- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
- [Maintaining MX480 MICs on page 430](#)
- [Troubleshooting the MX480 MICs on page 446](#)
- [Replacing an MX480 MPC on page 345](#)
- [Removing an MX480 MIC on page 338](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [MX480 MIC Serial Number Label on page 465](#)

Installing an MX480 Dual-Wide MIC

To install a dual-wide MIC (see [Figure 101 on page 268](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the septum, if necessary (see [Figure 100 on page 267](#)):
 - a. Place the MPC on a flat surface (if necessary, remove the MPC from the router as described in [“Removing an MX480 MPC” on page 345](#)).
 - b. Remove the four screws labeled **S** on the bottom of the MPC.
 - c. Remove the two screws labeled **S** on the top of the MPC.
 - d. Slide the septum towards you and out of the MPC.
 - e. Store the septum and screws for later use.
 - f. Install the MPC as described in [“Installing an MX480 MPC” on page 269](#).

Figure 100: Removing the Septum

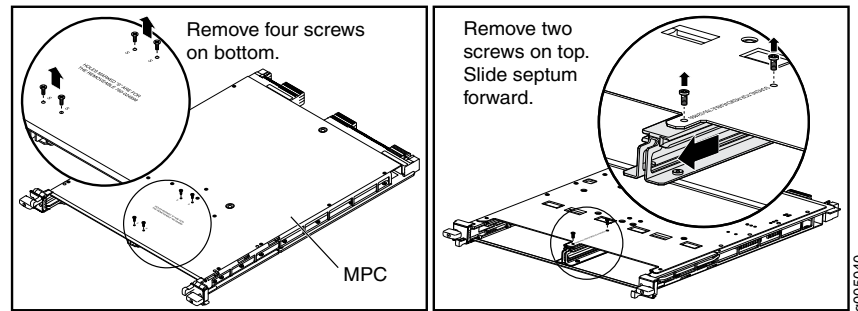

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. Pull the ejector lever above both MIC slots away from the router.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.
6. Slide the MIC into the MIC slot until it is firmly seated in the chassis.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector levers are engaged by pushing them toward the router.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.

10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.




CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

11. Use one of the following methods to bring the MIC online:
 - Press the MIC offline/online button until the MIC OK/FAIL LED lights green.
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the `show chassis fpc pic-status` command described in “Maintaining MX480 MICs” on page 430.

Figure 101: Installing a Dual-Wide MIC

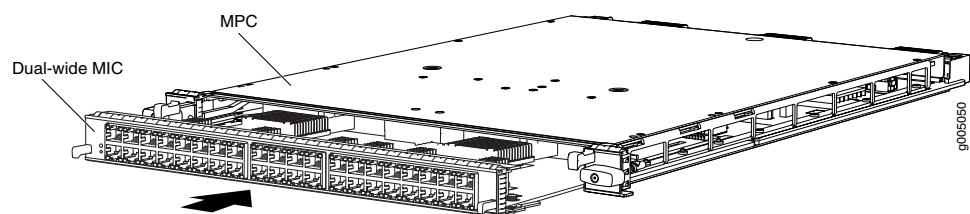

Related Documentation

- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
- [Maintaining MX480 MICs on page 430](#)
- [Troubleshooting the MX480 MICs on page 446](#)
- [Replacing an MX480 MPC on page 345](#)
- [Removing an MX480 MIC on page 338](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [MX480 MIC Serial Number Label on page 465](#)

Installing an MX480 MPC

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To install an MPC (see [Figure 102 on page 271](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the MPC on an antistatic mat.
3. Take each MIC to be installed in the replacement MPC out of its electrostatic bag, and identify the slot on the MPC where it will be connected.
4. Verify that each fiber-optic MIC has a rubber safety cap covering the MIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each MIC into the appropriate slot on the MPC.
6. Locate the slot in the card cage in which you plan to install the MPC.
7. Orient the MPC so that the faceplate faces you.
8. Lift the MPC into place, and carefully align the sides of the MPC with the guides inside the card cage.



CAUTION: When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the MPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles, and rotate them clockwise simultaneously until the MPC is fully seated.
11. If any of the MICs on the MPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each MIC on the MPC. Secure the cables so that they are not supporting their own weight. Place excess cable out of the way in a neatly coiled loop, using the cable management system. Placing fasteners on a loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

13. Use one of the following methods to bring the MPC online:

- Press and hold the corresponding MPC online button on the craft interface until the green **OK/FAIL** LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the **OK/FAIL** LED lights steadily, wait at least 30 seconds before removing the MPC again, removing an MPC from a different slot, or inserting an MPC in a different slot.

You can also verify correct MPC and MIC functioning by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands described in “[Maintaining MX480 MPCs](#)” on page 431 and “[Maintaining MX480 MICs](#)” on page 430.

Figure 102: Installing an MPC

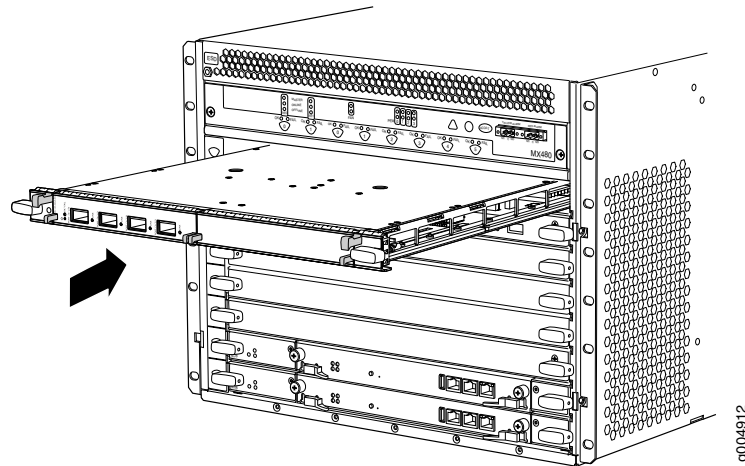

Related Documentation

- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
- [Maintaining MX480 MPCs on page 431](#)
- [Tools and Parts Required to Replace MX480 Hardware Components on page 248](#)
- [Removing an MX480 MPC on page 345](#)
- [Installing an MX480 MIC on page 264](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [MX480 MPC Serial Number Label on page 467](#)

Installing an MX480 PIC

To install a PIC (see [Figure 103 on page 273](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If the PIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
3. Align the notches in the connector at the rear of the PIC with the notches in the PIC slot in the FPC and then slide the PIC in until it lodges firmly in the FPC.



CAUTION: Slide the PIC straight into the slot to avoid damaging the components on the bottom of the PIC.

4. For an FPC3 PIC, turn the ejector handle at the top of the PIC faceplate clockwise, then tighten the captive screw at the bottom of the faceplate to secure the PIC in the FPC.
5. If the PIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

6. Insert the appropriate cables into the cable connectors on the PIC.
7. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


8. Use one of the following methods to bring the PIC online:
 - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in an FPC2 or FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the PIC is online. You can also verify correct PIC functioning by issuing the **show chassis fpc pic-status** command described in “Maintaining MX480 PICs” on page 433.

Figure 103: Installing a PIC

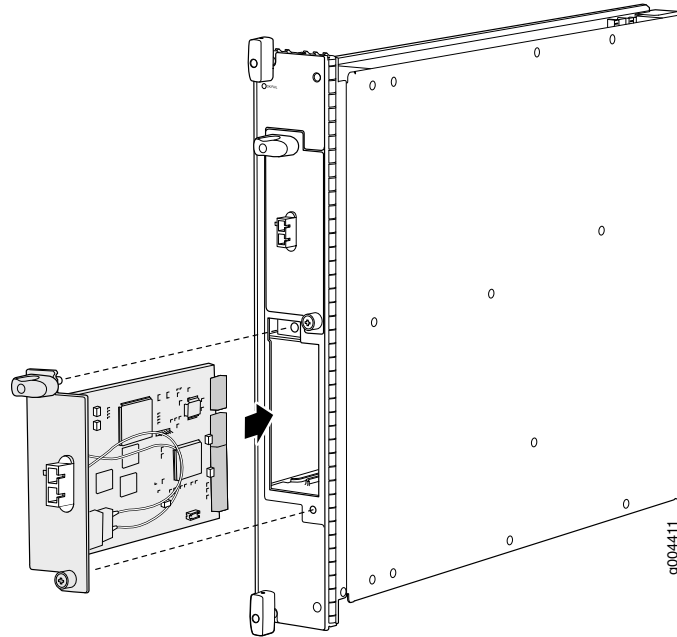

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing an MX480 PIC on page 351](#)
- [Troubleshooting the MX480 PICs on page 449](#)
- [Maintaining MX480 PICs on page 433](#)
- [MX480 PIC Serial Number Label on page 468](#)
- [MX480 PIC Description on page 66](#)
- [Replacing an MX480 FPC on page 332](#)

Installing an MX480 AS MLC

You can install up to five Application Services Modular Line Cards (AS MLCs) horizontally in the front of the MX480 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To install an AS MLC (see [Figure 104 on page 275](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the AS MLC on an antistatic mat.
3. Take the AS MSC and AS MXC (the modular cards) to be installed in the AS MLC out of its electrostatic bag. The AS MSC must be inserted in the left slot and the AS MXC in the right slot.
4. Install the AS MSC and AS MXC into the appropriate slot on the AS MLC.
5. Locate the slots in the card cage in which you plan to install the AS MLC.
6. Orient the AS MLC so that the faceplate faces you.
7. Lift the AS MLC into place, and carefully align the sides of the AS MLC with the guides inside the card cage.



CAUTION: When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

8. Slide the AS MLC all the way into the card cage until you feel resistance.
9. Grasp both ejector handles, and rotate them clockwise simultaneously until the AS MLC is fully seated.
10. Use one of the following methods to bring the AS MLC online:
 - Press and hold the AS MLC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each AS MLC are located above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED lights steadily, wait at least 30 seconds before removing the AS MLC again, removing an AS MLC from a different slot, or inserting an AS MLC in a different slot.

You can also verify correct AS MLC and AS MSC or AS MXC functioning by issuing the `show chassis fpc` and `show chassis fpc pic-status`.

Figure 104: Installing an AS MLC

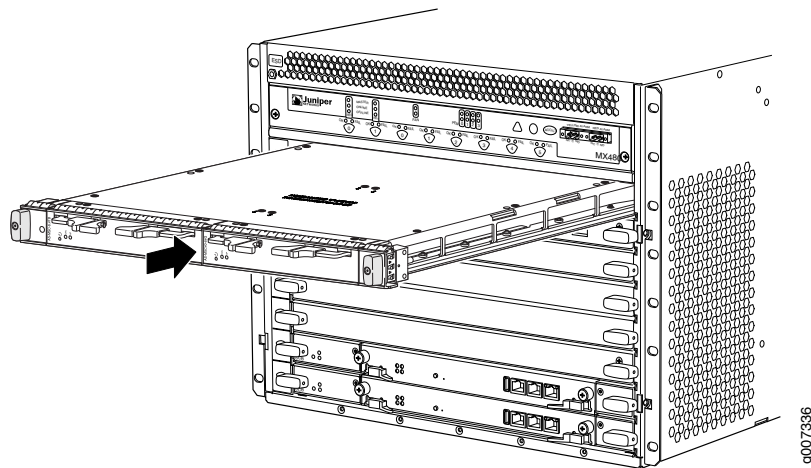

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Installing an MX480 AS MSC on page 275](#)
- [Installing an MX480 AS MXC on page 277](#)
- [Removing an MX480 AS MLC on page 356](#)

Installing an MX480 AS MSC

To install an AS MSC (see [Figure 105 on page 276](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Align the notches in the connector at the rear of the AS MSC with the notches in the AS MSC slot (slot 0—the top slot in the AS MLC), and then slide the AS MSC in until it lodges firmly in the AS MLC.



CAUTION: Slide the AS MSC straight into the slot to avoid damaging the components on the bottom of the AS MSC.

3. Use one of the following methods to bring the AS MSC online:


- Press the AS MSC offline/online button until the LED light turns green.
- Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MSC is online. You can also verify correct AS MSC functioning by issuing the **show chassis fpc pic-status**.

Figure 105: Installing an AS MSC

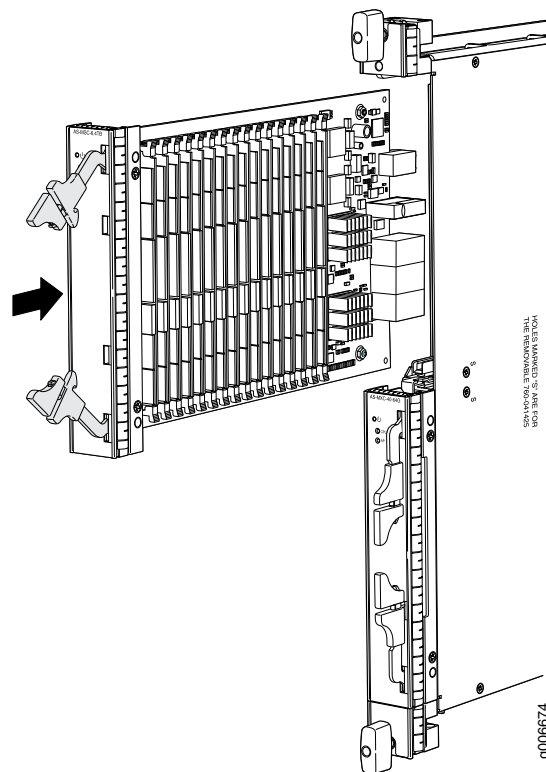

Related Documentation

- [MX480 Application Services Modular Storage Card Description on page 96](#)
- [Removing an MX480 AS MSC on page 360](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Installing an MX480 AS MXC

To install an AS MXC (see [Figure 106 on page 278](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Align the notches in the connector at the rear of the AS MXC with the notches in the AS MXC slot (slot 1—the bottom slot in the AS MLC), and then slide the AS MXC in until it lodges firmly in the AS MLC.



CAUTION: Slide the AS MXC straight into the slot to avoid damaging the components on the bottom of the AS MXC.


3. Use one of the following methods to bring the AS MXC online:
 - Press the AS MXC offline/online button until the LED light turns green.
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MXC is online. You can also verify correct AS MXC functioning by issuing the **show chassis fpc pic-status** command.

Figure 106: Installing an AS MXC

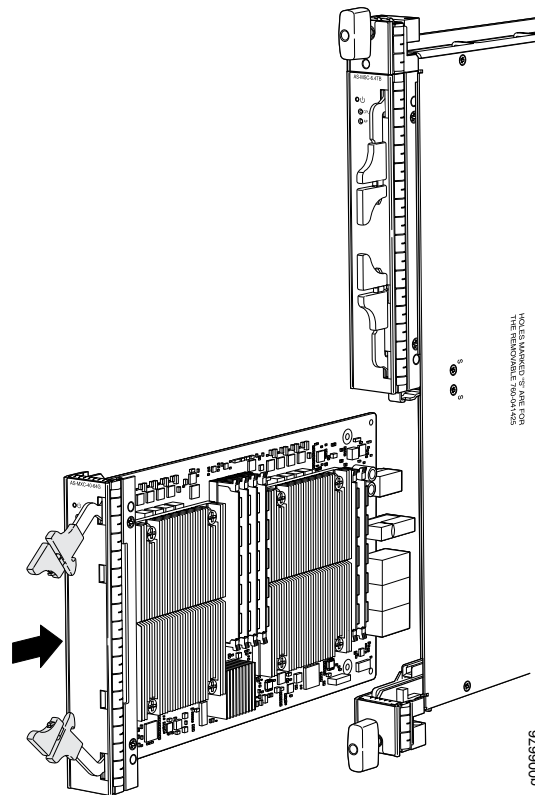

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [MX480 Application Services Modular Processing Card Description on page 97](#)
- [Removing an MX480 AS MXC on page 363](#)


Installing an MX480 AC Power Supply

To install an AC power supply (see [Figure 107 on page 279](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten both captive screws at the bottom of the power supply.

5. Attach the power cord to the power supply.
6. Route the power cord along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cord in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.
7. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker for the power supply. Follow the ESD and connection instructions for your site.
8. Move the AC input switch next to the appliance inlet on the power supply to the on (|) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

Figure 107: Installing an AC Power Supply in an MX480 Router

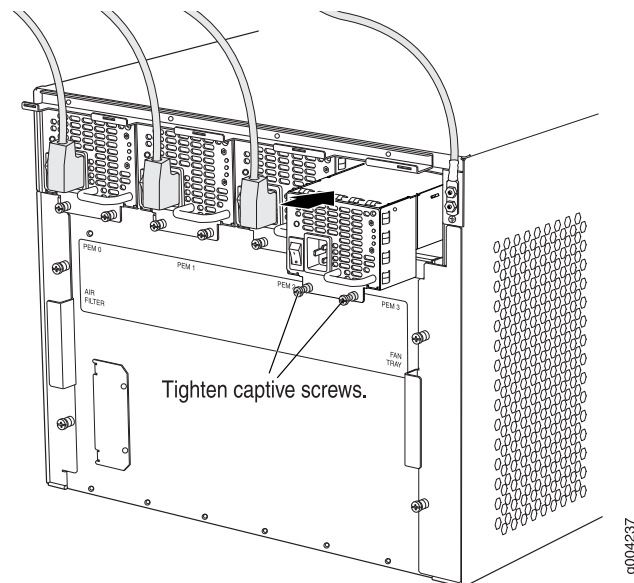

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing an MX480 AC Power Supply on page 367](#)
- [MX480 AC Power Supply Description on page 100](#)

Installing an MX480 DC Power Supply



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To install a DC power supply (see [Figure 108 on page 282](#)):

1. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the DC circuit breaker on the power supply faceplate to the off (O) position.
4. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
5. Tighten the captive screws on the lower edge of the power supply faceplate.
6. Remove the clear plastic cover protecting the terminal studs on the faceplate.
7. Remove the nut and washer from each of the terminal studs.
8. Secure each power cable lug to the terminal studs, first with the flat washer, then with the split washer, and then with the nut (see [Figure 109 on page 283](#)). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)
 - a. Secure the positive (+) DC source power cable lug to the RTN (return) terminal.
 - b. Secure the negative (–) DC source power cable lug to the –48V (input) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



NOTE: The DC power supplies in PEM0 and PEM1 must be powered by dedicated power feeds derived from feed A, and the DC power supplies in PEM2 and PEM3 must be powered by dedicated power feeds derived from feed B. This configuration provides the commonly deployed A/B feed redundancy for the system.



NOTE: For information about connecting to DC power sources, see “[DC Power Supply Electrical Specifications for the MX480 Router](#)” on page 157.

9. Replace the clear plastic cover over the terminal studs on the faceplate.
10. Route the power cables along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cables in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.
11. Verify that the power cabling is correct, that the cables are not touching or blocking access to router components, and that they do not drape where people could trip on them.
12. Switch on the dedicated customer site circuit breakers. Follow your site's procedures for safety and ESD.
Verify that the **INPUT OK** LED on the power supply is lit green.
13. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (–) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.




NOTE: If more than one power supply is being installed, turn on all power supplies at the same time.




NOTE: An SCB must be present for the PWR OK LED to go on.

Figure 108: Installing a DC Power Supply in the Router

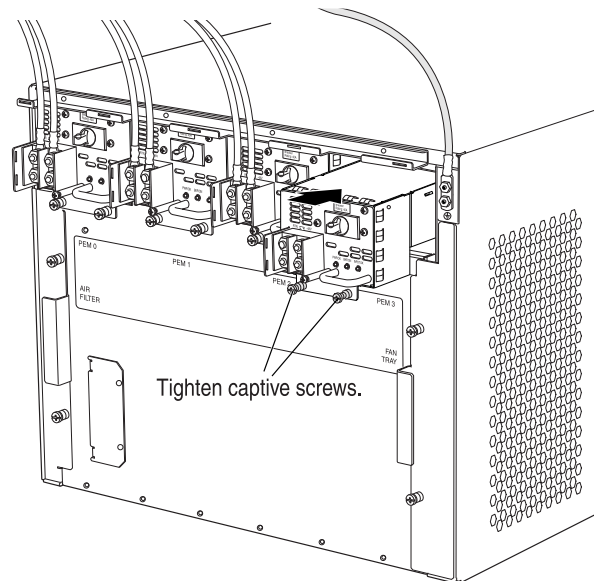

9004241

Figure 109: Connecting DC Power to the Router

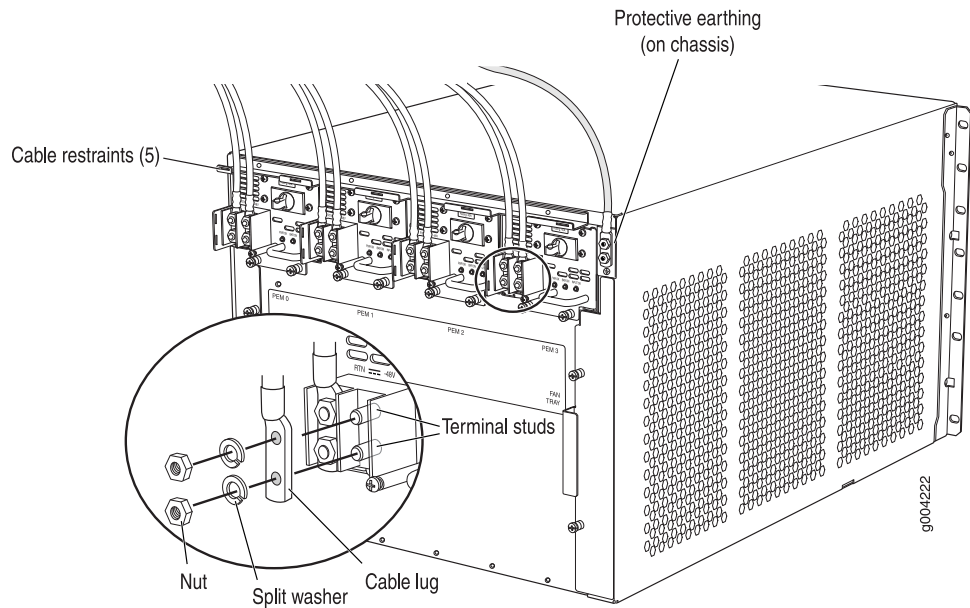

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing an MX480 DC Power Supply on page 370](#)
- [MX480 DC Power Supply Description on page 102](#)

Installing an MX480 SCB


To install an SCB (see [Figure 110 on page 285](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles, and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in the proper position, vertically and toward the center of the board.
6. Check the LEDs on the SCB faceplate to verify that it is functioning normally.

- The green **OK/FAIL** LED should light steadily a few minutes after the SCB is installed.
 - If the **OK/FAIL** LED is red, remove and install the SCB again. If the **OK/FAIL** LED still lights steadily, the SCB is not functioning properly. Contact your customer support representative.
7. Check the status of the SCB using the **show chassis environment cb** command:

```
user@host> show chassis environment cb
CB 0 status:
State                               Online Master
Temperature                          25 degrees C / 77 degrees F
Power 1
  1.2 V                               1198 mV
  1.5 V                               1508 mV
  1.8 V                               1830 mV
  2.5 V                               5059 mV
  3.3 V                               6593 mV
  5.0 V                               5111 mV
  12.0 V                              12181 mV
  1.25 V                              1250 mV
  3.3 V SM3                           6587 mV
  5 V RE                              5078 mV
  12 V RE                             12026 mV
Power 2
  11.3 V bias PEM                     11253 mV
  4.6 V bias MidPlane                 4827 mV
  11.3 V bias FPD                    11408 mV
  11.3 V bias POE 0                  11446 mV
  11.3 V bias POE 1                  11408 mV
Bus Revision                          6
FPGA Revision                         0
CB 1 status:
State                               Online Standby
Temperature                          26 degrees C / 78 degrees F
Power 1
  1.2 V                               1211 mV
  1.5 V                               1517 mV
  1.8 V                               1817 mV
  2.5 V                               2507 mV
  3.3 V                               3312 mV
  5.0 V                               5136 mV
  12.0 V                              12142 mV
  1.25 V                              1260 mV
  3.3 V SM3                           3306 mV
  5 V RE                              5085 mV
  12 V RE                             11968 mV
Power 2
  11.3 V bias PEM                     11369 mV
  4.6 V bias MidPlane                 4814 mV
  11.3 V bias FPD                    11427 mV
  11.3 V bias POE 0                  11350 mV
  11.3 V bias POE 1                  11330 mV
Bus Revision                          39
FPGA Revision                         1
```

Figure 110: Installing an SCB

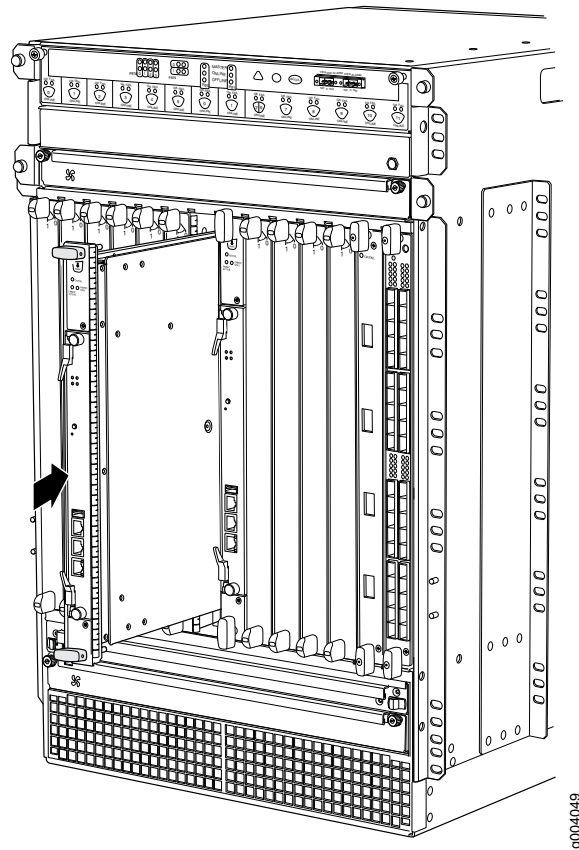

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing an MX480 SCB on page 381](#)
- [Operating and Positioning the MX480 SCB Ejectors](#)
- [Effect of Taking the MX480 Host Subsystem Offline](#)
- [Taking an MX480 Host Subsystem Offline](#)

Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC

To install an SFP or XFP:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.

4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the component faceplate indicate that the SFP or XFP is functioning correctly. For more information about the component LEDs, see the [MX Series Interface Module Reference](#).

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Removing an SFP or XFP Transceiver from an MX480 DPC, MPC, MIC, or PIC on page 399](#)
- [Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 328](#)

Replacing Chassis Components

- [Replacing the MX480 Craft Interface on page 287](#)
- [Replacing the MX480 Cable Management Brackets on page 291](#)
- [Replacing the Management Ethernet Cable on an MX Series Router on page 292](#)
- [Replacing the Console or Auxiliary Cable on an MX480 Router on page 292](#)


Replacing the MX480 Craft Interface

1. [Disconnecting the Alarm Relay Wires from the MX480 Craft Interface on page 287](#)
2. [Removing the MX480 Craft Interface on page 288](#)
3. [Installing the MX480 Craft Interface on page 289](#)
4. [Connecting the Alarm Relay Wires to the MX480 Craft Interface on page 290](#)

Disconnecting the Alarm Relay Wires from the MX480 Craft Interface

To disconnect the alarm relay wires from the router and an alarm-reporting device (see [Figure 111 on page 288](#)):

1. Disconnect the existing wire at the external device.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Using a 2.5-mm flat-blade screwdriver, loosen the small screws on the face of the terminal block and remove the block from the relay contact.
4. Using the 2.5-mm flat-blade screwdriver, loosen the small screws on the side of the terminal block. Remove existing wires from the slots in the front of the block.

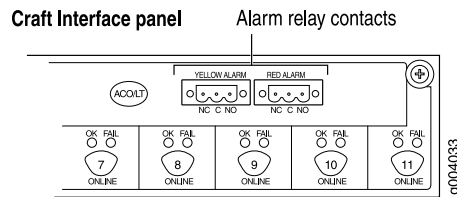
Figure 111: Alarm Relay Contacts

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Connecting the Alarm Relay Wires to the MX480 Craft Interface on page 239](#)
 - [Removing the MX480 Craft Interface on page 288](#)
 - [Installing the MX480 Craft Interface on page 251](#)

Removing the MX480 Craft Interface

To remove the craft interface (see [Figure 112 on page 288](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Detach any external devices connected to the craft interface.
3. Loosen the captive screws at the left and right corners of the craft interface faceplate.
4. Grasp the craft interface faceplate and carefully tilt it toward you until it is horizontal.
5. Disconnect the ribbon cable from the back of the faceplate by gently pressing on both sides of the latch with your thumb and forefinger. Remove the craft interface from the chassis.

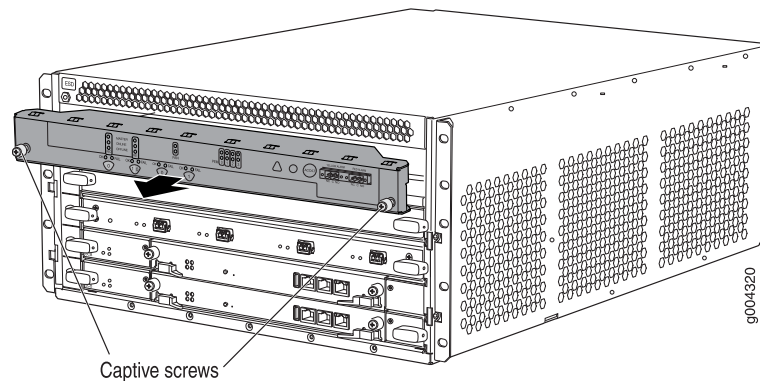Figure 112: Removing the Craft Interface

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)


- [Disconnecting the Alarm Relay Wires from the MX480 Craft Interface on page 287](#)
- [Installing the MX480 Craft Interface on page 251](#)

Installing the MX480 Craft Interface

To install the craft interface (see [Figure 91 on page 252](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the craft interface with one hand, and hold the bottom edge of the craft interface with the other hand to support its weight.
3. Orient the ribbon cable so that it plugs into the connector socket. The connector is keyed and can be inserted only one way.
4. Align the bottom of the craft interface with the sheet metal above the card cage and press it into place.
5. Tighten the screws on the left and right corners of the craft interface faceplate.
6. Reattach any external devices connected to the craft interface.

Figure 113: Installing the Craft Interface

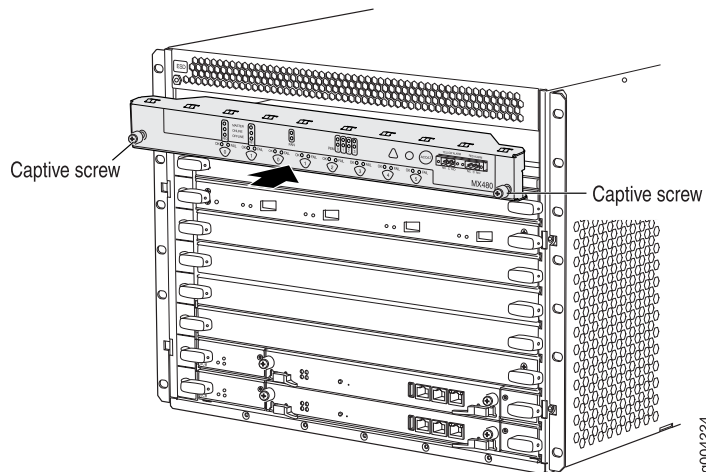


- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing the MX480 Craft Interface on page 288](#)
 - [Connecting the Alarm Relay Wires to the MX480 Craft Interface on page 239](#)

Connecting the Alarm Relay Wires to the MX480 Craft Interface

To connect the alarm relay wires between a router and an alarm-reporting device (see [Figure 90 on page 239](#)):

1. Prepare the required length of replacement wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm²).
2. Insert the replacement wires into the slots in the front of the block. Use a 2.5-mm flat-blade screwdriver to tighten the screws and secure the wire.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
5. Attach the other end of the wires to the external device.

Figure 114: Alarm Relay Contacts

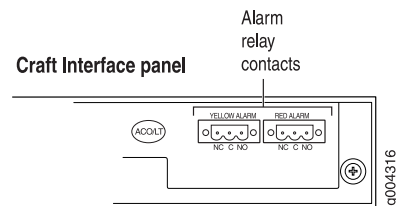

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Disconnecting the Alarm Relay Wires from the MX480 Craft Interface on page 287](#)
 - [Removing the MX480 Craft Interface on page 288](#)
 - [Installing the MX480 Craft Interface on page 251](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 Craft Interface Description on page 14](#)
 - [Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface on page 15](#)

Replacing the MX480 Cable Management Brackets


To remove the cable management brackets (see [Figure 115 on page 291](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Loosen the captive screws on either side of the chassis.
3. Remove the cable management brackets.

To install the cable management brackets (see [Figure 115 on page 291](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Position the on the front sides of the chassis.
3. Insert the tabs into the slots.
4. Tighten the screws completely.

Figure 115: Removing the Cable Management Brackets

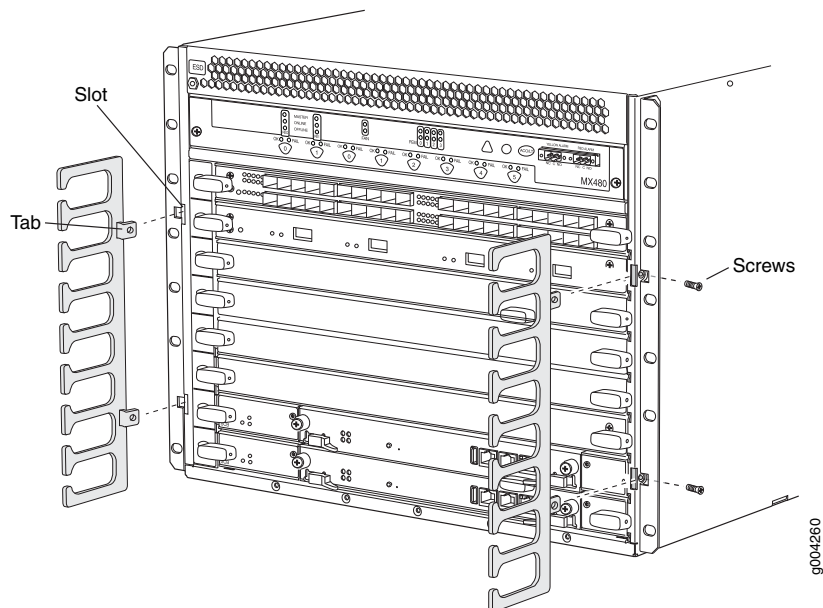

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [MX480 Cable Management Brackets on page 19](#)

- [Installing the MX480 Router Cable Management Bracket on page 215](#)

Replacing the Management Ethernet Cable on an MX Series Router

One Ethernet cable with RJ-45 connectors is provided with the router. To replace the cable connected to the **ETHERNET** port:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the port. [Figure 116 on page 292](#) shows the connector.
3. Disconnect the cable from the network device.
4. Plug one end of the replacement cable into the **ETHERNET** port. [Figure 117 on page 292](#) shows the port.
5. Plug the other end of the cable into the network device.

Figure 116: Cable Connector


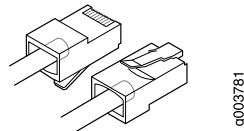


Figure 117: Ethernet Port

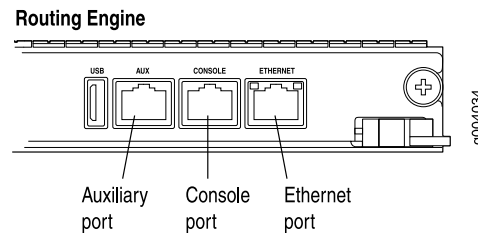

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Connecting the MX480 Router to Management and Alarm Devices on page 231](#)
- [Replacing the Console or Auxiliary Cable on an MX480 Router on page 292](#)
- [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port on page 137](#)

Replacing the Console or Auxiliary Cable on an MX480 Router


To use a system console to configure and manage the Routing Engine, connect it to the **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device,

connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. One RJ-45/DB-9 cable is provided with the router. If you want to connect a device to both ports, you must supply another cable.

To replace a cable connected to a management console or auxiliary device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the port.
3. Disconnect the cable from the console or auxiliary device.
4. Plug the RJ-45 end of the replacement serial cable into the **CONSOLE** or **AUX** port. [Figure 118 on page 293](#) shows the external device ports on the Routing Engine.
5. Plug the female DB-9 end into the console or auxiliary device's serial port.

Figure 118: Auxiliary and Console Ports

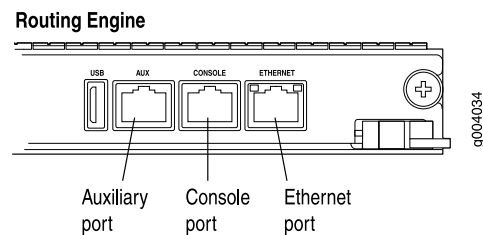

Related Documentation

- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 134](#)
- [Replacing the Management Ethernet Cable on an MX Series Router on page 292](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Replacing Cooling System Components

- Replacing the MX480 Air Filter on page 295
- Replacing the MX480 Fan Tray on page 297

Replacing the MX480 Air Filter

1. Removing the MX480 Air Filter on page 295
2. Installing the MX480 Air Filter on page 296

Removing the MX480 Air Filter



.....
CAUTION: Do not run the router for more than a few minutes without the air filter in place.
.....




.....
CAUTION: Always keep the air filter in place while the router is operating, except during replacement. Because the fans are very powerful, they could pull small bits of wire or other materials into the router through the unfiltered air intake. This could damage the router components.
.....

To remove the air filter (see [Figure 119 on page 296](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Loosen the captive screws on the air filter cover.
3. Remove the air filter cover.
4. Slide the air filter out of the chassis.

Figure 119: Removing the Air Filter

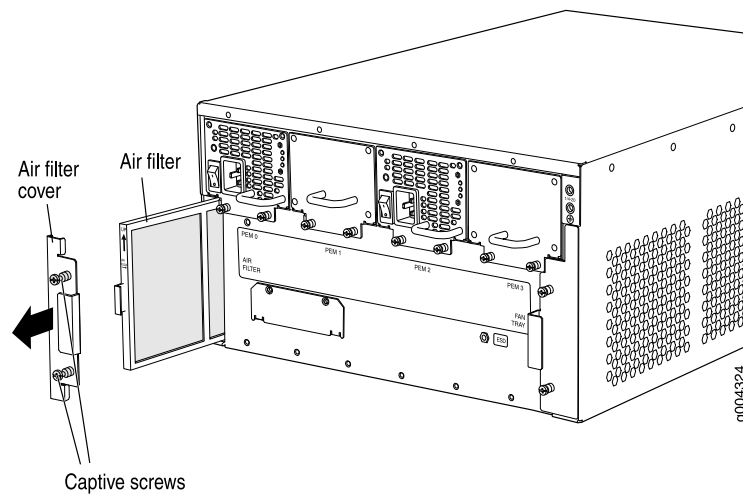


- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing the MX480 Air Filter on page 252](#)
 - [Maintaining the MX480 Air Filter on page 415](#)
 - [MX480 Cooling System Description on page 21](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

Installing the MX480 Air Filter

To install the air filter (see [Figure 92 on page 253](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Locate the up arrow and ensure that the air filter is right side up.
3. Slide the air filter straight into the chassis until it stops.
4. Align the captive screws of the air filter cover with the mounting holes on the chassis.
5. Tighten the captive screws on the air filter cover.

Figure 120: Installing the Air Filter

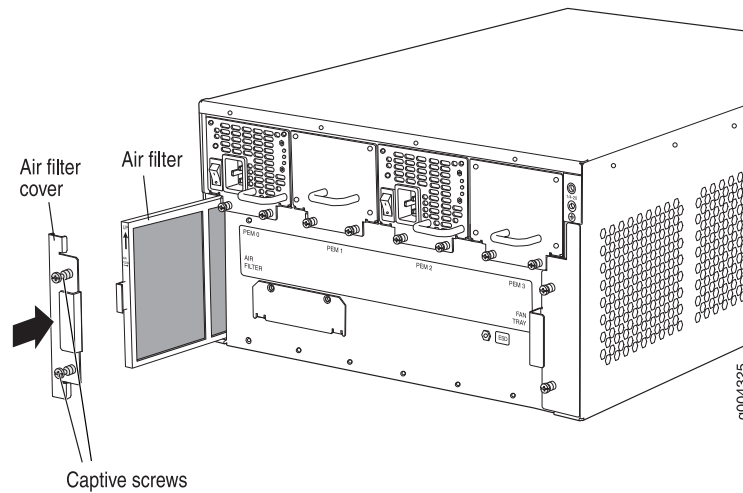

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing the MX480 Air Filter on page 295](#)
 - [Maintaining the MX480 Air Filter on page 415](#)
 - [MX480 Cooling System Description on page 21](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Maintaining the MX480 Air Filter on page 415](#)
 - [MX480 Cooling System Description on page 21](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

Replacing the MX480 Fan Tray

1. [Removing the MX480 Fan Tray on page 298](#)
2. [Installing the MX480 Fan Tray on page 299](#)

Removing the MX480 Fan Tray



NOTE: To prevent overheating, install the replacement fan tray immediately after removing the existing fan tray.

To remove the fan tray (see [Figure 121 on page 299](#)):


1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.



WARNING: To avoid injury, keep tools and your fingers away from the fans as you slide the fan module out of the chassis. The fans might still be spinning.

4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

Figure 121: Removing the Fan Tray

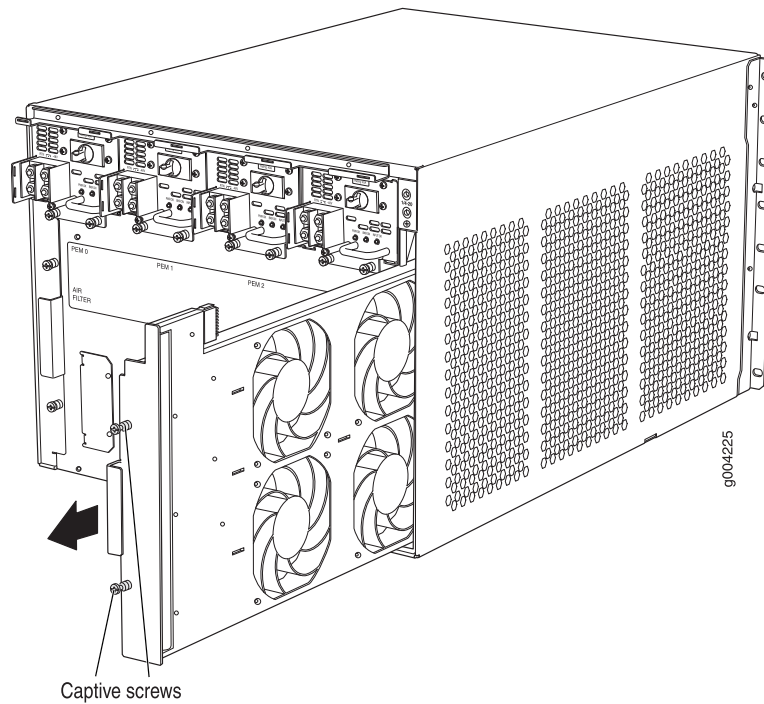


- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing the MX480 Fan Tray on page 253](#)
 - [Maintaining the MX480 Fan Tray on page 416](#)
 - [MX480 Cooling System Description on page 21](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

Installing the MX480 Fan Tray

To install the fan tray (see [Figure 93 on page 254](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray handle, and insert it straight into the chassis. Note the correct orientation by the **this side up** label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 122: Installing the Fan Tray

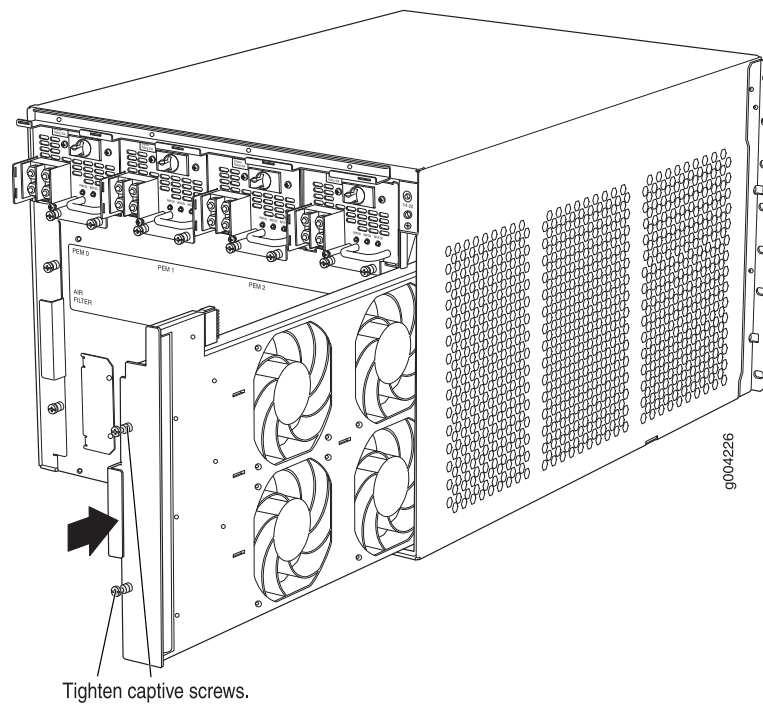

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing the MX480 Fan Tray on page 298](#)
 - [Maintaining the MX480 Fan Tray on page 416](#)
 - [MX480 Cooling System Description on page 21](#)
 - [Troubleshooting the MX480 Cooling System on page 442](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Replacing Host Subsystem Components

- Replacing an MX480 Routing Engine on page 301
- Replacing an SSD Drive on an RE-S-1800 on page 305
- Replacing an SSD Drive on an RE-S-X6-64G on page 306
- Replacing Connections to MX480 Routing Engine Interface Ports on page 311
- Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem on page 313
- Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem on page 319

Replacing an MX480 Routing Engine

1. Removing an MX480 Routing Engine on page 301
2. Installing an MX480 Routing Engine on page 303

Removing an MX480 Routing Engine

Before you remove a Routing Engine, remove the cables that connect to it.



CAUTION: Before you replace a Routing Engine, you must take the host subsystem offline. If there is only one host subsystem, taking the host subsystem offline shuts down the router.



CAUTION: If the Routing Engine to be replaced is currently functioning as the master Routing engine, switch it to be the backup before removing it.

To remove a Routing Engine from an SCB (see [Figure 123 on page 303](#)):

1. Take the Routing Engine offline gracefully.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.

3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Verify that the Routing Engine LEDs are off.
5. Loosen the captive screws on the top and bottom of the Routing Engine.
6. Flip the ejector handles outward to unseat the Routing Engine.
7. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
8. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.
9. Place the Routing Engine on the antistatic mat.




.....

NOTE: To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

.....

Figure 123: Removing a Routing Engine

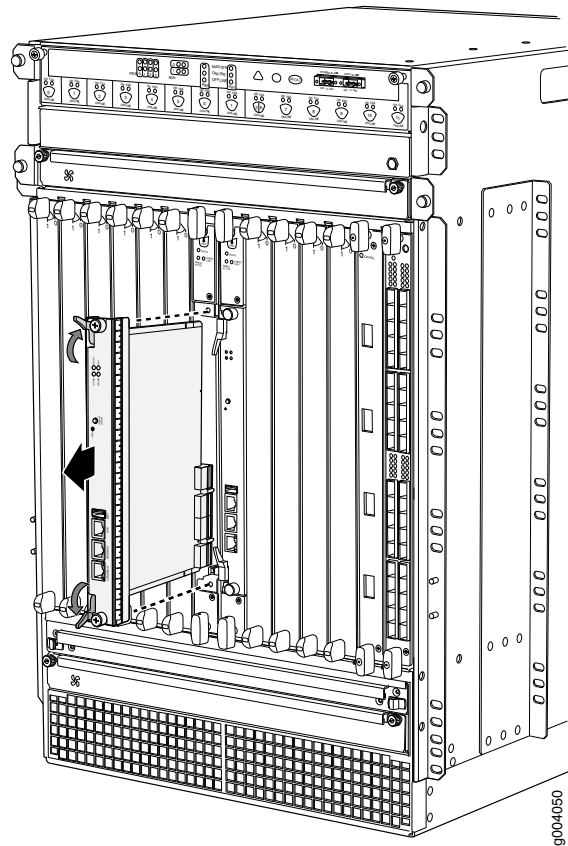

- See Also**
- [Replacing Connections to MX480 Routing Engine Interface Ports on page 311](#)
 - [Effect of Taking the MX480 Host Subsystem Offline](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 Routing Engine on page 254](#)

Installing an MX480 Routing Engine

To install a Routing Engine into an SCB (see [Figure 94 on page 255](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it.

4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCB.
5. Slide the Routing Engine into the SCB until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.
6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the left and right of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

The Routing Engine might require several minutes to boot.


After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED lights steadily. If the red **FAIL** LED lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

To check the status of the Routing Engine, use the CLI command:

```
user@host> show chassis routing-engine
Routing Engine status:      Slot 0:      Current state      Master ...
```

For more information about using the CLI, see the Junos OS documentation.

Figure 124: Installing a Routing Engine

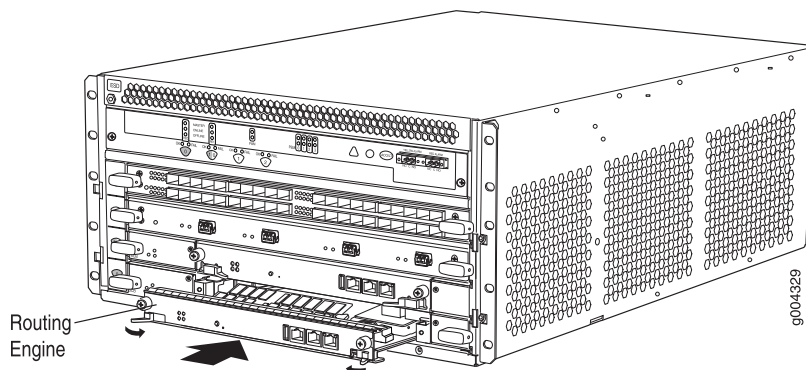


- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing Connections to MX480 Routing Engine Interface Ports on page 311](#)
 - [Removing an MX480 Routing Engine on page 301](#)
 - [Removing an MX480 Routing Engine on page 301](#)

- Related Documentation**
- [Replacing Connections to MX480 Routing Engine Interface Ports on page 311](#)
 - [Effect of Taking the MX480 Host Subsystem Offline](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing Connections to MX480 Routing Engine Interface Ports on page 311](#)
 - [Synchronizing Routing Engines](#)

Replacing an SSD Drive on an RE-S-1800

Each RE-S-1800 Routing Engine supports two solid-state drives (SSD) specified by Juniper Networks. The RE-S-1800 ships with one SSD installed in the slot labeled **SATA SSD1**. The spare SSD is Juniper part number SSD-32G-RE-S. [Figure 125 on page 305](#) shows the arrangement of storage drive slots on a RE-S-1800 Routing Engine.

Figure 125: RE-S-1800 Storage Drive Slots

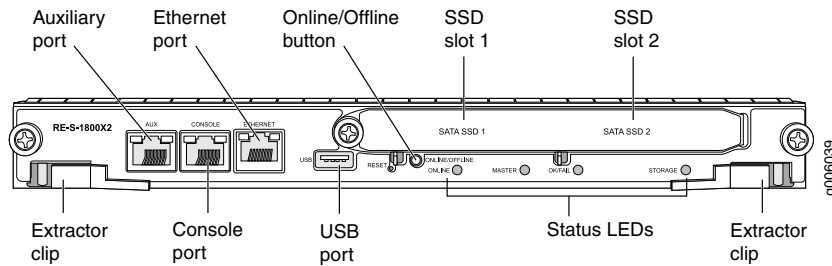

The following drive has been verified to work in the RE-S-1800 Routing Engine:

- SSD-32G-RE-S

To replace a storage drive:

1. Disable and deactivate the storage drive.

2. Remove the storage drive.
 - a. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an ESD point on the appliance.

For more information about ESD, see *Preventing Electrostatic Discharge Damage* in the hardware guide for your router.
 - b. Unfasten the thumbscrew that secures the access door in front of the storage drive slots, and open the door.
 - c. Slide the lock on the ejector to the unlocked position.
 - d. Carefully slide the drive out of the slot.
3. Reinstall a storage drive.
 - a. Carefully align the sides of the drive with the guides in the slot.
 - b. Slide the drive into the slot until you feel resistance, carefully ensuring that it is correctly aligned.
 - c. Close the access door and tighten the thumbscrew to secure the door.

**Related
Documentation**

- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)


Replacing an SSD Drive on an RE-S-X6-64G

Each RE-S-X6-64G Routing Engine supports two solid-state drives (SSD) specified by Juniper Networks. The RE-S-X6-64G ships with two SSDs installed in the slot labeled **DISK1** and **DISK2**. [Figure 126 on page 307](#) shows the arrangement of storage drive slots on a RE-S-X6-64G Routing Engine.

Replacing an SSD drive in a RE-S-X6-64G Routing Engine consists of the following two stages:

1. Replacing the SSD Drive in the Routing Engine.
2. Copying vmhost and Junos OS to the replaced SSD.

Figure 126: RE-S-X6-64G Storage Drive Slots

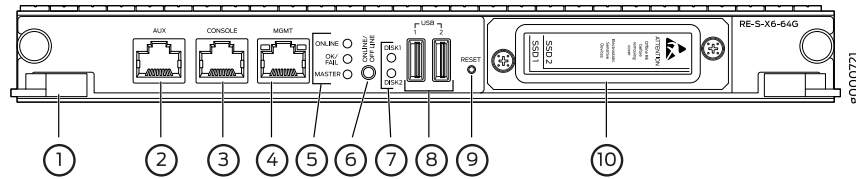

The following drive has been verified to work in the RE-S-X6-64G Routing Engine:

- 64GB slim SATA SSD

Replacing the SSDs:

1. To replace an SSD in the slot labeled **Disk2**:

- a. Make sure that there is no **VMHost %d Boot from alternate disk** alarm in the output:

```
user@host>show chassis alarm
```

- To replace an SSD in the slot labeled **Disk1**:

- a. Make sure that the router is booted up and running from an image from disk1.

Back up the currently running vmhost and Junos OS on disk1 to ensure that both disk1 and disk2 have the same version of vmhost and Junos OS:

```
user@host> request vmhost snapshot [partition]
```



NOTE: Partitioning the target media is optional.

- b. Reboot the router from disk2:

```
user@host> request vmhost reboot disk2
```

- c. Check for the presence of the **VMHost %d Boot from alternate disk** alarm in the output:


```
user@host>show chassis alarm
```

2. Offline the Routing Engine by pressing the **ONLINE/OFFLINE** button.

3. Remove the SSD.
 - a. Attach an ESD grounding strap to your bare wrist, and connect the strap to an ESD point on the appliance.

For more information about ESD, see *Preventing Electrostatic Discharge Damage* in the hardware guide for your router.
 - b. Unfasten the thumbscrew that secures the access door in front of the storage drive slots, and open the door.
 - c. Slide the lock on the ejector to the unlocked position.
 - d. Carefully slide the drive out of the slot.

Figure 127: Removing an SSD in the Routing Engine RE-S-X6-64G

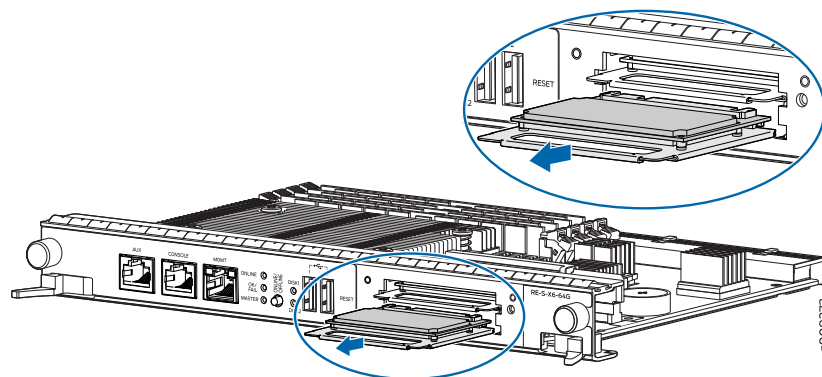

4. Reinstall an SSD:
 - a. Carefully align the sides of the drive with the guides in the slot.
 - b. Slide the drive into the slot until you feel resistance, carefully ensuring that it is correctly aligned.
 - c. Close the access door and tighten the thumbscrew to secure the door.

1. Copy Junos OS to the newly replaced SSD:

If both the SSDs are replaced together:

- a. Install using an USB disk:

1. Insert the USB disk in the **USB** slot on the Routing Engine.
2. After the Routing Engine boots from the USB, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N?** on the console.
3. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.



NOTE: To prepare a bootable USB disk, see

- b. Install vmhost using the PXEBoot method:

1. Set up the PXEBoot server. See *Copying VM Host Installation Package to the PXE Boot Server*.
2. Bring the Routing Engine online by pressing the ONLINE/OFFLINE button
3. During the boot, when you see the message **Press Esc for boot options** press **Esc** key to enter into the BIOS menu boot options.
After the **Esc** key is pressed, **Esc is pressed. Go to boot options.** is displayed on the screen.
4. Using **Up** or **Down** arrow keys, navigate to **Boot Manager** and press the **Enter** key.
5. Using **Up** or **Down** arrow keys, navigate through the EFI boot devices listed and select **EFI Network 0 for IPv4** to boot from the PXEboot server and press the **Enter** key.
6. **Booting `net boot console** is displayed and PXEBoot continues.



NOTE: The booting process may take several minutes.

7. After the Routing Engine boots, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N?** on the console.
8. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.

If only disk2 is replaced:

- a. Bring the Routing Engine online by pressing the ONLINE/OFFLINE button.
- b. The router boots from disk1. To be able to boot from disk2:


```
user@host> request vmhost snapshot partition
```

If only disk1 is replaced:

- a. Bring the Routing Engine online by pressing the ONLINE/OFFLINE button.
- b. The router boots from disk2 . To be able to boot from disk1:

```
user@host> request vmhost snapshot partition
```

Figure 128: Installing an SSD in the Routing Engine RE-S-X6-64G

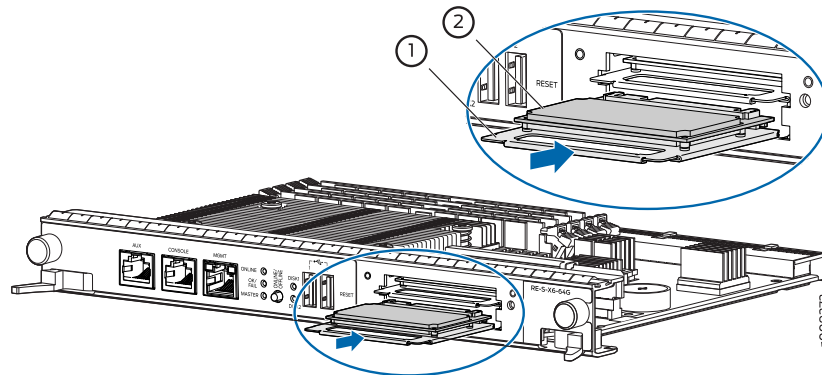

1—Carrier

2—SSD card

Copying vmhost and Junos OS from an USB disk when both the SSDs are replaced together:



NOTE: To prepare a bootable USB disk, see [Creating an Emergency Boot Device for RE-MX-X6, RE-MX-X8 and RE-PTX-X8 Routing Engines](#).

1. Insert the USB disk in the **USB** slot on the Routing Engine.
2. After the Routing Engine boots from the USB, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N]?** on the console.
3. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.

Copying vmhost and Junos OS to the SSDs from the PXEBoot server:

1. Set up the PXEBoot server. See [Copying VM Host Installation Package to the PXE Boot Server](#).
2. Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button.
3. During the boot, when you see the message **Press Esc for boot options** press **Esc** key to enter into the BIOS menu boot options.

After the **Esc** key is pressed, **Esc is pressed. Go to boot options.** is displayed on the screen.

4. Using **Up** or **Down** arrow keys, navigate to **Boot Manager** and press the **Enter** key.
5. Using **Up** or **Down** arrow keys, navigate through the EFI boot devices listed and select **EFI Network 0 for IPv4** to boot from the PXEboot server and press the **Enter** key.
6. **Booting `net boot console** is displayed and PXEBoot continues.



NOTE: The booting process may take several minutes.

7. After the Routing Engine boots, press **y** when you are prompted to confirm **Install vmhost and Junos software on Primary and Secondary disk [y/N]?** on the console.
8. After the installation is completed, press **y** when prompted to confirm **Reboot now? [y/N]?** to reboot from the SSD disk.

Copying vmhost and Junos OS when only one disk is replaced:

- a. Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button.
- b. The router boots from disk1 if disk2 is replaced. To be able to boot from disk2:

```
user@host> request vmhost snapshot partition
```

The router boots from disk2 if disk1 is replaced. To be able to boot from disk1:

```
user@host> request vmhost snapshot recovery partition
```

Related Documentation

- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Upgrading the SSD Firmware on RE-S-X6-64G and RE-MX2K-X8-64G Routing Engines](#)

Replacing Connections to MX480 Routing Engine Interface Ports

- [Replacing the Management Ethernet Cable on an MX Series Router on page 312](#)
- [Replacing the Console or Auxiliary Cable on an MX480 Router on page 312](#)

Replacing the Management Ethernet Cable on an MX Series Router

One Ethernet cable with RJ-45 connectors is provided with the router. To replace the cable connected to the **ETHERNET** port:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the port.
[Figure 116 on page 292](#) shows the connector.
3. Disconnect the cable from the network device.
4. Plug one end of the replacement cable into the **ETHERNET** port. [Figure 117 on page 292](#) shows the port.
5. Plug the other end of the cable into the network device.

Figure 129: Cable Connector


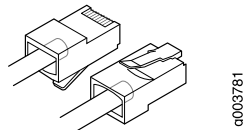


Figure 130: Ethernet Port

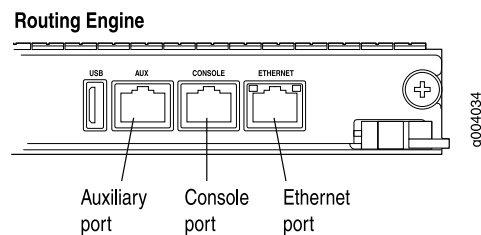

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Connecting the MX480 Router to Management and Alarm Devices on page 231](#)
 - [Replacing the Console or Auxiliary Cable on an MX480 Router on page 292](#)
 - [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port on page 137](#)


Replacing the Console or Auxiliary Cable on an MX480 Router

To use a system console to configure and manage the Routing Engine, connect it to the **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. One RJ-45/DB-9 cable is provided with the router. If you want to connect a device to both ports, you must supply another cable.

To replace a cable connected to a management console or auxiliary device:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Press the tab on the connector, and pull the connector straight out of the port.
3. Disconnect the cable from the console or auxiliary device.
4. Plug the RJ-45 end of the replacement serial cable into the **CONSOLE** or **AUX** port. [Figure 118 on page 293](#) shows the external device ports on the Routing Engine.
5. Plug the female DB-9 end into the console or auxiliary device's serial port.

Figure 131: Auxiliary and Console Ports

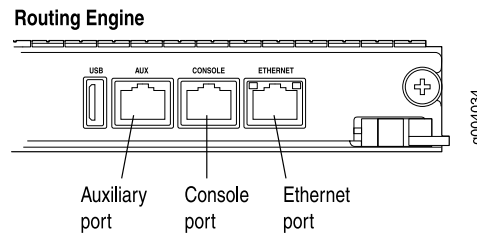

- See Also**
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 134](#)
 - [Replacing the Management Ethernet Cable on an MX Series Router on page 292](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

- Related Documentation**
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers on page 134](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 Routing Engine on page 301](#)

Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem

A redundant host subsystem consists of a master Routing Engine (RE0) and a backup Routing Engine (RE1). To upgrade the host subsystem to use the RE-S-X6-64G Routing Engine, you must first uninstall the backup Routing Engine and install the RE-S-X6-64G Routing Engine, which then becomes the backup Routing Engine. You then switch over this backup Routing Engine to make it the master Routing Engine. Replace the other Routing Engine and configure it as the backup Routing Engine.

Ensure that the Switch Control Board in the chassis is SCBE2 because the RE-S-X6-64G Routing Engine is not compatible with the Switch Control Boards SCB or SCBE. To upgrade the Switch Control Board to SCBE2, see *Replacing an MX240 SCB* or “[Replacing an MX480 SCB](#)” on [page 381](#) or *Replacing an MX960 SCB*, depending on the chassis on which the Routing Engine is being upgraded.



NOTE: Save the router configuration before proceeding with the Routing Engine upgrade.



NOTE: Nonstop active routing (NSR) and graceful Routing Engine switchover (GRES) are not supported during the upgrade and they must be temporarily disabled. Disable NSR by removing the `nonstop-routing` statement from the `[edit routing-options]` hierarchy level and by removing the `graceful-switchover` statement from the `[edit chassis redundancy]` hierarchy level .

1. [Removing the Routing Engine on page 314](#)
2. [Installing the Routing Engine RE-S-X6-64G on page 316](#)
3. [Verifying and Configuring the Upgraded Routing Engine as the Master on page 319](#)
4. [Verifying and Configuring the Upgraded Routing Engine as the Backup on page 319](#)

Removing the Routing Engine

To remove the backup Routing Engine from the chassis (see [Figure 132 on page 315](#), [Figure 133 on page 315](#), and [Figure 134 on page 316](#)):

1. On the external management device connected to the Routing Engine, shut down the host subsystem by using the `request system power-off` command.
2. Wait until a message appears on the console confirming that the operating system has halted.
3. Remove the cables connected to the Routing Engine.
4. Place an electrostatic bag or antistatic mat on a flat, stable surface. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Verify that the Routing Engine LEDs are off. Loosen the captive screws on the top and bottom of the Routing Engine.

6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis. Place the Routing Engine on the antistatic mat.



NOTE: To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

Figure 132: Removing a Routing Engine from an MX240 Router

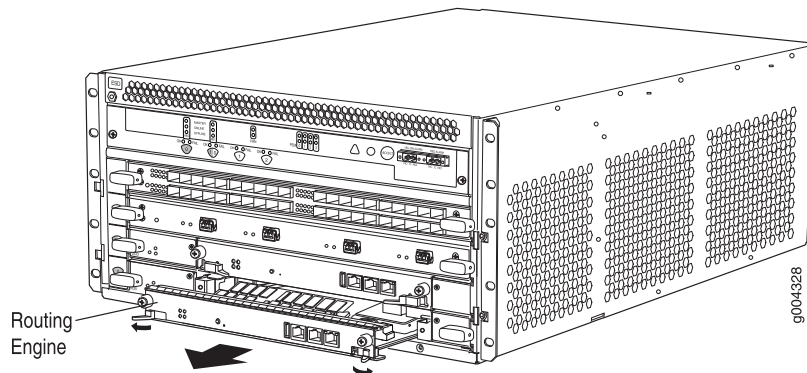


Figure 133: Removing a Routing Engine from an MX480 Router


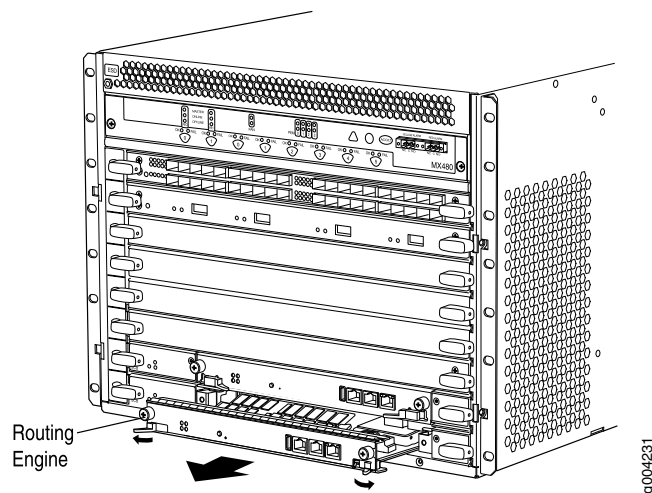


Figure 134: Removing a Routing Engine from an MX960 Router

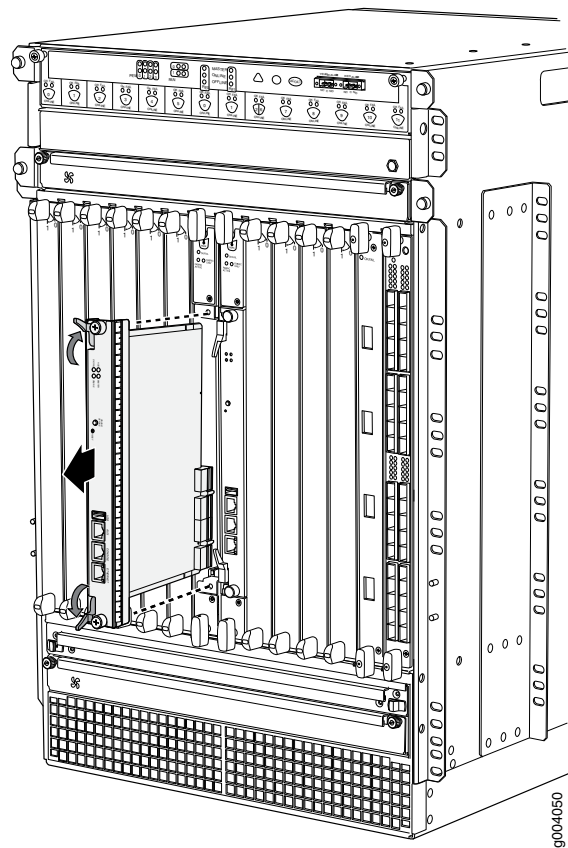

Installing the Routing Engine RE-S-X6-64G

To install the Routing Engine RE-S-X6-64G:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it and carefully align the sides of the Routing Engine with the guides inside the opening on the Switch Control Board SCBE2.



NOTE: The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

4. Slide the Routing Engine into the SCBE2 until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.

5. Press both of the ejector handles inward to seat the Routing Engine. Tighten the captive screws on the top and bottom of the Routing Engine.
6. Connect the management device cables to the Routing Engine. After the Routing Engine is installed, the **ONLINE** LED starts blinking green slowly.
7. Replace the former master Routing Engine, RE0, with the Routing Engine RE-S-X6-64G.



NOTE: The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

The Routing Engine might require several minutes to boot. After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED on the Routing Engine lights steadily. If the red **FAIL** LED on the Routing Engine lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

Figure 135: Installing a Routing Engine in an MX240 Router

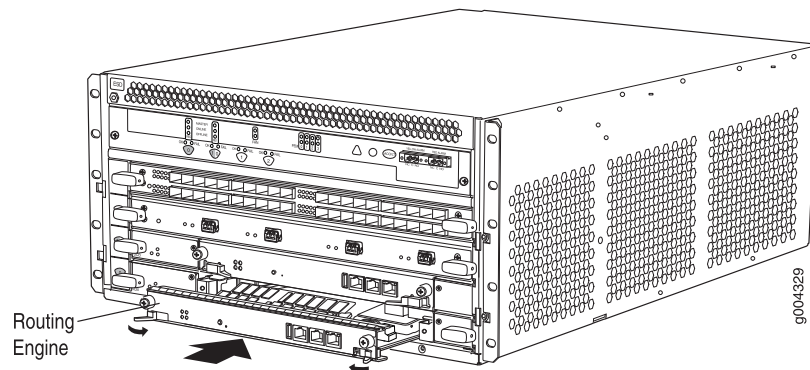


Figure 136: Installing a Routing Engine in an MX480 Router


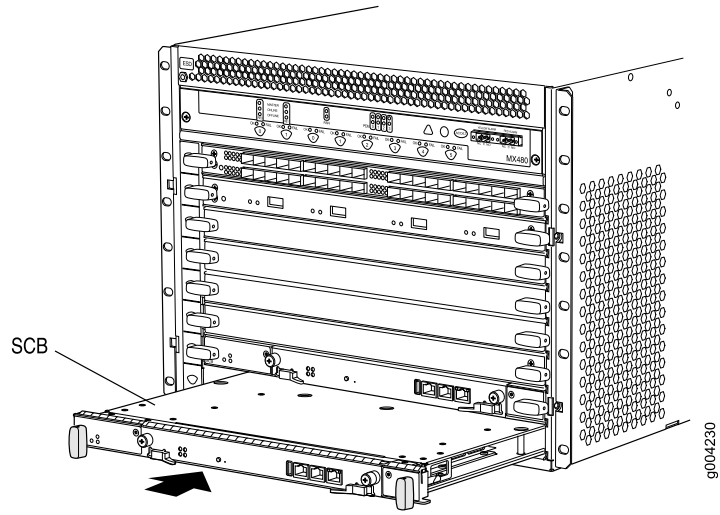


Figure 137: Installing a Routing Engine in an MX960 Router

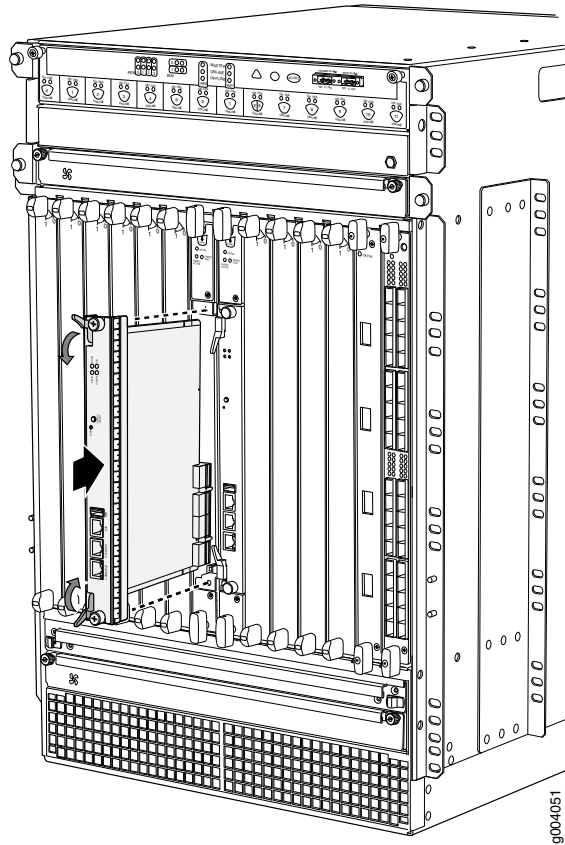

Verifying and Configuring the Upgraded Routing Engine as the Master

After replacing the backup Routing Engine with the RE-S-X6-64G Routing Engine, perform the following steps:

1. Verify that the SCBE2 and RE-S-X6-64G Routing Engine are online by issuing the **show chassis hardware** command.
2. After you install the RE-S-X6-64G Routing Engine into the SCBE2, the Routing Engine gets automatically powered on and comes up in *amnesiac* mode as it is loaded with factory defaults. After the Routing Engine comes up in *amnesiac* mode, load the base configuration and commit.
3. Configure the backup Routing Engine by using the **commit synchronize** command to copy the configuration to the backup Routing Engine.
4. Use the **request chassis routing-engine master switch** command to make the Routing Engine RE-S-X6-64G (RE1) the master Routing Engine. All FPCs reboot after this step.

Verifying and Configuring the Upgraded Routing Engine as the Backup

1. Use the **request chassis routing-engine master switch** command to make newly installed RE-S-X6-64G (RE0) the backup Routing Engine.
2. Use the **commit synchronize** command to copy the active configuration from the master Routing Engine to the backup Routing Engine.

Related Documentation

- [RE-S-X6-64G Routing Engine Description on page 32](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem on page 319](#)

Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem

In a nonredundant host subsystem, only one Routing Engine and one Switch Control Board are present in the chassis. When you are upgrading the Routing Engine, taking the host subsystem offline shuts down the router. To upgrade the host subsystem with the RE-S-X6-64G Routing Engine, you must uninstall the existing Routing Engine and install the RE-S-X6-64G Routing Engine. Ensure that the Switch Control Board in the chassis is SCBE2 because the RE-S-X6-64G Routing Engine is not compatible with the Switch Control Boards SCB or SCBE. To upgrade the Switch Control Board to SCBE2, see *Replacing an MX240 SCB* or *“Replacing an MX480 SCB”* on page 381 or *Replacing an MX960 SCB*, depending on the chassis on which the Routing Engine is being upgraded.



NOTE: Save the router configuration before proceeding with the Routing Engine upgrade.

1. [Removing the Routing Engine on page 320](#)
2. [Installing the Routing Engine RE-S-X6-64G on page 321](#)

Removing the Routing Engine

To remove the Routing Engine from the chassis:

1. On the external management device connected to the Routing Engine, shut down the host subsystem by using the **request system power-off** command.
2. Wait until a message appears on the console confirming that the operating system has halted.
3. Remove the cables connected to the Routing Engine.
4. Place an electrostatic bag or antistatic mat on a flat, stable surface. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Verify that the Routing Engine LEDs are off. Loosen the captive screws on the top and bottom of the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis. Place the Routing Engine on the antistatic mat.



NOTE: To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

Installing the Routing Engine RE-S-X6-64G

To install the new Routing Engine (RE-S-X6-64G):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it and carefully align the sides of the Routing Engine with the guides inside the opening on the SCBE2.



NOTE: The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

4. Slide the Routing Engine into the SCBE2 until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.
5. Press both of the ejector handles inward to seat the Routing Engine. Tighten the captive screws on the top and bottom of the Routing Engine.
6. Connect the management device cables to the Routing Engine. After the Routing Engine is installed, the **ONLINE** LED starts blinking green slowly.
7. Verify that the SCBE2 and RE-S-X6-64G Routing Engine are online by issuing the **show chassis hardware** command.
8. After you install the RE-S-X6-64G Routing Engine into the SCBE2, the Routing Engine gets automatically powered on and comes up in *amnesiac* mode as it is loaded with factory defaults. After the Routing Engine comes up in *amnesiac* mode, load the base configuration and commit.

The Routing Engine might require several minutes to boot. After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED on the Routing Engine lights steadily. If the red **FAIL** LED lights steadily instead, remove the Routing Engine and reinstall it. If the red **FAIL** LED on the Routing Engine still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

Related Documentation

- [RE-S-X6-64G Routing Engine Description on page 32](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem on page 313](#)

Replacing Line Card Components

- Replacing an MX480 DPC on page 323
- Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 328
- Replacing an MX480 FPC on page 332
- Replacing an MX480 MIC on page 337
- Replacing an MX480 MPC on page 345
- Replacing an MX480 PIC on page 350
- Replacing an MX480 AS MLC on page 355
- Replacing an MX480 AS MSC on page 359
- Replacing an MX480 AS MXC on page 363

Replacing an MX480 DPC

1. Removing an MX480 DPC on page 323
2. Installing an MX480 DPC on page 325

Removing an MX480 DPC

A DPC weighs up to 13.1 lb (5.9 kg). Be prepared to accept its full weight.

To remove a DPC (see [Figure 138 on page 325](#)):

1. Have ready a replacement DPC or DPC blank panel and an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC you are removing that uses an optical interface.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to each port on the DPC so that you can later reconnect the cables to the correct ports.
4. Use one of the following methods to take the DPC offline:

- Press and hold the corresponding DPC online button on the craft interface. The green OK LED next to the button begins to blink. Hold the button down until the LED goes off.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

5. Disconnect the cables from the DPC.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. Immediately cover each optical transceiver and the end of each fiber-optic cable with a rubber safety cap.
7. Arrange the disconnected cables in the cable management brackets to prevent the cables from developing stress points.
8. Simultaneously turn both of the ejector handles counterclockwise to unseat the DPC.
9. Grasp the handles, and slide the DPC straight out of the card cage halfway.
10. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack DPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

11. If you are not reinstalling a DPC into the emptied DPC slot within a short time, install a blank DPC panel over the slot to maintain proper airflow in the DPC card cage.



CAUTION: After removing a DPC from the chassis, wait at least 30 seconds before reinserting it, removing a DPC from a different slot, or inserting a DPC into a different slot.

Figure 138: Removing a DPC

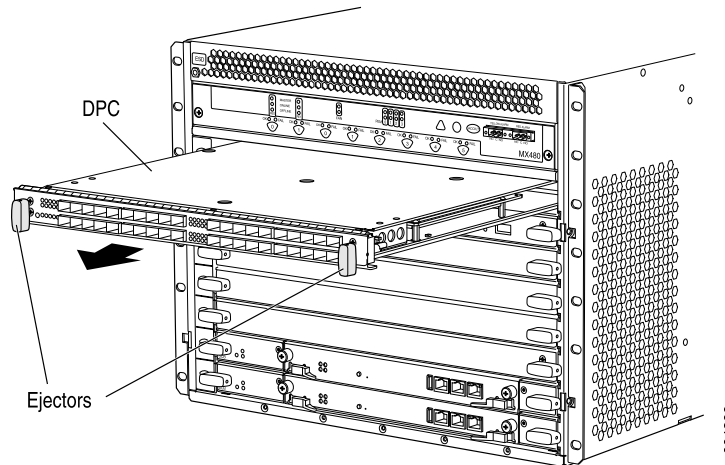

- See Also**
- [Installing an MX480 DPC on page 256](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Installing an MX480 DPC

A DPC weighs up to 14.5 lb (6.6 kg). Be prepared to accept its full weight.

To install a DPC (see [Figure 95 on page 258](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat, or remove it from its electrostatic bag.

3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered with a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you vertically.
6. Lift the DPC into place, and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the DPC is fully seated.
9. Remove the rubber safety cap from each fiber-optic transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

10. Insert the cables into the cable connector ports on each DPC (see [Figure 96 on page 259](#)).
11. Arrange the cable in the standard or extended cable manager to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

12. Use one of the following methods to bring the DPC online:
 - Press and hold the corresponding DPC online button on the craft interface until the green OK LED next to the button lights steadily, in about 5 seconds.

- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```

For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED turns green, wait at least 30 seconds before removing the DPC again, removing a DPC from a different slot, or inserting a DPC in a different slot.

You can also verify that the DPC is functioning correctly by issuing the `show chassis fpc` and `show chassis fpc pic-status` commands.

Figure 139: Installing a DPC


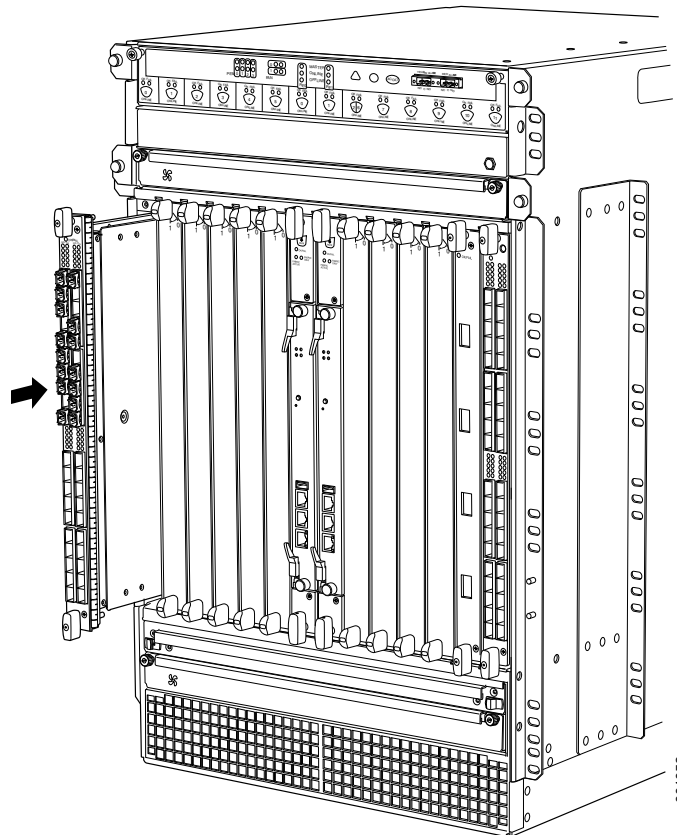


Figure 140: Attaching a Cable to a DPC

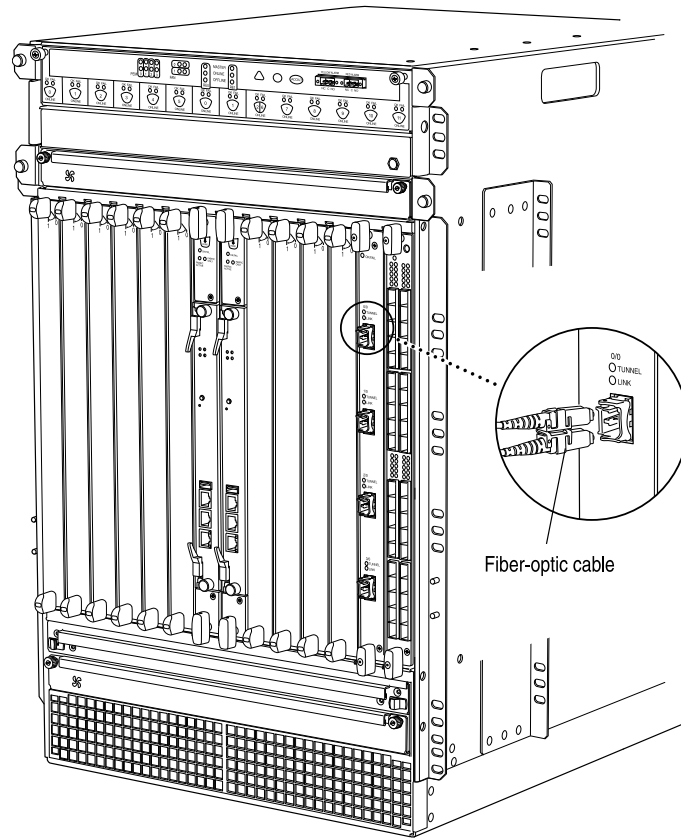

- See Also**
- [Removing an MX480 DPC on page 323](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 Dense Port Concentrator \(DPC\) Description on page 55](#)
 - [MX480 Dense Port Concentrator \(DPC\) LEDs on page 60](#)
 - [Troubleshooting the MX480 DPCs on page 442](#)
 - [Maintaining MX480 DPCs on page 420](#)

Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC

1. [Removing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 329](#)
2. [Installing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 330](#)

Removing a Cable on an MX480 DPC, MPC, MIC, or PIC

Removing and installing cables on a DPC, MPC, MIC, or PIC does not affect router function.

To remove a cable:

1. Have ready a rubber safety cap for each fiber-optic cable and transceiver.
2. If removing all cables connected to the component, use one of the following methods to take the component offline:

- To take a DPC or an MPC offline:

- Press and hold the corresponding online button on the craft interface. The green OK LED next to the button begins to blink. Hold the button down until the LED goes off.

- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

- To take a PIC offline:

- Press the online/offline button on the PIC. For a PIC installed in an FPC3, use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the PIC LED goes off (about 5 seconds).

- Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

- To take a MIC offline:

- Press the online/offline button on the MIC. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC LED goes off (about 5 seconds).

- Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot pic-slot mic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

3. Disconnect the cable from the cable connector port. If the component uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

4. Remove the cable from the cable management brackets.
5. Disconnect the cable from the destination port.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 259](#)
 - [Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs on page 434](#)

Installing a Cable on an MX480 DPC, MPC, MIC, or PIC

To install a cable:

1. Have ready a length of the type of cable used by the DPC, MPC, MIC, or PIC. For cable specifications, see the [MX Series Interface Module Reference](#).
2. If the cable connector port is covered by a rubber safety plug, remove the plug.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the component faceplate.
4. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

5. Insert the other end of the cable into the destination port.
6. Repeat the previous steps for any additional cables.
7. If the component is offline (its failure indicator LED is lit), use one of the following methods to bring the it online:

- To bring a DPC or an MPC online:

- Press and hold the corresponding online button on the craft interface until the green OK LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a PIC online:

- Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in an FPC2 or FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
- Issue the following CLI command:

```
user@host>request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a MIC online:

- Press the MIC offline/online button until the MIC LED lights green.
- Issue the following CLI command:

```
user@host>request chassis mic fpc-slot mpc-slot pic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning indicator LED confirms that the component is online. You can also verify correct DPC or MPC functioning by issuing the **show chassis fpc** command or correct MIC or the PIC functioning by issuing the **show chassis fpc pic-status** command.

See Also • [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

- [Removing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 329](#)
- [Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs on page 434](#)

**Related
Documentation**

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs on page 434](#)

Replacing an MX480 FPC

1. [Removing an MX480 FPC on page 332](#)
2. [Installing an MX480 FPC on page 335](#)

Removing an MX480 FPC

When you remove an FPC, the router continues to function, although the PIC interfaces installed on the FPC being removed no longer function.

An FPC takes up two DPC slots on the MX480 router. Up to three FPCs can be installed horizontally in the front of the MX480 router. The FPCs are hot-insertable and hot-removable. An empty FPC3 weighs 14 lb (6.5 kg). A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To remove an FPC (see [Figure 141 on page 334](#)):

1. Have ready a replacement FPC or FPC blank panel and an antistatic mat for the FPC. Also have ready rubber safety caps for each PIC using an optical interface on the FPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to each PIC on the FPC so that you can later reconnect the cables to the correct PICs.
4. Use one of the following methods to take the FPC offline:
 - Press and hold the FPC online/offline button. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).



NOTE: The slot number corresponds to the lowest numbered slot for which the FPC is installed.

5. Disconnect the cables from the PICs installed in the FPC.
6. Immediately cover each fiber-optic transceiver and the end of each fiber-optic cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

7. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

8. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
9. Grasp the handles, and slide the FPC straight out of the card cage halfway.
10. Place one hand around the front of the FPC (the PIC housing) and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack FPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

11. If necessary, remove each installed PIC from the FPC.
12. After you remove each PIC, immediately place it on an antistatic mat or in an electrostatic bag.
13. If you are not reinstalling an FPC into the emptied DPC slots within a short time, install a blank DPC panel over each slot to maintain proper airflow in the card cage.



CAUTION: After removing an FPC from the chassis, wait at least 30 seconds before reinserting it or inserting an FPC into a different slot.

Figure 141: Removing an FPC

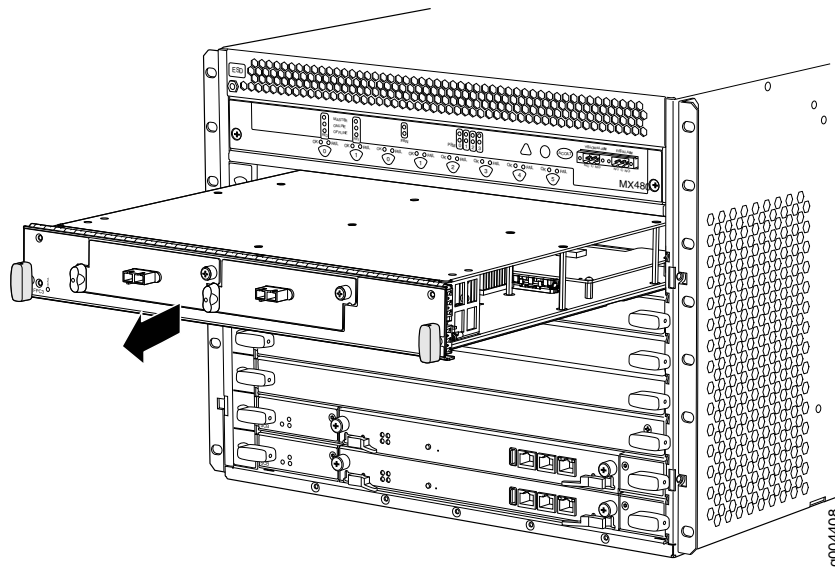

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an MX480 PIC on page 351.](#)
 - [Holding an MX480 FPC on page 427](#)
 - [Storing an MX480 FPC on page 429](#)
 - [Installing an MX480 FPC on page 261](#)
 - [Maintaining MX480 FPCs on page 425](#)

Installing an MX480 FPC

An FPC takes up two DPC slots on the MX480 router. Up to three FPCs can be installed horizontally in the front of the router. The FPCs are hot-insertable and hot-removable. An empty FPC3 weighs 14 lb (6.5 kg). A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To install an FPC (see [Figure 97 on page 263](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat.
3. Take each PIC to be installed in the replacement FPC out of its electrostatic bag, and identify the slot on the FPC where it will be connected.
4. Verify that each fiber-optic PIC has a rubber safety cap covering the PIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each PIC into the appropriate slot on the FPC.
6. Locate the slots in the card cage in which you plan to install the FPC.
7. Orient the FPC so that the faceplate faces you.
8. Lift the FPC into place, and carefully align the sides of the FPC with the guides inside the card cage.



CAUTION: When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the FPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles, and rotate them clockwise simultaneously until the FPC is fully seated.
11. If any of the PICs on the FPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each PIC on the FPC.
13. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

14. Use one of the following methods to bring the FPC online:
 - Press and hold the FPC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED lights steadily, wait at least 30 seconds before removing the FPC again, removing an FPC from a different slot, or inserting an FPC in a different slot.

You can also verify correct FPC and PIC functioning by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands described in “[Maintaining MX480 FPCs](#)” on page 425 and “[Maintaining MX480 PICs](#)” on page 433.

Figure 142: Installing an FPC

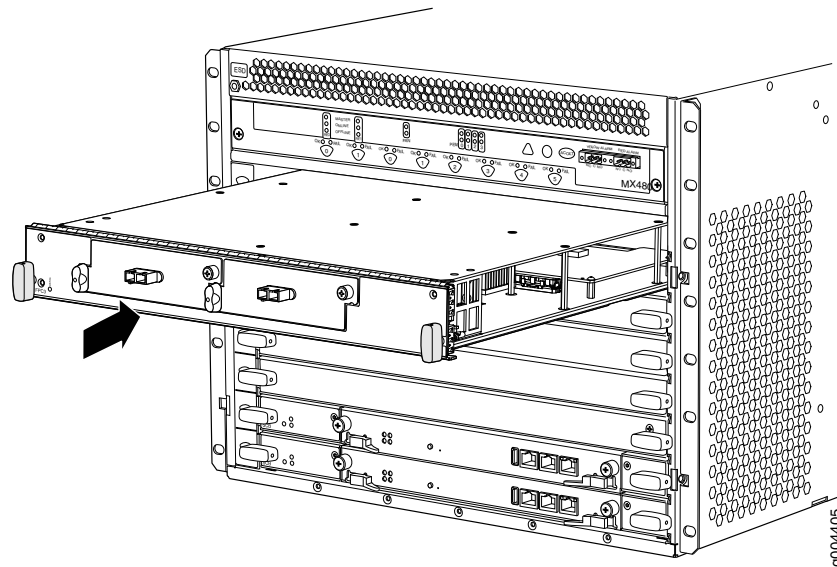

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 PIC on page 271](#)
 - [Removing an MX480 FPC on page 332](#)
 - [Holding an MX480 FPC on page 427](#)
 - [Storing an MX480 FPC on page 429](#)
 - [Maintaining MX480 FPCs on page 425](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 PIC on page 350](#)
 - [Holding an MX480 FPC on page 427](#)
 - [Storing an MX480 FPC on page 429](#)
 - [Maintaining MX480 FPCs on page 425](#)

Replacing an MX480 MIC

1. [Removing an MX480 MIC on page 338](#)
2. [Installing an MX480 MIC on page 340](#)
3. [Installing an MX480 Dual-Wide MIC on page 342](#)

Removing an MX480 MIC

MICs are hot-insertable and hot-removable. When you remove a MIC, the router continues to function, although the MIC interfaces being removed no longer function.

The MICs are located in the MPCs installed in the front of the router. A MIC weighs less than 2 lb (0.9 kg).

To remove a MIC (see [Figure 143 on page 339](#) and [Figure 144 on page 339](#)):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the MIC. If the MIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the MIC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC **OK/FAIL** LED goes off (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Label the cables connected to the MIC so that you can later reconnect each cable to the correct MIC.
5. Disconnect the cables from the MIC. If the MIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

6. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

7. On the MPC, pull the ejector lever that is adjacent to the MIC you are removing away from the MPC faceplate. Pulling the ejector lever disconnects the MIC from the MPC.



NOTE: To remove a dual-wide MIC that takes up both MIC slots, you must pull both ejector levers away from the MPC faceplate.

8. Grasp the handles on the MIC faceplate, and slide the MIC out of the MPC card carrier. Place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a MIC into the emptied MIC slot within a short time, install a blank MIC panel over the slot to maintain proper airflow in the MPC card cage.

Figure 143: Removing a MIC


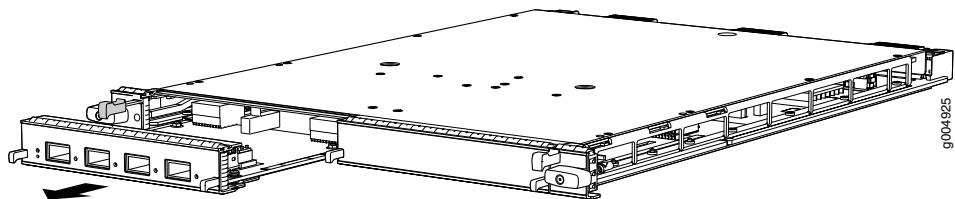


Figure 144: Removing a Dual-Wide MIC

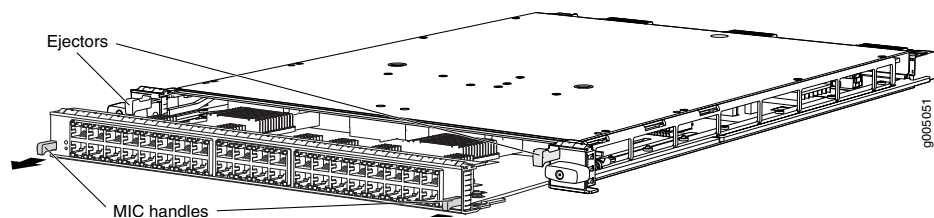

- See Also**
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MPC on page 345](#)
 - [Installing an MX480 MIC on page 264](#)
 - [Installing an MX480 Dual-Wide MIC on page 266](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)


- [MX480 MIC Serial Number Label on page 465](#)

Installing an MX480 MIC

To install a MIC (see [Figure 99 on page 266](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If you have used a dual-wide MIC and are now replacing it with two “single” MICs, install the septum (see [Figure 98 on page 264](#)):
 - a. Place the MPC on a flat surface (If necessary, remove the MPC from the router as described in [“Removing an MX480 MPC” on page 345](#)).
 - b. Position the septum in the center of the MPC so that it lines up with holes labeled **S** on the top of the MPC.
 - c. Insert a screw into each of the two holes labeled **S**, and then tighten completely.
 - d. On the bottom of the MPC, insert a screw into each of the four holes labeled **S**, and then tighten completely.
 - e. Install the MPC as described in [“Installing an MX480 MPC” on page 269](#).

Figure 145: Installing the Septum

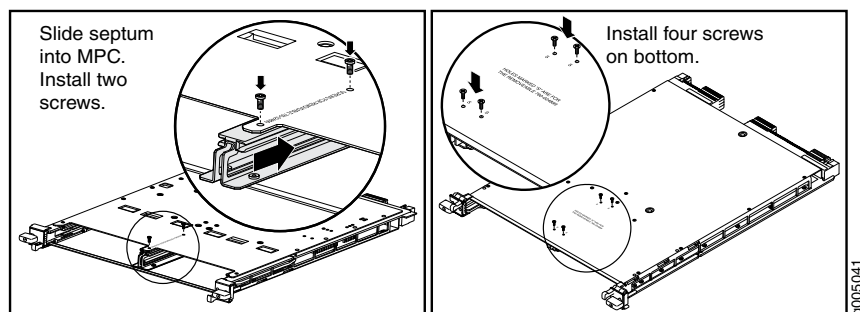

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. On the MPC, pull the ejector lever that is adjacent to the MIC you are installing away from the MPC faceplate.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.

6. Slide the MIC into the MPC until it is firmly seated in the MPC.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector lever is engaged by pushing it toward the MPC faceplate.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.
10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


11. Use one of the following methods to bring the MIC online:
- Press the MIC offline/online button until the MIC OK/FAIL LED lights green.
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the `show chassis fpc pic-status` command described in “Maintaining MX480 MICs” on page 430.

Figure 146: Installing a MIC

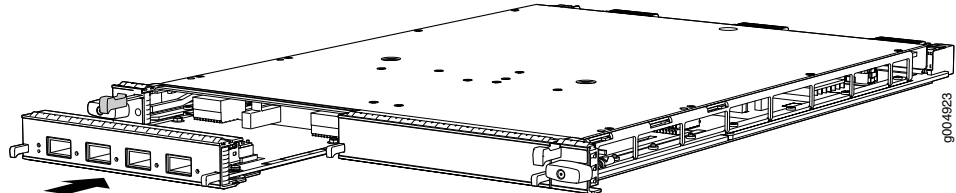


- See Also**
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MPC on page 345](#)
 - [Removing an MX480 MIC on page 338](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 MIC Serial Number Label on page 465](#)

Installing an MX480 Dual-Wide MIC

To install a dual-wide MIC (see [Figure 101 on page 268](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the septum, if necessary (see [Figure 100 on page 267](#)):
 - a. Place the MPC on a flat surface (if necessary, remove the MPC from the router as described in “[Removing an MX480 MPC](#)” on page 345).
 - b. Remove the four screws labeled **S** on the bottom of the MPC.
 - c. Remove the two screws labeled **S** on the top of the MPC.
 - d. Slide the septum towards you and out of the MPC.
 - e. Store the septum and screws for later use.
 - f. Install the MPC as described in “[Installing an MX480 MPC](#)” on page 269.

Figure 147: Removing the Septum

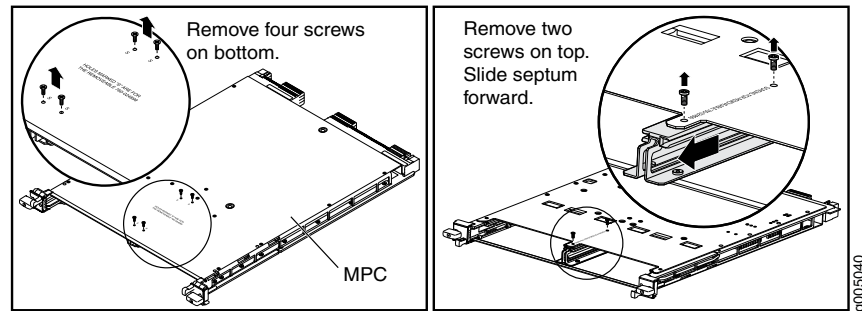

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. Pull the ejector lever above both MIC slots away from the router.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.
6. Slide the MIC into the MIC slot until it is firmly seated in the chassis.



CAUTION: Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector levers are engaged by pushing them toward the router.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.

10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.




CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

11. Use one of the following methods to bring the MIC online:
- Press the MIC offline/online button until the MIC OK/FAIL LED lights green.
 - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the `show chassis fpc pic-status` command described in “Maintaining MX480 MICs” on page 430.

Figure 148: Installing a Dual-Wide MIC

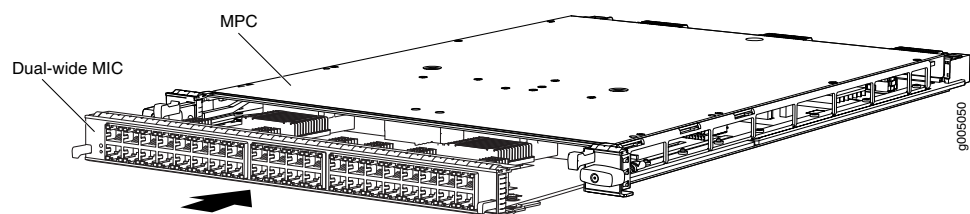

- See Also**
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MPC on page 345](#)
 - [Removing an MX480 MIC on page 338](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 MIC Serial Number Label on page 465](#)

- Related Documentation**
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MPC on page 345](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 MIC Serial Number Label on page 465](#)

Replacing an MX480 MPC

1. [Removing an MX480 MPC on page 345](#)
2. [Installing an MX480 MPC on page 348](#)

Removing an MX480 MPC

When you remove an MPC, the router continues to function, although the MIC interfaces installed on the MPC being removed no longer function.

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To remove an MPC (see [Figure 149 on page 347](#)):

1. Have ready a replacement MPC or DPC blank panel and an antistatic mat for the MPC. Also have ready rubber safety caps for each MIC using an optical interface on the MPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to each MIC on the MPC so that you can later reconnect the cables to the correct MICs.
4. Use one of the following methods to take the MPC offline:
 - Press and hold the corresponding online button on the craft interface. The green **OK/FAIL** LED next to the button begins to blink. Hold the button down until the LED goes off.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).
5. Disconnect the cables from the MICs installed in the MPC.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. If a MIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.
7. Arrange the disconnected cables in the cable management brackets to prevent the cables from developing stress points.
8. Simultaneously turn both the ejector handles counterclockwise to unseat the MPC.
9. Grasp the handles, and slide the MPC straight out of the card cage halfway.
10. Place one hand around the front of the MPC (the MIC housing) and the other hand under it to support it. Slide the MPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the MPC is concentrated in the back end. Be prepared to accept the full weight—up to 18.35 lb (8.3 kg)—as you slide the MPC out of the chassis.

When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack MPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.


11. If necessary, remove each installed MIC from the MPC.

12. After you remove each MIC, immediately place it on an antistatic mat or in an electrostatic bag.
13. If you are not reinstalling an MPC into the emptied line card slots within a short time, install a blank DPC panel over each slot to maintain proper airflow in the card cage.



CAUTION: After removing an MPC from the chassis, wait at least 30 seconds before reinserting it or inserting an MPC into a different slot.

Figure 149: Removing an MPC

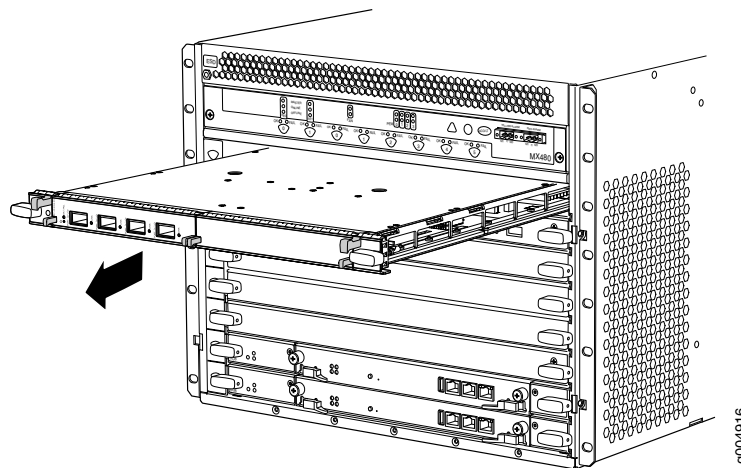

- See Also**
- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
 - [Maintaining MX480 MPCs on page 431](#)
 - [Tools and Parts Required to Replace MX480 Hardware Components on page 248](#)
 - [Installing an MX480 MPC on page 269](#)
 - [Removing an MX480 MIC on page 338](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 MPC Serial Number Label on page 467](#)

Installing an MX480 MPC

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To install an MPC (see [Figure 102 on page 271](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the MPC on an antistatic mat.
3. Take each MIC to be installed in the replacement MPC out of its electrostatic bag, and identify the slot on the MPC where it will be connected.
4. Verify that each fiber-optic MIC has a rubber safety cap covering the MIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each MIC into the appropriate slot on the MPC.
6. Locate the slot in the card cage in which you plan to install the MPC.
7. Orient the MPC so that the faceplate faces you.
8. Lift the MPC into place, and carefully align the sides of the MPC with the guides inside the card cage.



CAUTION: When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the MPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles, and rotate them clockwise simultaneously until the MPC is fully seated.
11. If any of the MICs on the MPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each MIC on the MPC. Secure the cables so that they are not supporting their own weight. Place excess cable out of the way in a neatly coiled loop, using the cable management system. Placing fasteners on a loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

13. Use one of the following methods to bring the MPC online:

- Press and hold the corresponding MPC online button on the craft interface until the green **OK/FAIL** LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



CAUTION: After the **OK/FAIL** LED lights steadily, wait at least 30 seconds before removing the MPC again, removing an MPC from a different slot, or inserting an MPC in a different slot.

You can also verify correct MPC and MIC functioning by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands described in “[Maintaining MX480 MPCs](#)” on page 431 and “[Maintaining MX480 MICs](#)” on page 430.

Figure 150: Installing an MPC

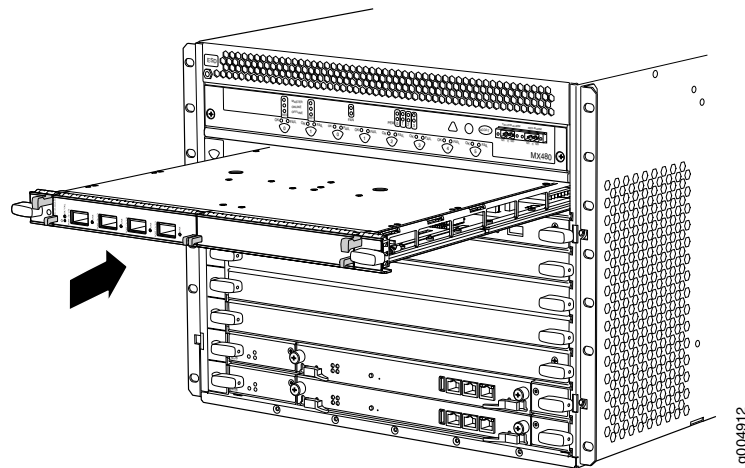

- See Also**
- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
 - [Maintaining MX480 MPCs on page 431](#)
 - [Tools and Parts Required to Replace MX480 Hardware Components on page 248](#)
 - [Removing an MX480 MPC on page 345](#)
 - [Installing an MX480 MIC on page 264](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 MPC Serial Number Label on page 467](#)

- Related Documentation**
- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
 - [Maintaining MX480 MPCs on page 431](#)
 - [Tools and Parts Required to Replace MX480 Hardware Components on page 248](#)
 - [Replacing an MX480 MIC on page 337](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 MPC Serial Number Label on page 467](#)

Replacing an MX480 PIC

1. [Removing an MX480 PIC on page 351](#)
2. [Installing an MX480 PIC on page 353](#)

Removing an MX480 PIC

PICs are hot-insertable and hot-removable. When you remove a PIC, the router continues to function, although the PIC interfaces being removed no longer function.

The PICs are located in the FPCs installed in the front of the router. A PIC weighs less than 2 lb (0.9 kg).

To remove a PIC (see [Figure 151 on page 352](#)):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the PIC. If the PIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the PIC offline:
 - Press its online/offline button. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the PIC LED goes off (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Label the cables connected to the PIC so that you can later reconnect each cable to the correct PIC.
5. Disconnect the cables from the PIC. If the PIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

6. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.




CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

7. For an FPC3 PIC, loosen the captive screw at the bottom of the PIC faceplate, then twist the ejector handle at the top of the faceplate counterclockwise to unseat the PIC.
8. Slide the PIC out of the FPC card carrier and place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a PIC into the emptied PIC slot within a short time, install a blank PIC panel over the slot to maintain proper airflow in the FPC card cage.

Figure 151: Removing a PIC

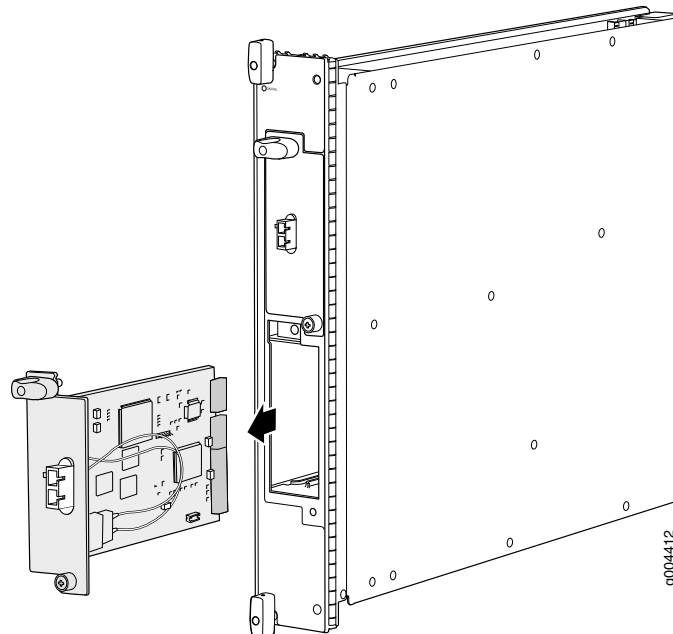

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 PIC on page 271](#)
 - [Troubleshooting the MX480 PICs on page 449](#)

- [Maintaining MX480 PICs on page 433](#)
- [MX480 PIC Serial Number Label on page 468](#)
- [MX480 PIC Description on page 66](#)
- [Installing an MX480 PIC on page 271](#)
- [Replacing an MX480 FPC on page 332](#)

Installing an MX480 PIC

To install a PIC (see [Figure 103 on page 273](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. If the PIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
3. Align the notches in the connector at the rear of the PIC with the notches in the PIC slot in the FPC and then slide the PIC in until it lodges firmly in the FPC.



CAUTION: Slide the PIC straight into the slot to avoid damaging the components on the bottom of the PIC.

4. For an FPC3 PIC, turn the ejector handle at the top of the PIC faceplate clockwise, then tighten the captive screw at the bottom of the faceplate to secure the PIC in the FPC.
5. If the PIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



CAUTION: Do not leave a fiber-optic transceiver uncovered except when you are inserting or removing cable. The safety cap keeps the port clean and prevents accidental exposure to laser light.

6. Insert the appropriate cables into the cable connectors on the PIC.

7. Arrange the cable in the cable management brackets to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on the loop helps to maintain its shape.



CAUTION: Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



CAUTION: Avoid bending fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


8. Use one of the following methods to bring the PIC online:
 - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in an FPC2 or FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the PIC is online. You can also verify correct PIC functioning by issuing the **show chassis fpc pic-status** command described in “Maintaining MX480 PICs” on page 433.

Figure 152: Installing a PIC

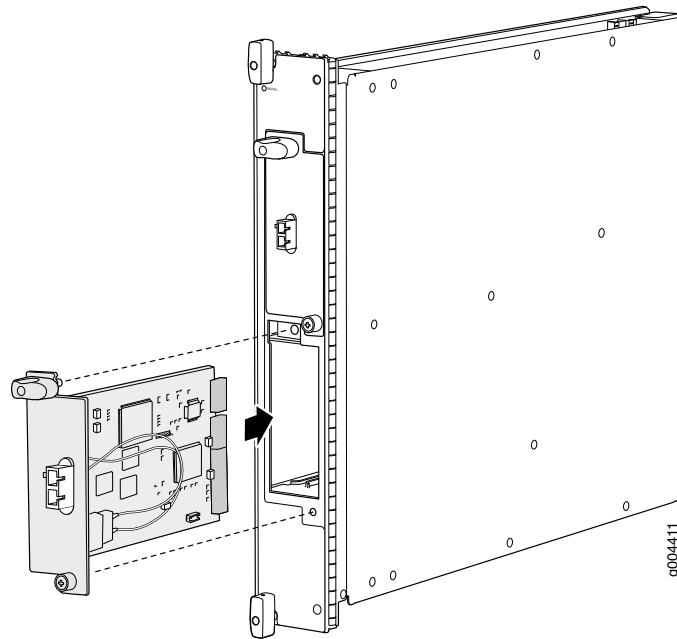

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an MX480 PIC on page 351](#)
 - [Troubleshooting the MX480 PICs on page 449](#)
 - [Maintaining MX480 PICs on page 433](#)
 - [MX480 PIC Serial Number Label on page 468](#)
 - [MX480 PIC Description on page 66](#)
 - [Replacing an MX480 FPC on page 332](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Troubleshooting the MX480 PICs on page 449](#)
 - [Maintaining MX480 PICs on page 433](#)
 - [MX480 PIC Serial Number Label on page 468](#)
 - [MX480 PIC Description on page 66](#)
 - [Replacing an MX480 FPC on page 332](#)

Replacing an MX480 AS MLC

1. [Removing an MX480 AS MLC on page 356](#)
2. [Installing an MX480 AS MLC on page 358](#)

Removing an MX480 AS MLC

When you remove an Application Services Modular Line Card (AS MLC), the router continues to function, although the modular cards (AS MXC and AS MSC) installed on the AS MLC being removed no longer function.

Up to five AS MLCs can be installed horizontally in the front of the MX480 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To remove an AS MLC (see [Figure 153 on page 357](#)):

1. Have ready a replacement AS MLC or an AS MLC blank panel and an antistatic mat for the AS MLC.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the AS MLC offline:
 - Press and hold the AS MLC online/offline button. The green OK LED next to the button begins to blink. Hold the button down until the LED goes out. The online/offline button for each AS MLC is located directly above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).



NOTE: The slot number corresponds to the lowest numbered slot for which the AS MLC is installed.

4. Simultaneously turn both the ejector handles counterclockwise to unseat the AS MLC.
5. Grasp the handles, and slide the AS MLC straight out of the card cage halfway.
6. Place one hand around the front of the AS MLC (the modular card housing) and the other hand under it to support it. Slide the AS MLC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



CAUTION: The weight of the AS MLC is concentrated in the back end. Be prepared to accept the full weight—up to 15.27 lb (6.93 kg)—as you slide the AS MLC out of the chassis.

When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack AS MLCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

7. If necessary, remove each installed AS MSC and AS MXC from the AS MLC.
8. After you remove each modular card, immediately place it on an antistatic mat or in an electrostatic bag.
9. If you are not reinstalling an AS MLC into the emptied slots within a short time, install a blank AS MLC panel over each slot to maintain proper airflow in the card cage.



CAUTION: After removing an AS MLC from the chassis, wait at least 30 seconds before reinserting it or inserting an AS MLC into a different slot.

Figure 153: Removing an AS MLC

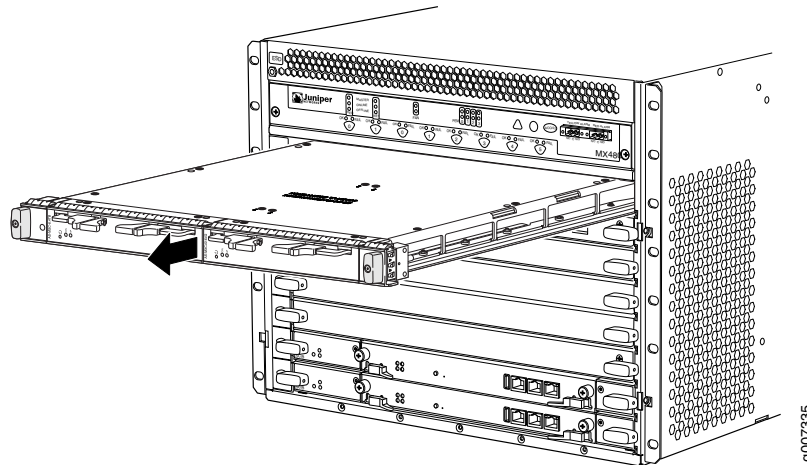

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an MX480 AS MSC on page 360](#)
 - [Removing an MX480 AS MXC on page 363](#)
 - [Installing an MX480 AS MLC on page 274](#)

Installing an MX480 AS MLC

You can install up to five Application Services Modular Line Cards (AS MLCs) horizontally in the front of the MX480 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To install an AS MLC (see [Figure 104 on page 275](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Place the AS MLC on an antistatic mat.
3. Take the AS MSC and AS MXC (the modular cards) to be installed in the AS MLC out of its electrostatic bag. The AS MSC must be inserted in the left slot and the AS MXC in the right slot.
4. Install the AS MSC and AS MXC into the appropriate slot on the AS MLC.
5. Locate the slots in the card cage in which you plan to install the AS MLC.
6. Orient the AS MLC so that the faceplate faces you.
7. Lift the AS MLC into place, and carefully align the sides of the AS MLC with the guides inside the card cage.



CAUTION: When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

8. Slide the AS MLC all the way into the card cage until you feel resistance.
9. Grasp both ejector handles, and rotate them clockwise simultaneously until the AS MLC is fully seated.
10. Use one of the following methods to bring the AS MLC online:
 - Press and hold the AS MLC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each AS MLC are located above it on the craft interface.
 - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```



For more information about the command, see the [CLI Explorer](#).



CAUTION: After the OK LED lights steadily, wait at least 30 seconds before removing the AS MLC again, removing an AS MLC from a different slot, or inserting an AS MLC in a different slot.

You can also verify correct AS MLC and AS MSC or AS MXC functioning by issuing the `show chassis fpc` and `show chassis fpc pic-status`.

Figure 154: Installing an AS MLC

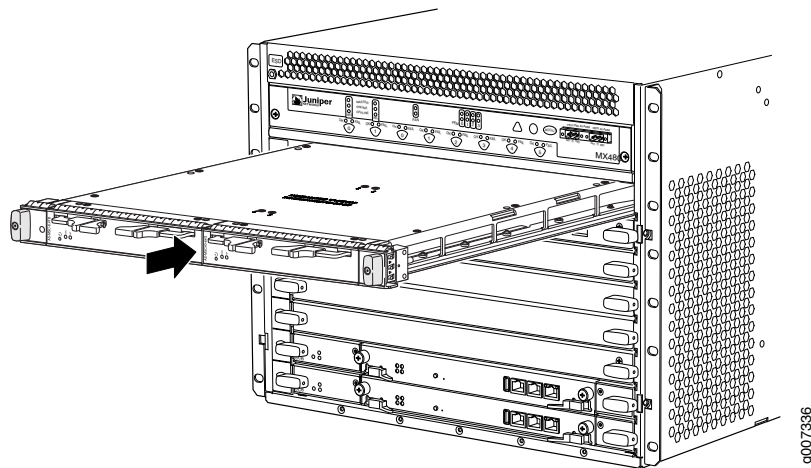

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 AS MSC on page 275](#)
 - [Installing an MX480 AS MXC on page 277](#)
 - [Removing an MX480 AS MLC on page 356](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 AS MSC on page 359](#)
 - [Replacing an MX480 AS MXC on page 363](#)

Replacing an MX480 AS MSC

1. [Removing an MX480 AS MSC on page 360](#)
2. [Installing an MX480 AS MSC on page 361](#)

Removing an MX480 AS MSC

AS MSCs are hot-insertable and hot-removable. When you remove an AS MSC, the router continues to function.

The AS MSCs are located in the AS MLCs installed in the front of the router. An AS MSC weighs 1.4 lb (0.6 kg).

To remove an AS MSC (see [Figure 155 on page 361](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the AS MSC.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the AS MSC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the AS MSC LED goes out (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Slide the AS MSC out of the AS MLC card carrier by pulling the handles, and place it in the electrostatic bag or on the antistatic mat.
5. If you are not reinstalling an AS MSC into the emptied AS MSC slot within a short time, install a blank AS MSC panel over the slot to maintain proper airflow in the AS MLC card cage.

Figure 155: Removing an AS MSC

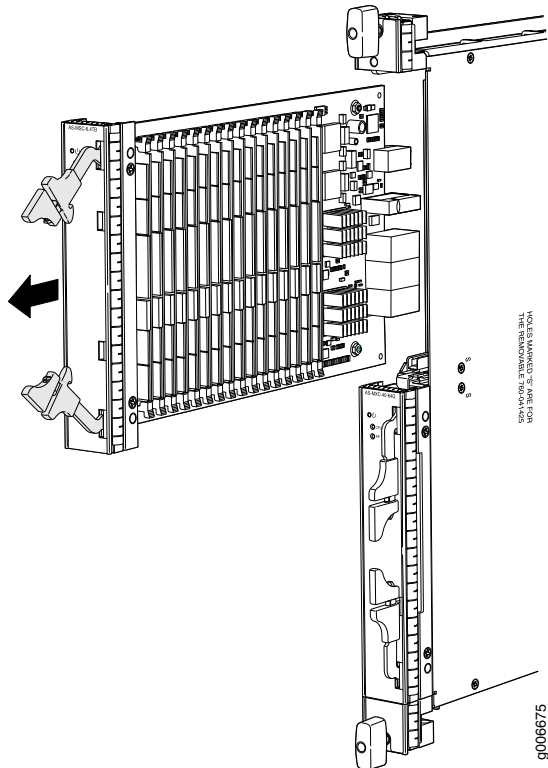

- See Also**
- [MX480 Application Services Modular Storage Card Description on page 96](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 AS MSC on page 275](#)

Installing an MX480 AS MSC

To install an AS MSC (see [Figure 105 on page 276](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Align the notches in the connector at the rear of the AS MSC with the notches in the AS MSC slot (slot 0—the top slot in the AS MLC), and then slide the AS MSC in until it lodges firmly in the AS MLC.



CAUTION: Slide the AS MSC straight into the slot to avoid damaging the components on the bottom of the AS MSC.

3. Use one of the following methods to bring the AS MSC online:


- Press the AS MSC offline/online button until the LED light turns green.
- Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MSC is online. You can also verify correct AS MSC functioning by issuing the **show chassis fpc pic-status**.

Figure 156: Installing an AS MSC

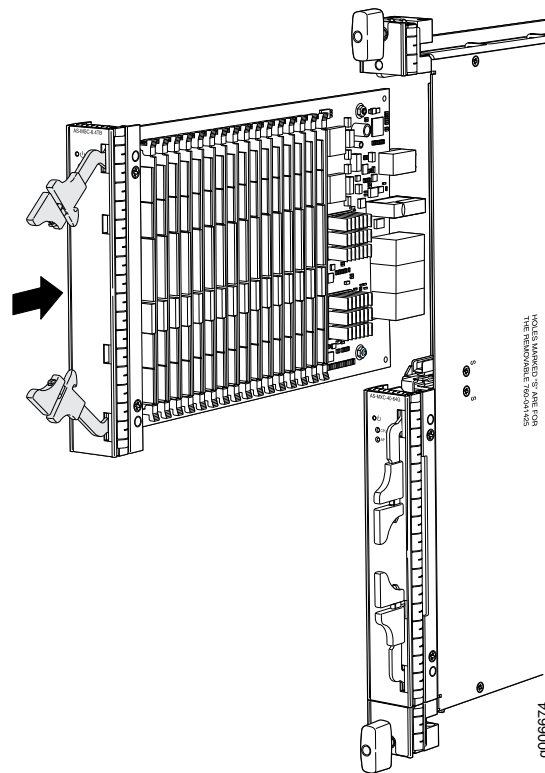

- See Also**
- [MX480 Application Services Modular Storage Card Description on page 96](#)
 - [Removing an MX480 AS MSC on page 360](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Related Documentation

- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
- [Replacing an MX480 AS MLC on page 355](#)
- [MX480 Application Services Modular Storage Card Description on page 96](#)

Replacing an MX480 AS MXC

1. [Removing an MX480 AS MXC on page 363](#)
2. [Installing an MX480 AS MXC on page 364](#)

Removing an MX480 AS MXC

AS MXCs are hot-insertable and hot-removable. When you remove an AS MXC, the router continues to function.

The AS MXCs are located in the AS MLCs installed in the front of the router. An AS MXC weighs 1.4 lb (0.6 kg).

To remove an AS MXC (see [Figure 157 on page 364](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the AS MXC.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Use one of the following methods to take the AS MXC offline:
 - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the AS MXC LED goes out (about 5 seconds).
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

5. Slide the AS MXC out of the AS MLC card carrier by pulling the handles, and place it in the electrostatic bag or on the antistatic mat.
6. If you are not reinstalling an AS MXC into the emptied AS MXC slot within a short time, install a blank AS MXC panel over the slot to maintain proper airflow in the AS MLC card cage.

Figure 157: Removing an AS MXC

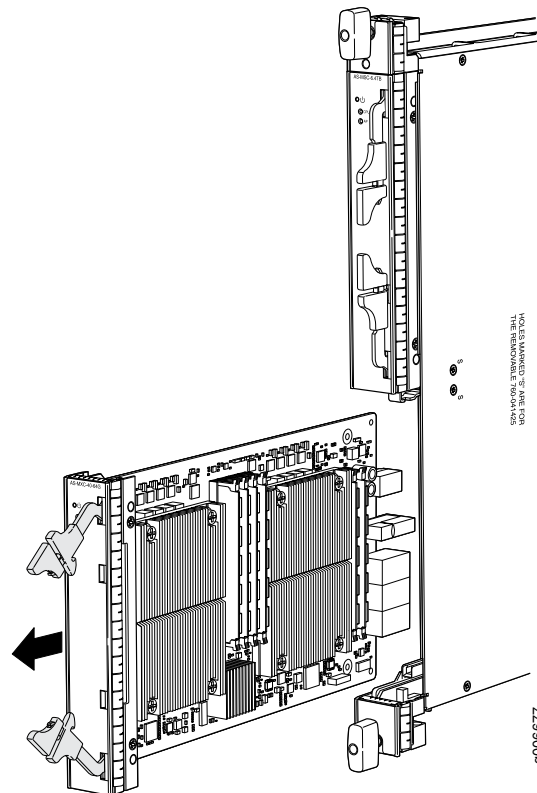

- See Also**
- [MX480 Application Services Modular Processing Card Description on page 97](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 AS MXC on page 277](#)

Installing an MX480 AS MXC

To install an AS MXC (see [Figure 106 on page 278](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Align the notches in the connector at the rear of the AS MXC with the notches in the AS MXC slot (slot 1—the bottom slot in the AS MLC), and then slide the AS MXC in until it lodges firmly in the AS MLC.



CAUTION: Slide the AS MXC straight into the slot to avoid damaging the components on the bottom of the AS MXC.


3. Use one of the following methods to bring the AS MXC online:
 - Press the AS MXC offline/online button until the LED light turns green.
 - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MXC is online. You can also verify correct AS MXC functioning by issuing the `show chassis fpc pic-status` command.

Figure 158: Installing an AS MXC

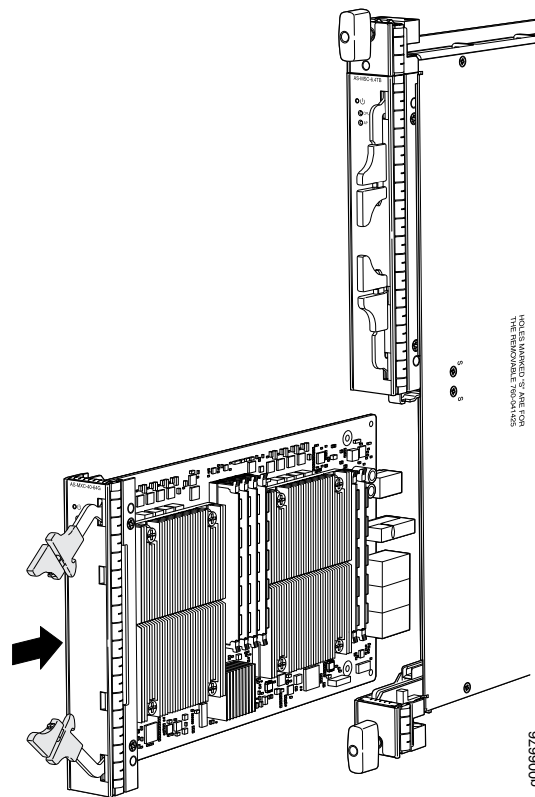

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 Application Services Modular Processing Card Description on page 97](#)
 - [Removing an MX480 AS MXC on page 363](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 AS MLC on page 355](#)
 - [MX480 Application Services Modular Processing Card Description on page 97](#)

Replacing Power System Components

- [Replacing an MX480 AC Power Supply on page 367](#)
- [Replacing an MX480 DC Power Supply on page 370](#)
- [Replacing an MX480 AC Power Supply Cord on page 376](#)
- [Replacing an MX480 DC Power Supply Cable on page 377](#)

Replacing an MX480 AC Power Supply

1. [Removing an MX480 AC Power Supply on page 367](#)
2. [Installing an MX480 AC Power Supply on page 369](#)

Removing an MX480 AC Power Supply

Before you remove a power supply, be aware of the following:



NOTE: The minimum number of power supplies must be present in the router at all times.



CAUTION: To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.




NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove an AC power supply (see [Figure 159 on page 368](#)):

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Remove the power cord from the power supply.
5. Unscrew the captive screws on the bottom edge of the power supply.
6. Pull the power supply straight out of the chassis.

Figure 159: Removing an AC Power Supply

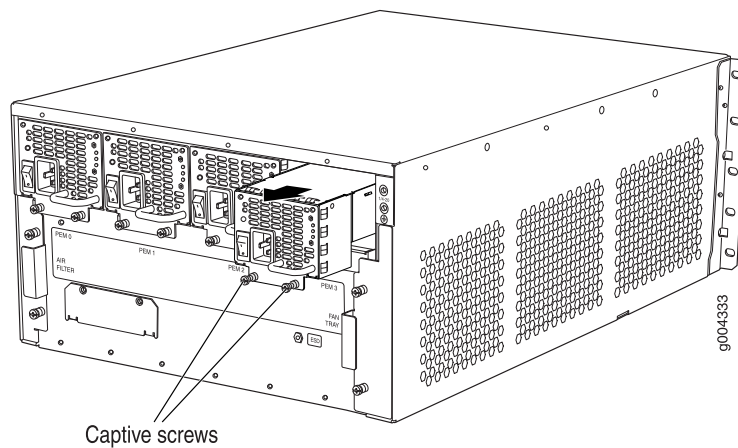


- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 AC Power Supply on page 278](#)
 - [MX480 AC Power Supply Description on page 100](#)

Installing an MX480 AC Power Supply

To install an AC power supply (see [Figure 107 on page 279](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten both captive screws at the bottom of the power supply.
5. Attach the power cord to the power supply.
6. Route the power cord along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cord in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.
7. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker for the power supply. Follow the ESD and connection instructions for your site.
8. Move the AC input switch next to the appliance inlet on the power supply to the on (|) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

Figure 160: Installing an AC Power Supply in an MX480 Router

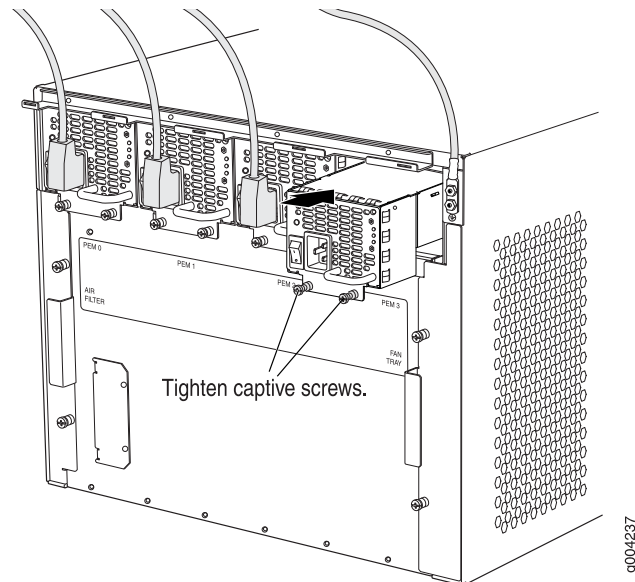

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an MX480 AC Power Supply on page 367](#)
 - [MX480 AC Power Supply Description on page 100](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 AC Power Supply Description on page 100](#)

Replacing an MX480 DC Power Supply

1. [Removing an MX480 DC Power Supply on page 370](#)
2. [Installing an MX480 DC Power Supply on page 372](#)

Removing an MX480 DC Power Supply

Before you remove a power supply, be aware of the following:



NOTE: The minimum number of power supplies must be present in the router at all times.



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit

breaker to the off position, and tape the switch handle of the circuit breaker in the off position.



CAUTION: To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.




NOTE: After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove a DC power supply (see [Figure 161 on page 372](#)):

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the DC circuit breaker on the DC power supply faceplate to the off (O) position.
5. Remove the clear plastic cover protecting the terminal studs on the faceplate.
6. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
7. Remove the cable lugs from the terminal studs.
8. Loosen the captive screws on the bottom edge of the power supply faceplate.
9. Carefully move the power cables out of the way.
10. Pull the power supply straight out of the chassis.

Figure 161: Removing a DC Power Supply from the Router

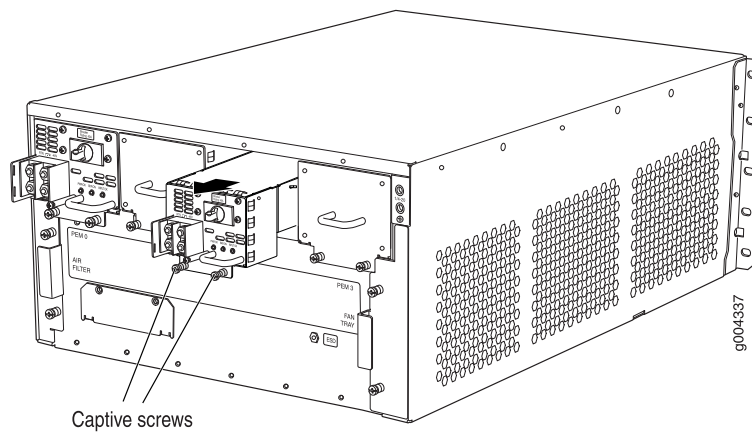

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an MX480 DC Power Supply on page 280](#)
 - [MX480 DC Power Supply Description on page 102](#)

Installing an MX480 DC Power Supply



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To install a DC power supply (see [Figure 108 on page 282](#)):

1. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the DC circuit breaker on the power supply faceplate to the off (O) position.
4. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
5. Tighten the captive screws on the lower edge of the power supply faceplate.
6. Remove the clear plastic cover protecting the terminal studs on the faceplate.

7. Remove the nut and washer from each of the terminal studs.
8. Secure each power cable lug to the terminal studs, first with the flat washer, then with the split washer, and then with the nut (see [Figure 109 on page 283](#)). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)
 - a. Secure the positive (+) DC source power cable lug to the **RTN** (return) terminal.
 - b. Secure the negative (–) DC source power cable lug to the **–48V** (input) terminal.



CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.



CAUTION: You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



NOTE: The DC power supplies in PEM0 and PEM1 must be powered by dedicated power feeds derived from feed A, and the DC power supplies in PEM2 and PEM3 must be powered by dedicated power feeds derived from feed B. This configuration provides the commonly deployed A/B feed redundancy for the system.



NOTE: For information about connecting to DC power sources, see “[DC Power Supply Electrical Specifications for the MX480 Router](#)” on page 157.

9. Replace the clear plastic cover over the terminal studs on the faceplate.

10. Route the power cables along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cables in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.
11. Verify that the power cabling is correct, that the cables are not touching or blocking access to router components, and that they do not drape where people could trip on them.
12. Switch on the dedicated customer site circuit breakers. Follow your site's procedures for safety and ESD.

Verify that the **INPUT OK** LED on the power supply is lit green.
13. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.



NOTE: If more than one power supply is being installed, turn on all power supplies at the same time.



NOTE: An SCB must be present for the **PWR OK** LED to go on.

Figure 162: Installing a DC Power Supply in the Router


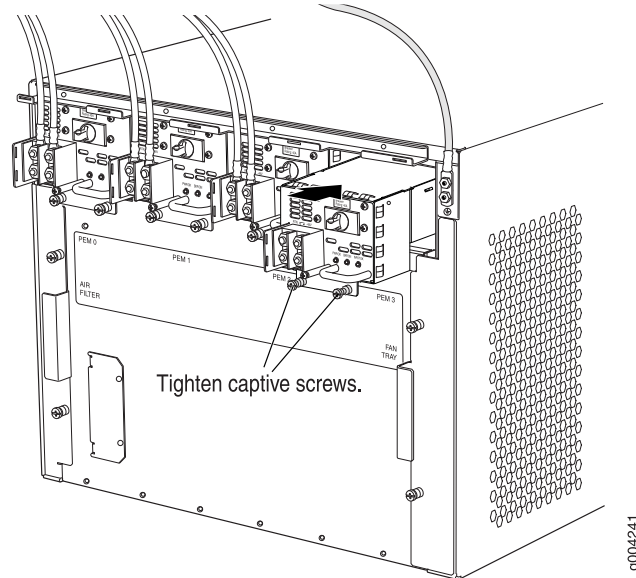


Figure 163: Connecting DC Power to the Router

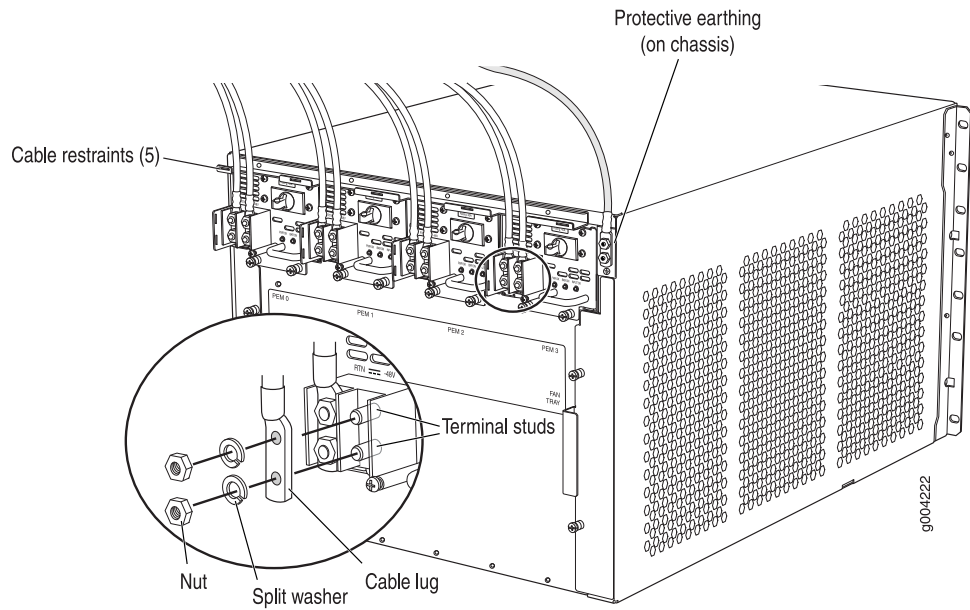

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an MX480 DC Power Supply on page 370](#)
 - [MX480 DC Power Supply Description on page 102](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 DC Power Supply Description on page 102](#)

Replacing an MX480 AC Power Supply Cord

1. [Disconnecting an MX480 AC Power Supply Cord on page 376](#)
2. [Connecting an MX480 AC Power Supply Cord on page 376](#)

Disconnecting an MX480 AC Power Supply Cord

To disconnect the AC power cord:

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Remove the power cord from the power supply.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 AC Power Supply on page 367](#)
 - [Connecting an MX480 AC Power Supply Cord on page 226](#)
 - [AC Electrical Specifications for the MX480 Router on page 139](#)

Connecting an MX480 AC Power Supply Cord

To connect the AC power cord:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see [“AC Power Cord Specifications for the MX480 Router” on page 153](#)).
2. Connect the power cord to the power supply.
3. Route the power cord along the cable restraint toward the left or right corner of the chassis. If needed to hold the power cord in place, thread plastic cable ties, which you must provide, through the openings on the cable restraint.

4. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
5. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker for the power supply. Follow the ESD and connection instructions for your site.
6. Switch the AC input switch on the each power supply to the on (—) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 AC Power Supply on page 367](#)
 - [Disconnecting an MX480 AC Power Supply Cord on page 376](#)
 - [AC Electrical Specifications for the MX480 Router on page 139](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 AC Power Supply on page 367](#)
 - [AC Electrical Specifications for the MX480 Router on page 139](#)

Replacing an MX480 DC Power Supply Cable

1. [Disconnecting an MX480 DC Power Supply Cable on page 377](#)
2. [Connecting an MX480 DC Power Supply Cable on page 378](#)

Disconnecting an MX480 DC Power Supply Cable



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To disconnect a power cable for a DC power supply:

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.

3. Verify that the **INPUT OK** LED on the power supply is not lit.
4. Remove the power cable from the external DC power source.
5. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
6. Move the DC circuit breaker on the power supply faceplate to the off (O) position.
7. Remove the clear plastic cover protecting the terminal studs on the faceplate.
8. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
9. Remove the cable lug from the terminal studs.
10. Remove the power cable from the cable restraint, and then carefully move the cable out of the way.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 DC Power Supply on page 370](#)
 - [Connecting an MX480 DC Power Supply Cable on page 227](#)
 - [MX480 DC Power Supply Description on page 102](#)

Connecting an MX480 DC Power Supply Cable



WARNING: Before performing DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To connect a power cable for a DC power supply:

1. Locate a replacement power cable that meets the specifications defined in "[DC Power Cable Specifications for the MX480 Router](#)" on page 173.
2. Verify that a licensed electrician has attached a cable lug to the replacement power cable.
3. Verify that the **INPUT OK** LED is off.

- Secure the power cable lug to the terminal studs, first with the flat washer, then with the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut (see [Figure 77 on page 228](#)). Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)




CAUTION: Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



CAUTION: The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

Figure 164: Connecting Power Cables to the DC Power Supply

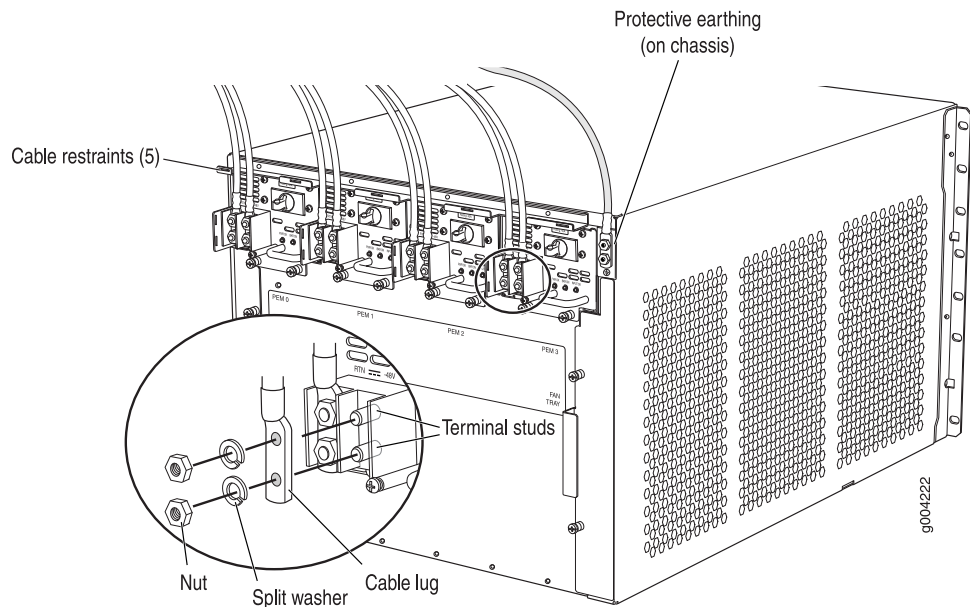

- Route the power cable along the cable restraint toward the left or right corner of the chassis. If needed, thread plastic cable ties, which you must provide, through the openings on the cable restraint to hold the power cable in place.
- Verify that the DC power cable is connected correctly, that it does not touch or block access to router components, and that it does not drape where people could trip on it.

7. Replace the clear plastic cover over the terminal studs on the faceplate.
8. Attach the power cable to the DC power source.
9. Turn on the dedicated customer site circuit breaker to the power supply.
10. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



NOTE: The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing an MX480 DC Power Supply on page 370](#)
 - [Disconnecting an MX480 DC Power Supply Cable on page 377](#)
 - [MX480 DC Power Supply Description on page 102](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [MX480 DC Power Supply Description on page 102](#)
 - [Replacing an MX480 DC Power Supply on page 370](#)

Replacing Switch Fabric Components

- Replacing an MX480 SCB on page 381
- Replacing an SFP or XFP Transceiver on an MX480 DPC, MPC, MIC, or PIC on page 399
- Upgrading an MX480 SCB on page 402

Replacing an MX480 SCB

Before replacing an SCB, read the guidelines in *Operating and Positioning the MX480 SCB Ejectors*.

1. Removing an MX480 SCB on page 381
2. Installing an MX480 SCB on page 383
3. Upgrading an MX480 SCB on page 385
4. Upgrading an MX480 SCB or SCBE to SCBE2 on page 393

Removing an MX480 SCB

To remove an SCB (see [Figure 165 on page 382](#)):



NOTE: You can remove the SCB and Routing Engine as a unit, or remove the Routing Engine separately.



CAUTION: Before removing an SCB, ensure that you know how to operate the ejector handles properly to avoid damage to the equipment.




CAUTION: Before you replace an SCB, you must take the host subsystem offline. If there is only one host subsystem, taking the host subsystem offline shuts down the router.

1. Take the host subsystem offline.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.

3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
5. Grasp the ejector handles, and slide the SCB about halfway out of the chassis.
6. Place one hand underneath the SCB to support it, and slide it completely out of the chassis.
7. Place the SCB on the antistatic mat.
8. If you are not replacing the SCB now, install a blank panel over the empty slot.

Figure 165: Removing an SCB

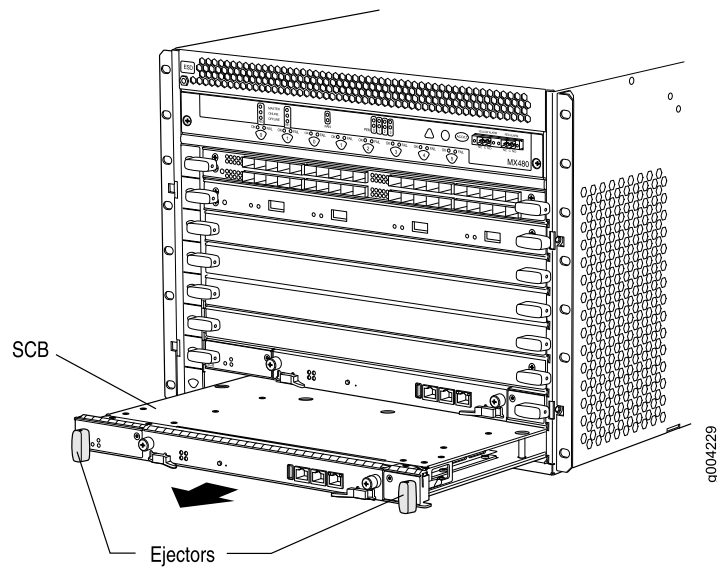

- See Also**
- [Operating and Positioning the MX480 SCB Ejectors](#)
 - [Effect of Taking the MX480 Host Subsystem Offline](#)
 - [Taking an MX480 Host Subsystem Offline](#)
 - [Installing an MX480 SCB on page 283](#)
 - [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Installing an MX480 SCB


To install an SCB (see [Figure 110 on page 285](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles, and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in the proper position, vertically and toward the center of the board.
6. Check the LEDs on the SCB faceplate to verify that it is functioning normally.
 - The green **OK/FAIL** LED should light steadily a few minutes after the SCB is installed.
 - If the **OK/FAIL** LED is red, remove and install the SCB again. If the **OK/FAIL** LED still lights steadily, the SCB is not functioning properly. Contact your customer support representative.
7. Check the status of the SCB using the **show chassis environment cb** command:

```
user@host> show chassis environment cb
CB 0 status:
State                               Online Master
Temperature                          25 degrees C / 77 degrees F
Power 1
  1.2 V                               1198 mV
  1.5 V                               1508 mV
  1.8 V                               1830 mV
  2.5 V                               5059 mV
  3.3 V                               6593 mV
  5.0 V                               5111 mV
  12.0 V                              12181 mV
  1.25 V                              1250 mV
  3.3 V SM3                           6587 mV
  5 V RE                               5078 mV
  12 V RE                              12026 mV
Power 2
  11.3 V bias PEM                      11253 mV
  4.6 V bias MidPlane                  4827 mV
  11.3 V bias FPD                     11408 mV
  11.3 V bias POE 0                   11446 mV
  11.3 V bias POE 1                   11408 mV
Bus Revision                          6
FPGA Revision                         0
CB 1 status:
State                               Online Standby
```

Temperature	26 degrees C / 78 degrees F
Power 1	
1.2 V	1211 mV
1.5 V	1517 mV
1.8 V	1817 mV
2.5 V	2507 mV
3.3 V	3312 mV
5.0 V	5136 mV
12.0 V	12142 mV
1.25 V	1260 mV
3.3 V SM3	3306 mV
5 V RE	5085 mV
12 V RE	11968 mV
Power 2	
11.3 V bias PEM	11369 mV
4.6 V bias MidPlane	4814 mV
11.3 V bias FPD	11427 mV
11.3 V bias POE 0	11350 mV
11.3 V bias POE 1	11330 mV
Bus Revision	39
FPGA Revision	1

Figure 166: Installing an SCB

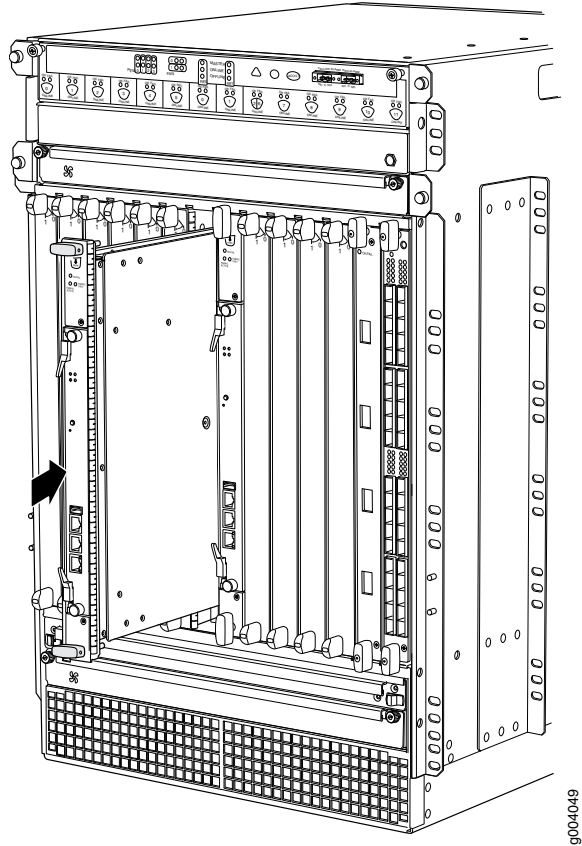

9004049

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an MX480 SCB on page 381](#)

- *Operating and Positioning the MX480 SCB Ejectors*
- *Effect of Taking the MX480 Host Subsystem Offline*
- *Taking an MX480 Host Subsystem Offline*

Upgrading an MX480 SCB

1. [Preparing for the Upgrade on page 385](#)
2. [Upgrading the SCB in the Backup Routing Engine on page 387](#)
3. [Upgrading the SCB in the Master Routing Engine on page 389](#)
4. [Completing the SCB Upgrade on page 391](#)

Preparing for the Upgrade



NOTE: Do not make other changes to the CLI during the entire upgrade process. You can ensure that you will not make such changes by opening a telnet session to the master RE CLI operational mode and issuing the `configure exclusive` command. This command locks the configuration procedure.



TIP: To prevent traffic loss during the upgrade process, we recommend that you operate the line cards at 50% line rate. This 50% limit must be maintained per PFE on each line card.

To prepare the MX480 router for the Enhanced MX Switch Control Board (MX SCBE) upgrade:

1. Verify that the system runs Junos OS Release 11.4 or later by issuing the **show version** command on the master router.

```
user@host> show version
Model: mx480
Junos Base OS Software Suite [11.4-20110530];
```



NOTE: The MX SCBE is supported only in Junos OS Release 11.4 or later.

The latest software ensures a healthy system—that is, Routing Engines, control boards, and FPCs—before the upgrade.

2. Verify that MX SCB boards are installed by issuing the **show chassis hardware** command.

```
user@host> show chassis hardware
Item  Version  Part Number  Serial Number  Description
```

```
CB0 REV 07 710-021523 ABBC8281 MX SCB
CB1 REV 07 710-021523 ABBC8323 MX SCB
```

SCB details are displayed as above, along with other hardware components. The MX480 router has only two SCBs and each SCB has four fabric planes.

3. Establish console connections to both Routing Engines. You can use a telnet session to connect to the router console by issuing the **<router name>-con** command. For example, if the router name is juniper, you can connect to RE0 and RE1 consoles by issuing the **telnet juniper-con** and **telnet juniper1-con** commands.
4. Ensure that graceful switchover (GRES), commit synchronize (required for nonstop routing), and nonstop routing (NSR) are enabled or configured by running the **set chassis redundancy graceful-switchover**, **set system commit synchronize**, **set routing-options nonstop-routing** commands.



NOTE: These commands are mandatory for this upgrade and may be removed, if desired, after the upgrade.

5. Set the upgrade flag on, and start the SCB upgrade by issuing the **set chassis state cb-upgrade on** command.

```
user@host# configure
user@host# set chassis state cb-upgrade on
user@host# commit
```

6. Determine the order to replace the existing SCBs with upgraded ones. SCB0 is associated with RE0 and SCB1 is associated with RE1.



NOTE: Do not add or remove any router hardware during the upgrade procedure.

Upgrading the SCB in the Backup Routing Engine



TIP: MX480 has two slots for SCB—that is, SCB0 and SCB1—and these correspond to RE0 and RE1 respectively, where SCB1 is the first SCB.

To upgrade the SCB in the backup Routing Engine:

1. Power down the backup Routing Engine from the master Routing Engine by issuing the **request system power-off other-routing-engine** command.
2. Verify that the Routing Engine is powered down by issuing the **show chassis routing-engine 1** command. The slot of the Routing Engine may be 0 or 1, and is shown as 1 in this example:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
Current State Present
```

Ensure that the Current State is Present, which indicates that the Routing Engine is offline.

3. Take the fabric plane offline by issuing the **request chassis fabric plane 4 offline** command. SCB1 has four fabric planes numbered, 4, 5, 6, and 7.
4. Verify that the fabric plane is offline by issuing the **show chassis fabric summary** command.

```
user@host> show chassis fabric summary

Plane State Uptime
 4 Offline
 5 Online 1 hour, 15 minutes, 35 seconds
```

Verify that the State of Plane 4 is Offline.

5. Take the remaining fabric planes offline by issuing the **request chassis fabric plane 5/6/7 offline** command—that is, by changing the fabric plane number each time. Verify that the fabric planes are offline by issuing the command given in Step 2.
6. Take the SCB in slot 1 offline by issuing the **request chassis cb offline slot 1** command.
7. Verify that the control board is offline by issuing the **show chassis environment cb 1** command:

```
user@host> show chassis environment cb 1
CB 1 status:
State Offline
```

```
Power 1 Disabled  
Power 2 Disabled
```

8. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
9. Remove and replace SCB1 on the router with the SCBE. Use the replacement procedure described in [“Removing an MX480 SCB” on page 381](#)
10. Verify that the installation is successful and the SCB is online by issuing the **show chassis environment cb 1** command:

```
user@host> show chassis environment cb 1  
CB 1 status  
State Online  
Temperature 30 degrees C / 86 degrees F
```

Other details, such as power, are also displayed along with the state.

11. Verify that the fabric planes come online correctly by issuing the **show chassis fabric summary** command:

```
user@host> show chassis fabric summary  
Plane State Uptime  
4 Online 2 minutes, 25 seconds  
5 Online 2 minutes, 15 seconds  
6 Online 2 minutes, 3 seconds  
7 Online 1 minute, 49 seconds
```

12. Verify that the backup Routing Engine is back online by issuing the **show chassis routing-engine 1** command:

```
user@host> show chassis routing-engine 1  
Routing Engine Status:  
Slot 1:  
Current State Backup
```

13. Verify the alarms by issuing the **show chassis alarms** command:

```
user@host> show chassis alarms  
Alarm Time Class Description  
2011-06-01 13:26:56 EDT Major CB fabrics are of mixed types
```

As only one SCB has been upgraded, the alarm indicates that the SCBs are of mixed type. This alarm is cleared after all the control boards are upgraded.

Upgrading the SCB in the Master Routing Engine

To upgrade the SCB in the master Routing Engine:

1. Ensure a Graceful RE Switchover (GRES) to gracefully switch between the master and backup Routing Engines, so that the backup RE becomes the master RE, by issuing the **request chassis routing-engine master switch** command.
2. Log in to the new master Routing Engine after the switchover.
3. Switch the configuration mode to ensure that you are still in configure exclusive mode by issuing the **exit** command and then the **configure exclusive** command, from the old master Routing Engine.
4. Log in to the current master Routing Engine again and issue the **configure exclusive** command.
5. Power down the backup Routing Engine from the master Routing Engine by issuing the **request system power-off other-routing-engine** command.
6. Ensure that the Routing Engine is powered down by issuing the **show chassis routing-engine 0** command.

```
user@host> show chassis routing-engine 0
Routing Engine Status:
Slot 0:
Current State Present
```

Verify that the Current State is Present, which indicates that the Routing Engine is offline.

7. Take the first fabric plane of the backup Routing Engine offline by issuing the **request chassis fabric plane 0 offline** command. SCBO has four fabric planes numbered, 0, 1, 2, and 3.
8. Verify that the fabric plane is offline by issuing the **show chassis fabric summary** command.

```
user@host> show chassis fabric summary
Plane State Uptime
0 Offline
1 Online 3 minutes, 45 seconds
```

Verify that the State of Plane 0 is Offline.

9. Take the remaining fabric planes offline by issuing the **request chassis fabric plane 1/2/3 offline** command—that is, by changing the fabric plane number each time. Verify that the fabric planes are offline by issuing the command given in Step 4.

10. Take the SCB in slot 0 offline by issuing the **request chassis cb offline slot 0** command.

11. Verify that the control board is offline by issuing the **show chassis environment cb 0** command:

```
user@host> show chassis environment cb 0
CB 0 status:
State Offline
Power 1 Disabled
Power 2 Disabled
```

12. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.

13. Remove and replace the offline SCB on the router with the SCBE. Use the replacement procedure described in [“Removing an MX480 SCB” on page 381](#).

14. Verify that the installation is successful and SCB0 is online by issuing the **show chassis environment cb 0** command:

```
user@host> show chassis environment cb 0
CB 0 status
State Online
Temperature 30 degrees C / 86 degrees F
```

Other details, such as power, are also displayed along with the state.

15. Verify that the fabric planes come online correctly by issuing the **show chassis fabric summary** command:

```
user@host> show chassis fabric summary
Plane State Uptime
0 Online 2 minutes, 5 seconds
1 Online 1 minute, 55 seconds
2 Online 1 minute, 43 seconds
3 Online 1 minute, 33 seconds
```

16. Verify that the backup Routing Engine is back online by issuing the **show chassis routing-engine 0** command:

```
user@host> show chassis routing-engine 0
Routing Engine Status:
Slot 0:
Current State Backup
```

17. Verify the alarms by issuing the **show chassis alarms** command:

```
user@host> show chassis alarms
Alarm Time Class Description
2011-06-01 13:26:56 EDT Major CB fabric links require upgrade/training
2011-06-01 12:10:41 EDT Major Require a fan tray upgrade
```

The major alarm has changed from **CB fabrics are of mixed types** to **CB fabric links require upgrade/training**, as a switch control board requires training to change links

from 3G speed to 6G speed of the SCBE. This alarm is displayed until the 3G to 6G link transition is completed.

Completing the SCB Upgrade

To complete the procedure after upgrading the SCBs:

1. Verify that any Modular Port Concentrator (MPC) is running at 3G instead of 6G by issuing the **request chassis fabric upgrade-bandwidth info** command:

```
user@host> request chassis fabric upgrade-bandwidth info
Slot State
0 Upgrade not supported
1 Needs upgrade
2 Empty
3 Empty
4 Empty
5 Empty
```

The results indicate that slot 0 does not support the upgrade and slot 1 needs to be upgraded.

2. Upgrade the bandwidth of all MPCs by issuing the **request chassis fabric upgrade-bandwidth fpc all** command. If you want to control the MPC line card upgrade, go to Step 3.



CAUTION: Use this command only if you are not concerned with the slot upgrade order or if only one old MPC is present in the chassis. Running this command may result in a loss of traffic across that MPC. Using this method may increase that loss, because it does not consider any redundancy or graceful switchover strategies that you may have configured on the system.

3. Upgrade the MPC in slot 1 by running the **request chassis fabric upgrade-bandwidth fpc slot 1** command.
4. Verify that the MPC is upgraded by issuing the **request chassis fabric upgrade-bandwidth info** command:

```
user@host> request chassis fabric upgrade-bandwidth info
Slot State
0 Upgrade not supported
1 Upgraded
2 Empty
```

5. Verify the state of the fabric planes for all MPCs by issuing the **show chassis fabric summary** command.

```
user@host> show chassis fabric summary
Plane State Uptime
0 Spare 21 seconds
```

```

1 Spare 12 seconds
2 Online 12 minutes
3 Online 12 minutes
4 Online 30 minutes
5 Online 30 minutes

```

- Verify the state of the MPCs by issuing the **show chassis fabric fpcs** command.

```

user@host> show chassis fabric fpcs
FPC 1
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #1
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #2
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #3
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled

```

Fabric plane details of all MPCs are similarly displayed.

- Verify if any output of the **show chassis fabric summary** command shows fabric planes in 'check' state, as it indicates that the fabric plane has an error. You can try to recover the fabric plane to normal operation by issuing the **request chassis fabric plane <#> offline** command, followed by the **request chassis fabric plane <#> online** command, where <#> equals the fabric plane in error.



NOTE: After you issue the **request chassis fabric plane <#> offline** and **request chassis fabric plane <#> online** commands, issue the **show chassis fabric summary** command to verify that the fabric plane errors are rectified and to verify the current state of the fabric planes.

- Verify that the major alarms are displayed by issuing the **show chassis alarms** command:

```
user@host> show chassis alarms
Alarm Time   Class Description
2011-06-01 13:37:43 EDT Minor Require a fan tray upgrade
2011-06-01 13:37:26 EDT Minor Backup RE Active
```

The major alarms are not displayed anymore, and the upgrade is successfully completed.

9. Disable the upgrade configuration by issuing the **set chassis state cb-upgrade off** command and then the **commit** command.
10. You can delete that command by issuing the **delete chassis state cb-upgrade** command and then the **commit** command.
11. Verify the SCBs before you finish by issuing the **show chassis hardware** command:

```
user@host> show chassis hardware
Item  Version  Part Number  Serial Number  Description
CB0   REV 02  750-031391  YE8505   Enhanced MX SCB
CB1   REV 07  710-031391  YL6769   Enhanced MX SCB
```

You can see that the MX480 now has the MX SCBEs.

See Also • [MX480 SCBE Description on page 110](#)

Related Documentation • [Removing an MX480 SCB on page 381](#)
• [Installing an MX480 SCB on page 283](#)

Upgrading an MX480 SCB or SCBE to SCBE2

Consider the following scenarios when upgrading an MX480 SCB or SCBE to SCBE2:

- SCBE2; Routing Engine with Junos OS Release 13.3R1 or later installed.
 - Replace the SCBs. Ensure that you replace the SCBs at the same time.
 - Ensure that Enhanced IP or Enhanced Ethernet Network Services mode is configured before you power on the router.
- SCB or SCBE; existing Routing Engine with a Junos OS Release 13.3R1 or earlier installed.
 - Upgrade the Routing Engine (**RE0** and **RE1**) software to Junos OS Release 13.3 or later.
 - Configure Enhanced IP or Enhanced Ethernet Network Services mode.
 - Replace the SCBs. Ensure that you replace the SCBs at the same time.
- Failed SCB or SCBE; Routing Engine with a Junos OS Release 13.3R1 or earlier installed.

- Upgrade the software on the Routing Engine hosting the failed SCB or SCBE with Junos OS Release 13.3R1 or later.
- Replace the SCBs. Ensure that you replace the SCBs at the same time.
- Upgrade the software on the Routing Engine hosting the SCBE2 with Junos OS Release 13.3R1 or later.
- Configure Enhanced IP or Enhanced Ethernet Network Services mode.

To upgrade the SCB or SCBE to SCBE2, perform the following steps:



NOTE: SCBE2 does not support smooth upgrade.

1. [Preparing the MX480 Router for the SCBE2 Upgrade on page 394](#)
2. [Powering Off the MX480 Router on page 395](#)
3. [Removing an MX480 Routing Engine from an SCB or SCBE on page 396](#)
4. [Replacing the SCB or SCBE with SCBE2 on page 396](#)
5. [Installing an MX480 Routing Engine into an SCBE2 on page 396](#)
6. [Powering On the MX480 Router on page 397](#)
7. [Completing the SCBE2 Upgrade on page 398](#)

Preparing the MX480 Router for the SCBE2 Upgrade

To prepare the MX480 router for the SCBE2 upgrade:

1. Verify that the system runs Junos OS Release 13.3 or later by issuing the **show version** command on the master router.

```
user@host> show version
Model: mx480
Junos Base OS Software Suite [13.3-yyyymmdd];
...
```



NOTE: The SCBE2 is supported only on:

- Junos OS Release 13.3 or later
- Network Services Mode: Enhanced-IP

The latest software ensures a healthy system—that is, a system that comprises Routing Engines, control boards, and FPCs—before the upgrade.

For information about how to verify and upgrade the Junos OS, see the *Junos OS Installation and Upgrade Guide*.

Powering Off the MX480 Router



NOTE: After turning off the power supply, wait at least 60 seconds before turning it back on.

To power off the MX480 router:

1. On the external management device connected to the Routing Engine, issue the **request system halt both-routing-engines** operational mode command. The command shuts down the Routing Engines cleanly, so that their state information is preserved. (If the router contains only one Routing Engine, issue the **request system halt** command.)

```
user@host> request system halt both-routing-engines
```

2. Wait until a message appears on the console confirming that the operating system has halted.
3. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power supply faceplate to the off (O) position.

Removing an MX480 Routing Engine from an SCB or SCBE

To remove an MX480 Routing Engine from an SCB or SCBE:

1. Remove the cables connected to the Routing Engine.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
4. Loosen the captive screws on the top and bottom of the Routing Engine.
5. Flip the ejector handles outward to unseat the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.
8. Place the Routing Engine on the antistatic mat.

Replacing the SCB or SCBE with SCBE2

To replace the existing SCB or SCBE with SCBE2:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove and replace the offline SCB or SCBE on the router with SCBE2.

Installing an MX480 Routing Engine into an SCBE2

To install an MX480 Routing Engine into an SCBE2:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it.
4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCBE2.

5. Slide the Routing Engine into the SCBE2 until you feel resistance and then press the faceplate of the Routing Engine until it engages the connectors.
6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the top and bottom of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

Powering On the MX480 Router

To power on the MX480 router:

1. Verify that the power supplies are fully inserted in the chassis.
2. Verify that each AC power cord is securely inserted into its appliance inlet.
3. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
4. Turn on the power to the external management device.
5. Switch on the dedicated customer-site circuit breakers. Follow the ESD and safety instructions for your site.
6. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power-supply faceplate to the off (—) position.
8. Check that the AC or the DC power supply is correctly installed and functioning normally. Verify that the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.



.....

NOTE: After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

.....

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures.

9. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.



NOTE: If the system is completely powered off when you power on the power supply, the Routing Engine boots as the power supply completes its startup sequence. Normally, the router boots from the Junos OS on the CompactFlash card.

After turning on a power supply, wait at least 60 seconds before turning it off.

Completing the SCBE2 Upgrade

To complete the SCBE2 upgrade procedure:

1. Verify that the installation is successful and the SCBE2 is online by issuing the **show chassis environment cb** command:

```
user@host> show chassis environment cb 0
CB 0 status
State Online
Temperature 30 degrees C / 86 degrees F
...
```

```
user@host> show chassis environment cb 1
CB 1 status
State Online
Temperature 30 degrees C / 86 degrees F
...
```

Other details, such as, temperature, power, etc are also displayed along with the state.

2. Verify that the fabric planes come online correctly by issuing the **show chassis fabric summary** command:

```
user@host> show chassis fabric summary
Plane State Uptime
0 Online 2 days, 19 hours, 10 minutes, 9 seconds
1 Online 2 days, 19 hours, 10 minutes, 9 seconds
...
```

3. Verify that the backup Routing Engine is back online by issuing the **show chassis routing-engine 1** command:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
```



```
Current State Backup
...
```

4. Verify the SCBE2s before you finish by issuing the **show chassis hardware** command:

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
CB 0          REV 08   750-048307   CAB09829      Enhanced MX SCB 2
CB 1          REV 08   750-048307   CAB09828      Enhanced MX SCB 2
...
```

You see that the MX480 now has SCBE2s.

Related Documentation

- [MX480 SCBE2 Description on page 113](#)
- [Removing an MX480 SCB on page 381](#)
- [Installing an MX480 SCB on page 283](#)

Related Documentation

- [Operating and Positioning the MX480 SCB Ejectors](#)
- [Effect of Taking the MX480 Host Subsystem Offline](#)
- [Taking an MX480 Host Subsystem Offline](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

Replacing an SFP or XFP Transceiver on an MX480 DPC, MPC, MIC, or PIC

1. [Removing an SFP or XFP Transceiver from an MX480 DPC, MPC, MIC, or PIC on page 399](#)
2. [Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC on page 401](#)

Removing an SFP or XFP Transceiver from an MX480 DPC, MPC, MIC, or PIC

Removing an SFP or XFP does not interrupt DPC, MPC, MIC, or PIC functioning, but the removed SFP or XFP no longer receives or transmits data.

To remove an SFP or XFP transceiver (see [Figure 167 on page 400](#)):

1. Have ready a replacement transceiver or a transceiver slot plug, an antistatic mat, and a rubber safety cap for the transceiver.
2. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

4. Remove the cable connector from the transceiver.
5. Pull the ejector handle out from the transceiver to unlock the transceiver.




CAUTION: Make sure that you open the ejector handle completely until you hear it click. This prevents damage to the transceiver.

Use needlenose pliers to pull the ejector handle out from the transceiver.

6. Grasp the transceiver ejector handle, and pull the transceiver approximately 0.5 in. (1.3 cm) out of the DPC, MPC, MIC, or PIC.
7. Using your fingers, grasp the body of the transceiver, and pull it the rest of the way out of the DPC, MPC, MIC, or PIC.

Figure 167: Removing SFPs or XFPs

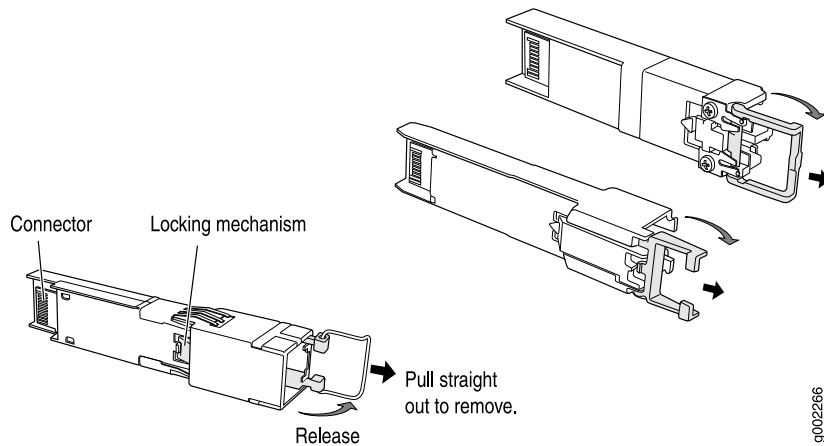

8. Place a rubber safety cap over the transceiver.
9. Place the removed transceiver on an antistatic mat or in an electrostatic bag.



CAUTION: After removing a transceiver from the chassis, wait at least 30 seconds before reinserting it or inserting a transceiver into a different slot.

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC on page 285](#)
 - [Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 328](#)

Installing an SFP or XFP Transceiver into an MX480 DPC, MPC, MIC, or PIC

To install an SFP or XFP:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.
4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



WARNING: Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the component faceplate indicate that the SFP or XFP is functioning correctly. For more information about the component LEDs, see the [MX Series Interface Module Reference](#).

- See Also**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Removing an SFP or XFP Transceiver from an MX480 DPC, MPC, MIC, or PIC on page 399](#)
 - [Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 328](#)

- Related Documentation**
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)
 - [Replacing a Cable on an MX480 DPC, MPC, MIC, or PIC on page 328](#)

Upgrading an MX480 SCB

1. [Preparing for the Upgrade on page 402](#)
2. [Upgrading the SCB in the Backup Routing Engine on page 403](#)
3. [Upgrading the SCB in the Master Routing Engine on page 405](#)
4. [Completing the SCB Upgrade on page 407](#)

Preparing for the Upgrade



NOTE: Do not make other changes to the CLI during the entire upgrade process. You can ensure that you will not make such changes by opening a telnet session to the master RE CLI operational mode and issuing the `configure exclusive` command. This command locks the configuration procedure.



TIP: To prevent traffic loss during the upgrade process, we recommend that you operate the line cards at 50% line rate. This 50% limit must be maintained per PFE on each line card.

To prepare the MX480 router for the Enhanced MX Switch Control Board (MX SCBE) upgrade:

1. Verify that the system runs Junos OS Release 11.4 or later by issuing the `show version` command on the master router.

```
user@host> show version
Model: mx480
Junos Base OS Software Suite [11.4-20110530];
```



NOTE: The MX SCBE is supported only in Junos OS Release 11.4 or later.

The latest software ensures a healthy system—that is, Routing Engines, control boards, and FPCs—before the upgrade.

2. Verify that MX SCB boards are installed by issuing the `show chassis hardware` command.

```
user@host> show chassis hardware
Item  Version  Part Number  Serial Number  Description
CB0   REV 07   710-021523  ABBC8281     MX SCB
CB1   REV 07   710-021523  ABBC8323     MX SCB
```

SCB details are displayed as above, along with other hardware components. The MX480 router has only two SCBs and each SCB has four fabric planes.

3. Establish console connections to both Routing Engines. You can use a telnet session to connect to the router console by issuing the `<router name>-con` command. For example, if the router name is `juniper`, you can connect to RE0 and RE1 consoles by issuing the `telnet juniper-con` and `telnet juniper1-con` commands.
4. Ensure that graceful switchover (GRES), commit synchronize (required for nonstop routing), and nonstop routing (NSR) are enabled or configured by running the `set chassis redundancy graceful-switchover`, `set system commit synchronize`, `set routing-options nonstop-routing` commands.



NOTE: These commands are mandatory for this upgrade and may be removed, if desired, after the upgrade.

5. Set the upgrade flag on, and start the SCB upgrade by issuing the `set chassis state cb-upgrade on` command.

```
user@host# configure
user@host# set chassis state cb-upgrade on
user@host# commit
```

6. Determine the order to replace the existing SCBs with upgraded ones. SCB0 is associated with RE0 and SCB1 is associated with RE1.



NOTE: Do not add or remove any router hardware during the upgrade procedure.

Upgrading the SCB in the Backup Routing Engine



TIP: MX480 has two slots for SCB—that is, SCB0 and SCB1—and these correspond to RE0 and RE1 respectively, where SCB1 is the first SCB.

To upgrade the SCB in the backup Routing Engine:

1. Power down the backup Routing Engine from the master Routing Engine by issuing the `request system power-off other-routing-engine` command.
2. Verify that the Routing Engine is powered down by issuing the `show chassis routing-engine 1` command. The slot of the Routing Engine may be 0 or 1, and is shown as 1 in this example:

```
user@host> show chassis routing-engine 1
```

```
Routing Engine Status:  
Slot 1:  
Current State Present
```

Ensure that the Current State is Present, which indicates that the Routing Engine is offline.

3. Take the fabric plane offline by issuing the **request chassis fabric plane 4 offline** command. SCB1 has four fabric planes numbered, 4, 5, 6, and 7.
4. Verify that the fabric plane is offline by issuing the **show chassis fabric summary** command.

```
user@host> show chassis fabric summary
```

```
Plane State Uptime  
 4 Offline  
 5 Online 1 hour, 15 minutes, 35 seconds
```

Verify that the State of Plane 4 is Offline.

5. Take the remaining fabric planes offline by issuing the **request chassis fabric plane 5/6/7 offline** command—that is, by changing the fabric plane number each time. Verify that the fabric planes are offline by issuing the command given in Step 2.
6. Take the SCB in slot 1 offline by issuing the **request chassis cb offline slot 1** command.
7. Verify that the control board is offline by issuing the **show chassis environment cb 1** command:

```
user@host> show chassis environment cb 1  
CB 1 status:  
State Offline  
Power 1 Disabled  
Power 2 Disabled
```

8. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
9. Remove and replace SCB1 on the router with the SCBE. Use the replacement procedure described in [“Removing an MX480 SCB” on page 381](#)
10. Verify that the installation is successful and the SCB is online by issuing the **show chassis environment cb 1** command:

```
user@host> show chassis environment cb 1  
CB 1 status  
State Online  
Temperature 30 degrees C / 86 degrees F
```

Other details, such as power, are also displayed along with the state.

- Verify that the fabric planes come online correctly by issuing the **show chassis fabric summary** command:

```
user@host> show chassis fabric summary
Plane  State Uptime
4 Online 2 minutes, 25 seconds
5 Online 2 minutes, 15 seconds
6 Online 2 minutes, 3 seconds
7 Online 1 minute, 49 seconds
```

- Verify that the backup Routing Engine is back online by issuing the **show chassis routing-engine 1** command:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
Current State Backup
```

- Verify the alarms by issuing the **show chassis alarms** command:

```
user@host> show chassis alarms
Alarm Time  Class Description
2011-06-01 13:26:56 EDT Major CB fabrics are of mixed types
```

As only one SCB has been upgraded, the alarm indicates that the SCBs are of mixed type. This alarm is cleared after all the control boards are upgraded.

Upgrading the SCB in the Master Routing Engine

To upgrade the SCB in the master Routing Engine:

- Ensure a Graceful RE Switchover (GRES) to gracefully switch between the master and backup Routing Engines, so that the backup RE becomes the master RE, by issuing the **request chassis routing-engine master switch** command.
- Log in to the new master Routing Engine after the switchover.
- Switch the configuration mode to ensure that you are still in configure exclusive mode by issuing the **exit** command and then the **configure exclusive** command, from the old master Routing Engine.
- Log in to the current master Routing Engine again and issue the **configure exclusive** command.
- Power down the backup Routing Engine from the master Routing Engine by issuing the **request system power-off other-routing-engine** command.
- Ensure that the Routing Engine is powered down by issuing the **show chassis routing-engine 0** command.

```
user@host> show chassis routing-engine 0
```

```
Routing Engine Status:  
Slot 0:  
Current State Present
```

Verify that the Current State is Present, which indicates that the Routing Engine is offline.

7. Take the first fabric plane of the backup Routing Engine offline by issuing the **request chassis fabric plane 0 offline** command. SCB0 has four fabric planes numbered, 0, 1, 2, and 3.
8. Verify that the fabric plane is offline by issuing the **show chassis fabric summary** command.

```
user@host> show chassis fabric summary  
Plane State Uptime  
0 Offline  
1 Online 3 minutes, 45 seconds
```

Verify that the State of Plane 0 is Offline.

9. Take the remaining fabric planes offline by issuing the **request chassis fabric plane 1/2/3 offline** command—that is, by changing the fabric plane number each time. Verify that the fabric planes are offline by issuing the command given in Step 4.
10. Take the SCB in slot 0 offline by issuing the **request chassis cb offline slot 0** command.
11. Verify that the control board is offline by issuing the **show chassis environment cb 0** command:

```
user@host> show chassis environment cb 0  
CB 0 status:  
State Offline  
Power 1 Disabled  
Power 2 Disabled
```

12. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
13. Remove and replace the offline SCB on the router with the SCBE. Use the replacement procedure described in [“Removing an MX480 SCB” on page 381](#).
14. Verify that the installation is successful and SCB0 is online by issuing the **show chassis environment cb 0** command:

```
user@host> show chassis environment cb 0  
CB 0 status  
State Online  
Temperature 30 degrees C / 86 degrees F
```

Other details, such as power, are also displayed along with the state.

- Verify that the fabric planes come online correctly by issuing the **show chassis fabric summary** command:

```
user@host> show chassis fabric summary
Plane State Uptime
0 Online 2 minutes, 5 seconds
1 Online 1 minute, 55 seconds
2 Online 1 minute, 43 seconds
3 Online 1 minute, 33 seconds
```

- Verify that the backup Routing Engine is back online by issuing the **show chassis routing-engine 0** command:

```
user@host> show chassis routing-engine 0
Routing Engine Status:
Slot 0:
Current State Backup
```

- Verify the alarms by issuing the **show chassis alarms** command:

```
user@host> show chassis alarms
Alarm Time Class Description
2011-06-01 13:26:56 EDT Major CB fabric links require upgrade/training
2011-06-01 12:10:41 EDT Major Require a fan tray upgrade
```

The major alarm has changed from **CB fabrics are of mixed types** to **CB fabric links require upgrade/training**, as a switch control board requires training to change links from 3G speed to 6G speed of the SCBE. This alarm is displayed until the 3G to 6G link transition is completed.

Completing the SCB Upgrade

To complete the procedure after upgrading the SCBs:

- Verify that any Modular Port Concentrator (MPC) is running at 3G instead of 6G by issuing the **request chassis fabric upgrade-bandwidth info** command:

```
user@host> request chassis fabric upgrade-bandwidth info
Slot State
0 Upgrade not supported
1 Needs upgrade
2 Empty
3 Empty
4 Empty
5 Empty
```

The results indicate that slot 0 does not support the upgrade and slot 1 needs to be upgraded.

- Upgrade the bandwidth of all MPCs by issuing the **request chassis fabric upgrade-bandwidth fpc all** command. If you want to control the MPC line card upgrade, go to Step 3.



CAUTION: Use this command only if you are not concerned with the slot upgrade order or if only one old MPC is present in the chassis. Running this command may result in a loss of traffic across that MPC. Using this method may increase that loss, because it does not consider any redundancy or graceful switchover strategies that you may have configured on the system.

3. Upgrade the MPC in slot 1 by running the **request chassis fabric upgrade-bandwidth fpc slot 1** command.
4. Verify that the MPC is upgraded by issuing the **request chassis fabric upgrade-bandwidth info** command:

```
user@host> request chassis fabric upgrade-bandwidth info
Slot State
0 Upgrade not supported
1 Upgraded
2 Empty
```

5. Verify the state of the fabric planes for all MPCs by issuing the **show chassis fabric summary** command.

```
user@host> show chassis fabric summary
Plane State Uptime
0 Spare 21 seconds
1 Spare 12 seconds
2 Online 12 minutes
3 Online 12 minutes
4 Online 30 minutes
5 Online 30 minutes
```

6. Verify the state of the MPCs by issuing the **show chassis fabric fpcs** command.

```
user@host> show chassis fabric fpcs
FPC 1
PFE #0
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #1
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #2
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
```

```

Plane 4: Plane enabled
Plane 5: Plane enabled
PFE #3
Plane 0: Links ok
Plane 1: Links ok
Plane 2: Plane enabled
Plane 3: Plane enabled
Plane 4: Plane enabled
Plane 5: Plane enabled

```

Fabric plane details of all MPCs are similarly displayed.

- Verify if any output of the **show chassis fabric summary** command shows fabric planes in 'check' state, as it indicates that the fabric plane has an error. You can try to recover the fabric plane to normal operation by issuing the **request chassis fabric plane <#> offline** command, followed by the **request chassis fabric plane <#> online** command, where <#> equals the fabric plane in error.



NOTE: After you issue the **request chassis fabric plane <#> offline** and **request chassis fabric plane <#> online** commands, issue the **show chassis fabric summary** command to verify that the fabric plane errors are rectified and to verify the current state of the fabric planes.

- Verify that the major alarms are displayed by issuing the **show chassis alarms** command:

```

user@host> show chassis alarms
Alarm Time   Class Description
2011-06-01 13:37:43 EDT Minor Require a fan tray upgrade
2011-06-01 13:37:26 EDT Minor Backup RE Active

```

The major alarms are not displayed anymore, and the upgrade is successfully completed.

- Disable the upgrade configuration by issuing the **set chassis state cb-upgrade off** command and then the **commit** command.
- You can delete that command by issuing the **delete chassis state cb-upgrade** command and then the **commit** command.
- Verify the SCBs before you finish by issuing the **show chassis hardware** command:

```

user@host> show chassis hardware
Item Version Part Number Serial Number Description
CB0 REV 02 750-031391 YE8505 Enhanced MX SCB
CB1 REV 07 710-031391 YL6769 Enhanced MX SCB

```

You can see that the MX480 now has the MX SCBEs.

See Also • [MX480 SCBE Description on page 110](#)

Related Documentation • [Removing an MX480 SCB on page 381](#)
• [Installing an MX480 SCB on page 283](#)

PART 5

Maintaining the Chassis and Components

- [Routine Maintenance Procedures on page 413](#)
- [Maintaining Components on page 415](#)

CHAPTER 28

Routine Maintenance Procedures

- [Routine Maintenance Procedures for the MX480 Router on page 413](#)

Routine Maintenance Procedures for the MX480 Router

Purpose For optimum router performance, perform preventive maintenance procedures.

- Action**
- Inspect the installation site for moisture, loose wires or cables, and excessive dust. Make sure that airflow is unobstructed around the router and into the air intake vents.
 - Check the status-reporting devices on the craft interface—System alarms and LEDs.
 - Inspect the air filter at the left rear of the router, replacing it every 6 months for optimum cooling system performance. Do not run the router for more than a few minutes without the air filter in place.

Related Documentation

- [Maintaining the MX480 Air Filter on page 415](#)

CHAPTER 29

Maintaining Components

- [Tools and Parts Required to Maintain the MX480 Router on page 415](#)
- [Maintaining the MX480 Air Filter on page 415](#)
- [Maintaining the MX480 Fan Tray on page 416](#)
- [Maintaining the MX480 Host Subsystem on page 418](#)
- [Maintaining MX480 DPCs on page 420](#)
- [Holding an MX480 DPC on page 422](#)
- [Storing an MX480 DPC on page 424](#)
- [Maintaining MX480 FPCs on page 425](#)
- [Holding an MX480 FPC on page 427](#)
- [Storing an MX480 FPC on page 429](#)
- [Maintaining MX480 MICs on page 430](#)
- [Maintaining MX480 MPCs on page 431](#)
- [Maintaining MX480 PICs on page 433](#)
- [Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs on page 434](#)
- [Maintaining the MX480 Power Supplies on page 435](#)

Tools and Parts Required to Maintain the MX480 Router

To maintain hardware components, you need the following tools and parts:

- ESD grounding wrist strap
- Flat-blade (–) screwdriver
- Phillips (+) screwdriver, number 1
- Phillips (+) screwdriver, number 2

Related Documentation

- [Routine Maintenance Procedures for the MX480 Router on page 413](#)

Maintaining the MX480 Air Filter

Purpose For optimum cooling, verify the condition of the air filters.

- Action**
- Regularly inspect the air filter. A dirty air filter restricts airflow in the unit, producing a negative effect on the ventilation of the chassis. The filter degrades over time. You must replace the filter every 6 months.



CAUTION: Always keep the air filter in place while the device is operating. Because the fans are very powerful, they could pull small bits of wire or other materials into the through the unfiltered air intake. This could damage the components.

- The shelf life of polyurethane filter varies from two years to five years depending on the storage conditions. Store in a cool, dry, and dark environment. Wrap the media in plastic and store in an environment with relative humidity between 40%- 80% and temperature between 40° F (4° C) to 90° F (32° C). Note that if the material flakes, or becomes brittle when rubbed or deformed, it is no longer usable.

- Related Documentation**
- [Replacing the MX480 Air Filter on page 295](#)
 - [Routine Maintenance Procedures for the MX480 Router on page 413](#)

Maintaining the MX480 Fan Tray

Purpose For optimum cooling, verify the condition of the fans.

- Action**
- Monitor the status of the fans. A fan tray contains multiple fans that work in unison to cool the router components. If one fan fails, the host subsystem adjusts the speed of the remaining fans to maintain proper cooling. A red alarm is triggered when a fan fails, and a yellow alarm and red alarm is triggered when a fan tray is removed.
 - To display the status of the cooling system, issue the **show chassis environment** command. The output is similar to the following:

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	Absent	
	PEM 2	Absent	
	PEM 3	OK	40 degrees C / 104 degrees F
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	42 degrees C / 107 degrees F
	CB 0 Intake	OK	26 degrees C / 78 degrees F
	CB 0 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 0 ACBC	OK	26 degrees C / 78 degrees F
	CB 0 SF A	OK	37 degrees C / 98 degrees F
	CB 0 SF B	OK	35 degrees C / 95 degrees F
	CB 1 Intake	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 1 Exhaust B	OK	28 degrees C / 82 degrees F
	CB 1 ACBC	OK	27 degrees C / 80 degrees F

CB 1 SF A	OK	36 degrees C / 96 degrees F
CB 1 SF B	OK	36 degrees C / 96 degrees F
CB 2 Intake	Absent	
CB 2 Exhaust A	Absent	
CB 2 Exhaust B	Absent	
CB 2 ACBC	Absent	
CB 2 SF A	Absent	
CB 2 SF B	Absent	
FPC 2 Intake	OK	22 degrees C / 71 degrees F
FPC 2 Exhaust A	OK	27 degrees C / 80 degrees F
FPC 2 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 2 I3 0 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 0 Chip	OK	35 degrees C / 95 degrees F
FPC 2 I3 1 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 1 Chip	OK	33 degrees C / 91 degrees F
FPC 2 I3 2 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 2 Chip	OK	30 degrees C / 86 degrees F
FPC 2 I3 3 TSensor	OK	30 degrees C / 86 degrees F
FPC 2 I3 3 Chip	OK	30 degrees C / 86 degrees F
FPC 2 IA 0 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 IA 0 Chip	OK	36 degrees C / 96 degrees F
FPC 2 IA 1 TSensor	OK	30 degrees C / 86 degrees F
FPC 2 IA 1 Chip	OK	35 degrees C / 95 degrees F
FPC 4 Intake	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 4 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 4 I3 0 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 0 Chip	OK	34 degrees C / 93 degrees F
FPC 4 I3 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 1 Chip	OK	33 degrees C / 91 degrees F
FPC 4 I3 2 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 2 Chip	OK	29 degrees C / 84 degrees F
FPC 4 I3 3 TSensor	OK	29 degrees C / 84 degrees F
FPC 4 I3 3 Chip	OK	29 degrees C / 84 degrees F
FPC 4 IA 0 TSensor	OK	35 degrees C / 95 degrees F
FPC 4 IA 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 IA 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 IA 1 Chip	OK	35 degrees C / 95 degrees F
FPC 7 Intake	OK	20 degrees C / 68 degrees F
FPC 7 Exhaust A	OK	21 degrees C / 69 degrees F
FPC 7 Exhaust B	OK	21 degrees C / 69 degrees F
FPC 7 I3 0 TSensor	OK	31 degrees C / 87 degrees F
FPC 7 I3 0 Chip	OK	36 degrees C / 96 degrees F
FPC 7 I3 1 TSensor	OK	32 degrees C / 89 degrees F
FPC 7 I3 1 Chip	OK	35 degrees C / 95 degrees F
FPC 7 I3 2 TSensor	OK	32 degrees C / 89 degrees F
FPC 7 I3 2 Chip	OK	30 degrees C / 86 degrees F
FPC 7 I3 3 TSensor	OK	30 degrees C / 86 degrees F
FPC 7 I3 3 Chip	OK	31 degrees C / 87 degrees F
FPC 7 IA 0 TSensor	OK	34 degrees C / 93 degrees F
FPC 7 IA 0 Chip	OK	37 degrees C / 98 degrees F
FPC 7 IA 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 7 IA 1 Chip	OK	35 degrees C / 95 degrees F
Fans Top Fan Tray Temp	OK	27 degrees C / 80 degrees F
Top Tray Fan 1	OK	Spinning at high speed
Top Tray Fan 2	OK	Spinning at high speed
Top Tray Fan 3	OK	Spinning at high speed
Top Tray Fan 4	OK	Spinning at high speed
Top Tray Fan 5	OK	Spinning at high speed
Top Tray Fan 6	OK	Spinning at high speed
Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F

Bottom Tray Fan 1	OK	Spinning at high speed
Bottom Tray Fan 2	OK	Spinning at high speed
Bottom Tray Fan 3	OK	Spinning at high speed
Bottom Tray Fan 4	OK	Spinning at high speed
Bottom Tray Fan 5	OK	Spinning at high speed
Bottom Tray Fan 6	OK	Spinning at high speed

- Related Documentation**
- [Routine Maintenance Procedures for the MX480 Router on page 413](#)
 - [Installing the MX480 Fan Tray on page 253](#)

Maintaining the MX480 Host Subsystem

Purpose For optimum router performance, verify the condition of the host subsystem. The host subsystem comprises an SCB and a Routing Engine installed directly into an SCB.

Action On a regular basis:

- Check the LEDs on the craft interface to view information about the status of the Routing Engines.
- Check the LEDs on the SCB faceplate.
- Check the LEDs on the Routing Engine faceplate.
- To check the status of the Routing Engines, issue the **show chassis routing-engine** command. The output is similar to the following:

```
user@host> show chassis routing-engine
Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature              45 degrees C / 113 degrees F
  CPU temperature         43 degrees C / 109 degrees F
  DRAM                    2048 MB
  Memory utilization      15 percent
  CPU utilization:
    User                   0 percent
    Background              0 percent
    Kernel                  8 percent
    Interrupt               0 percent
    Idle                    92 percent
  Model                   RE-S-1300
  Serial ID               1000694968
  Start time              2007-07-10 12:27:39 PDT
  Uptime                  1 hour, 40 minutes, 37 seconds
  Load averages:         1 minute   5 minute   15 minute
                        0.11       0.06       0.01

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature              46 degrees C / 114 degrees F
  CPU temperature         42 degrees C / 107 degrees F
  DRAM                    2048 MB
```

```

Memory utilization      13 percent
CPU utilization:
  User                  0 percent
  Background            0 percent
  Kernel                0 percent
  Interrupt             0 percent
  Idle                  100 percent
Model                  RE-S-1300
Serial ID              1000694976
Start time             2007-06-19 14:17:00 PDT
Uptime                 20 days, 23 hours, 51 minutes, 4 seconds

```

- To check the status of the SCBs, issue the **show chassis environment cb** command. The output is similar to the following:

```

user@host> show chassis environment cb
CB 0 status:
State                Online Master
Temperature          40 degrees C / 104 degrees F
Power 1
  1.2 V              1208 mV
  1.5 V              1521 mV
  1.8 V              1807 mV
  2.5 V              2507 mV
  3.3 V              3319 mV
  5.0 V              5033 mV
  12.0 V             12142 mV
  1.25 V             1243 mV
  3.3 V SM3          3312 mV
  5 V RE             5059 mV
  12 V RE            11968 mV
Power 2
  11.3 V bias PEM    11253 mV
  4.6 V bias MidPlane 4814 mV
  11.3 V bias FPD    11234 mV
  11.3 V bias POE 0  11176 mV
  11.3 V bias POE 1  11292 mV
Bus Revision         42
FPGA Revision        1
CB 1 status:
State                Online Standby
Temperature          40 degrees C / 104 degrees F
Power 1
  1.2 V              1202 mV
  1.5 V              1514 mV
  1.8 V              1807 mV
  2.5 V              2500 mV
  3.3 V              3293 mV
  5.0 V              5053 mV
  12.0 V             12200 mV
  1.25 V             1260 mV
  3.3 V SM3          3319 mV
  5 V RE             5059 mV
  12 V RE            12007 mV
Power 2
  11.3 V bias PEM    11311 mV
  4.6 V bias MidPlane 4827 mV
  11.3 V bias FPD    11330 mV
  11.3 V bias POE 0  11292 mV
  11.3 V bias POE 1  11311 mV

```

```

Bus Revision          42
FPGA Revision         1

```

To check the status of a specific SCB, issue the **show chassis environment cb** command and include the slot number of the SCB. The output is similar to the following:

```

user@host> show chassis environment cb 0
CB 0 status:
State                Online
Temperature Intake   66 degrees C / 150 degrees F
Temperature Exhaust A 67 degrees C / 152 degrees F
Temperature Exhaust B 73 degrees C / 163 degrees F
Power
  1.2 V                1153 mV
  1.5 V                1417 mV
  1.8 V                1704 mV
  2.5 V                2375 mV
  3.3 V                3138 mV
  5.0 V                4763 mV
  1.2 V Rocket IO     1160 mV
  1.5 V Rocket IO     1408 mV
  1.8 V RLDRAM        1717 mV
I2C Slave Revision   15

```

For more information about using the CLI, see the Junos OS manuals.

- Related Documentation**
- [MX480 Craft Interface Description on page 14](#)
 - [MX480 Routing Engine Description on page 27](#)

Maintaining MX480 DPCs

Purpose The router can have up to six Dense Port Concentrators (DPCs) mounted horizontally in the DPC card cage at the front of the chassis. For optimum router performance, verify the condition of the DPCs.

Action On a regular basis:

- Check the LEDs on the craft interface directly above each DPC slot. The green LED labeled **OK** lights steadily when a DPC is functioning normally.
- Check the **OK/FAIL** LED on the DPC. For more information, see [MX Series Interface Module Reference](#). If the DPC detects a failure, the DPC sends an alarm message to the Routing Engine.
- Check the status of installed DPCs by issuing the CLI **show chassis fpc** command to check the status of installed DPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the DPC is functioning normally:

```

user@host> show chassis fpc
          Temp CPU Utilization (%) Memory Utilization (%)
Slot State (C) Total Interrupt  DRAM (MB) Heap Buffer
  0 Online    41     9         0    1024    15    57

```

1	Online	43	5	0	1024	16	57
2	Online	43	11	0	1024	16	57
3	Empty						
4	Empty						
5	Online	42	6	0	1024	16	57

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```

user@host> show chassis fpc detail
Slot 0 information:
  State                Online
  Temperature          41 degrees C / 105 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:          2007-07-10 12:28:33 PDT
  Uptime:              1 hour, 33 minutes, 52 seconds
  Max Power Consumption 368 Watts
Slot 1 information:
  State                Online
  Temperature          43 degrees C / 109 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:          2007-07-10 12:28:38 PDT
  Uptime:              1 hour, 33 minutes, 47 seconds
  Max Power Consumption 249 Watts
Slot 2 information:
  State                Online
  Temperature          43 degrees C / 109 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:          2007-07-10 12:28:40 PDT
  Uptime:              1 hour, 33 minutes, 45 seconds
  Max Power Consumption 335 Watts
Slot 5 information:
  State                Online
  Temperature          42 degrees C / 107 degrees F
  Total CPU DRAM       1024 MB
  Total RLDRAM         256 MB
  Total DDR DRAM       4096 MB
  Start time:          2007-07-10 12:28:42 PDT
  Uptime:              1 hour, 33 minutes, 43 seconds
  Max Power Consumption 333 Watts

```

- Issue the CLI **show chassis fpc pic-status** command. The DPC slots are numbered **0** through **5**, bottom to top:

```

user@host> show chassis fpc pic-status
Slot 0  Online    DPCE 4x 10GE R
  PIC 0  Online    1x 10GE(LAN/WAN)
  PIC 1  Online    1x 10GE(LAN/WAN)
  PIC 2  Online    1x 10GE(LAN/WAN)
  PIC 3  Online    1x 10GE(LAN/WAN)
Slot 1  Online    DPCE 40x 1GE R
  PIC 0  Online    10x 1GE(LAN)
  PIC 1  Online    10x 1GE(LAN)

```

```

PIC 2 Online      10x 1GE(LAN)
PIC 3 Online      10x 1GE(LAN)
Slot 2 Online     DPCE 40x 1GE R
PIC 0 Online      10x 1GE(LAN)
PIC 1 Online      10x 1GE(LAN)
PIC 2 Online      10x 1GE(LAN)
PIC 3 Online      10x 1GE(LAN)
Slot 5 Online     DPC 4x 10GE R
PIC 0 Online      1x 10GE(LAN/WAN)
PIC 1 Online      1x 10GE(LAN/WAN)
PIC 2 Online      1x 10GE(LAN/WAN)
PIC 3 Online      1x 10GE(LAN/WAN)

```

For further description of the output from the command, see the [CLI Explorer](#).

Related Documentation

- [MX480 Chassis Description on page 9](#)
- [DPC and MPC LEDs on the MX480 Craft Interface on page 17](#)

Holding an MX480 DPC

When carrying a DPC, you can hold it either vertically or horizontally.



NOTE: A DPC weighs 14.5 lb (6.6 kg). Be prepared to accept the full weight of the DPC as you lift it.

To hold a DPC vertically:

1. Orient the DPC so that the faceplate faces you. To verify orientation, confirm that the text on the DPC is right-side up and the electromagnetic interference (EMI) strip is on the right-hand side.
2. Place one hand around the DPC faceplate about a quarter of the way down from the top edge. To avoid deforming the EMI shielding strip, do not press hard on it.
3. Place your other hand at the bottom edge of the DPC.

If the DPC is horizontal before you grasp it, place your left hand around the faceplate and your right hand along the bottom edge.

To hold a DPC horizontally:


1. Orient the DPC so that the faceplate faces you.
2. Grasp the top edge with your left hand and the bottom edge with your right hand.

You can rest the faceplate of the DPC against your body as you carry it.

As you carry the DPC, do not bump it against anything. DPC components are fragile.

Never hold or grasp the DPC anywhere except places that this document indicates. In particular, never grasp the connector edge, especially at the power connector in the corner where the connector and bottom edges meet. See [Figure 168 on page 423](#).

Figure 168: Do Not Grasp the Connector Edge

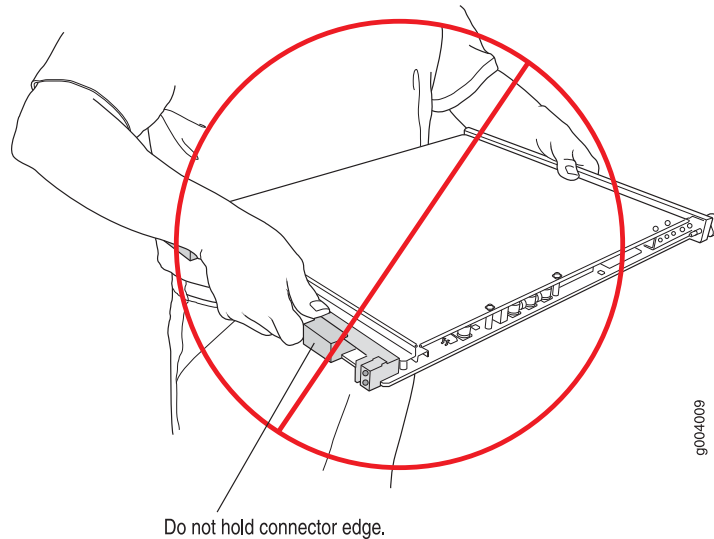


Never carry the DPC by the faceplate with only one hand.

Do not rest any edge of a DPC directly against a hard surface (see [Figure 169 on page 424](#)).

Do not stack DPCs.

Figure 169: Do Not Rest the DPC on an Edge

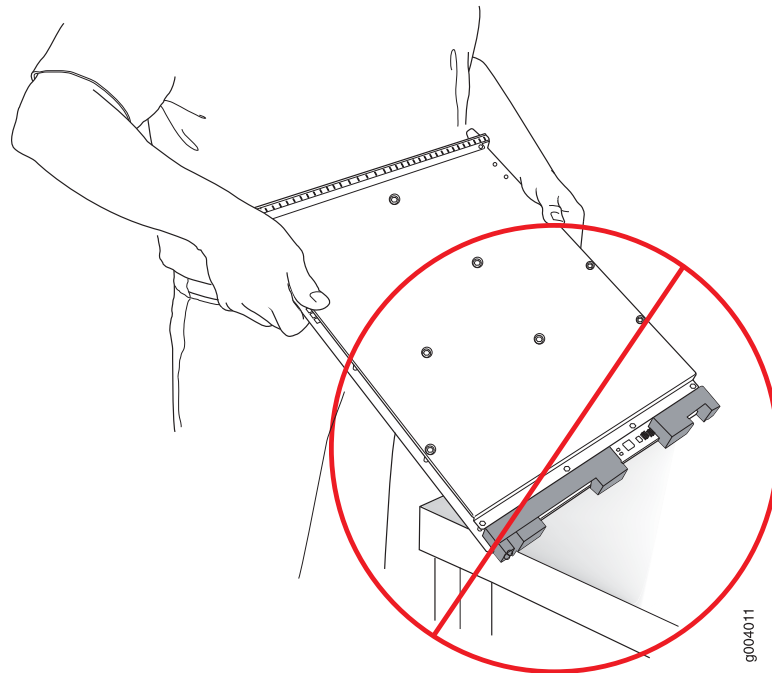

Do not rest connectors on any surface.

If you must rest the DPC temporarily on an edge while changing its orientation between vertical and horizontal, use your hand as a cushion between the edge and the surface.

Related Documentation

- [MX480 DPC Terminology](#)
- [Storing an MX480 DPC on page 424](#)

Storing an MX480 DPC

You must store a DPC as follows:

- In the router
- In the container in which a spare DPC is shipped
- Horizontally and sheet metal side down

When you store a DPC on a horizontal surface or in the shipping container, always place it inside an antistatic bag. Because the DPC is heavy, and because antistatic bags are fragile, inserting the DPC into the bag is easier with two people. To do this, one person holds the DPC in the horizontal position with the faceplate facing the body, and the other person slides the opening of the bag over the DPC connector edge.

If you must insert the DPC into a bag by yourself, first lay the DPC horizontally on a flat, stable surface, sheet metal side down. Orient the DPC with the faceplate facing you. Carefully insert the DPC connector edge into the opening of the bag, and pull the bag toward you to cover the DPC.

Never stack a DPC under or on top of any other component.

- Related Documentation**
- [MX480 DPC Terminology](#)
 - [Holding an MX480 DPC on page 422](#)

Maintaining MX480 FPCs

Purpose The MX480 router can have up to three Flexible PIC Concentrators (FPCs) installed horizontally in the front of the chassis. For optimum router performance, verify the condition of the FPC.

Action On a regular basis:

- Check the LEDs on the craft interface directly above the FPC. The green LED labeled **OK** lights steadily when an FPC is functioning normally.
- Check the **OK/FAIL** LED on the FPC. If the FPC detects a failure, the FPC sends an alarm message to the Routing Engine.
- Issue the CLI **show chassis fpc** command to check the status of the installed FPC. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the FPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Total	Utilization (%) Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Online	24	3	0	1024	13	21
1	Empty						
2	Online	41	9	0	1024	15	57
3	Online	43	5	0	1024	16	57
4	Online	24	3	0	1024	13	21
5	Empty						

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

```
Slot 0 information:
```

State	Online
Temperature	24 degrees C / 75 degrees F
Total CPU DRAM	1024 MB
Total RDRAM	128 MB
Total DDR DRAM	2048 MB
Start time:	2008-12-11 16:53:24 PST
Uptime:	15 hours, 2 minutes, 47 seconds
Max Power Consumption	368 Watts

```
Slot 2 information:
```

State	Online
Temperature	29 degrees C / 84 degrees F
Total CPU DRAM	1024 MB
Total RDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-12-11 16:53:18 PST
Uptime:	15 hours, 2 minutes, 53 seconds

```

Max Power Consumption          294 Watts
Slot 3 information:
  State                        Online
  Temperature                  29 degrees C / 84 degrees F
  Total CPU DRAM              1024 MB
  Total RDRAM                 256 MB
  Total DDR DRAM              4096 MB
  Start time:                 2008-12-11 16:53:18 PST
  Uptime:                     15 hours, 2 minutes, 53 seconds
  Max Power Consumption       335 Watts
Slot 4 information:
  State                        Online
  Temperature                  29 degrees C / 84 degrees F
  Total CPU DRAM              1024 MB
  Total RDRAM                 256 MB
  Total DDR DRAM              4096 MB
  Start time:                 2008-12-11 16:53:18 PST
  Uptime:                     15 hours, 2 minutes, 53 seconds
  Max Power Consumption       333 Watts

```

- Issue the CLI **show chassis fpc pic-status** command. The following example shows an FPC installed in DPC slots 0, and 1:

```

user@host> show chassis fpc pic-status
Slot 0  Online      MX FPC Type 3
  PIC 0  Online      1x OC-192 SONET
  PIC 1  Online      1x OC-192 SONET
Slot 2  Online      DPC 40x 1GE R
  PIC 0  Online      10x 1GE(LAN)
  PIC 1  Online      10x 1GE(LAN)
  PIC 2  Online      10x 1GE(LAN)
  PIC 3  Online      10x 1GE(LAN)
Slot 3  Online      MPC Type 2 3D EQ
  PIC 0  Online      1x 10GE XFP
  PIC 1  Online      1x 10GE XFP
Slot 4  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+

```



NOTE: An FPC takes up two DPC slots when installed on an MX Series router. The slot number corresponds to the lowest numbered DPC slot.

For further description of the output from the command, see the [CLI Explorer](#).

Related Documentation

- [MX480 Flexible PIC Concentrator \(FPC\) LEDs on page 65](#)
- [Replacing an MX480 FPC on page 332](#)
- [Holding an MX480 FPC on page 427](#)
- [Storing an MX480 FPC on page 429](#)
- [Troubleshooting the MX480 FPCs on page 444](#)

Holding an MX480 FPC



CAUTION: Many components on the FPC are fragile. Failure to handle FPCs as specified in this document can cause irreparable damage.




NOTE: An FPC configured with PICs installed can weigh as much as 18 lb (8.2 kg). Be prepared to accept the full weight of the FPC as you lift it.



CAUTION: To prevent damage when handling or carrying FPCs:

- As you carry the FPC, do not bump it against anything. FPC components are fragile.
- Do not grasp the FPC anywhere except places that this document indicates. In particular, never grasp the connector edge, especially at the power connector in the corner where the connector and bottom edges meet (see [Figure 170 on page 427](#)).

Figure 170: Do Not Grasp the Connector Edge

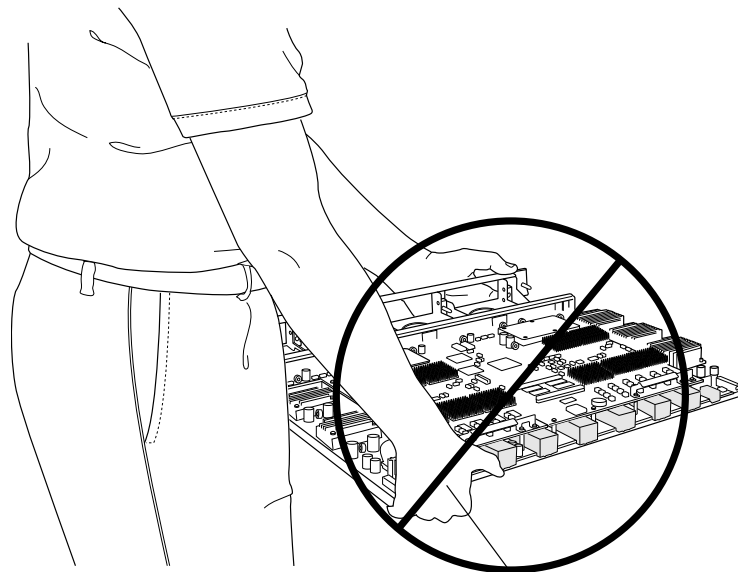


Hand position can damage fragile prongs on power connector in corner

g003142

- Do not carry the FPC by the faceplate with only one hand (see [Figure 171 on page 428](#)).


Figure 171: Do Not Carry an FPC with Only One Hand

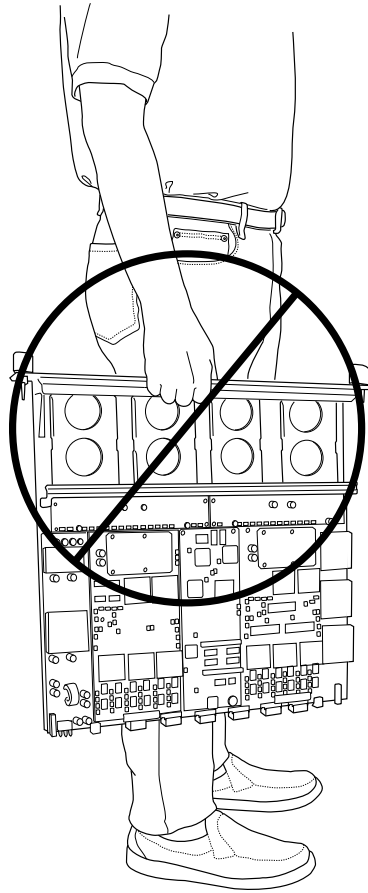

9003143

- Do not rest any edge of an FPC directly against a hard surface (see [Figure 172 on page 429](#)). If you must rest the FPC temporarily on an edge while changing its orientation between vertical and horizontal, use your hand as a cushion between the edge and the surface.

Figure 172: Do Not Rest the FPC on an Edge

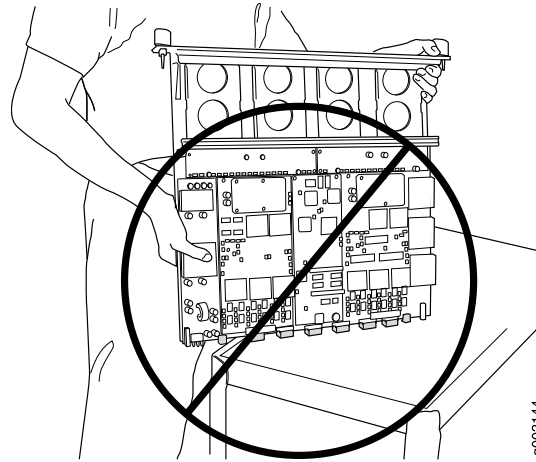

You hold an FPC horizontally when installing it into the chassis or an equipment rack.

If the FPC is horizontal before you grasp it, place your left hand around the faceplate and your right hand along the bottom edge.

To hold an FPC horizontally:

1. Orient the FPC so that the faceplate faces you.
2. Grasp the top edge with your left hand and the bottom edge with your right hand.

Related Documentation

- [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
- [MX480 FPC Terminology](#)
- [Storing an MX480 FPC on page 429](#)

Storing an MX480 FPC

When not installed in the routing platforms, FPCs must be either stored in the container in which a spare FPC is shipped or stored horizontally with the component-side up on a flat, stable surface. When you store an FPC on a horizontal surface or in the shipping container, always place it inside an antistatic bag. Because the FPC is heavy and because antistatic bags are fragile, inserting the FPC into the bag is easier with two people. The storage guidelines are as follows:

- When storing an FPC with two people, one person holds the FPC in the horizontal position with the faceplate facing their body, the other person slides the opening of the bag over the FPC connector edge.
- When storing an FPC with one person, you must insert the FPC into a bag by yourself. First lay the FPC horizontally on a flat, stable surface, component-side up. Orient the


FPC with the faceplate facing you. Carefully insert the FPC connector edge into the opening of the bag, and pull the bag toward you to cover the FPC.



CAUTION: To prevent damage when storing FPCs:

- Never lay an FPC component-side down.

Figure 173: Do Not Stack FPCs

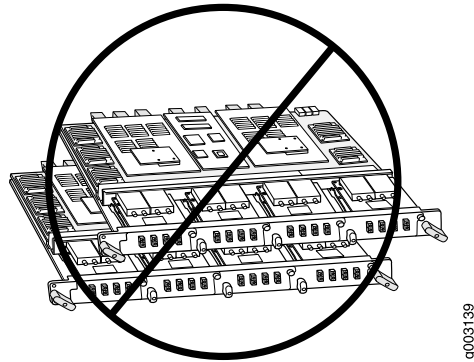

- Never stack an FPC under or on top of any other component (see [Figure 173 on page 430](#)).

- Related Documentation**
- [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
 - [MX480 FPC Terminology](#)
 - [Holding an MX480 FPC on page 427](#)

Maintaining MX480 MICs

Purpose For optimum router performance, verify the condition of the MICs.

Action On a regular basis:

- Check the LEDs on MIC faceplates. The meaning of the LED states differs for various MICs. For more information, see the [MX Series Interface Module Reference](#). If the MPC that houses the MIC detects a MIC failure, the MPC generates an alarm message to be sent to the Routing Engine.
- Issue the CLI `show chassis fpc pic-status` command. The MIC slots in an MPC are numbered **PIC 0/1** and **PIC 2/3**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0  Online      DPCE 4x 10GE R EQ
  PIC 0  Online      1x 10GE(LAN/WAN) EQ
  PIC 1  Online      1x 10GE(LAN/WAN) EQ
  PIC 2  Online      1x 10GE(LAN/WAN) EQ
  PIC 3  Online      1x 10GE(LAN/WAN) EQ
Slot 1  Online      DPCE 40x 1GE R EQ
```



```

PIC 0 Online      10x 1GE(LAN) EQ
PIC 1 Online      10x 1GE(LAN) EQ
PIC 2 Online      10x 1GE(LAN) EQ
PIC 3 Online      10x 1GE(LAN) EQ
Slot 2 Online     MS-DPC
PIC 0 Online      MS-DPC PIC
PIC 1 Online      MS-DPC PIC
Slot 3 Online     MPC Type 2 3D EQ
PIC 0 Online      1x 10GE XFP
PIC 1 Online      1x 10GE XFP
Slot 4 Online     MPC 3D 16x 10GE
PIC 0 Online      4x 10GE(LAN) SFP+
PIC 1 Online      4x 10GE(LAN) SFP+
PIC 2 Online      4x 10GE(LAN) SFP+
PIC 3 Online      4x 10GE(LAN) SFP+

```

For further description of the output from the command, see the [CLI Explorer](#).

- Related Documentation**
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [MX480 Modular Interface Card \(MIC\) LEDs on page 80](#)
 - [Troubleshooting the MX480 MICs on page 446](#)
 - [Replacing an MX480 MIC on page 337](#)

Maintaining MX480 MPCs

Purpose The router can have up to six MPCs mounted horizontally in the card cage at the front of the chassis. For optimum router performance, verify the condition of the MPCs.

Action On a regular basis:

- Check the LEDs on the craft interface directly above each MPC slot. The green LED labeled **OK** lights steadily when an MPC is functioning normally.
- Check the **OK/FAIL** LED on the MPC. If the MPC detects a failure, the MPC sends an alarm message to the Routing Engine.
- Issue the CLI **show chassis fpc** command to check the status of installed MPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the MPC is functioning normally:

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)		Memory Utilization (%)		
			Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	36	3	0	2048	14	13
1	Online	40	5	0	2048	26	13
2	Online	41	6	0	1024	7	43
3	Online	43	5	0	1024	16	57
4	Online	24	3	0	1024	13	21
5	Empty						

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```

user@host> show chassis fpc detail
Slot 0 information:
  State                               Online
  Temperature                          33 degrees C / 91 degrees F
  Total CPU DRAM                        1024 MB
  Total RLD RAM                         256 MB
  Total DDR DRAM                        4096 MB
  Start time:                          2009-12-22 12:26:54 PST
  Uptime:                               6 days, 3 hours, 8 minutes, 51 seconds

  Max Power Consumption                 330 Watts
Slot 1 information:
  State                               Online
  Temperature                          32 degrees C / 89 degrees F
  Total CPU DRAM                        1024 MB
  Total RLD RAM                         256 MB
  Total DDR DRAM                        4096 MB
  Start time:                          2009-12-22 12:26:54 PST
  Uptime:                               6 days, 3 hours, 8 minutes, 51 seconds

  Max Power Consumption                 365 Watts
Slot 2 information:
  State                               Online
  Temperature                          41 degrees C / 105 degrees F
  Total CPU DRAM                        1024 MB
  Total RLD RAM                         128 MB
  Total DDR DRAM                        2048 MB
  Start time:                          2009-12-22 12:26:46 PST
  Uptime:                               6 days, 3 hours, 8 minutes, 59 seconds

  Max Power Consumption                 265 Watts
Slot 3 information:
  State                               Online
  Temperature                          36 degrees C / 96 degrees F
  Total CPU DRAM                        2048 MB
  Total RLD RAM                         806 MB
  Total DDR DRAM                        2632 MB
  Start time:                          2009-12-22 12:27:04 PST
  Uptime:                               6 days, 3 hours, 8 minutes, 41 seconds

  Max Power Consumption                 450 Watts
Slot 4 information:
  State                               Online
  Temperature                          40 degrees C / 104 degrees F
  Total CPU DRAM                        2048 MB
  Total RLD RAM                         1324 MB
  Total DDR DRAM                        5120 MB
  Start time:                          2009-12-22 12:27:02 PST
  Uptime:                               6 days, 3 hours, 8 minutes, 43 seconds

  Max Power Consumption                 440 Watts

```

- Issue the CLI `show chassis fpc pic-status` command. The MPC slots are numbered 0 through 5, bottom to top:

```

user@host> show chassis fpc pic-status
Slot 0  Online      DPCE 4x 10GE R EQ
PIC 0   Online      1x 10GE(LAN/WAN) EQ
PIC 1   Online      1x 10GE(LAN/WAN) EQ
PIC 2   Online      1x 10GE(LAN/WAN) EQ

```

```

PIC 3 Online      1x 10GE(LAN/WAN) EQ
Slot 1 Online    DPCE 40x 1GE R EQ
PIC 0 Online     10x 1GE(LAN) EQ
PIC 1 Online     10x 1GE(LAN) EQ
PIC 2 Online     10x 1GE(LAN) EQ
PIC 3 Online     10x 1GE(LAN) EQ
Slot 2 Online    MS-DPC
PIC 0 Online     MS-DPC PIC
PIC 1 Online     MS-DPC PIC
Slot 3 Online    MPC Type 2 3D EQ
PIC 0 Online     1x 10GE XFP
PIC 1 Online     1x 10GE XFP
Slot 4 Online    MPC 3D 16x 10GE
PIC 0 Online     4x 10GE(LAN) SFP+
PIC 1 Online     4x 10GE(LAN) SFP+
PIC 2 Online     4x 10GE(LAN) SFP+
PIC 3 Online     4x 10GE(LAN) SFP+

```

For further description of the output from the command, see the [CLI Explorer](#).

- Related Documentation**
- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
 - [MX480 Modular Port Concentrator \(MPC\) LEDs on page 90](#)
 - [Troubleshooting the MX480 MPCs on page 447](#)
 - [Replacing an MX480 MPC on page 345](#)

Maintaining MX480 PICs

Purpose For optimum router performance, verify the condition of the PICs.

Action On a regular basis:

- Check the LEDs on PIC faceplates. The meaning of the LED states differs for various PICs. For more information, see the [MX Series Interface Module Reference](#). If the FPC that houses the PIC detects a PIC failure, the FPC generates an alarm message to be sent to the Routing Engine.
- Issue the CLI **show chassis fpc pic-status** command. The PIC slots in an FPC are numbered from 0 through 1, left to right:

```

user@host> show chassis fpc pic-status
Slot 0 Online    DPC 40x 1GE R
PIC 0 Online     10x 1GE(LAN)
PIC 1 Online     10x 1GE(LAN)
PIC 2 Online     10x 1GE(LAN)
PIC 3 Online     10x 1GE(LAN)
Slot 1 Online    MX FPC Type 3
PIC 0 Online     1x OC-192 SONET
PIC 1 Online     1x OC-192 SONET
Slot 2 Online    MS-DPC
PIC 0 Online     MS-DPC PIC
PIC 1 Online     MS-DPC PIC
Slot 3 Online    MPC Type 2 3D EQ

```

```

PIC 0 Online      1x 10GE XFP
PIC 1 Online      1x 10GE XFP
Slot 4 Online     MPC 3D 16x 10GE
PIC 0 Online      4x 10GE(LAN) SFP+
PIC 1 Online      4x 10GE(LAN) SFP+
PIC 2 Online      4x 10GE(LAN) SFP+
PIC 3 Online      4x 10GE(LAN) SFP+

```

For further description of the output from the command, see the [CLI Explorer](#).

Related Documentation

- [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
- [Replacing an MX480 PIC on page 350](#)
- [Troubleshooting the MX480 PICs on page 449](#)
- [MX480 PIC Serial Number Label on page 468](#)

Maintaining Cables That Connect to MX480 DPCs, MPCs, MICs, or PICs

Purpose For optimum router performance, verify the condition of the cables that connect to the DPCs, MPCs, MICs, or PICs.

Action On a regular basis:

- Use the cable management brackets to support cables and prevent cables from dislodging or developing stress points.
- Place excess cable out of the way in the cable management brackets. Do not allow fastened loops of cable to dangle from the connector or cable management brackets, because this stresses the cable at the fastening point. Putting fasteners on the loops helps to maintain their shape.
- Keep the cable connections clean and free of dust and other particles, which can cause drops in the received power level. Always inspect cables and clean them if necessary before connecting an interface.
- Label both ends of the cables to identify them.

The following guidelines apply specifically to fiber-optic cables:

- When you unplug a fiber-optic cable, always place a rubber safety plug over the transceiver on the faceplate and on the end of the cable.
- Anchor fiber-optic cables to avoid stress on the connectors. Be sure to secure fiber-optic cables so that they do not support their own weight as they hang to the floor. Never let fiber-optic cable hang free from the connector.
- Avoid bending fiber-optic cable beyond its bend radius. An arc smaller than a few inches can damage the cable and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cable into and out of optical instruments can cause damage to the instruments that is expensive to repair. Instead, attach a short fiber extension to the optical equipment. Any wear and tear due to

frequent plugging and unplugging is then absorbed by the short fiber extension, which is easy and inexpensive to replace.

- Keep fiber-optic cable connections clean. Small microdeposits of oil and dust in the canal of the transceiver or cable connector could cause loss of light, reducing signal power and possibly causing intermittent problems with the optical connection.

To clean the transceivers, use an appropriate fiber-cleaning device, such as RIFOCS Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the directions for the cleaning kit you use.

After you clean an optical transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit, such as the Opptex Cletop-S Fiber Cleaner. Follow the directions for the cleaning kit you use.

Related Documentation

- [Maintaining MX480 DPCs on page 420](#)
- [Maintaining MX480 MPCs on page 431](#)
- [Maintaining MX480 MICs on page 430](#)
- [Maintaining MX480 PICs on page 433](#)

Maintaining the MX480 Power Supplies

Purpose For optimum router performance, verify the condition of the power supplies.

Action On a regular basis:

- PEM 0 status:

State	Online			
Temperature	OK			
AC Input:	OK			
DC Output	VoLtage(V)	Current(A)	Power(W)	Load(%)
	59	0	0	0
- PEM 1 status:

State	Online			
Temperature	OK			
AC Input:	OK			
DC Output	VoLtage(V)	Current(A)	Power(W)	Load(%)
	59	18	1062	42

- Make sure that the power and grounding cables are arranged so that they do not obstruct access to other router components.
- Routinely check the status LEDs on the power supply faceplates and the craft interface to determine if the power supplies are functioning normally.
- Check the red and yellow alarm LEDs on the craft interface. Power supply failure or removal triggers an alarm that causes one or both of the LEDs to light. You can display the associated error messages by issuing the following command:

```
user@host> show chassis alarms
```

- Periodically inspect the site to ensure that the grounding and power cables connected to the router are securely in place and that there is no moisture accumulating near the router.

**Related
Documentation**

- [Power Supply LEDs on the MX480 Craft Interface on page 17](#)
- [MX480 AC Power Supply Description on page 100](#)
- [MX480 DC Power Supply Description on page 102](#)
- [Troubleshooting Resources for MX480 Routers on page 439](#)
- [MX480 Site Preparation Checklist on page 121](#)

PART 6

Troubleshooting Hardware

- [Troubleshooting Components on page 439](#)

CHAPTER 30

Troubleshooting Components

- [Troubleshooting Resources for MX480 Routers on page 439](#)
- [Troubleshooting the MX480 Cooling System on page 442](#)
- [Troubleshooting the MX480 DPCs on page 442](#)
- [Troubleshooting the MX480 FPCs on page 444](#)
- [Troubleshooting the MX480 MICs on page 446](#)
- [Troubleshooting the MX480 MPCs on page 447](#)
- [Troubleshooting the MX480 PICs on page 449](#)
- [Troubleshooting the MX480 Power System on page 449](#)

Troubleshooting Resources for MX480 Routers

- [Command-Line Interface on page 439](#)
- [Chassis and Interface Alarm Messages on page 440](#)
- [Alarm Relay Contacts on page 440](#)
- [Craft Interface LEDs on page 440](#)
- [Component LEDs on page 441](#)
- [Juniper Networks Technical Assistance Center on page 441](#)

Command-Line Interface

The Junos OS command-line interface (CLI) is the primary tool for controlling and troubleshooting router hardware, the Junos OS, routing protocols, and network connectivity. CLI commands display information from routing tables, information specific to routing protocols, and information about network connectivity derived from the **ping** and **traceroute** utilities.

You enter CLI commands on one or more external management devices connected to ports on the Routing Engine.

For information about using the CLI to troubleshoot the Junos OS, see the appropriate Junos OS configuration guide.

Chassis and Interface Alarm Messages

When the Routing Engine detects an alarm condition, it lights the red or yellow alarm LED on the craft interface as appropriate. To view a more detailed description of the alarm cause, issue the **show chassis alarms** command:

```
user@host> show chassis alarms
```

There are two classes of alarm messages:

- Chassis alarms—Indicate a problem with a chassis component such as the cooling system or power supplies.
- Interface alarms—Indicate a problem with a specific network interface.

Alarm Relay Contacts

The craft interface has two alarm relay contacts for connecting the router to external alarm devices. Whenever a system condition triggers either the red or yellow alarm on the craft interface, the alarm relay contacts are also activated. The alarm relay contacts are located on the upper right of the craft interface.

Craft Interface LEDs

The craft interface is the panel on the front of the router located above the DPC cards that contains LEDs and buttons that allow you to troubleshoot the router.

LEDs on the craft interface include the following:

- Alarm LEDs—One large red circular LED and one large yellow triangular LED, located on the upper right of the craft interface, indicate two levels of alarm conditions. The circular red LED lights to indicate a critical condition that can result in a system shutdown. The triangular yellow LED lights to indicate a less severe condition that requires monitoring or maintenance. Both LEDs can be lit simultaneously. A condition that causes an alarm LED to light also activates the corresponding alarm relay contact on the craft interface.
- Host subsystem LEDs—Three LEDs, **MASTER**, **ONLINE**, and **OFFLINE**, indicate the status of the host subsystem. A green **MASTER** LED indicates that the host is functioning as the master. The **ONLINE** LED indicates that the host is online. The **OFFLINE** LED indicates that the host is installed but the routing engine is offline. The host subsystem LEDs are located on the left of the craft interface and are labeled **RE0** and **RE1**.
- Power supply LEDs—Two LEDs (**PEM**) indicate the status of each power supply. Green indicates that the power supply is functioning normally. Red indicates that the power supply is not functioning normally. The power supply LEDs are located in the center craft interface, and are labeled **0** through **3**.
- Line card LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of each DPC, FPC, or MPC. Green indicates OK and red indicates a failure. The LEDs are located along the bottom of the craft interface.

- SCB LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of each SCB. Green indicates OK and red indicates a failure. The SCB LEDs are located on the left of the craft interface along the bottom.
- Fan LEDs—Two LEDs indicate the status of the fans. Green indicates the fans are functioning normally and red indicates a fan has failed. The fan LEDs are located on the upper left of the craft interface.

Component LEDs

The following LEDs are located on various router components and display the status of those components:

- DPC LED—One LED labeled **OK/FAIL** on each DPC faceplate indicates the DPC's status. For more information, see the [MX Series Interface Module Reference](#).
- FPC LED—One LED labeled **OK/FAIL** on each FPC faceplate indicates the FPC's status.
- MPC LED—One LED labeled **OK/FAIL** on each FPC faceplate indicates the FPC's status.
- MIC LED—One LED labeled **OK/FAIL** on each MIC faceplate indicates the MIC's status. For more information, see the [MX Series Interface Module Reference](#).
- PIC LED—One LED labeled **OK/FAIL** on each PIC faceplate indicates the PIC's status. For more information, see the [MX Series Interface Module Reference](#).
- SCB LEDs—Three LEDs, labeled **FABRIC ACTIVE**, **FABRIC ONLY**, and **OK/FAIL**, on each SCB faceplate indicate the status of the SCB. If no LEDs are lit, the master RE might still be booting or the SCB is not receiving power.
- Routing Engine LEDs—Four LEDs, labeled **MASTER**, **HDD**, **ONLINE**, and **FAIL** on each Routing Engine faceplate indicate the status of the Routing Engine and hard disk drive.
- Power supply LEDs—Two LEDs on each power supply faceplate indicate the status of that power supply.

Juniper Networks Technical Assistance Center

If you need assistance during troubleshooting, you can contact the Juniper Networks Technical Assistance Center (JTAC) by using the Web or by telephone.

Related Documentation

- [Troubleshooting the MX480 Cooling System on page 442](#)
- [Troubleshooting the MX480 DPCs on page 442](#)
- [Troubleshooting the MX480 FPCs on page 444](#)
- [Troubleshooting the MX480 PICs on page 449](#)
- [Troubleshooting the MX480 MPCs on page 447](#)
- [Troubleshooting the MX480 MICs on page 446](#)
- [Troubleshooting the MX480 Power System on page 449](#)

Troubleshooting the MX480 Cooling System

Problem **Description:** The fans in the fan tray are not functioning normally.

Solution Follow these guidelines to troubleshoot the fans:

- Check the fan LEDs and alarm LEDs on the craft interface.
- If the red alarm LED on the craft interface lights, use the CLI to get information about the source of an alarm condition: `user@host> show chassis alarms`.

If the CLI output lists only one fan failure, and the other fans are functioning normally, the fan is most likely faulty and you must replace the fan tray.
- Place your hand near the exhaust vents at the side of the chassis to determine whether the fans are pushing air out of the chassis.
- If a fan tray is removed, a yellow alarm and a red alarm occur.
- The following conditions automatically cause the fans to run at full speed and also trigger the indicated alarm:
 - A fan fails (red alarm).
 - The router temperature exceeds the “temperature warm” threshold (yellow alarm).
 - The temperature of the router exceeds the maximum (“temperature hot”) threshold (red alarm and automatic shutdown of the power supplies).

**Related
Documentation**

- [Alarm LEDs and Alarm Cutoff/Lamp Test Button on the MX480 Craft Interface on page 15](#)
- [Replacing the MX480 Fan Tray on page 297](#)
- [Maintaining the MX480 Air Filter on page 415](#)
- [Maintaining the MX480 Fan Tray on page 416](#)

Troubleshooting the MX480 DPCs

Problem **Description:** The DPCs are not functioning normally.

- Solution**
- Monitor the green LED labeled **OK** above the DPC on the craft interface as soon as a DPC is seated in an operating router.

The Routing Engine downloads the DPC software to it under two conditions: the DPC is present when the Routing Engine boots Junos OS, and the DPC is installed and requested online through the CLI or push button on the front panel. The DPC then runs diagnostics, during which the **OK** LED blinks. When the DPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the DPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the DPC and **OK** and **FAIL** DPC LEDs on the craft interface. When the DPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed DPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the DPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)		Memory Utilization (%)		
			Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	41	9	0	1024	15	57
1	Online	43	5	0	1024	16	57
2	Online	43	11	0	1024	16	57
3	Empty						
4	Empty						
5	Online	42	6	0	1024	16	57



NOTE: The **show chassis fpc** command displays the status of the DPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 2 information:

```
State Online
Temperature 22 degrees C / 71 degrees F
Total CPU DRAM 1024 MB
Total SRAM 256 MB
Total SDRAM 0 MB
Start time 2006-11-03 07:35:40 PST
Uptime 2 hours, 27 minutes, 1 second
```

Slot 4 information:

```
State Online
Temperature 22 degrees C / 71 degrees F
Total CPU DRAM 1024 MB
Total SRAM 256 MB
Total SDRAM 0 MB
Start time 2006-11-03 07:35:48 PST
Uptime 2 hours, 26 minutes, 53 seconds
```

Slot 7 information:

```
State Online
Temperature 24 degrees C / 75 degrees F
```

```

Total CPU DRAM          1024 MB
Total SRAM              256 MB
Total SDRAM             0 MB
Start time              2006-11-03 07:35:53 PST
Uptime                  2 hours, 26 minutes, 48 seconds

```

For further description of the output from the commands, see the *Junos OS Administration Library*.

- Related Documentation**
- [Installing an MX480 DPC on page 256](#)
 - [MX480 DPC Terminology](#)
 - [Maintaining MX480 DPCs on page 420](#)

Troubleshooting the MX480 FPCs

Problem **Description:** The FPCs are not functioning normally.

- Solution**
- Monitor the green LED labeled **OK** above the FPC on the craft interface as soon as an FPC is seated in an operating router.

The Routing Engine downloads the FPC software to it under two conditions: the FPC is present when the Routing Engine boots Junos OS, and the FPC is installed and requested online through the CLI or push button on the front panel. The FPC then runs diagnostics, during which the **OK** LED blinks. When the FPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the FPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the FPC and **OK** and **FAIL** FPC LEDs on the craft interface. When the FPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed FPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the FPC is functioning normally:

```

user@host> show chassis fpc

```

Slot	State	Temp (C)	CPU Utilization (%)	Memory DRAM (MB)	Utilization (%)
			Total Interrupt	Heap	Buffer
0	Online	24	3	0	1024 13 21
1	Empty				
2	Online	41	9	0	1024 15 57
3	Online	43	5	0	1024 16 57
4	Online	43	11	0	1024 16 57
5	Online	41	9	0	1024 15 57
6	Online	43	5	0	1024 16 57
7	Empty				
8	Empty				
9	Empty				
10	Online	24	3	0	1024 13 21
11	Empty				



NOTE: The `show chassis fpc` command displays the status of the FPCs.

For more detailed output, add the `detail` option. The following example does not specify a slot number, which is optional:

```

user@host> show chassis fpc detail
Slot 0 information:
  State                               Online
  Temperature                          24 degrees C / 75 degrees F
  Total CPU DRAM                        1024 MB
  Total RDRAM                           128 MB
  Total DDR DRAM                        2048 MB
  Start time:                           2008-12-11 16:53:24 PST
  Uptime:                                15 hours, 2 minutes, 47 seconds
Slot 2 information:
  State                               Online
  Temperature                          29 degrees C / 84 degrees F
  Total CPU DRAM                        1024 MB
  Total RDRAM                           256 MB
  Total DDR DRAM                        4096 MB
  Start time:                           2008-12-11 16:53:18 PST
  Uptime:                                15 hours, 2 minutes, 53 seconds
Slot 3 information:
  State                               Online
  Temperature                          29 degrees C / 84 degrees F
  Total CPU DRAM                        1024 MB
  Total RDRAM                           256 MB
  Total DDR DRAM                        4096 MB
  Start time:                           2008-12-11 16:53:18 PST
  Uptime:                                15 hours, 2 minutes, 53 seconds
Slot 4 information:
  State                               Online
  Temperature                          29 degrees C / 84 degrees F
  Total CPU DRAM                        1024 MB
  Total RDRAM                           256 MB
  Total DDR DRAM                        4096 MB
  Start time:                           2008-12-11 16:53:18 PST
  Uptime:                                15 hours, 2 minutes, 53 seconds
Slot 5 information:
  State                               Online
  Temperature                          29 degrees C / 84 degrees F
  Total CPU DRAM                        1024 MB
  Total RDRAM                           256 MB
  Total DDR DRAM                        4096 MB
  Start time:                           2008-12-11 16:53:22 PST
  Uptime:                                15 hours, 2 minutes, 49 seconds
Slot 6 information:
  State                               Online
  Temperature                          29 degrees C / 84 degrees F
  Total CPU DRAM                        1024 MB
  Total RDRAM                           256 MB
  Total DDR DRAM                        4096 MB
  Start time:                           2008-12-11 16:53:18 PST
  Uptime:                                15 hours, 2 minutes, 53 seconds
Slot 10 information:
  State                               Online
  Temperature                          24 degrees C / 75 degrees F

```

```

Total CPU DRAM          1024 MB
Total RLDRAM            128 MB
Total DDR DRAM         2048 MB
Start time:            2008-12-11 16:53:24 PST
Uptime:                15 hours, 2 minutes, 47 seconds

```

For further description of the output from the commands, see the *Junos OS Administration Library*.

- Related Documentation**
- [MX480 Flexible PIC Concentrator \(FPC\) LEDs on page 65](#)
 - [Replacing an MX480 FPC on page 332](#)
 - [Holding an MX480 FPC on page 427](#)
 - [Storing an MX480 FPC on page 429](#)
 - [Maintaining MX480 FPCs on page 425](#)

Troubleshooting the MX480 MICs

Problem **Description:** The MICs are not functioning normally.

- Solution**
- Check the status of each port on a MIC by looking at the LED located on the MIC faceplate. For information about the meaning of LED states on different MICs, see the [MX Series Interface Module Reference](#).
 - Check the status of a MIC by issuing the **show chassis fpc pic-status** CLI command. The MIC slots in the MPC are labeled **PIC 0/1** and **PIC 2/3**, left to right:

```

user@host> show chassis fpc pic-status
Slot 0  Online      DPCE 4x 10GE R EQ
  PIC 0  Online      1x 10GE(LAN/WAN) EQ
  PIC 1  Online      1x 10GE(LAN/WAN) EQ
  PIC 2  Online      1x 10GE(LAN/WAN) EQ
  PIC 3  Online      1x 10GE(LAN/WAN) EQ
Slot 1  Online      DPCE 40x 1GE R EQ
  PIC 0  Online      10x 1GE(LAN) EQ
  PIC 1  Online      10x 1GE(LAN) EQ
  PIC 2  Online      10x 1GE(LAN) EQ
  PIC 3  Online      10x 1GE(LAN) EQ
Slot 2  Online      MS-DPC
  PIC 0  Online      MS-DPC PIC
  PIC 1  Online      MS-DPC PIC
Slot 3  Online      MPC Type 2 3D EQ
  PIC 0  Online      1x 10GE XFP
  PIC 1  Online      1x 10GE XFP
Slot 4  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+

```

For further description of the output from the command, see the [CLI Explorer](#).

- Related Documentation**
- [MX480 Modular Interface Card \(MIC\) Description on page 76](#)
 - [Maintaining MX480 MICs on page 430](#)
 - [Replacing an MX480 MIC on page 337](#)

Troubleshooting the MX480 MPCs

Problem **Description:** The MPCs are not functioning normally.

- Solution**
- Monitor the green LED labeled **OK** above the MPC on the craft interface as soon as an MPC is seated in an operating router.

The Routing Engine downloads the MPC software to it under two conditions: The MPC is present when the Routing Engine boots Junos OS, and the MPC is installed and requested online through the CLI or push button on the front panel. The MPC then runs diagnostics, during which the **OK** LED blinks. When the MPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the MPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the MPC and **OK** and **FAIL** line card LEDs on the craft interface. When the MPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed MPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the MPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total	Interrupt	Memory DRAM (MB)	Utilization (%) Heap	Buffer
0	Online	36	3	0	2048	14	13
1	Online	40	5	0	2048	26	13
2	Online	41	6	0	1024	7	43
3	Online	43	5	0	1024	16	57
4	Online	24	3	0	1024	13	21
5	Empty						



NOTE: The **show chassis fpc** command displays the status of the MPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	33 degrees C / 91 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB

```

Total DDR DRAM                4096 MB
Start time:                    2009-12-22 12:26:54 PST
Uptime:                        6 days, 3 hours, 8 minutes, 51 seconds

Max Power Consumption          330 Watts
Slot 1 information:
State                          Online
Temperature                     32 degrees C / 89 degrees F
Total CPU DRAM                 1024 MB
Total RDRAM                   256 MB
Total DDR DRAM                 4096 MB
Start time:                    2009-12-22 12:26:54 PST
Uptime:                        6 days, 3 hours, 8 minutes, 51 seconds

Max Power Consumption          365 Watts
Slot 2 information:
State                          Online
Temperature                     41 degrees C / 105 degrees F
Total CPU DRAM                 1024 MB
Total RDRAM                   128 MB
Total DDR DRAM                 2048 MB
Start time:                    2009-12-22 12:26:46 PST
Uptime:                        6 days, 3 hours, 8 minutes, 59 seconds

Max Power Consumption          265 Watts
Slot 3 information:
State                          Online
Temperature                     36 degrees C / 96 degrees F
Total CPU DRAM                 2048 MB
Total RDRAM                   806 MB
Total DDR DRAM                 2632 MB
Start time:                    2009-12-22 12:27:04 PST
Uptime:                        6 days, 3 hours, 8 minutes, 41 seconds

Max Power Consumption          450 Watts
Slot 4 information:
State                          Online
Temperature                     40 degrees C / 104 degrees F
Total CPU DRAM                 2048 MB
Total RDRAM                   1324 MB
Total DDR DRAM                 5120 MB
Start time:                    2009-12-22 12:27:02 PST
Uptime:                        6 days, 3 hours, 8 minutes, 43 seconds

Max Power Consumption          440 Watts

```

For further description of the output from the commands, see the *Junos OS Administration Library*.

Related Documentation

- [MX480 Modular Port Concentrator \(MPC\) Description on page 87](#)
- [Maintaining MX480 MPCs on page 431](#)
- [Replacing an MX480 MPC on page 345](#)

Troubleshooting the MX480 PICs

Problem **Description:** The PICs are not functioning normally.

- Solution**
- Check the status of each port on a PIC by looking at the LED located on the PIC faceplate. For information about the meaning of LED states on different PICs, see the [MX Series Interface Module Reference](#).
 - Check the status of a PIC by issuing the **show chassis fpc pic-status** CLI command. The PIC slots in the FPC are numbered from **0** through **1**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0  Online      DPC 40x 1GE R
  PIC 0  Online      10x 1GE(LAN)
  PIC 1  Online      10x 1GE(LAN)
  PIC 2  Online      10x 1GE(LAN)
  PIC 3  Online      10x 1GE(LAN)
Slot 1  Online      MX FPC Type 3
  PIC 0  Online      1x 0C-192 SONET
  PIC 1  Online      1x 0C-192 SONET
Slot 2  Online      MS-DPC
  PIC 0  Online      MS-DPC PIC
  PIC 1  Online      MS-DPC PIC
Slot 3  Online      MPC Type 2 3D EQ
  PIC 0  Online      1x 10GE XFP
  PIC 1  Online      1x 10GE XFP
Slot 4  Online      MPC 3D 16x 10GE
  PIC 0  Online      4x 10GE(LAN) SFP+
  PIC 1  Online      4x 10GE(LAN) SFP+
  PIC 2  Online      4x 10GE(LAN) SFP+
  PIC 3  Online      4x 10GE(LAN) SFP+
```

For further description of the output from the command, see the [CLI Explorer](#).

- Related Documentation**
- [MX480 Flexible PIC Concentrator \(FPC\) Description on page 63](#)
 - [Replacing an MX480 PIC on page 350](#)
 - [Maintaining MX480 PICs on page 433](#)
 - [MX480 PIC Serial Number Label on page 468](#)

Troubleshooting the MX480 Power System

Problem **Description:** The power system is not functioning normally.

- Solution**
- Check the LEDs on each power supply faceplate.
 - If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LED's light steadily, and the **PS FAIL** LED is not lit.

- If a DC power supply is correctly installed and functioning normally, the **PWR_OK**, **INPUT OK**, and **BREAKER ON** LED's light steadily.
- Issue the CLI **show chassis environment pem** command to check the status of installed power supply modules. As shown in the sample output, the value **Online** in the rows labeled **State** indicates that each power supply is functioning normally:

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature     OK
  DC output       OK
PEM 1 status:
  State           Online
  Temperature     OK
  DC output       OK
```

If a power supply is not functioning normally, perform the following steps to diagnose and correct the problem:

- If a red alarm condition occurs, issue the **show chassis alarms** command to determine the source of the problem.
- Check that the AC input switch (—) or DC circuit breaker (I) is in the on position and that the power supply is receiving power.
- Verify that the source circuit breaker has the proper current rating. Each power supply must be connected to a separate source circuit breaker.
- Verify that the AC power cord or DC power cables from the power source to the router are not damaged. If the insulation is cracked or broken, immediately replace the cord or cable.
- Connect the power supply to a different power source with a new power cord or power cables. If the power supply status LEDs indicate that the power supply is not operating normally, the power supply is the source of the problem. Replace the power supply with a spare.
- If all power supplies have failed, the system temperature might have exceeded the threshold, causing the system to shut down.



NOTE: If the system temperature exceeds the threshold, the Junos OS shuts down all power supplies so that no status is displayed.

The Junos OS also can shut down one of the power supplies for other reasons. In this case, the remaining power supplies provide power to the router, and you can still view the system status through the CLI or display.

To restart a high-capacity AC power supply after a shut down due to an over-temperature situation:

1. Move the power switch on the power supply to the off (o) position.
2. Turn off power to where the AC line goes into the power distribution module (PDM) area.
3. Wait for the power supply LEDs to fade out and for the fans inside the power supply to shutdown. This can take up to 10 seconds.



CAUTION: Do not attempt to power-on the power supply if the LED is still lit and the fan is still running. If you do, the router will not reboot.

4. Turn on power to where the AC line goes into the power distribution module (PDM) area.
5. Move the power switch on the power supply to the on (I) position.
6. Verify that the LEDs on the power supply faceplate are properly lit.
7. Issue the CLI **show chassis environment pem** command and verify the State is **ONLINE** and the Temperature is **OK**.

To restart a high-capacity DC power supply after a shut down due to an over-temperature situation:

1. Switch off the circuit breaker(s) on the DC distribution panel to remove power to the chassis and power supplies.
2. Switch on the circuit breaker(s) on the distribution panel to power up the chassis and power supplies.




NOTE: The power switch on the power supplies is not part of the outer or inner DC circuits and therefore does not need to be switched off when restarting the chassis.



NOTE: If output power is not load-balancing correctly in the same zone on an MX-series router with a high-capacity AC or DC power supply module, connect two feeds and change the DIP switch to 1 to boost the voltage on the power supply module.

Each High Capacity AC or DC power supply accepts two AC or DC feeds in two unique AC or DC receptacles. It is possible to operate with one feed, but there is a reduction in the power supply output. The DIP switch must be set according to the number of AC or DC feeds that are present for the power supply. Refer to [Figure 174 on page 452](#).

Figure 174: MX480 High-Capacity DC Power Supply Input Mode Switch.

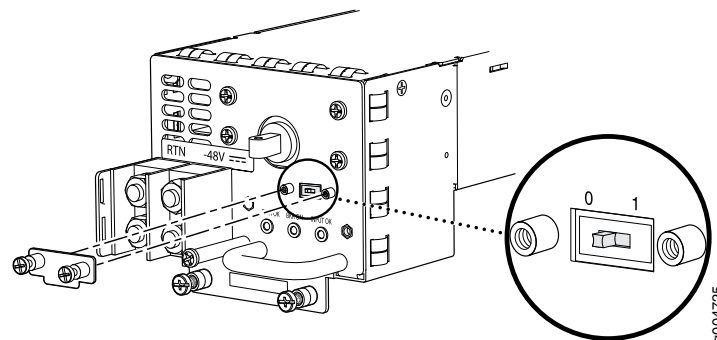

- Position – 0 indicates that only one AC or DC feed is provided.
- Position – 1 indicates that two AC or DC feeds are provided.

To check the DIP switch position:

1. Issue the **show chassis power** command and check to see how many feeds are connected. The following example shows there are two AC input feeds connected for PEM 0 and one AC input feed connected for PEM 1. This indicates that the DIP switch for PEM 0 is in position 1 and the DIP switch for PEM 1 is in position 0. These are the proper settings.

```
# run show chassis power
```

```
PEM 0:
```

```
State: Online
```

```
AC input: OK (2 feed expected, 2 feed connected)
```

```
Capacity: 4100 W (maximum 4100 W)
```

```
DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)
```

```
PEM 1:
```

```
State: Online
```

```
AC input: OK (1 feed expected, 1 feed connected)
```

```
Capacity: 1700 W (maximum 4100 W)
```

```
DC output: 969 W (zone 1, 17 A at 57 V, 57% of capacity)
```

2. Issue the **show chassis alarms** command to see if there are any active alarms on the DIP switch:

```
> show chassis alarms
4 alarms currently active
Alarm time Class Description 2013-01-11 14:48:26 UTC Minor PEM 0 Dipswitch 0
Feed Connection 2
```

- If the **show chassis alarms** output shows an alarm on **Dipswitch**, issue the **show chassis power** command to check the DIP switch position.

```
# run show chassis power
PEM 0:
State: Online
AC input: OK (1 feed expected, 2 feed connected)
Capacity: 4100 W (maximum 4100 W)
DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)
```

In this example, the DIP switch is in the wrong position since there is one AC feed expected but two AC feeds are connected. Change the DIP switch to position 1. This should clear the alarm.



NOTE: Changing the DIP switch position does not impact traffic. However, it is always recommended to do so in a maintenance window.

Related Documentation

- [MX480 AC Power Supply Description on page 100](#)
- [MX480 DC Power Supply Description on page 102](#)
- [Replacing an MX480 AC Power Supply on page 367](#)
- [Troubleshooting Resources for MX480 Routers on page 439](#)

PART 7

Contacting Customer Support and Returning the Chassis or Components

- [Contacting Customer Support on page 457](#)
- [Locating Component Serial Numbers on page 459](#)
- [Packing and Returning Components on page 473](#)

CHAPTER 31

Contacting Customer Support

- [Contacting Customer Support on page 457](#)

Contacting Customer Support

You can contact Juniper Networks Technical Assistance Center (JTAC) 24 hours a day, 7 days a week in one of the following ways:

- On the Web, using the Case Manager link at:

<http://www.juniper.net/support/>

- By telephone:

From the US and Canada: 1-888-314-JTAC

From all other locations: 1-408-745-9500

If contacting JTAC by phone, enter your 12-digit case number followed by the # key if this is an existing case, or press the * key to be routed to the next available support engineer.

When requesting support from JTAC by telephone, be prepared to provide the following information:

- Your existing case number, if you have one
- Details of the failure or problem
- Type of activity being performed on the platform when the problem occurred
- Configuration data using one or more of the show commands

Related Documentation

- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)

Locating Component Serial Numbers

- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [MX480 Chassis Serial Number Label on page 461](#)
- [MX480 SCB Serial Number Label on page 462](#)
- [MX480 DPC Serial Number Label on page 463](#)
- [MX480 FPC Serial Number Label on page 464](#)
- [MX480 MIC Serial Number Label on page 465](#)
- [MX480 MPC Serial Number Label on page 467](#)
- [MX480 PIC Serial Number Label on page 468](#)
- [MX480 Power Supply Serial Number Label on page 468](#)
- [MX480 Routing Engine Serial Number Label on page 470](#)

Displaying MX480 Router Components and Serial Numbers

Before contacting Juniper Networks, Inc. to request a Return Materials Authorization (RMA), you must find the serial number on the router or component. To display all of the router components and their serial numbers, enter the following command-line interface (CLI) command:

```
user@host> show chassis hardware
```

```
Hardware inventory:
```

Item	Version	Part number	Serial number	Description
Chassis			JN10B6596AFB	MX480
Midplane	REV 01	710-017414		MX480
FPM Board				
PEM 0	Rev 1E	740-017330	000083	PS 2.0kw; 90-264V AC
PEM 1	Rev 1E	740-017330	000089	PS 2.0kw; 90-264V AC
PEM 2	Rev 1E	740-017330	000109	PS 2.0kw; 90-264V AC
Routing Engine 0	REV 06	740-015113	1000694968	RE-S-1300
Routing Engine 1	REV 06	740-015113	1000694976	RE-S-1300
CB 0	REV 07	710-013385	KA5867	MX SCB
CB 1	REV 07	710-013385	KA5863	MX SCB
FPC 0	REV 01	750-018124	KA5710	DPCE 4x 10GE R
CPU	REV 06	710-013713	KB4077	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014289	C712XU01J	XFP-10G-SR
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014289	C712XU01E	XFP-10G-SR
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)

PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
FPC 1	REV 01	750-018122	JZ8183	DPCE 40x 1GE R
CPU	REV 06	710-013713	KA0454	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011613	PAJ4SNB	SFP-SX
Xcvr 9	REV 01	740-011782	P9MOTYY	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 3	REV 01	740-011613	PAJ4SQ9	SFP-SX
Xcvr 4	REV 01	740-011613	PAJ4SQR	SFP-SX
Xcvr 9	REV 01	740-011782	PAR1L2P	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0		NON-JNPR	MTC009778	SFP-T
Xcvr 9	REV 01	740-011782	PAR1L2N	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 3	REV 01	740-011613	PAJ4SQD	SFP-SX
Xcvr 9	REV 01	740-011782	PAR1L27	SFP-SX
FPC 2	REV 01	750-018122	KA5576	DPCE 40x 1GE R
CPU	REV 06	710-013713	KB3961	DPC PMB
PIC 0		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	PB83DK1	SFP-SX
Xcvr 1	REV 01	740-011782	PB82174	SFP-SX
Xcvr 2	REV 01	740-011782	PB81U9C	SFP-SX
Xcvr 3	REV 01	740-011782	PB8329N	SFP-SX
Xcvr 4	REV 01	740-011782	PB832A0	SFP-SX
Xcvr 5	REV 01	740-011782	PB82A3T	SFP-SX
Xcvr 6	REV 01	740-011782	PB835F7	SFP-SX
Xcvr 7	REV 01	740-011782	PB81NBR	SFP-SX
Xcvr 8	REV 01	740-011782	PB82CGR	SFP-SX
Xcvr 9	REV 01	740-011782	PB81NC4	SFP-SX
PIC 1		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	PB81NBS	SFP-SX
Xcvr 1	REV 01	740-011782	PB8390V	SFP-SX
Xcvr 2	REV 01	740-011782	PB75EFU	SFP-SX
Xcvr 3	REV 01	740-011782	PB82VHH	SFP-SX
Xcvr 4	REV 01	740-011782	PB832DA	SFP-SX
Xcvr 5	REV 01	740-011782	P9MOU35	SFP-SX
Xcvr 6	REV 01	740-011782	P9MOU37	SFP-SX
Xcvr 7	REV 01	740-011782	P9MOU74	SFP-SX
Xcvr 8	REV 01	740-011782	P9MOU3C	SFP-SX
Xcvr 9	REV 01	740-011782	P9MOU3B	SFP-SX
PIC 2		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	PAR1YWF	SFP-SX
Xcvr 1	REV 01	740-011782	PAR1Z55	SFP-SX
Xcvr 2	REV 01	740-011782	PAR1YXD	SFP-SX
Xcvr 3	REV 01	740-011785	P6NOTQ1	SFP-LX
Xcvr 4	REV 01	740-011782	PAR1Z4Q	SFP-SX
Xcvr 5	REV 01	740-011782	PAR1XDZ	SFP-SX
Xcvr 6	REV 01	740-011613	PAJ4SQQ	SFP-SX
Xcvr 7	REV 01	740-011782	P8N1Y6L	SFP-SX
Xcvr 8	REV 01	740-011613	PAJ4SYW	SFP-SX
Xcvr 9	0	NON-JNPR	AM06211TK7	SFP-SX
PIC 3		BUILTIN	BUILTIN	10x 1GE(LAN)
Xcvr 0	REV 01	740-011782	PAR1XB3	SFP-SX
Xcvr 1	REV 01	740-011782	PAR1YHY	SFP-SX
Xcvr 2	REV 01	740-011782	PAR1XDV	SFP-SX
Xcvr 3	REV 01	740-011782	PAR1Z7B	SFP-SX
Xcvr 4	REV 01	740-011782	PAR1YWE	SFP-SX
Xcvr 5	REV 01	740-011782	PAR1X5W	SFP-SX
Xcvr 6	REV 01	740-011782	PAR1Z5E	SFP-SX
Xcvr 7	REV 01	740-011782	PAR1XB6	SFP-SX
Xcvr 8	REV 01	740-011785	PAQOZAS	SFP-LX

Xcvr 9	REV 01	740-011785	PAQOZA8	SFP-LX
FPC 5	REV 08	710-014219	KB0710	DPC 4x 10GE R
CPU	REV 06	710-013713	KB1015	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	733019A00156	XFP-10G-LR
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	733019A00192	XFP-10G-LR
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Fan Tray				Left Fan Tray

Most components also have a small rectangular serial number ID label (see [Figure 175 on page 461](#)) attached to the component body.

Figure 175: Serial Number ID Label




Related Documentation

- [MX480 Chassis Serial Number Label on page 461](#)
- [MX480 SCB Serial Number Label on page 462](#)
- [MX480 DPC Serial Number Label on page 463](#)
- [MX480 FPC Serial Number Label on page 464](#)
- [MX480 PIC Serial Number Label on page 468](#)
- [MX480 MPC Serial Number Label on page 467](#)
- [MX480 MIC Serial Number Label on page 465](#)
- [MX480 Power Supply Serial Number Label on page 468](#)
- [MX480 Routing Engine Serial Number Label on page 470](#)

MX480 Chassis Serial Number Label

The chassis serial number is located on the side of the chassis (see [Figure 176 on page 462](#)).

Figure 176: MX480 Chassis Serial Number Label

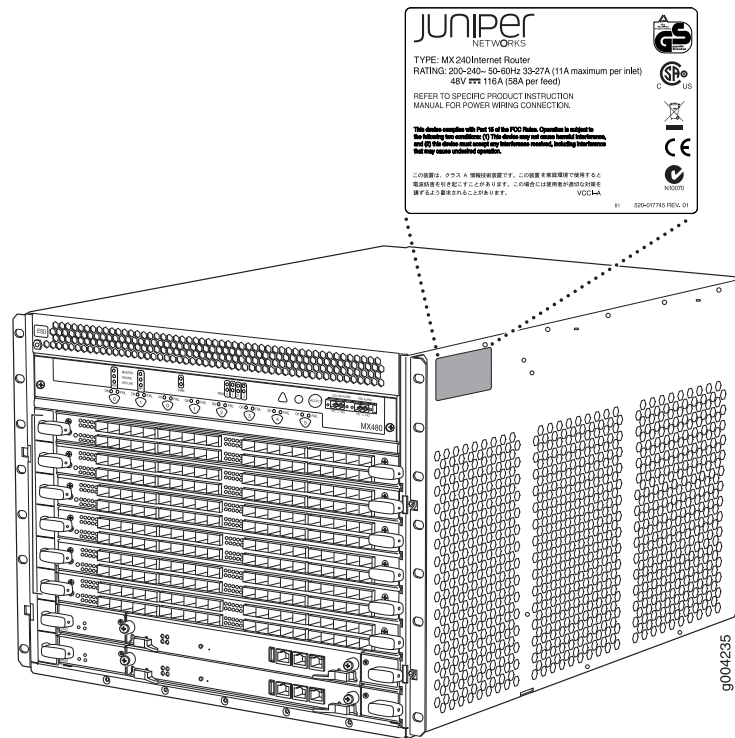


Related Documentation

- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [MX480 SCB Serial Number Label on page 462](#)
- [MX480 DPC Serial Number Label on page 463](#)
- [MX480 FPC Serial Number Label on page 464](#)
- [MX480 PIC Serial Number Label on page 468](#)
- [MX480 MPC Serial Number Label on page 467](#)
- [MX480 MIC Serial Number Label on page 465](#)
- [MX480 Power Supply Serial Number Label on page 468](#)
- [MX480 Routing Engine Serial Number Label on page 470](#)

MX480 SCB Serial Number Label

The serial number is located on the right side of the top of the SCB (see [Figure 177 on page 463](#)).

Figure 177: SCB Serial Number Label

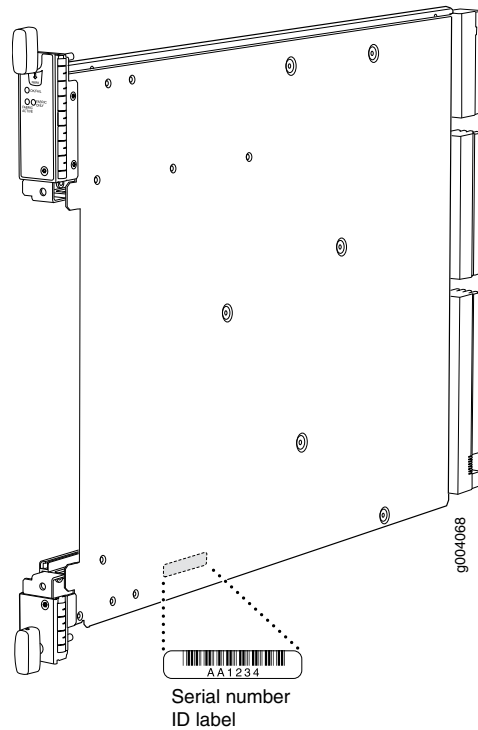
**Related Documentation**

- [Replacing an MX480 SCB on page 381](#)
- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 DPC Serial Number Label

The serial number label is located on the center of the right side of the DPC (see Figure 178 on page 464).

Figure 178: DPC Serial Number Label

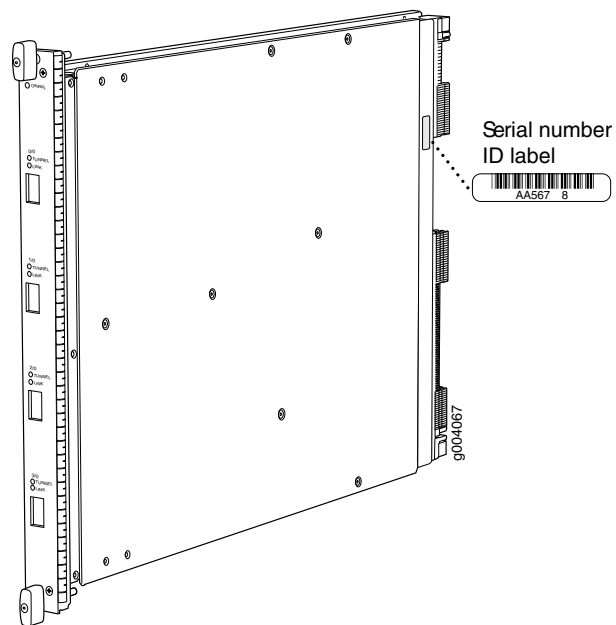
**Related Documentation**

- [Replacing an MX480 DPC on page 323](#)
- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 FPC Serial Number Label

The serial number label is located on the center of the right side of the FPC (see [Figure 179 on page 465](#)).

Figure 179: FPC Serial Number Label

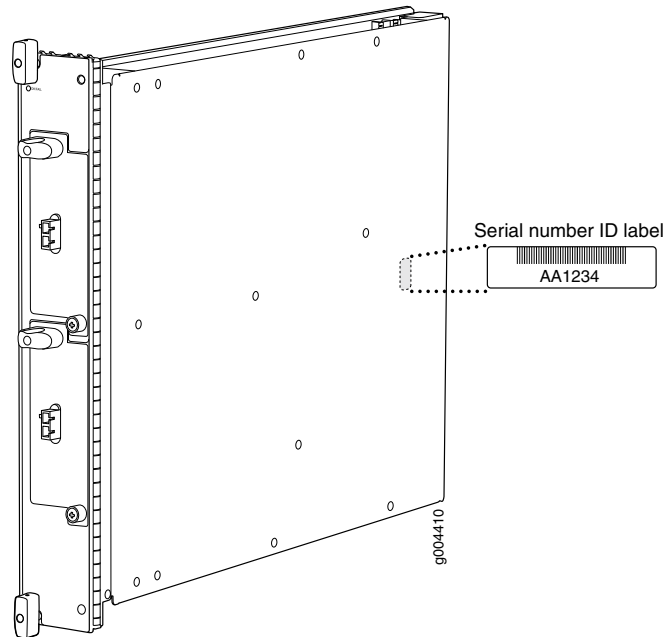**Related Documentation**

- [Replacing an MX480 FPC on page 332](#)
- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 MIC Serial Number Label

The serial number label location varies per MIC (see [Figure 181 on page 466](#) and [Figure 182 on page 466](#)). The exact location may be slightly different on different MICs,

depending on the placement of components on the MIC board (see [Figure 180 on page 466](#), [Figure 181 on page 466](#), [Figure 182 on page 466](#), and [Figure 183 on page 466](#)).

Figure 180: 2-Port MIC Serial Number Label

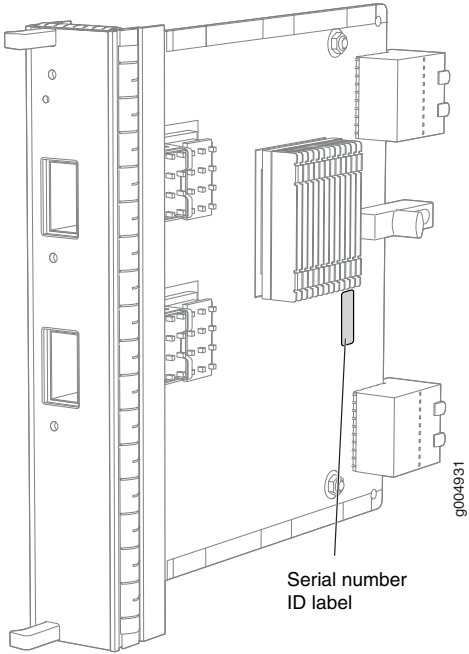


Figure 181: 4-Port MIC Serial Number Label

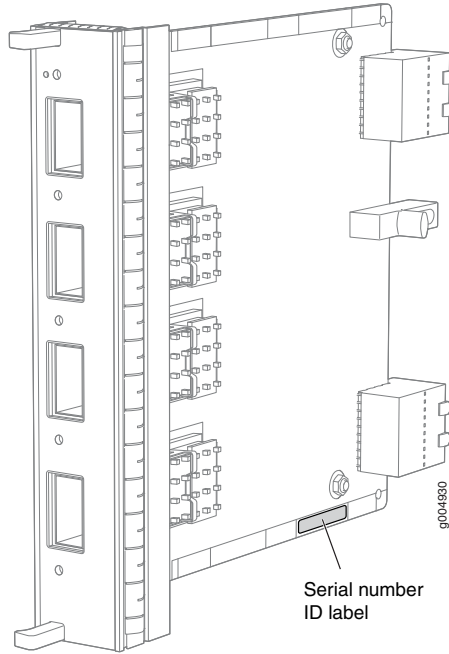


Figure 182: 20-Port MIC Serial Number Label


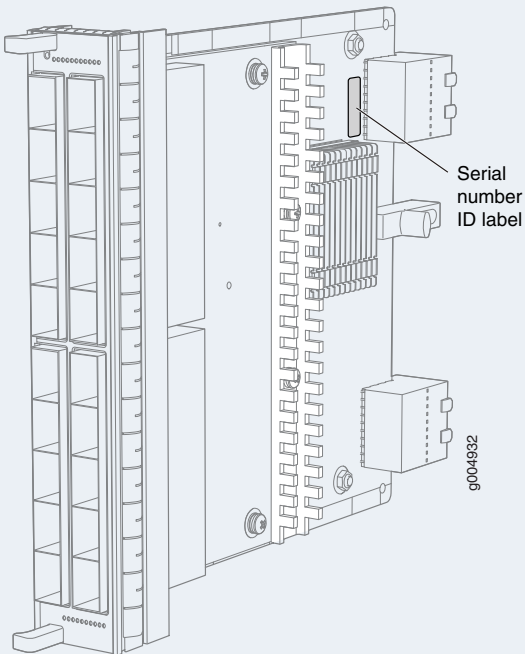


Figure 183: 40-Port MIC Serial Number Label

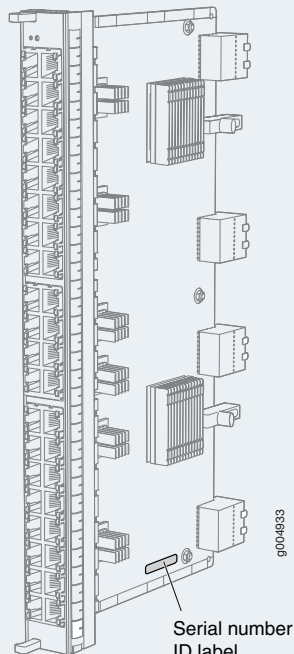


- Related Documentation**
- [Replacing an MX480 MIC on page 337](#)
 - [Displaying MX480 Router Components and Serial Numbers on page 459](#)
 - [Contacting Customer Support on page 457](#)
 - [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
 - [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 MPC Serial Number Label

The serial number label is near the connectors located on the left side of the MPC when it is oriented vertically (see [Figure 184 on page 467](#)).

Figure 184: MPC Serial Number Label

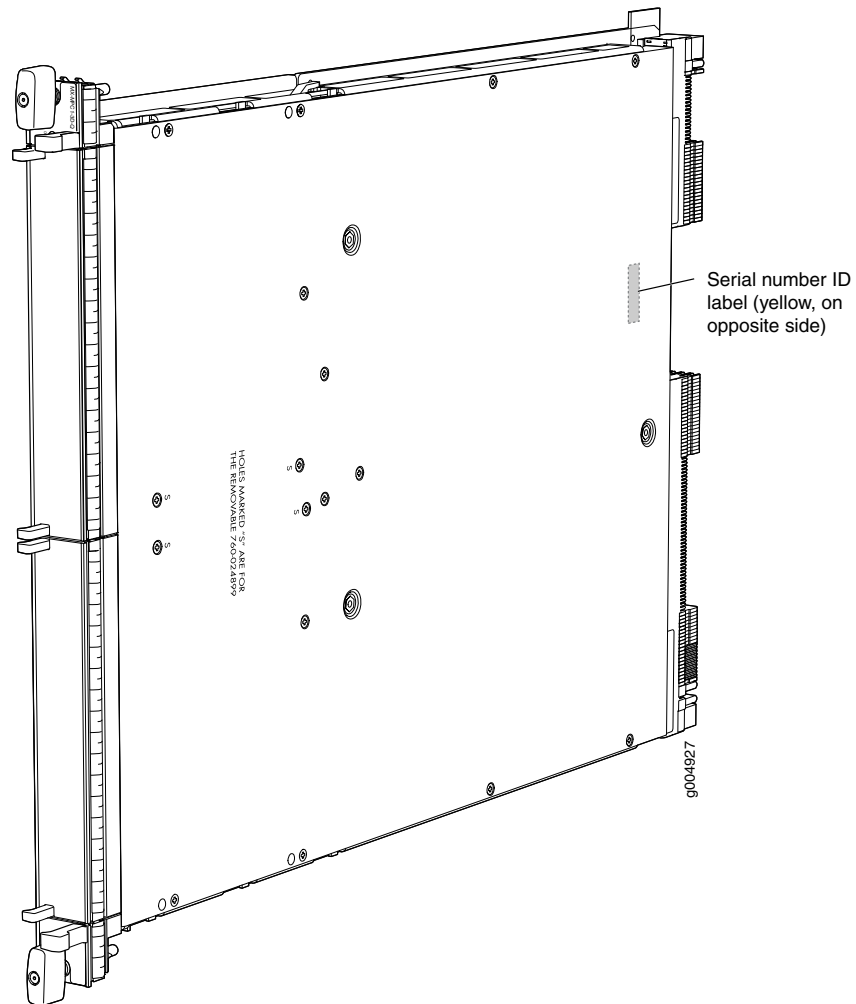


- Related Documentation**
- [Replacing an MX480 MPC on page 345](#)
 - [Displaying MX480 Router Components and Serial Numbers on page 459](#)

- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 PIC Serial Number Label

The serial number label is located on the right side of the PIC (see [Figure 185 on page 468](#)), when the PIC is vertically oriented (as it would be installed in the router). The exact location may be slightly different on different PICs, depending on the placement of components on the PIC board.

Figure 185: PIC Serial Number Label

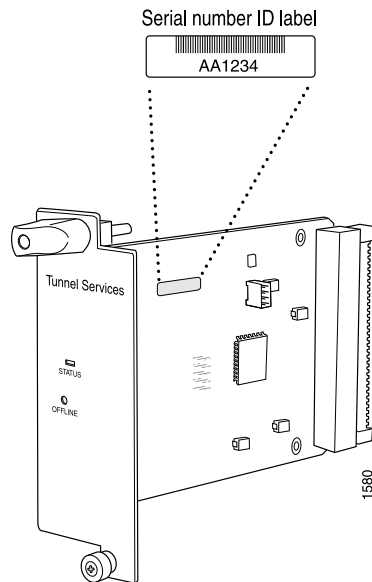

Related Documentation

- [Replacing an MX480 PIC on page 350](#)
- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 Power Supply Serial Number Label

The serial number label is located on the top of the AC power supply (see [Figure 186 on page 469](#)).

The serial number label is located on the top of the DC power supply faceplate (see [Figure 187 on page 469](#)).

Figure 186: AC Power Supply Serial Number Label


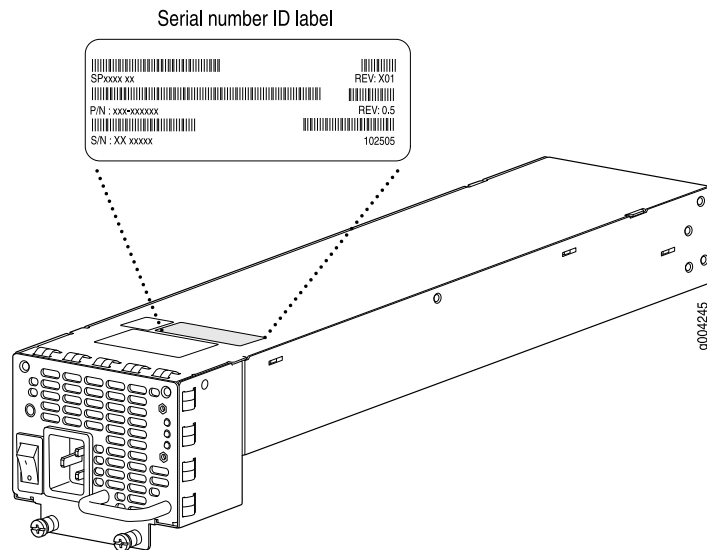


Figure 187: DC Power Supply Serial Number Label

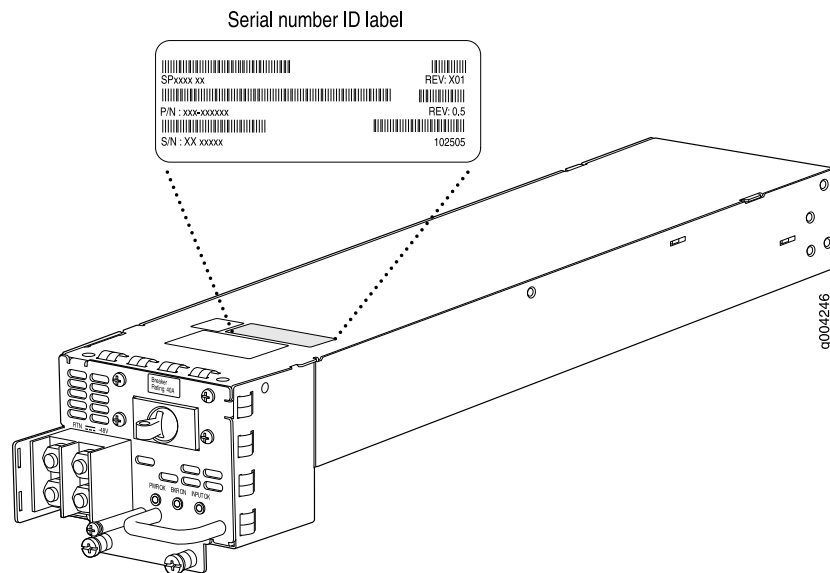

Related Documentation

- [Replacing an MX480 AC Power Supply on page 367](#)
- [Replacing an MX480 DC Power Supply on page 370](#)
- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

MX480 Routing Engine Serial Number Label

The serial number label is located on the left side of the top of the Routing Engine (see [Figure 188 on page 470](#) and [Figure 189 on page 470](#)).

Figure 188: Routing Engine Serial Number Label


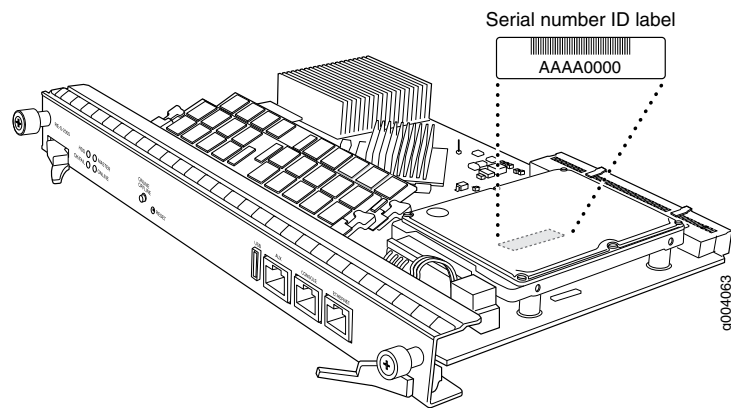


Figure 189: RE-S-X6-64G Routing Engine Serial Number Label

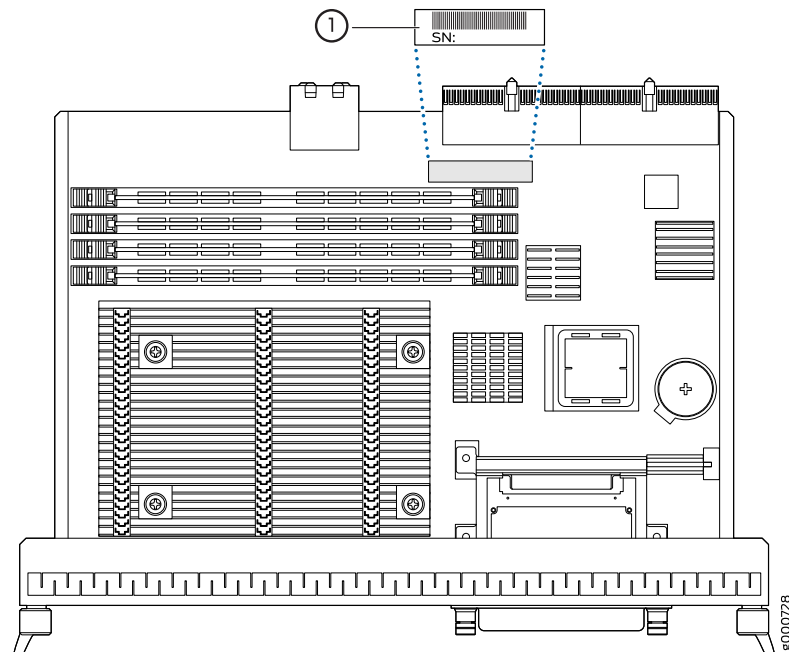

Related Documentation

- [Replacing an MX480 Routing Engine on page 301](#)
- [Displaying MX480 Router Components and Serial Numbers on page 459](#)
- [Contacting Customer Support on page 457](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)

- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

Packing and Returning Components

- [Contacting Customer Support to Obtain Return Material Authorization on page 473](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)
- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Packing the MX480 Router for Shipment on page 475](#)

Contacting Customer Support to Obtain Return Material Authorization

If you are returning a device or hardware component to Juniper Networks for repair or replacement, obtain a Return Material Authorization (RMA) number from Juniper Networks Technical Assistance Center (JTAC).

After locating the serial number of the device or hardware component you want to return, open a Case with Juniper Networks Technical Assistance Center (JTAC) on the Web or by telephone.

Before you request an RMA number from JTAC, be prepared to provide the following information:

- Your existing case number, if you have one
- Serial number of the component
- Your name, organization name, telephone number, fax number, and shipping address
- Details of the failure or problem
- Type of activity being performed on the device when the problem occurred
- Configuration data displayed by one or more **show** commands

You can contact JTAC 24 hours a day, seven days a week on the Web or by telephone:

- Case Manager at CSC: <http://www.juniper.net/cm/>
- Telephone: +1-888-314-JTAC1-888-314-5822, toll free in U.S., Canada, and Mexico



NOTE: For international or direct-dial options in countries without toll free numbers, see <http://www.juniper.net/support/requesting-support.html>.

If you are contacting JTAC by telephone, enter your 12-digit case number followed by the pound (#) key for an existing case, or press the star (*) key to be routed to the next available support engineer.

The support representative validates your request and issues an RMA number for return of the component.

**Related
Documentation**

- [Prevention of Electrostatic Discharge Damage on page 506](#)

Guidelines for Packing Hardware Components for Shipment

To pack and ship individual components:

- When you return components, make sure they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual components in antistatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



CAUTION: Do not stack any of the hardware components.

**Related
Documentation**

- [Returning a Hardware Component to Juniper Networks, Inc. on page 474](#)
- [Contacting Customer Support on page 457](#)

Returning a Hardware Component to Juniper Networks, Inc.

In the event of a hardware failure, please contact Juniper Networks, Inc. to obtain a Return Material Authorization (RMA) number. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



NOTE: Do not return any component to Juniper Networks, Inc. unless you have first obtained an RMA number. Juniper Networks, Inc. reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer by collect freight.

For more information about return and repair policies, see the customer support Web page at <http://www.juniper.net/support/guidelines.html>.

For product problems or technical support issues, contact the Juniper Networks Technical Assistance Center (JTAC) by using the Case Manager link at

<http://www.juniper.net/support/> or at 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

To return a defective hardware component:

1. Determine the part number and serial number of the defective component.
2. Obtain an RMA number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
 - Part number and serial number of component
 - Your name, organization name, telephone number, and fax number
 - Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
5. Pack the component for shipment.

**Related
Documentation**

- [Contacting Customer Support on page 457](#)
- [Guidelines for Packing Hardware Components for Shipment on page 474](#)

Packing the MX480 Router for Shipment

To pack the router for shipment:

1. Retrieve the shipping crate and packing materials in which the router was originally shipped. If you do not have these materials, contact your Juniper Networks representative about approved packaging materials.
2. On the console or other management device connected to the master Routing Engine, enter CLI operational mode and issue the following command to shut down the router software. (If two Routing Engines are installed, also issue the command on the backup Routing Engine.)

```
user@host> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted.

For more information about the command, see *request system halt*.

3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.

4. Shut down power to the router by pressing the AC input switch or DC circuit breaker for all power supplies to the off (O) position.
5. Disconnect power from the router.
6. Remove the cables that connect to all external devices.
7. Remove all field replaceable units (FRUs) from the router.
8. Remove the router from the rack:
 - If you are using a mechanical lift, place the lift platform under the router, unscrew and remove the mounting screws from the rack, and move the router to the shipping crate.
 - If you are not using a mechanical lift and the router weight is fully supported by a shelf or another router, unscrew and remove the mounting screws from the rack. Three people can then lift the router and move it to the shipping crate.
 - If you are not using a mechanical lift and the router weight is not fully supported by a shelf or another router, three people should grasp the router while a fourth person unscrews and removes the mounting screws from the rack. The three lifters can then move the router to the shipping container.
9. Place the router in the shipping crate or onto the pallet. If on a pallet, bolt the router to the pallet.
10. Cover the router with an ESD bag and place the packing foam on top of and around the router.
11. Replace the accessory box on top of the packing foam.
12. Securely tape the box closed or place the crate cover over the router.
13. Write the RMA number on the exterior of the box to ensure proper tracking.

PART 8

Safety and Compliance Information

- [General Safety Guidelines and Warnings on page 479](#)
- [Installation and Maintenance Safety Guidelines and Warnings on page 487](#)
- [Radiation and Laser Warnings on page 495](#)
- [Maintenance and Operational Safety Guidelines and Warnings on page 499](#)
- [Electrical Safety Guidelines and Warnings on page 505](#)
- [Agency Approvals and Compliance Statements on page 519](#)

General Safety Guidelines and Warnings

- [General Safety Guidelines and Warnings on page 479](#)
- [Definitions of Safety Warning Levels on page 480](#)
- [Qualified Personnel Warning on page 482](#)
- [Fire Safety Requirements on page 483](#)
- [Warning Statement for Norway and Sweden on page 484](#)
- [Preventing Electrostatic Discharge Damage to an MX480 Router on page 484](#)

General Safety Guidelines and Warnings

The following guidelines help ensure your safety and protect the device from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in the hardware documentation for this device. Make sure that only authorized service personnel perform other system services.
- Keep the area around the device clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the device.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the device only when it is properly grounded.

- Ensure that the separate protective earthing terminal provided on this device is permanently connected to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet-metal parts unless instructions are provided in the hardware documentation for this device. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any device component. Such an action could cause electrical shock or damage the device.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.
- Always ensure that all modules, power supplies, and cover panels are fully inserted and that the installation screws are fully tightened.

Related Documentation

- [AC Power Electrical Safety Guidelines on page 508](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [Maintenance and Operational Safety Guidelines and Warnings on page 499](#)
- [Installation Instructions Warning on page 487](#)
- [Grounded Equipment Warning on page 493](#)

Definitions of Safety Warning Levels

The documentation uses the following levels of safety warnings (there are two *Warning* formats):



NOTE: You might find this information helpful in a particular situation, or you might overlook this important information if it was not highlighted in a Note.



CAUTION: You need to observe the specified guidelines to prevent minor injury or discomfort to you or severe damage to the device.



WARNING: This symbol alerts you to the risk of personal injury from a laser.



WARNING: This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards

involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Waarschuwing Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

Varoitus Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

Attention Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

Avvertenza Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

Advarsel Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

Aviso Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

¡Atención! Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

Varning! Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning

måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 479](#)
- [Installation Instructions Warning on page 487](#)
- [Maintenance and Operational Safety Guidelines and Warnings on page 499](#)
- [Grounded Equipment Warning on page 493](#)
- [Laser and LED Safety Guidelines and Warnings on page 495](#)
- [Laser and LED Safety Guidelines and Warnings for the ACX5000 Router](#)
- [Warning Statement for Norway and Sweden on page 484](#)

Qualified Personnel Warning



WARNING: Only trained and qualified personnel should install or replace the device.

Waarschuwing Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

Varoitus Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

Attention Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

Warnung Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

Avvertenza Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

Advarsel Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

Aviso Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

¡Atención! Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

Varning! Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)
 - [General Electrical Safety Guidelines and Warnings on page 505](#)
 - [AC Power Electrical Safety Guidelines on page 508](#)
 - [DC Power Electrical Safety Guidelines for Switches](#)

Fire Safety Requirements

In the event of a fire emergency, the safety of people is the primary concern. You should establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, you should establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products should be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment and that all local fire, safety, and electrical codes and ordinances be observed when you install and operate your equipment.

Fire Suppression

In the event of an electrical hazard or an electrical fire, you should first turn power off to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide and Halotron™, are most effective for suppressing electrical fires. Type C fire extinguishers displace oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, you should use this type of inert oxygen displacement extinguisher instead of an extinguisher that leaves residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers). The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean. In addition, in the presence of minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



NOTE: To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks device. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)
 - [General Electrical Safety Guidelines and Warnings on page 505](#)
 - [Action to Take After an Electrical Accident on page 517](#)

Warning Statement for Norway and Sweden



WARNING: The equipment must be connected to an earthed mains socket-outlet.

Advarsel Apparatet skal kobles til en jordet stikkontakt.

Varning! Apparaten skall anslutas till jordat nätuttag.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)

Preventing Electrostatic Discharge Damage to an MX480 Router

Many router hardware components are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:


- Always use an ESD wrist strap or ankle strap, and make sure that it is in direct contact with your skin.
-



CAUTION: For safety, periodically check the resistance value of the ESD strap. The measurement should be in the range of 1 through 10 Mohms.

- When handling any component that is removed from the chassis, make sure the equipment end of your ESD strap is attached to one of the ESD points on the chassis.
- Avoid contact between the component and your clothing. ESD voltages emitted from clothing can still damage components.
- When removing or installing a component, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an electrostatic bag (see [Figure 190 on page 485](#)). If you are returning a component, place it in an electrostatic bag before packing it.

Figure 190: Placing a Component into an Electrostatic Bag

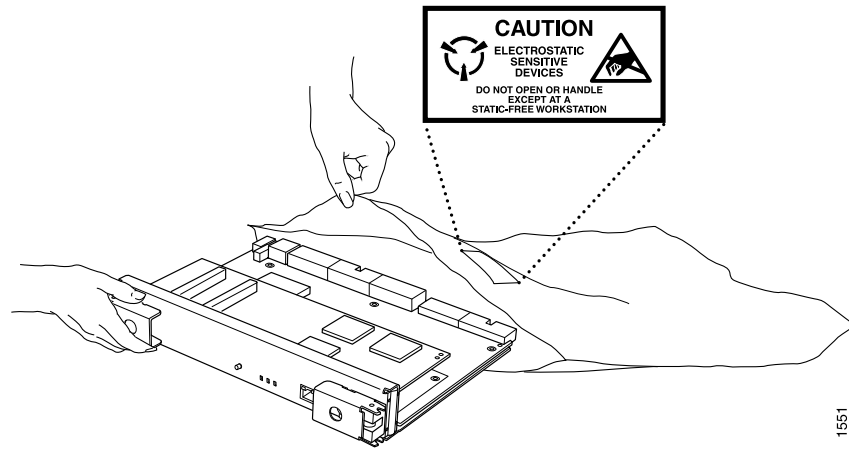

Installation and Maintenance Safety Guidelines and Warnings

- Installation Instructions Warning on page 487
- MX480 Chassis Lifting Guidelines on page 488
- Ramp Warning on page 489
- Rack-Mounting and Cabinet-Mounting Warnings on page 489
- Grounded Equipment Warning on page 493

Installation Instructions Warning



WARNING: Read the installation instructions before you connect the device to a power source.

Waarschuwing Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

Varoitus Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.

Attention Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

Avvertenza Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

Advarsel Les installasjonsinstruksjonene før systemet kobles til strømkilden.

Aviso Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

¡Atención! Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

.....

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)
 - [Laser and LED Safety Guidelines and Warnings on page 495](#)
 - [Laser and LED Safety Guidelines and Warnings for the ACX5000 Router](#)
 - [Grounded Equipment Warning on page 493](#)

MX480 Chassis Lifting Guidelines

The weight of a fully configured chassis is about 163.5 lb (74.2 kg). Observe the following guidelines for lifting and moving the router:

- Before moving the router, verify that the intended site meets the specified power, environmental, and clearance requirements.
- Do not attempt to lift a fully configured router by yourself. Using a mechanical lift to maneuver the router into a rack is recommended. If a lift cannot be used, a minimum of two people must lift the router, and you must remove components from the chassis before lifting.

To lift routing devices and components, use the following lifting guidelines:

- Up to 39.7 lbs (18 kg) 1 person lift.
- 39.7 lbs (18 kg) to 70.5 lbs (32 kg) 2 or more person lift.
- 70.5 lbs (32 kg) to 121.2 lbs (55 kg) 3 or more person lift.
- Above 121.2 lbs (55 kg) material handling systems (such as levers, slings, lifts and so on) must be used. When this is not practical, specially-trained persons or systems must be used (riggers or movers).
- Before lifting or moving the router, disconnect all external cables.
- As when lifting any heavy object, lift most of the weight with your legs rather than your back. Keep your knees bent and your back relatively straight and avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

- Related Documentation**
- [MX480 Site Preparation Checklist on page 121](#)
 - [Removing Components from the MX480 Router Before Installing It Without a Lift on page 202](#)
 - [Installing the MX480 Chassis in the Rack Manually on page 208](#)

Ramp Warning



WARNING: When installing the device, do not use a ramp inclined at more than 10 degrees.

Waarschuwing Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

Varoitus Älä käytä sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

Attention Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

Warnung Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

Avvertenza Non usare una rampa con pendenza superiore a 10 gradi.

Advarsel Bruk aldri en rampe som heller mer enn 10 grader.

Aviso Não utilize uma rampa com uma inclinação superior a 10 graus.

¡Atención! No usar una rampa inclinada más de 10 grados

Varning! Använd inte ramp med en lutning på mer än 10 grader.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [Installation Instructions Warning on page 487](#)
- [Grounded Equipment Warning on page 493](#)

Rack-Mounting and Cabinet-Mounting Warnings

Ensure that the rack or cabinet in which the device is installed is evenly and securely supported. Uneven mechanical loading could lead to a hazardous condition.



WARNING: To prevent bodily injury when mounting or servicing the device in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- The device must be installed in a rack that is secured to the building structure.
- The device should be mounted at the bottom of the rack if it is the only unit in the rack.

- When mounting the device on a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing equipment, install the stabilizers before mounting or servicing the device in the rack.

Waarschuwing Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks switch moet in een stelling worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

Varoitus Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta vältetään loukkaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks switch on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

Attention Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks switch doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.

- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks switch muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

Avvertenza Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks switch deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

Advarsel Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks switch må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.

- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

Aviso Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks switch deverá ser instalado numa prateleira fixa à estrutura do edifício.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

¡Atención! Para evitar lesiones durante el montaje de este equipo sobre un bastidor, o posteriormente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks switch debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

Varning! För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks switch måste installeras i en ställning som är förankrad i byggnadens struktur.
- Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
- Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
- Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 479](#)
- [Installation Instructions Warning on page 487](#)
- [Grounded Equipment Warning on page 493](#)

Grounded Equipment Warning



WARNING: The device is intended to be grounded. During normal use, ensure that you have connected earth ground to the chassis.

Waarschuwing Deze apparatuur hoort geaard te worden. Zorg dat de host-computer tijdens normaal gebruik met aarde is verbonden.

Varoitus Tämä laitteisto on tarkoitettu maadoitettavaksi. Varmista, että isäntälaitte on yhdistetty maahan normaalikäytön aikana.

Attention Cet équipement doit être relié à la terre. S'assurer que l'appareil hôte est relié à la terre lors de l'utilisation normale.

Warnung Dieses Gerät muß geerdet werden. Stellen Sie sicher, daß das Host-Gerät während des normalen Betriebs an Erde gelegt ist.

Avvertenza Questa apparecchiatura deve essere collegata a massa. Accertarsi che il dispositivo host sia collegato alla massa di terra durante il normale utilizzo.

Advarsel Dette utstyret skal jordes. Forviss deg om vertsterminalen er jordet ved normalt bruk.

Aviso Este equipamento deverá estar ligado à terra. Certifique-se que o host se encontra ligado à terra durante a sua utilização normal.

¡Atención! Este equipo debe conectarse a tierra. Asegurarse de que el equipo principal esté conectado a tierra durante el uso normal.

Varning! Denna utrustning är avsedd att jordas. Se till att värdenheten är jordad vid normal användning.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)
 - [AC Power Electrical Safety Guidelines on page 508](#)
 - [DC Power Electrical Safety Guidelines for Switches](#)

Radiation and Laser Warnings

- [Laser and LED Safety Guidelines and Warnings on page 495](#)
- [Radiation from Open Port Apertures Warning on page 497](#)

Laser and LED Safety Guidelines and Warnings

Juniper Networks devices are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration and are evaluated as a Class 1 Laser Product per EN 60825-1 requirements.

Observe the following guidelines and warnings:

- [General Laser Safety Guidelines on page 495](#)
- [Class 1 Laser Product Warning on page 496](#)
- [Class 1 LED Product Warning on page 496](#)
- [Laser Beam Warning on page 496](#)

General Laser Safety Guidelines

When working around ports that support optical transceivers, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



WARNING: Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

Class 1 Laser Product Warning



WARNING: Class 1 laser product.

Waarschuwing Klasse-1 laser produkt.

Varoitus Luokan 1 lasertuote.

Attention Produit laser de classe I.

Warnung Laserprodukt der Klasse 1.

Avvertenza Prodotto laser di Classe 1.

Advarsel Laserprodukt av klasse 1.

Aviso Produto laser de classe 1.

¡Atención! Producto láser Clase I.

Varning! Laserprodukt av klass 1.

Class 1 LED Product Warning



WARNING: Class 1 LED product.

Waarschuwing Klasse 1 LED-product.

Varoitus Luokan 1 valodiodituote.

Attention Alarme de produit LED Class I.

Warnung Class 1 LED-Produktwarnung.

Avvertenza Avvertenza prodotto LED di Classe 1.

Advarsel LED-produkt i klasse 1.

Aviso Produto de classe 1 com LED.

¡Atención! Aviso sobre producto LED de Clase 1.

Varning! Lysdiodprodukt av klass 1.

Laser Beam Warning



WARNING: Do not stare into the laser beam or view it directly with optical instruments.

Waarschuwing Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.

Varoitus Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.

Attention Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.

Warnung Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.

Avvertenza Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.

Advarsel Stirr eller se ikke direkte p strlen med optiske instrumenter.

Aviso Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.

¡Atención! No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.

Varning! Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [Radiation from Open Port Apertures Warning on page 497](#)
- [Installation Instructions Warning on page 487](#)
- [Grounded Equipment Warning on page 493](#)

Radiation from Open Port Apertures Warning



WARNING: Because invisible radiation might be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.

Waarschuwing Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

Varoitus Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumisista äläkä katso avoimiin aukkoihin.

Attention Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

Warnung Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

Avvertenza Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

Advarsel Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

Aviso Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar a exposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

¡Atención! Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

Varning! Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

.....

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 479](#)
- [Laser and LED Safety Guidelines and Warnings on page 495](#)
- [Laser and LED Safety Guidelines and Warnings for the ACX5000 Router](#)
- [Installation Instructions Warning on page 487](#)
- [Grounded Equipment Warning on page 493](#)

Maintenance and Operational Safety Guidelines and Warnings

- [Maintenance and Operational Safety Guidelines and Warnings on page 499](#)

Maintenance and Operational Safety Guidelines and Warnings

While performing the maintenance activities for devices, observe the following guidelines and warnings:

- [Battery Handling Warning on page 499](#)
- [Jewelry Removal Warning on page 500](#)
- [Lightning Activity Warning on page 501](#)
- [Operating Temperature Warning on page 502](#)
- [Product Disposal Warning on page 503](#)

Battery Handling Warning



WARNING: Replacing a battery incorrectly might result in an explosion.

Replace a battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Waarschuwing Er is ontplofingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.

Varoitus Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaaventyypistä akkua, joka on valmistajan suosittelema. Hävitä käytetyt akut valmistajan ohjeiden mukaan.

Attention Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

Warnung Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

Advarsel Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

Avvertenza Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

Aviso Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

¡Atención! Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

Varning! Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

Jewelry Removal Warning



WARNING: Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or can be welded to the terminals.

Waarschuwing Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

Varoitus Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

Attention Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés

à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

Warnung Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

Avvertenza Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

Advarsel Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

Aviso Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

¡Atención! Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

Varning! Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

Lightning Activity Warning



WARNING: Do not work on the system or connect or disconnect cables during periods of lightning activity.

Waarschuwing Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

Varoitus Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

Attention Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

Warnung Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

Avvertenza Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

Advarsel Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lynet.

Aviso Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

¡Atención! No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

Varning! Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

Operating Temperature Warning



WARNING: To prevent the device from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature. To prevent airflow restriction, allow at least 6 in. (15.2 cm) of clearance around the ventilation openings.

Waarschuwing Om te voorkomen dat welke switch van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.

Varoitus Ettei Juniper Networks switch-sarjan reititin ylikuumentuusi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

Attention Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks switch, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

Warnung Um einen Router der switch vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.

Avvertenza Per evitare il surriscaldamento dei switch, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.

Advarsel Unngå overoppheting av eventuelle rutere i Juniper Networks switch Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40° C (104° F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.

Aviso Para evitar o sobreaquecimento do encaminhador Juniper Networks switch, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

¡Atención! Para impedir que un encaminador de la serie Juniper Networks switch se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aberturas para ventilación.

Varning! Förhindra att en Juniper Networks switch överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40° C överskrids. Förhindra att luftcirkulationen inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

Product Disposal Warning



WARNING: Disposal of this device must be handled according to all national laws and regulations.

Waarschuwing Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

Varoitus Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

Attention La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

Warnung Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

Avvertenza L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

Advarsel Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

Aviso A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

¡Atención! El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

Varning! Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [AC Power Electrical Safety Guidelines on page 508](#)
- [DC Power Electrical Safety Guidelines for Switches](#)
- [Laser and LED Safety Guidelines and Warnings on page 495](#)
- [Laser and LED Safety Guidelines and Warnings for the ACX5000 Router](#)
- [Installation Instructions Warning on page 487](#)
- [Grounded Equipment Warning on page 493](#)

Electrical Safety Guidelines and Warnings

- General Electrical Safety Guidelines and Warnings on page 505
- Prevention of Electrostatic Discharge Damage on page 506
- AC Power Electrical Safety Guidelines on page 508
- AC Power Disconnection Warning on page 509
- DC Power Copper Conductors Warning on page 509
- DC Power Disconnection Warning on page 510
- DC Power Grounding Requirements and Warning on page 512
- DC Power Wiring Sequence Warning on page 513
- DC Power Wiring Terminations Warning on page 514
- Midplane Energy Hazard Warning on page 516
- Multiple Power Supplies Disconnection Warning on page 516
- Action to Take After an Electrical Accident on page 517

General Electrical Safety Guidelines and Warnings



WARNING: Certain ports on the device are designed for use as intrabuilding (within-the-building) interfaces only (Type 2 or Type 4 ports as described in *GR-1089-CORE*) and require isolation from the exposed outside plant (OSP) cabling. To comply with NEBS requirements and protect against lightning surges and commercial power disturbances, the intrabuilding ports *must not* be metallically connected to interfaces that connect to the OSP or its wiring. The intrabuilding ports on the device are suitable for connection to intrabuilding or unexposed wiring or cabling only. The addition of primary protectors is not sufficient protection for connecting these interfaces metallically to OSP wiring.



CAUTION: Before removing or installing components of a device, attach an electrostatic discharge (ESD) grounding strap to an ESD point and place the other end of the strap around your bare wrist. Failure to use an ESD grounding strap could result in damage to the device.

- Install the device in compliance with the following local, national, and international electrical codes:
 - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
 - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
 - Evaluated to the TN power system.
 - Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Make sure that grounding surfaces are cleaned and brought to a bright finish before grounding connections are made.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the device and peripheral equipment function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

You can remove and replace many device components without powering off or disconnecting power to the device, as detailed elsewhere in the hardware documentation for this device. Never install equipment that appears to be damaged.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [AC Power Electrical Safety Guidelines on page 508](#)
- *DC Power Electrical Safety Guidelines for Switches*

Prevention of Electrostatic Discharge Damage

Device components that are shipped in antistatic bags are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD grounding strap when you are handling components that are subject to ESD damage, and make sure that it is in direct contact with your skin.

If a grounding strap is not available, hold the component in its antistatic bag (see [Figure 190 on page 485](#)) in one hand and touch the exposed, bare metal of the device with the other hand immediately before inserting the component into the device.




WARNING: For safety, periodically check the resistance value of the ESD grounding strap. The measurement must be in the range 1 through 10 Mohms.

- When handling any component that is subject to ESD damage and that is removed from the device, make sure the equipment end of your ESD grounding strap is attached to the ESD point on the chassis.

If no grounding strap is available, touch the exposed, bare metal of the device to ground yourself before handling the component.

- Avoid contact between the component that is subject to ESD damage and your clothing. ESD voltages emitted from clothing can damage components.
- When removing or installing a component that is subject to ESD damage, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an antistatic bag (see [Figure 190 on page 485](#)). If you are returning a component, place it in an antistatic bag before packing it.

Figure 191: Placing a Component into an Antistatic Bag

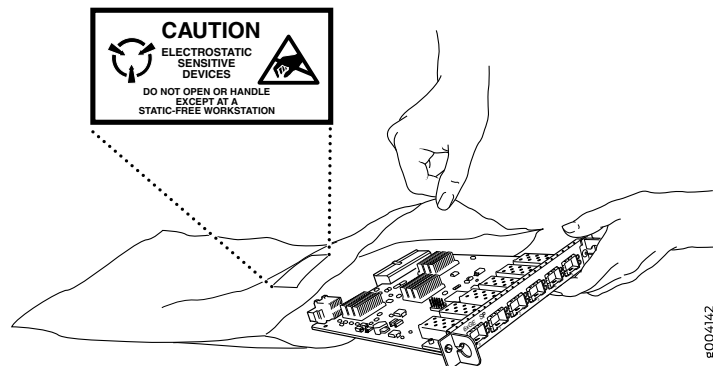

CAUTION: ANSI/TIA/EIA-568 cables such as Category 5e and Category 6 can get electrostatically charged. To dissipate this charge, always ground the cables to a suitable and safe earth ground before connecting them to the system.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)

AC Power Electrical Safety Guidelines



CAUTION: For devices with AC power supplies, an external surge protective device (SPD) must be used at the AC power source.

The following electrical safety guidelines apply to AC-powered devices:

- Note the following warnings printed on the device:
 - “**CAUTION:** THIS UNIT HAS MORE THAN ONE POWER SUPPLY CORD. DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING TO AVOID ELECTRIC SHOCK.”
 - “**ATTENTION:** CET APPAREIL COMPORTE PLUS D'UN CORDON D'ALIMENTATION. AFIN DE PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHER TOUT CORDON D'ALIMENTATION AVANT DE FAIRE LE DÉPANNAGE.”
- AC-powered devices are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical codes.
- You must provide an external certified circuit breaker rated minimum 20 A in the building installation.
- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- For devices that have more than one power supply connection, you must ensure that all power connections are fully disconnected so that power to the device is completely removed to prevent electric shock. To disconnect power, unplug all power cords (one for each power supply).

Power Cable Warning (Japanese)

WARNING: The attached power cable is only for this product. Do not use the cable for another product.

注意

附属の電源コードセットはこの製品専用です。
他の電気機器には使用しないでください。

907253

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [Multiple Power Supplies Disconnection Warning on page 516](#)

AC Power Disconnection Warning



WARNING: Before working on the device or near power supplies, unplug all the power cords from an AC-powered device.

Waarschuwing Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.

Varoitus Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.

Attention Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.

Warnung Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.

Avvertenza Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.

Advarsel Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømledningen trekkes ut på vekselstrømsenheter.

Aviso Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.

¡Atención! Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).

Varning! Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [AC Power Electrical Safety Guidelines on page 508](#)

DC Power Copper Conductors Warning



WARNING: Use copper conductors only.

Waarschuwing Gebruik alleen koperen geleiders.

Varoitus Käytä vain kuparijohtimia.

Attention Utilisez uniquement des conducteurs en cuivre.

Warnung Verwenden Sie ausschließlich Kupferleiter.

Avvertenza Usate unicamente dei conduttori di rame.

Advarsel Bruk bare kobberledninger.

Aviso Utilize apenas fios condutores de cobre.

¡Atención! Emplee sólo conductores de cobre.

Varning! Använd endast ledare av koppar.

DC Power Disconnection Warning



WARNING: Before performing any of the DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the device handle of the circuit breaker in the OFF position.

Waarschuwing Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhendel van de stroomverbreker met plakband in de UIT positie vast.

Varoitus Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin, käännä suojakytkin KATKAISTU-asentoon ja teippaa suojakytkimen varsi niin, että se pysyy KATKAISTU-asennossa.

Attention Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifiez que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

Warnung Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den

Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

Avvertenza Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

Advarsel Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.

Aviso Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

¡Atención! Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF), y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

Varning! Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningsskydd som skyddar likströmskretsen och tejpa fast överspänningsskyddets omkopplare i FRÅN-läget.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [DC Power Electrical Safety Guidelines for Switches](#)
- [DC Power Grounding Requirements and Warning on page 512](#)
- [DC Power Wiring Sequence Warning on page 513](#)
- [DC Power Wiring Terminations Warning on page 514](#)

DC Power Grounding Requirements and Warning

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors but is identifiable by green and yellow stripes is installed as part of the branch circuit that supplies the device. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



WARNING: When you install the device, the ground connection must always be made first and disconnected last.

Waarschuwing Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

Varoitus Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytkeminen viimeiseksi.

Attention Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

Warnung Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

Avvertenza In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

Advarsel Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

Aviso Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

¡Atención! Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

Varning! Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [DC Power Electrical Safety Guidelines for Switches](#)
- [DC Power Copper Conductors Warning on page 509](#)
- [DC Power Disconnection Warning on page 510](#)
- [DC Power Wiring Sequence Warning on page 513](#)
- [DC Power Wiring Terminations Warning on page 514](#)

DC Power Wiring Sequence Warning



WARNING: Wire the DC power supply using the appropriate lugs. When connecting power, the proper wiring sequence is ground to ground, +RTN to +RTN, then -48 V to -48 V . When disconnecting power, the proper wiring sequence is -48 V to -48 V , +RTN to +RTN, then ground to ground. Note that the ground wire must always be connected first and disconnected last.

Waarschuwing De juiste bedradingsvolgorde verbonden is aarde naar aarde, +RTN naar +RTN, en -48 V naar -48 V . De juiste bedradingsvolgorde losgemaakt is en -48 naar -48 V , +RTN naar +RTN, aarde naar aarde.

Varoitus Oikea yhdistettävä kytkentäjarjestys on maajohto maajohtoon, +RTN varten +RTN, -48 V varten -48 V . Oikea irrotettava kytkentäjarjestys on -48 V varten -48 V , +RTN varten +RTN, maajohto maajohtoon.

Attention Câblez l'alimentation d'alimentation CC En utilisant les crochets appropriés à l'extrémité de câblage. En reliant la puissance, l'ordre approprié de câblage est rectifié pour rectifier, +RTN à +RTN, puis -48 V à -48 V . En débranchant la puissance, l'ordre approprié de câblage est -48 V à -48 V , +RTN à +RTN, a alors rectifié pour rectifier. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois.

Warnung Die Stromzufuhr ist nur mit geeigneten Ringösen an das DC Netzteil anzuschliessen. Die richtige Anschlusssequenz ist: Erdanschluss zu Erdanschluss, +RTN zu +RTN und dann -48V zu -48V . Die richtige Sequenz zum Abtrennen der Stromversorgung ist -48V zu -48V , +RTN zu +RTN und dann Erdanschluss zu Erdanschluss. Es ist zu beachten dass der Erdanschluss immer zuerst angeschlossen und als letztes abgetrennt wird.

Avvertenza Mostra la morsettiera dell'alimentatore CC. Cablare l'alimentatore CC usando i connettori adatti all'estremità del cablaggio, come illustrato. La corretta sequenza di cablaggio è da massa a massa, da positivo a positivo (da linea ad L) e da negativo a negativo (da neutro a N). Tenere presente che il filo di massa deve sempre venire collegato per primo e scollegato per ultimo.

Advarsel Riktig tilkoples tilkoplingssekvens er jord til jord, +RTN til +RTN, -48 V til -48 V . Riktig frakoples tilkoplingssekvens er -48 V til -48 V , +RTN til +RTN, jord til jord.

Aviso Ate con alambre la fuente de potencia cc Usando los terminales apropiados en el extremo del cableado. Al conectar potencia, la secuencia apropiada del cableado se muele para moler, +RTN a +RTN, entonces -48 V a -48 V . Al desconectar potencia, la secuencia apropiada del cableado es -48 V a -48 V , +RTN a +RTN, entonces molió para moler. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

Atención! Wire a fonte de alimentação de DC Usando os talões apropriados na extremidade da fiação. Ao conectar a potência, a seqüência apropriada da fiação é moída para moer, +RTN a +RTN, então –48 V a –48 V. Ao desconectar a potência, a seqüência apropriada da fiação é –48 V a –48 V, +RTN a +RTN, moeu então para moer. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último.

Varning! Korrekt kopplingssekvens ar jord till jord, +RTN till +RTN, –48 V till –48 V. Korrekt kopplas kopplingssekvens ar –48 V till –48 V, +RTN till +RTN, jord till jord.

Related Documentation

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- [DC Power Electrical Safety Guidelines for Switches](#)
- [DC Power Disconnection Warning on page 510](#)
- [DC Power Grounding Requirements and Warning on page 512](#)
- [DC Power Wiring Terminations Warning on page 514](#)

DC Power Wiring Terminations Warning



WARNING: When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

Waarschuwing Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

Varoitus Jos säikeellinen johdin on tarpeen, käytä hyväksytyä johdinliitäntää, esimerkiksi suljettua silmukkaa tai kourumaista liitäntää, jossa on ylöspäin käännetyt kiinnityskorvat. Tällaisten liitäntöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

Attention Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la

taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

Warnung Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

Avvertenza Quando occorre usare trecce, usare connettori omologati, come quelli a occhio o a forcella con linguette rivolte verso l'alto. I connettori devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

Advarsel Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og ledaren.

Aviso Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

¡Atención! Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

Varning! När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av sluten eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

**Related
Documentation**

- [General Safety Guidelines and Warnings on page 479](#)
- [General Electrical Safety Guidelines and Warnings on page 505](#)
- *DC Power Electrical Safety Guidelines for Switches*
- [DC Power Disconnection Warning on page 510](#)
- [DC Power Grounding Requirements and Warning on page 512](#)
- [DC Power Wiring Sequence Warning on page 513](#)

Midplane Energy Hazard Warning



WARNING: High levels of electrical energy are distributed across the midplane. Be careful not to contact the midplane connectors, or any component connected to the midplane, with any metallic object while servicing components.

Multiple Power Supplies Disconnection Warning



WARNING: The network device has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.

Waarschuwing Deze eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.

Varoitus Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.

Attention Cette unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

Warnung Diese Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.

Avvertenza Questa unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.

Advarsel Denne enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.

Aviso Este dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.

¡Atención! Esta unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.

Varning! Denna enhet har mer än en strömförsörjningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)
 - [General Electrical Safety Guidelines and Warnings on page 505](#)
 - [AC Power Electrical Safety Guidelines on page 508](#)
 - [DC Power Electrical Safety Guidelines for Switches](#)

Action to Take After an Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the device.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, then call for help.

- Related Documentation**
- [General Safety Guidelines and Warnings on page 479](#)
 - [General Electrical Safety Guidelines and Warnings on page 505](#)
 - [AC Power Electrical Safety Guidelines on page 508](#)
 - [DC Power Electrical Safety Guidelines for Switches](#)

Agency Approvals and Compliance Statements

- Agency Approvals for MX480 Routers on page 519
- Compliance Statements for EMC Requirements on page 520
- Compliance Statements for Environmental Requirements on page 521
- Compliance Statements for NEBS on page 521
- Compliance Statements for Acoustic Noise for the MX480 Router on page 521

Agency Approvals for MX480 Routers

The routers comply with the following standards:

- Safety
 - CAN/CSA-22.2 No. 60950-00/UL 1950 Third Edition, Safety of Information Technology Equipment
 - EN 60825-1 Safety of Laser Products - Part 1: Equipment Classification, Requirements and User's Guide
 - EN 60950 Safety of Information Technology Equipment
- EMC
 - AS/NZS CISPR22:2009 (Australia/New Zealand)
 - EN55022 Class A (Europe)
 - FCC Part 15 Class A (USA)
 - VCCI Class A (Japan)
- Immunity
 - EN-61000-3-2 Power Line Harmonics
 - EN-61000-3-3 Voltage Fluctuations and Flicker
 - EN-61000-4-2 ESD
 - EN-61000-4-3 Radiated Immunity

- EN-61000-4-4 EFT
- EN-61000-4-5 Surge
- EN-61000-4-6 Low Frequency Common Immunity
- EN-61000-4-11 Voltage Dips and Sags
- ETSI
 - ETSI EN-300386-2 Telecommunication Network Equipment. Electromagnetic Compatibility Requirements

The router is designed to comply with the following standards:

- NEBS
 - GR-1089-Core: EMC and Electrical Safety for Network Telecommunications Equipment
 - SR-3580 NEBS Criteria Levels (Level 3 Compliance)
 - GR-63-Core: NEBS, Physical Protection

Compliance Statements for EMC Requirements

- [Canada on page 520](#)
- [European Community on page 520](#)
- [Israel on page 520](#)
- [Japan on page 521](#)
- [United States on page 521](#)


Canada

CAN ICES-3 (A)/NMB-3(A)

European Community

This is a Class A product. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures.

Israel

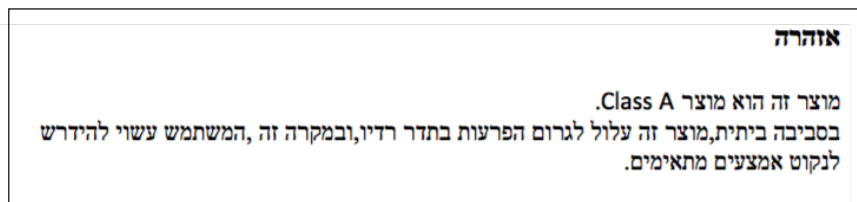

Translation from Hebrew—Warning: This product is Class A. In residential environments, the product might cause radio interference, and in such a situation, the user might be required to take adequate measures.

Japan

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

The preceding translates as follows:

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this product is used near a radio or television receiver in a domestic environment, it might cause radio interference. Install and use the equipment according to the instruction manual. VCCI-A.

United States

The hardware equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Compliance Statements for Environmental Requirements

Batteries in this product are not based on mercury, lead, or cadmium substances. The batteries used in this product are in compliance with EU Directives 91/157/EEC, 93/86/EEC, and 98/101/EEC. The product documentation includes instructional information about the proper method of reclamation and recycling.

Compliance Statements for NEBS

- The equipment is suitable for installation as part of the Common Bonding Network (CBN).
- The equipment is suitable for installation in Network Telecommunications Facilities.
- The battery return connection is to be treated as an isolated DC return (i.e. DC-I), as defined in GR-1089-CORE.
- For Juniper Networks systems with AC power supplies, an external surge protective device (SPD) must be used at the AC power source.

Compliance Statements for Acoustic Noise for the MX480 Router

The router complies with NEBS Level 3 requirements:

- GR-63-CORE: NEBS, Physical Protection
- GR-1089-CORE: EMC and Electrical Safety for Network Telecommunications Equipment